


installation guide

chef electric freestanding cooker

models: EBC5201W, EBC5211W, EBC5231W, EBC5241W,
EBC5261W, EBC5271W, EBC5451W, EBC5481W

cooker dimensions

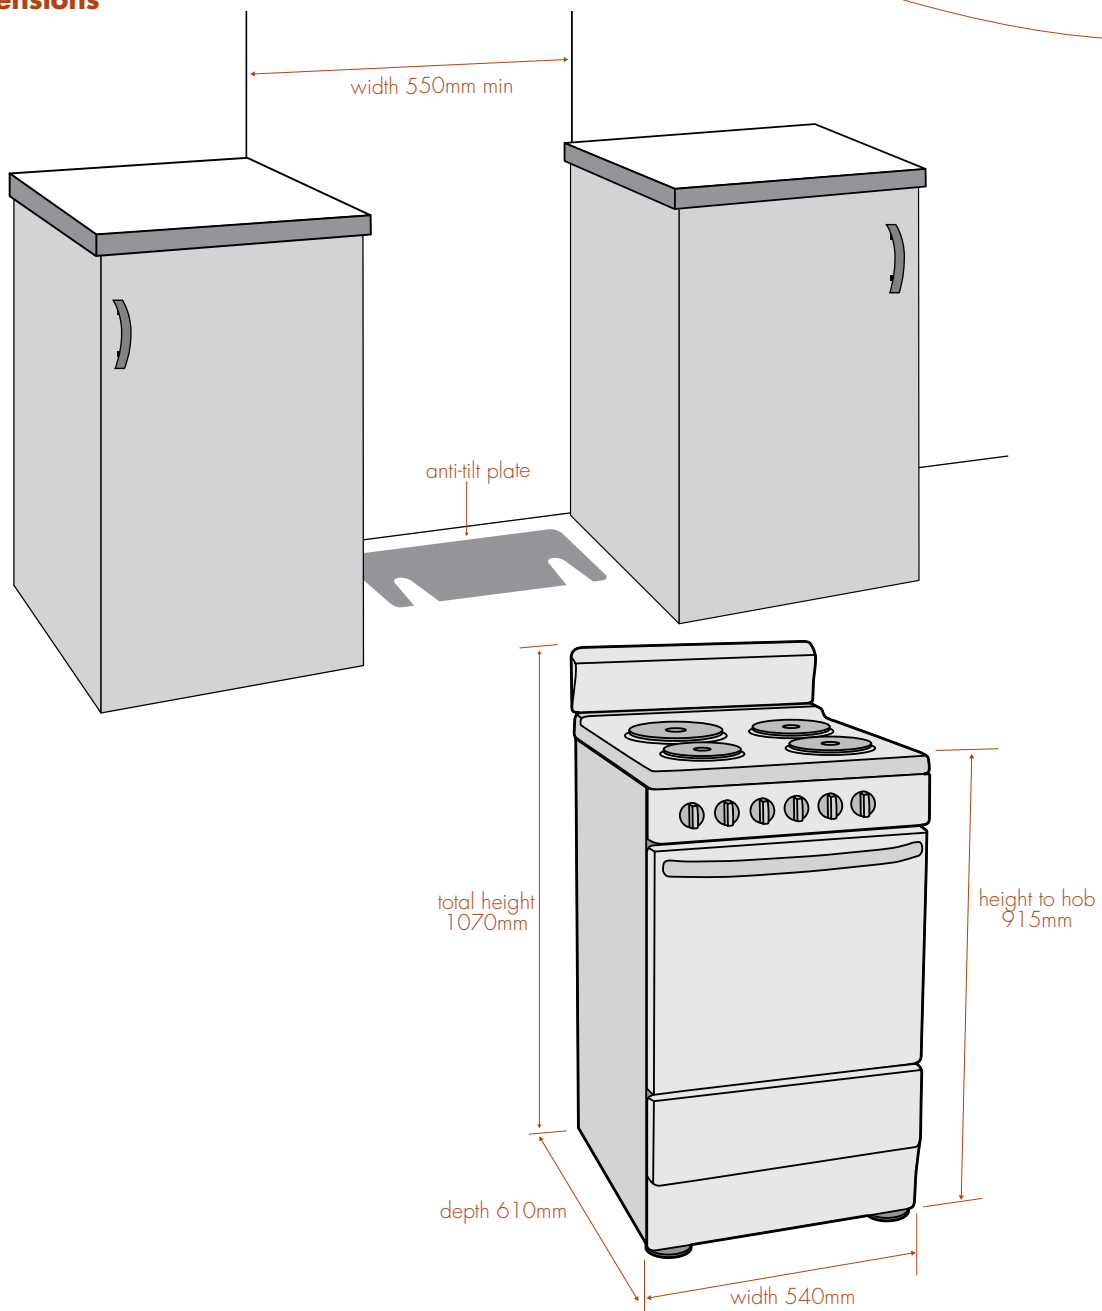

All measurements in millimetres.

Current as at Dec 2006.

© 2006 Electrolux Home Products Pty Ltd. CDIMEBC540mm


CHEF

installation guide

chef gas freestanding cooker

models: GBC5246W, GBC5266W, GBC5276W, GBC5486W

cooker dimensions

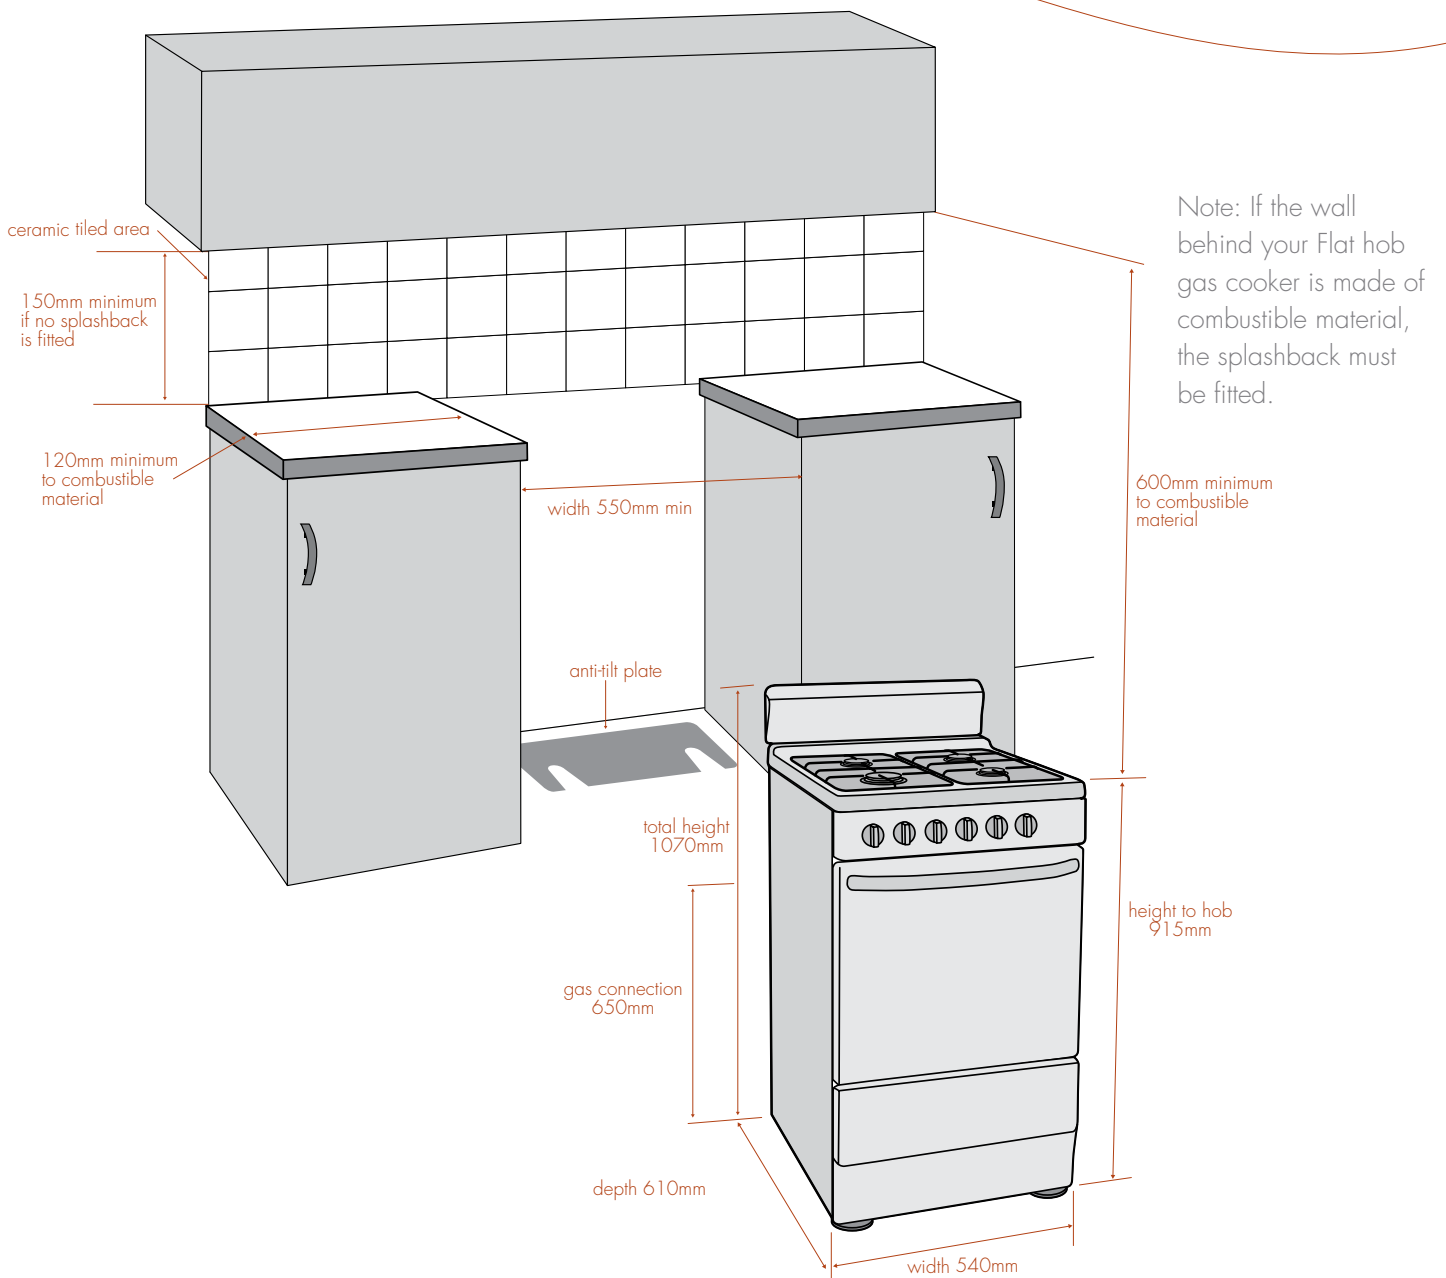

All measurements in millimetres.

Current as at Dec 2006.

© 2006 Electrolux Home Products Pty Ltd. CDIMGBC540mm

CHEF