



Congratulations on your purchase!
Thank you for choosing a Sirius product.

SLTC919

UNDERMOUNT RANGEHOOD INSTALLATION INSTRUCTIONS

SLTC919 520
SLTC919 580

EAN # 9351116002244
EAN # 9351116002251





BEFORE YOU INSTALL – please read

 
Sirius warranty covers only Sirius product. If you choose to install a non-Sirius branded accessory such as flexible ducting, Sirius will only warrant the hood and motor. If installation is found to be the cause of failure or issue then charges will apply for service and parts.

Flexible ducting is not permitted under any circumstances. Flexible ducting has been found to increase noise levels, increase vibration and reduce airflow. Sirius Semi-rigid or solid ducting can be used in lieu. There is a range available to suit any application.

Ducting available at www.siriusbrand.com

A reduction in the duct diameter from stated ducting size will void warranty.

If you are in doubt about the ducting, please contact Sirius on 1300 762 219 prior to installation

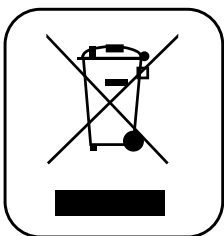

The symbol on the product or on its packaging indicates that this product may not be treated as house-hold waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. This appliance is marked according to the European directive 2002/96/EC on waste electrical and electronic equipment (WEEE).



 
WARNING

Min. 600mm - Max. 650mm for induction cooktops.

Min. 600mm - Max. 750mm gas cooktops.

If the rangehood is positioned above the max height recommended, warranty may be compromised as performance of the rangehood will be affected.

Measurement is taken from the top of the trivets to the underside of the hood. (Fig.1)

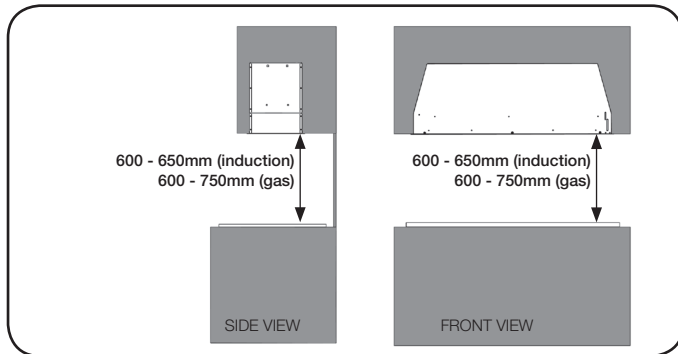

(Fig. 1)

- The air being drawn can't be conveyed through or into a duct used to let out fumes from appliances fed by energy other than electric power (eg. centralized heating, radiators, water heaters, etc.).
- Attention: remove any possible PVC film from the stainless steel, including the filters.
- To externally vent, please comply with the pertaining rules given by competent authorities.
- Provide the room with an adequate ventilation when a rangehood and appliances fed by energy other than electric power (gas, oil, or coal stoves, etc.) are used simultaneously. The rangehood, when evacuating the air, could generate a negative pressure in the room which can't exceed the limit of 0.04 mbar, in order to avoid the suck of exhausts deriving from the heat source. Therefore the room should be provided with air intakes to allow a constant flow of fresh air.

If the rating label in the rangehood shows the symbol , the appliance is built in class II° and it **does not need** any earth connection.

If the rating label in the rangehood does not show the symbol , the appliance is built in class I° and it **needs** the earth connection.

When performing the electrical connections on the appliance, please make sure that the current-tap is provided with earth connection and that voltage values correspond to those indicated on the label placed inside the appliance itself.

Before carrying out any cleaning or maintaining operations, the appliance needs to be switched off. If the appliance is not provided with a non-separable

flexible cable and plug, or with another device ensuring omnipolar disconnections from the grid, with an opening distance between the contacts of at least 3mm, then such disconnecting devices must be supplied within the fixed installation.

If the fixed appliance is endowed with a supply cord and a plug, the appliance has to be put in a place where the plug can be reached easily.

 
The use of materials which can burst into flames should be avoided in close proximity of the appliance. When frying, please pay particular attention to fire risk due to oil grease. Being highly flammable, hot oil is especially dangerous. Do not use uncovered electric grills. In order to avoid possible fire risk, all instructions for grease-filter cleaning and for removing eventual grease deposits should be strictly followed.

When ducting rangehood, options are as follows:

Roof vent - EASYROOF 150T/M

*Kit includes roof flashing


[Download installation guide](#)

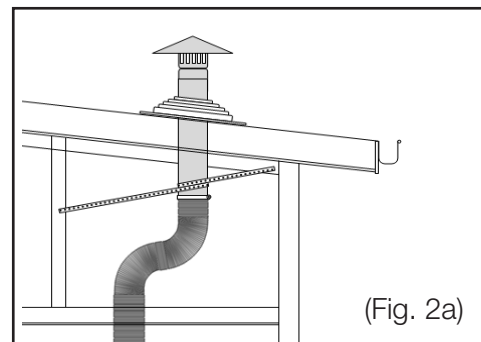

(Fig. 2a)

Eave vent - EASYEAVE 150

 
[Download installation guide](#)

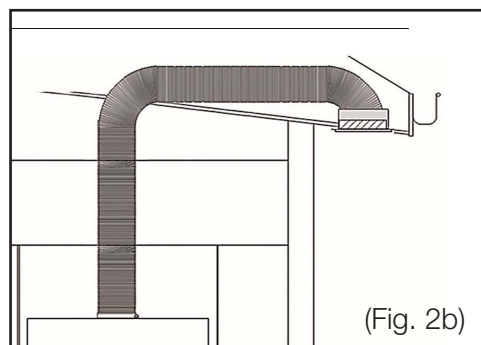

(Fig. 2b)

Wall vent - EASYWALL 150

 [Download installation guide](#)

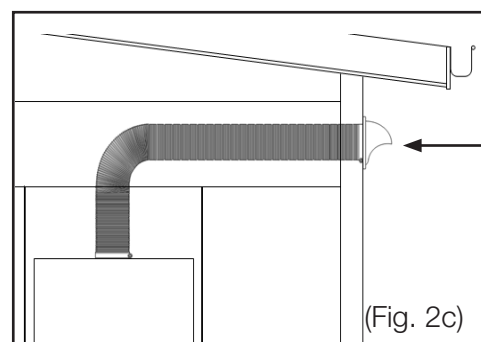


(Fig. 2c)

SLTC919 series INSTALLATION



Before installing the appliance, make sure that none of the parts are damaged in any way. In case of damaged parts, contact your retailer and do not proceed with installation. Read all of the following instructions with care before installing the appliance.

 - 10AMP GPO required at head unit.
- Use ducting within the min/max specifications
- Limit the number of ducting bends.
- Do not make any changes in ducting diameter (recommended constant diameter: Ø 150 mm or equal surface area).

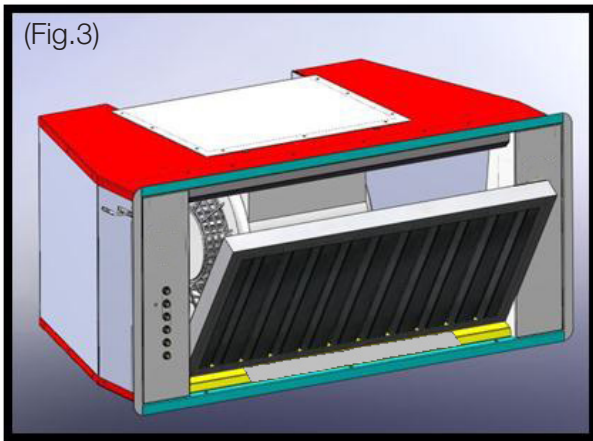


Remove the grease filters before installing the product, in order to avoid to damage the appliance. Open the glass by rotating it as shown in fig. 3; then remove the grease filters by acting on their specific handle and rotate them to remove them from their seating.

Make an opening on the kitchen cabinet bottom of the following sizes:


SLTC919 520: 265mm x 498mm

 SLTC919 850: 265mm x 835mm


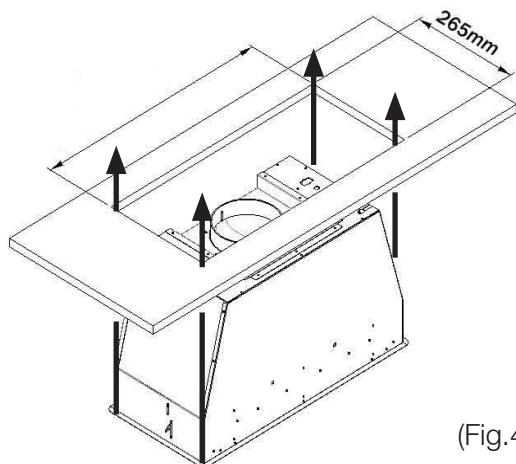


To install the appliance please respect the follow instructions:

 
- The appliance must be installed by qualified technicians, or where possible use a Sirius recommended installer. See siriusbrand.com. In order to avoid damage to the electronic parts of the appliance, please do not use additional screws.
- Essential precautions to respect before installing the appliance are the following:
To have made a cutout on the bottom of the cabinet which is suitable to hold the appliance in position (fig. 4):
- Prepare the power supply - 240 volt.
- Prepare a hole for the ducting - 160 mm diameter.
- Maximum length of ducting should not exceed 7 metres to atmosphere.
- Do not use screws to fix the outlet pipe to the rangehoods as they will prevent the movement of non-return valves.
- Limit the number of elbows in the ducting, since each elbow reduces the duct efficiency by 1 metre. (i.e. if you use two 90° elbows, the length of ducting must not exceed 5 metres.)
- Avoid abrupt direction changes.
- Use 150mm constant diameter ducting for the whole length for the single motor.
- **The use of Sirius ducting will increase the warranty of the unit to 4 years.**

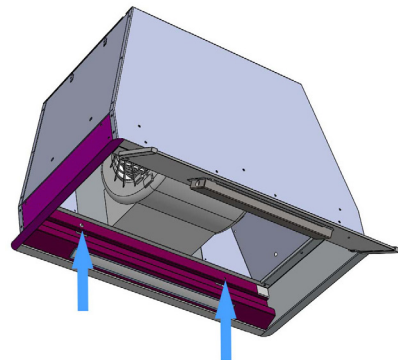

  - Rotate the steel bar, including the LED bar, to remove it from its seating (Fig. 6 - 7). You can electronically disconnect the bar by disconnecting the specific connector.

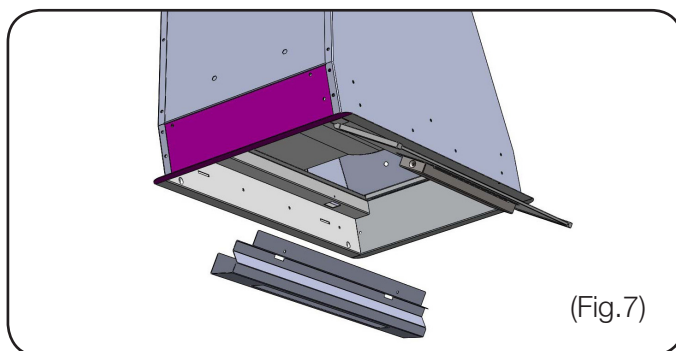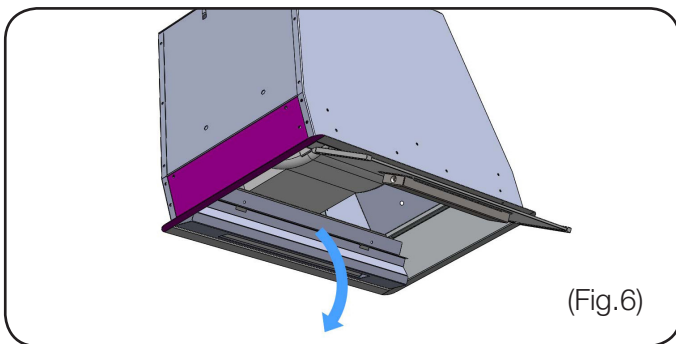

 - Place the appliance inside the cabinet and fix it by inserting the screws supplied into the holes, as shown in Fig.8.

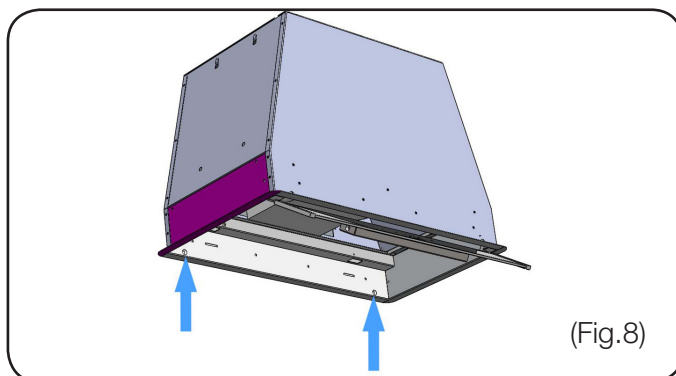

- Refit the stainless steel bar previously removed, connect the LED bar electrically by means of the specific connector, and then refit the grease filter.



 
 
Before connecting any ducting to the motor, make sure the non-return valves - which are on the air outlet of the motor - can swing open.

External venting

- Connect the flange to the exhaust hole with the appropriate ducting. Connect the rangehood with the electrical mains through the supply cord.

Rear vented version


- All the models with one motor can be rear vented; if the customer wants to use this option, it is necessary to remove the 18 screws from the motor group support. Then take the metal support with motor included out (fig.7a). Turn the motor to have the air outlet on the rear side (fig.7b) and fix the screws previously removed.

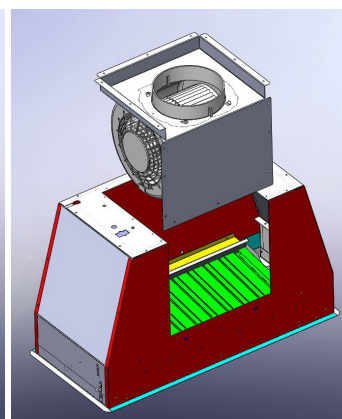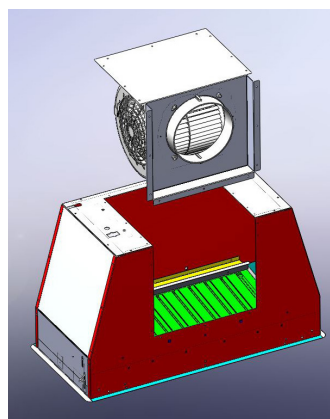

OPERATION

SLTC919 series

 - A: Light switch on/off
- B: Motor OFF / Reduce speed
- C: Fan-speed indicator
- D: Motor ON / Increase speed
- E: 10 minute shut-off timer

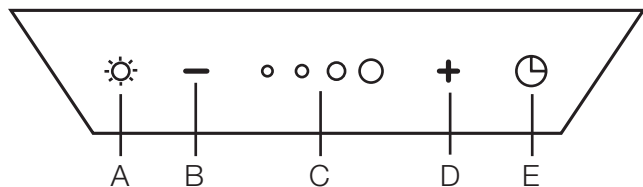

If the electrical power supply to the product SLTC is cut, 15 seconds are needed for self-diagnostics after the functions are restored.

Internal motor models, with maximum air capacity higher than 650m³/h, are equipped with a timer device that automatically switches the suction speed from 4th to 3rd speed, after 5 minutes of operation.

The energy consumption of the appliance in standby mode is lower than 0.5W.

MAINTENANCE

- Accurate maintenance guarantees good functioning and long-lasting performance.
- Particular care is due to the grease filter panel. It can be removed by pushing its handle toward the back side of the rangehood and pulling the filter downwards so to unfasten it from its slot (Fig.3). To insert the filter just perform the opposite operation.
- After 30 hours of operation, the push button control panel will flash, signaling the filters are due for cleaning. Press the timer button to reset. ⌚
- The grease filter needs cleaning by regular handwashing or in dishwashers every two months at least, depending on its use.
- To clean the appliance itself, water and detergent are recommended, while abrasive products should be avoided. For steel appliances specialized detergents are recommended (please follow the instructions indicated on the product itself to obtain the desired results).

LED Bar replacement

To remove the LED, it is recommended to remove the steel bar as shown in Fig.6 and 7, then disengage the LED bar by acting on the specific fastening springs. Replace the LED bar with one of the same characteristics.
Refit the Steel bar.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.