

Before the first use

⚠ Damage resulting from incorrect installation and connection. Installing and connecting the washing machine incorrectly will cause serious damage. Please read the separate operating instructions supplied with the appliance.

 
⚠ Damage resulting from failure to remove the transit bars. Failure to remove the transit bars can result in damage to the washing machine and to adjacent cabinetry or appliances. Please read the separate operating instructions supplied with the appliance.

The setting up procedure for the washing machine occurs in 4 steps.

1. Removing the transit bars
2. Setting up Miele@home
3. Commissioning TwinDos
4. Starting the calibration programme

For further information, please refer to the separate operating instructions.

Operating the washing machine

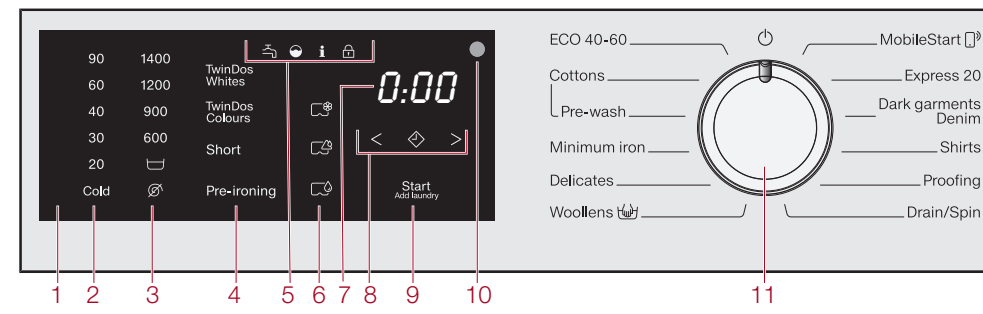

- 1 Control panel**
- 2 Temperature sensors** for selecting the temperature.
- 3 Spin speed sensors** for selecting the spin speed.
- 4 Sensors for TwinDos and Extras** You can deactivate or activate TwinDos dispensing for a wash programme and add Extras to the programme.
- 5 Indicator lights**
 - Water inlet or drainage faults
 - Excess detergent used
 - Reminder about hygiene information or TwinDos cleaning
 - The Add laundry function cannot be selected
- 6 CapDosing sensors**
 - Fabric care (e.g. fabric softener)
 - Additives (e.g. detergent enhancers)
 - Detergent (for the main wash only)
- 7 Time display** After the programme has started, the programme duration will be shown in the display in hours and minutes.
- 8 < > sensors** for the Delay start function.
- 9 Start/Add laundry sensor**
 - Touching the *Start/Add laundry* sensor starts a programme. The sensor lights up constantly.
 - Once the programme has started, the *Start/Add laundry* sensor allows you to add laundry.
- 10 Optical interface** For service technicians.
- 11 Programme selector** for selecting programmes and for switching the washing machine off. The washing machine is switched off by selecting a programme, and switched off by turning the programme selector to the position.

Washing environmentally and economically

- Programmes that are more efficient with regard to energy and water consumption generally have a longer running time. By extending the programme running time, the wash temperature that is actually reached can be reduced while still providing the same wash results.
- For example, the Cottons 40°C programme has a longer running time than the Cottons 40°C or 60°C programme, but the Cottons 40°C programme is more efficient in terms of energy and water consumption.
- To get the most out of your machine, load the maximum dry load for the programme you are using.
- Use the *Express 20* programme for small, lightly soiled loads.

Washing

1. Preparing the laundry

- Empty all pockets.
- Foreign objects (e.g. nails, coins, paper clips, etc.) can cause damage to garments and components in the machine.

- Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.
- Pre-treat stains and badly soiled areas (Please refer to the Miele website or Miele@mobile App for more information on stain removal.)

 
2. Selecting a programme

- 1. Selecting wash programmes using the programme selector**
 - Turn the programme selector to the required programme.



2. Selecting programmes using the MobileStart App

Tip: To use MobileStart, the washing machine must be signed on to the Wi-Fi network and Remote control must be switched on.

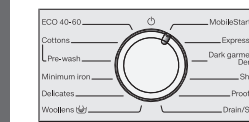

- Turn the programme selector to the MobileStart programme selector position.

 
3. Loading the washing machine

Opening the door

- Take hold of the door and pull it open.
- Unfold the laundry and load loosely in the drum.

Closing the door

- Make sure that no items are caught between the door and the seal.
- Shut the door with a gentle swing.

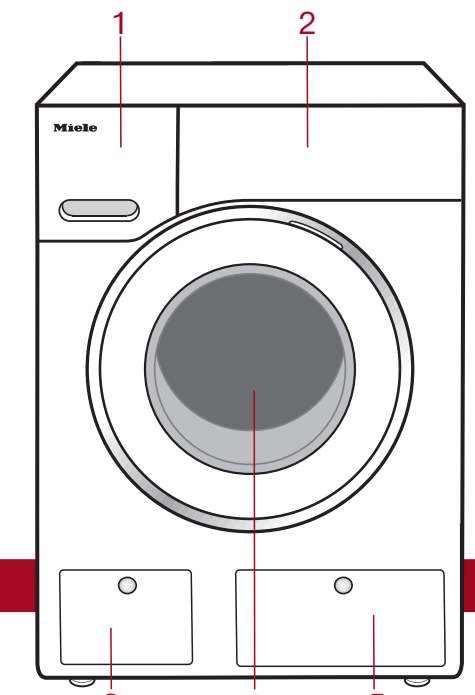

- 1 Detergent dispenser drawer**
- 2 Control panel**
- 3 Access to drain filter, drain pump and emergency release**
- 4 Door**
- 5 Access panel for TwinDos containers**

4. Selecting programme settings

Selecting the temperature and spin speed

- The wash programme's pre-set temperature and spin speed light up brightly. The choice of temperatures and spin speeds selectable for the wash programme light up dimly.
- Touch the sensor for the temperature you want. It will light up brightly.
 - Touch the sensor for the spin speed you want. It will light up brightly.

Selecting Extras

- The selection of Extras available for the wash programme lights up dimly.
- Touch the sensor for the Extra you want. It then lights up brightly.
- Tip:** You can select multiple Extras for a wash programme.

5. Adding detergent

There are several options for adding detergent.

TwinDos

TwinDos dispensing is automatically activated for all programmes in which dispensing is possible. The *TwinDos Colours* sensor lights up. The *TwinDos Whites* sensor lights up dimly in certain wash programmes.

 
Changing TwinDos dispensing You can change the suggested colour composition of the laundry.

- Touch the *TwinDos Whites* sensor if required.

Deactivating TwinDos dispensing Touch the brightly lit *TwinDos Whites* or *TwinDos Colours* sensor.

Both sensors light up dimly and dispensing is deactivated.

Detergent dispenser drawer

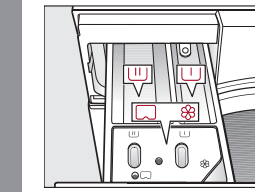

- Pull out the detergent dispenser drawer and add detergent to the compartments.

CapDosing

Three different types of capsules are available:

- Fabric care (e.g. fabric softener)
- Additives (e.g. detergent enhancers)
- Detergent

See "Detergent" in the operating instructions for more information on detergents, capsules and dosage.

6. Starting the programme

- Touch the flashing *Start/Add laundry* sensor.

The door will lock and the programme will start.

Adding laundry during a programme sequence

Laundry can be added or removed at any time, provided that the symbol is not lit up on the control panel.

- Touch the *Start/Add laundry* sensor. The rotating bars ... are shown in the time display.

 
When the word *Add* appears in the display, the door can be opened.

- Open the door and add or remove laundry.
- Close the door.
- Touch the *Start/Add laundry* sensor. The wash programme will continue.


7. At the end of the programme

The door is locked in the Anti-crease phase.

- Turn the programme selector to the position.
- 0- appears in the display and the indicator light goes out. The door will unlock.

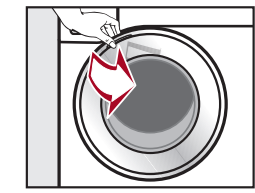

 Items left in the drum could discolour other items in the next wash or become discoloured themselves.

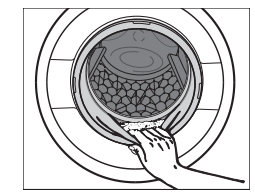

Note: For safety reasons close the door.

- Remove any used capsules from the detergent dispenser drawer.

Tip: Leave the detergent dispenser drawer slightly open to allow it to dry.

Changing the programme (safety lock)

It is not possible to change the programme, the temperature, the spin speed or the selected Extras after the programme has started. This prevents the appliance being operated unintentionally, e.g. by children.

Cancelling a programme

You can cancel a programme at any time after it has started.

- Turn the programme selector to the position.
- Turn the programme selector to any position.

The display shows rotating bars ... or -0-. The water is pumped away and the door lock is released.

Selecting a new programme

- Turn the programme selector to the required programme.
- Check that there is still detergent in the dispenser drawer. Add more detergent if necessary.
- Touch the *Start/Add laundry* sensor.

Delay start/Extras

Delay start/SmartStart

You can delay the start of a programme from 30 minutes up to a maximum of 24 hours. This allows you to make use of night-time economy electricity rates, for example.

Selecting Delay start

- Select the programme required.
- Touch the sensor.



- Touch the < or > sensor repeatedly until the required Delay start time appears in the time display.

For below 10 hours, the Delay start time changes in increments of 30 minutes.

For more than 10 hours, the Delay start time changes in increments of 1 hour.

- Touch the flashing *Start/Add laundry* sensor.

The Delay start process starts and counts down in the time display.

SmartStart - setting time period

If the *P38* SmartGrid programmable function is activated, the function of the sensor changes. The time display no longer shows the Delay start period, and instead shows the time period in which your washing machine can be started automatically.

The procedure for setting this is the same as for the Delay start time. For further information, please refer to the separate operating instructions.

Extras

You can select or deselect Extras by touching the corresponding sensor on the control panel.

Short




For light soiling with no visible staining. The wash duration is reduced.



Pre-ironing

In order to reduce creasing, the laundry undergoes a smoothing process at the end of the programme. For optimal smoothing reduce the maximum load by 50%. Follow the instructions in the display. Small loads achieve a better result.


The garments must be suitable for drying in a tumble dryer and suitable for ironing.

Programme chart

Programme	Load (in kg)	Temperature	Items	Extra
ECO 40-60 ^{1,2}	8.0		For normally soiled cotton garments. A laundry load consisting of mixed cottons that are intended for washing at 40°C or 60°C can be washed in the same wash cycle.	Ⓐ, Ⓑ
Cottons	8.0	Cold to 90°C	Cottons, linens or cotton mix fabrics, e.g. table linen, towelling, underwear, T-shirts etc. If you want to select a pre-wash programme, turn the programme selector to <i>Pre-wash</i> .	Ⓐ, Ⓑ
Minimum iron	4.0	Cold to 60°C	Synthetic and mixed fibre textiles and easy care cotton.	Ⓐ, Ⓑ
Delicates	3.0	Cold to 40°C	Delicate garments made from synthetic fibre, mixed fibre, rayon and viscose. Performance outerwear (e.g. jackets and trousers) made from membrane fabric such as Gore-Tex®, SYMPATEX®, WINDSTOPPER®, etc. Curtains, including net curtains, specified as machine-washable by the manufacturer. Machine-washable or hand-washable wool or wool blend fabric. If the care label does not specify a temperature, wash using the cold setting.	Ⓐ, Ⓑ
Woolens 	2.0	Cold to 40°C		
MobileStart  Express 20	The Miele@mobile App is used for selecting programmes and operating the machine.			
Dark garments/Denim	3.5	Cold to 40°C	Cotton garments that have hardly been worn or are only very lightly soiled.	Ⓐ
Shirts	3.0	Cold to 60°C	Black and dark garments made from cotton, mixed fibres and denim.	Ⓐ, Ⓑ
	1.0/2.0	Cold to 60°C	Shirts and blouses made of cotton and mixed fibre. Wash silk shirts and blouses in the Delicates programme. If the preset Pre-ironing option is switched off, the maximum load capacity is increased to 2.0 kg.	Ⓐ, Ⓑ
Proofing	2.5	40°C	Microfibre fabric, skiwear and table linen made from mainly synthetic fibres.	
Drain/Spin	8.0		Drain only: Select  for the spin speed.	

 ¹You cannot select any temperatures or Extras for the ECO 40-60 wash programme. The Cottons   wash programmes that are most efficient in terms of energy and water consumption for washing cottons can be selected via the ECO 40-60 wash programme.

²For energy/labeling programme according to AS/NZS 2040.1 & AS/NZS 2040.2 change the following settings: The temperatures 60 and 40 light up dimly in the temperature display.





- Touch the 40 sensor for the Cottons  test programme. Temperature 40 lights up brightly.




Ⓐ = Short; Ⓑ = Pre-ironing

PROGRAMME CHART

Detergent

Miele recommended detergents

Programmes	Miele UltraPhase 1 and 2		Miele capsules 	
ECO 40-60	✓	-	✓	✓
Cottons	✓	-	✓	✓
Minimum iron	✓	-	✓	✓
Delicates	✓	✓	✓	-
Woolens 	-	✓	-	-
Express 20	✓	-	✓	-
Dark garments/Denim	✓	✓	✓	-
Shirts	✓	-	✓	✓
Proofing	-	-	✓	

 
- ✓ Recommended
- Not recommended
-  Specialist detergents (e.g. WoolCare)
-  Fabric care (e.g. fabric softener)
-  Additive (e.g. booster)

Cleaning and care

Cleaning the detergent dispenser drawer

Washing at low temperatures and the use of liquid detergent can lead to a build-up of mould and bacteria in the detergent dispenser drawer.


- For hygiene reasons, clean the entire drawer at regular intervals.

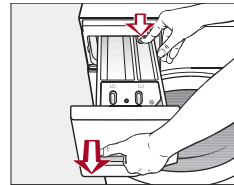

- Pull out the detergent dispenser drawer until a resistance is felt.

- Press down the release button and, at the same time, pull the drawer right out of the machine.
- Clean the detergent drawer with warm water.

 Cleaning the siphon tube and the fabric softener channel

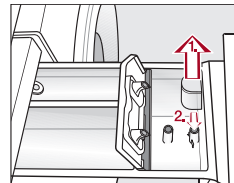


- Clean the siphon tube in the same way.
- Refit the siphon.



⚠ Liquid starch can cause the siphon to become clogged. Make sure that you clean the siphon and siphon tube particularly thoroughly after using liquid starch a few times.

 Cleaning the detergent dispenser drawer housing

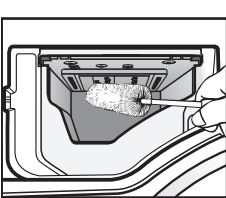

- Use a bottle brush to remove detergent residues and limescale from the jets inside the detergent dispenser drawer housing.

Cleaning the drum (Hygiene info)

Washing at low temperatures and/or using liquid detergent can cause bacteria and unpleasant odours to build up in the washing machine.




Use the *Cottons 90°C* programme to clean the washing machine. Clean the drum no later than the point at which the **i** indicator light and **7** light up in the time display.


Tip: Leave the detergent dispenser drawer slightly open to allow it to dry.

CLEANING AND CARE

Problem solving guide

Many malfunctions and minor faults that can occur in daily operation can be corrected without contacting Miele. This will save you time and money because you will not need a service call.


Problem/Fault message	Possible cause and remedy
The control panel remains dark.	There is no power to the machine. ■ Check whether the mains plug is plugged in and switched on. ■ Check whether the circuit breaker has tripped. The washing machine has switched off automatically to save energy. ■ Switch the washing machine back on by turning the programme selector.
F and 34 alternate in the display.	The door is not closed properly. The door lock could not engage. ■ Close the door again. ■ Restart the programme. If the fault message appears again, contact Miele.
The fault indicator light  lights up. F and 11 alternate in the time display and the buzzer sounds.	The water outlet is blocked or restricted. The drain hose has been fixed too high. ■ Clean the filter and the drain pump. ■ The maximum drain height is 1 m.
The fault indicator light  lights up. F and 10 alternate in the time display and the buzzer sounds.	The filter in the water inlet is blocked. ■ Clean the filter (see the operating instructions).
The fault indicator light  lights up. F and 138 alternate in the time display and the buzzer sounds.	The water inlet is blocked or restricted. ■ Check whether the tap is turned on properly. ■ Check whether the inlet hose is kinked. ■ Check whether there is sufficient water pressure.
F and XXX alternate in the time display and the buzzer sounds.	The filter in the water inlet is blocked. ■ Clean the filter (see the operating instructions).
	The water protection system has reacted. The washing machine is switched off. ■ Turn off the tap. ■ Call Miele.
	There is a fault. ■ Disconnect the washing machine from the electricity supply, either by switching it off at the wall socket and withdrawing the plug, or by disconnecting it at the circuit breaker. ■ Wait at least 2 minutes before reconnecting the washing machine to the electricity supply. ■ Then switch the washing machine back on. ■ Restart the programme. If the fault message appears again, contact Miele.

Problem/Fault message	Possible cause and remedy
-0- lights up in the time display.	The programme selector was moved to a different position after the programme had started. ■ Turn the programme selector back to the original position.
The indicator light  lights up.	The programme has been interrupted. ■ Open the door. ■ Close the door.
The i indicator light lights up and 7 appears in the time display.	Excessive foam has built up during washing. ■ Use less detergent next time and follow the manufacturer's instructions on dosage given on the packaging.
The i indicator light lights up and 2 appears in the time display.	A programme using a temperature above 60°C has not been run for a long period of time. ■ In order to prevent bacteria and unpleasant odours building up in the machine, run the Cottons 90°C programme using the Miele IntenseClean machine cleaner or a universal powder detergent.
F and 37 alternate in the time display.	TwinDos has not been used for too long a time. It is possible that detergent has dried inside the hoses. ■ Carry out the TwinDos maintenance programme as described in the operating instructions.
F and 37 alternate in the time display.	The <i>Pre-ironing</i> Extra which runs at the end of the programme could not be carried out properly. ■ Check that the washing machine is standing level. ■ Check whether the maximum delivery head of 1 m has been exceeded.
The TwinDos Whites sensor flashes.	If the fault message appears again, contact Miele. The washing machine can still be used, however without the <i>Pre-ironing</i> Extra.
The TwinDos Colours sensor flashes.	The UltraPhase 1 cartridge is empty.
F and 35 alternate in the time display.	The UltraPhase 2 cartridge is empty.
	The door lock has jammed. ■ Call Miele.

PROBLEM SOLVING GUIDE



 Quick Start Guide
Washing machine

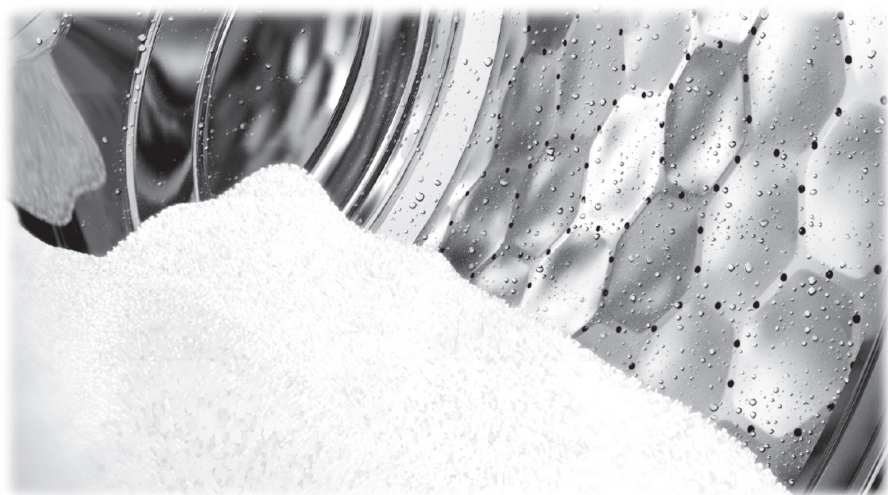

These short instructions are not a substitute for the operating instructions supplied with the appliance. Please read the operating instructions supplied with your washing machine before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your appliance.