

Installation instructions

«Front loader» washing machine
One-family household



1064373-R04

31/10/2019

For Service and Spare Part Information please contact: V-ZUG AUSTRALIA Pty. Ltd. Tel +61 7 3209 6822



The appliance should be installed by qualified personnel only.
Each step must be carried out and checked in full in the order specified.

Validity

These installation instructions apply to the models: **11021, 11023, 11025**

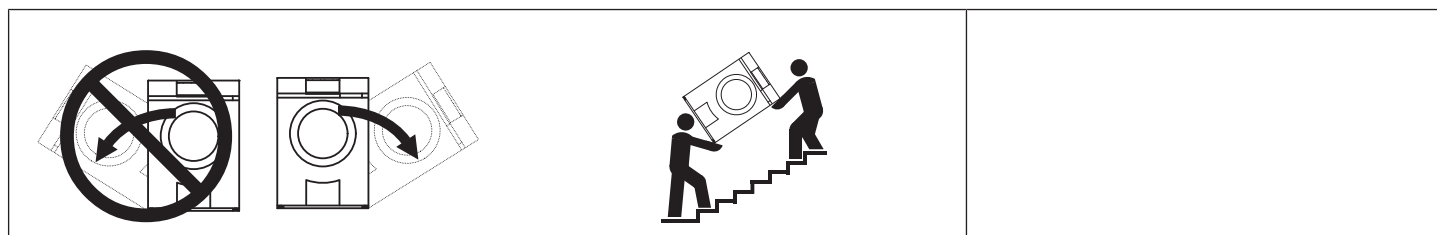
Transport



If the weight of the appliance is greater than your lifting capacity, the appliance must be transported by several people or using a transport aid. The weight of the appliance is given on the appliance packaging and in the operating instructions.



Transport the appliance in an upright position only! Transporting it in any other position will cause damage. When carried carefully without being shaken, the appliance may be tilted a maximum of 90° to the right (viewed from the front).



Applicable only to model 11025:



In the event that the appliance is tilted during transportation or installation it must not be put into operation for 2 hours.

Identification plate

1

► Open the drain tray below the appliance door (see «1. Opening the appliance door»).

– Identification plate 1

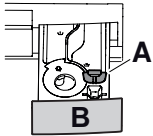
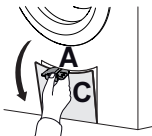
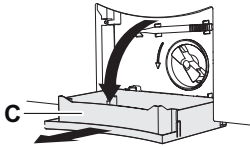
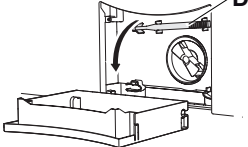


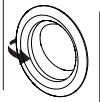
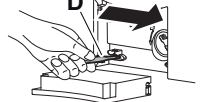
Installation accessories supplied

The necessary installation accessories are located in the washing drum and in the appliance packaging.

Designation	Article no.	Number	See installation step
Installation set, incl.: <ul style="list-style-type: none">▪ Rubber stopper▪ Screw material (3 each of screws, washers, rawlplugs)▪ Drain hose▪ Wire hose clamp▪ Hose support	W41152	1	
		2	2. Removing the transport lock
		1	4. Positioning the installation plate
		1	6. Plumbing in
		1	6. Plumbing in
		1	6. Plumbing in
Installation plate (incl. double-sided adhesive tape)	W40653	1	4. Positioning the installation plate





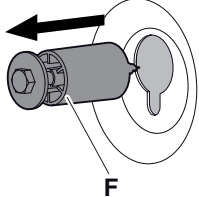
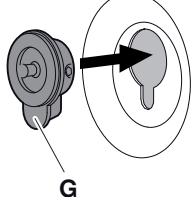
1. Opening the appliance door (without power)

<p>1</p> 	<p>2</p> 	<ul style="list-style-type: none"> ▶ Remove liquid-detergent flap A from detergent dispenser drawer B. ▶ Open drain tray C with liquid-detergent flap A.
<p>3</p> 	<p>4</p> 	<ul style="list-style-type: none"> ▶ Fold drain tray C right down and remove it. ▶ Remove emergency door release tool D from bracket.
<p>5</p> <p>1</p> 		<p>Variant 1: Left-hand hinge door:</p> <ul style="list-style-type: none"> ▶ Insert tool D into blue emergency door release and pull to the left. <ul style="list-style-type: none"> – The appliance door opens.
<p>2</p> 		<p>Variant 2: Right-hand hinge door:</p> <ul style="list-style-type: none"> ▶ Insert tool D into blue emergency door release and pull to the right. <ul style="list-style-type: none"> – The appliance door opens.

2. Removing the transportation lock



The transport locks **F** on the rear side have to be removed before using the appliance for the first time.

<p>1</p>  <p>2</p>  <p>3</p>  <p>4</p> 	<ul style="list-style-type: none"> ▶ Remove the hexagon head screws E of the transport locks F using a 10 mm ring or open-end wrench. ▶ Push up and pull out the transport lock F. ▶ Plug the holes with the rubber stoppers G.
---	--



Risk of soiling!

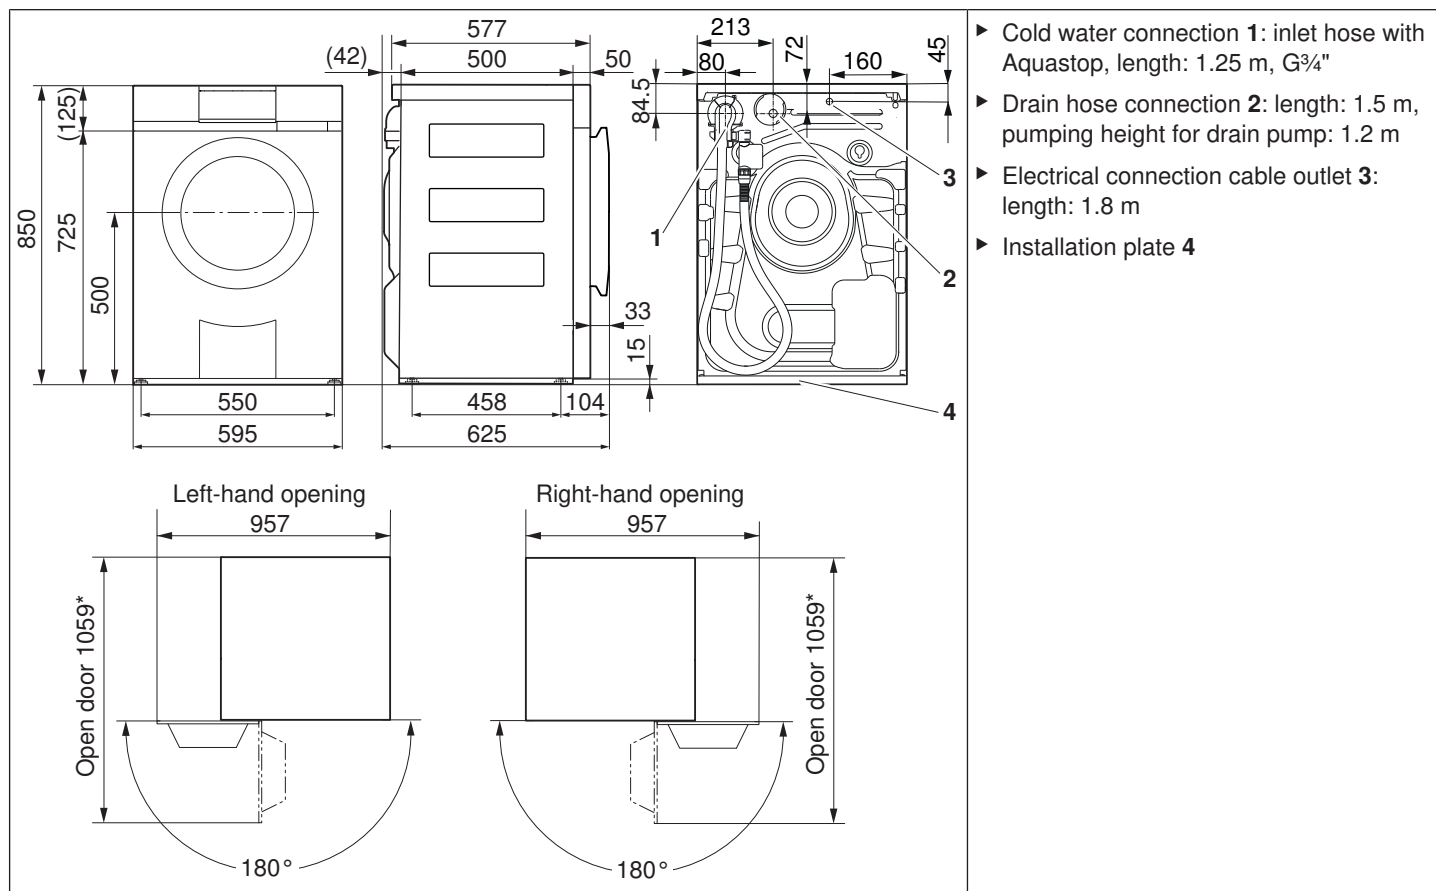
Failure to plug the holes with the rubber stoppers can result in error messages. Insert the rubber stoppers and prevent soiling in the appliance.



3. Dimensions



The stated dimensions do not include distances from walls. To prevent disturbing noise and vibration the appliances must not come into contact with the surrounding walls of their installation location.



* In order that the detergent dispenser drawer can be used without obstruction and be taken out for cleaning, the clearance space must be observed across the entire front of the appliance.



4. Positioning the installation plate

General tips

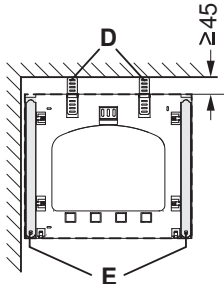
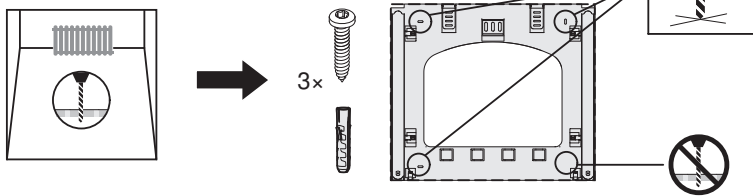
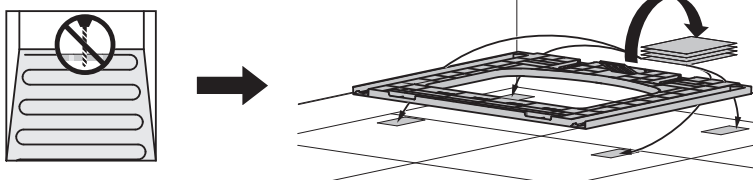


Use the installation plate supplied to install the appliance. It fixes the appliance in position, and is for use with both free-standing appliances and appliances positioned in a niche.

The use of an unsuitable installation plate or a soft, sound-insulating underlay can affect the proper functioning of the appliance.



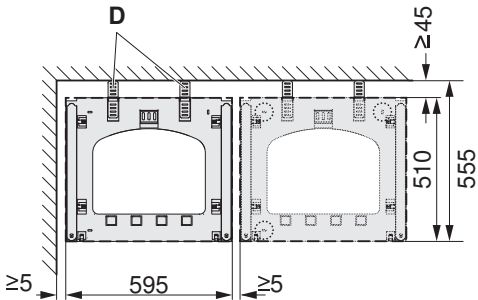
In case of underfloor heating, do not drill holes in the floor! Adhere installation plate into place!

<p>1</p> 	<ul style="list-style-type: none"> ► Fold out spacers D in order to keep distance to the back wall.
<p>2</p> <div data-bbox="135 1064 167 1097">1</div>  <div data-bbox="135 1344 167 1377">2</div> 	<p>Variant 1: Without underfloor heating:</p> <ul style="list-style-type: none"> ► Fasten installation plate to the floor with 3 screws. ► Dampen mounting slots E with water to make the appliance easier to push in. <p>Variant 2: With underfloor heating:</p> <ul style="list-style-type: none"> ► Holes must not be drilled in the floor if the room has underfloor heating. The installation plate must be adhered to the floor. ► Dampen mounting slots E with water to make the appliance easier to push in.

Free-standing position



If a tumble dryer and a washing machine are positioned side by side, keep a distance of min. 5 mm between the installation plates and to the walls at the side and min. 45 mm to the back wall. The installation plates for the washing machine and tumble dryer are the same.

<p>1</p> 	<ul style="list-style-type: none"> ► Fold out spacers D in order to keep distance to the back wall. ► Dimensions 45 and 555 only apply if no plumbing fittings are to be installed behind the appliance.
---	---



Positioning in a niche

<div data-bbox="76 286 354 611"> <p>1</p> </div> <div data-bbox="395 286 1026 611"> <p>2</p> </div>	<ul style="list-style-type: none"> ▶ Centre the installation plate in the niche. ▶ Distance to the back wall: ≥ 45 mm ▶ Cut-out for lateral connections (left or right): $\geq 100 \times 100$ mm ▶ Niche height for washing machine: ≥ 860 mm
<div data-bbox="76 633 1026 981"> <p>3</p> <p>1</p> </div> <div data-bbox="76 992 1026 1328"> <p>2</p> </div>	<p>Variant 1: Niche front B and appliance front C are flush:</p> <ul style="list-style-type: none"> ▶ Niche depth A ≥ 605 mm ▶ Installation offset for installation plate D = 50 mm. <p>Variant 2: Niche front B and appliance door E are flush:</p> <ul style="list-style-type: none"> ▶ Niche depth A ≥ 645 mm ▶ Installation offset for installation plate D = 83 mm.

5. Levelling

To ensure fault-free operation, the appliance must stand level with all 4 feet firmly on the installation plate and not wobble.

<p>1</p>	<ul style="list-style-type: none"> ▶ Roughly adjust the height of the front and rear adjuster feet using socket wrench (size 10). Height adjustment: ≤ 14 mm (1.5 mm per turn) ▶ Use a spirit level L to level the appliance. ▶ Slide the appliance onto the installation plate. ▶ Finely adjust the height of the front adjuster feet. ▶ Use a spirit level L to level the appliance. <ul style="list-style-type: none"> – The appliance must not wobble.
-----------------	---



6. Plumbing in



Local water authority regulations must be observed.

Any old water supply and drain hoses must always be replaced with new hoses.

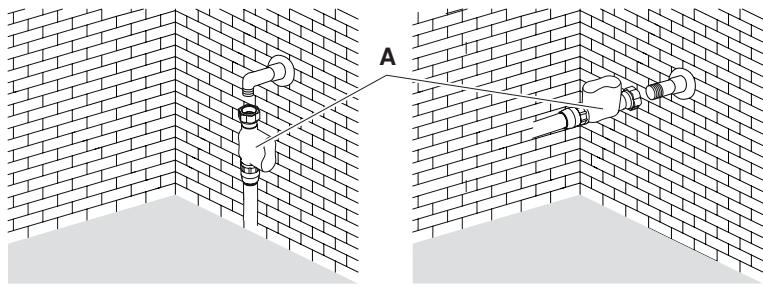
Water inlet



Only cold water G $\frac{3}{4}$ " permitted, possible pressure range: 0.1–1.0 MPa (1–10 bar).



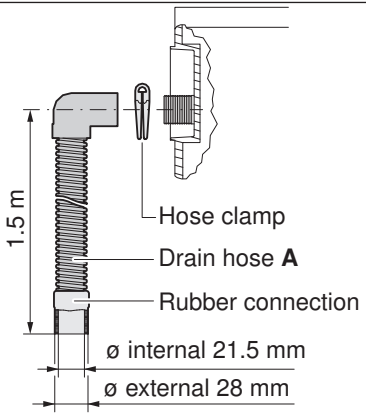
The appliance must not be connected to a mixer tap or a continuous flow boiler!

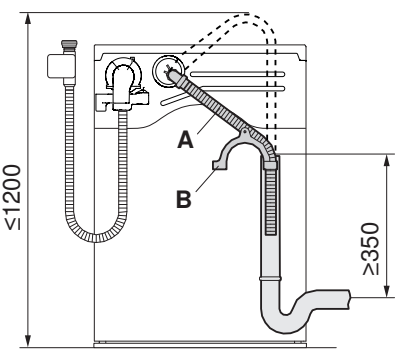
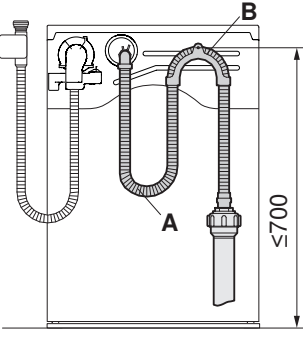
<p>1</p> 	<p>Preferred alignment for Aquastop valve block A (sound-optimized installation):</p> <ul style="list-style-type: none"> ▶ The tap seal seat must be clean and flat. ▶ Install hose without kinking or twisting it. ▶ Check for leaks.
---	--

Water outlet



When installing the drain hose, protect it against damage and kinks!

Installing the drain hose	Work steps
 <p>Hose clamp Drain hose A Rubber connection 1.5 m ø internal 21.5 mm ø external 28 mm</p>	<ul style="list-style-type: none"> ▶ For drainage into fixed upright outflow pipe, shorten drain hose A to necessary length. ▶ For drainage into a bath tub or sink, etc., drain hose A cannot be shortened!

Drainage into an open-top fixed upright outflow pipe	Drainage into a bath tub or sink, etc.	Work steps
 <p>Max. pumping height: 1200 mm</p>	 <p>Max. pumping height: 700 mm</p>	<ul style="list-style-type: none"> ▶ For all connection types, mount the hose support B. ▶ For drainage into a bath tub or sink, etc., secure the hose end with hose support B.



7. Electrical connections

Electrical connections



Electrical connections must be carried out by qualified personnel in accordance with the guidelines and standards for low-voltage installations and the specifications of the local electricity supply companies.

A plug-in appliance may only be connected to a socket outlet with earthing contact, installed according to specifications. An all-pole mains isolating device with 3 mm contact opening should be provided in the house wiring system. Switches, plug and socket devices, circuit breakers and fusible cut-outs which are accessible after installation and which have all-poles switching are permissible as isolating devices. Effective earthing and separately installed neutral and earth conductors ensure safe and fault-free operation. After installation, live parts and cables with basic insulation must not be accessible. Check old installations.

- ▶ The appliance is designed for use up to a max. altitude of 2000 m above sea level.
- ▶ Refer to the identification plate for information on the required mains voltage, current type and fuse protection.



The mains plug must not be cut off.

Connection cable

Valid for all washing machines and tumble dryers in the Adora, AdoraWash and AdoraDry model range.



The mains cable may only be replaced by the manufacturer, its Customer Services or a similarly qualified person.

Error messages «U1»



Disconnect the appliance from the mains and control the wiring.



8. Performing the stability check

Strong vibrations are deliberately produced during the stability check in order to check that the appliance is standing firmly on the ground.

<div>1</div> <div>2</div> <div>3</div> <div>4</div>	<ul style="list-style-type: none"> ▶ Insert plug into mains socket or turn on at wall switch. ▶ Remove drum contents, close appliance door. ▶ Turn on water tap. ▶ Close the appliance door.
<div>5</div> <div>6</div> <div>7</div>	<ul style="list-style-type: none"> ▶ Select language. ▶ Touch ok. <ul style="list-style-type: none"> – In the display appears: «Transport locks removed?» ▶ Remove transport locks F (see section 2).
<div>8</div> <div>9</div>	<ul style="list-style-type: none"> ▶ Touch Yes. <ul style="list-style-type: none"> – In the display appears: «Stability check» ▶ Touch ▶ . <ul style="list-style-type: none"> – The stability check starts. – Spinning is carried out and in the display appears: «Creating unbalanced load, please wait...»
<div>10</div>	<ul style="list-style-type: none"> ▶ Realign adjuster feet if necessary. ▶ The appliance must stand level with all 4 feet firmly on the installation plate and not wobble. ▶ The user must carry out a visual and haptic assessment as the appliance cannot detect or display the set-up.
<div>11</div> <div>12</div>	<ul style="list-style-type: none"> ▶ Touch the ▶ button. <ul style="list-style-type: none"> – In the display appears: «Create unbalanced load finishing...» – The spinning is finished, the appliance is drained. ▶ Check stability and realign adjuster feet if necessary.
<div>13</div> <div>14</div>	<ul style="list-style-type: none"> ▶ Repeat stability check if necessary: Depress the ⬅e, ♡... and ▶ buttons simultaneously for 5 seconds.
<div>15</div> <div>11025</div> <div>11021, 11023</div>	<ul style="list-style-type: none"> ▶ For model 11025, wait 2 hours. ▶ Touch any button. ▶ Follow the instructions in the display and set the time and date.