

Kambrook - Australia

Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337

www.kambrook.com.au

Kambrook - New Zealand

Private Bag 94411
Botany, Manukau
Auckland 2163
New Zealand
Customer Service Line/
Spare Parts 0800 273 845
Customer Service Fax 0800 288 513

www.kambrook.co.nz

KAMBROOK

THE SMARTER CHOICE



**Portable
Hotplates**

KHP1B/KHP2B

Instruction Booklet

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Portable Hotplate	p6
Using Your Kambrook Hotplate	p7
Care, Cleaning and Storage	p9

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Single/Double Portable Hotplate

- Carefully read all instructions before operating the hotplate and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the hotplate for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this hotplate.
- The hotplate operates at very high temperatures. Extreme caution should be exercised during operation. Do not touch hot surfaces.
- The temperature of accessible surfaces will be high when the hotplate is operating and for some time after use.
- The hotplate is not intended to be operated by means of an external timer or separate remote control system.
- Do not use on a cloth covered surface, near curtains or other flammable materials. Keep clear of walls for good circulation and to prevent heat damage.
- Always use the hotplate on a dry, clean, level, heat resistant surface.
- Do not leave the hotplate unattended when in use.
- Do not operate the hotplate on a sink drain board.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces or become knotted.
- Do not place this hotplate on or near a hot gas or electric stove, or where it could touch a heated appliance.
- Do not place metallic objects such as knives, forks, spoons and lids on the hotplate surface as they can become very hot.
- Do not operate the hotplate without a cooking pot or pan positioned on the hotplate heating surface.
- Do not place anything on top of the hotplate surface (except cooking pots and pans) when in use and when stored.
- Do not insert sharp objects into the ventilation vents.
- If the hotplate is not used for an extended period, disconnect the hotplate from the power outlet.
- Always turn off at the power outlet and then remove plug before attempting to move the hotplate or when not in use or when storing or cleaning.
- Keep the hotplate clean. Follow the cleaning instructions provided in this book.



WARNING: Always keep in mind that the hotplates, after being switched off, continue to radiate residual heat for a certain period of time.



WARNING: Do not use hotplate within reach of young children.



WARNING: If the hotplate surface is cracked, switch off the hotplate to avoid the possibility of electric shock. Return the hotplate to the nearest authorized Kambrook Service Centre for repair.

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Connect only to 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to inspect the appliance regularly. Do not use the appliance if the power supply cord, plug, connector or appliance becomes damaged in anyway. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

Your Kambrook Portable Hotplate

A. KHP1B Single Hotplate

1. 1600W, large 18.5cm cast iron hotplate
2. Heating indicator light
3. 8 setting variable temperature control
4. Sturdy non-slip feet
5. Durable surface, for easy cleaning

Not Shown

- Cord Wrap

B. KHP2B Double Hotplate

1. 800W, 15.5cm cast iron hotplate
2. 1600W, large 18.5cm cast iron hotplate
3. Heating indicator light
4. 8 setting variable temperature controls for each hotplate
5. Sturdy non-slip feet
6. Durable surface, for easy cleaning

Not Shown

- Cord Wrap



Using Your Kambrook Hotplate

Before first use

Remove any packaging material and promotional labels before using your hotplate for the first time.

It is recommended before first use to wipe the hotplate surface with a soft damp cloth and dry thoroughly.



WARNING: Fully unwind power cord before use. Do not allow power cord to come in contact with hotplate. Do not move hotplate until it has completely cooled down.

1. Place the hotplate on a dry, level heat resistant surface.
2. Fully unwind the power cord and insert power cord into a 230V or 240V power outlet and switch on at the power outlet.
3. Place the cooking vessel to be used, (e.g. saucepan or cooking pot) in which food will be cooked, onto the hotplate.

NOTE: To achieve optimum cooking performance, ensure the diameter of the cooking vessel is no larger than the diameter of the hotplate.

4. Place food to be cooked into the cooking vessel. Depending on ingredients being used or as per recipe guidelines, ingredients can be added prior or after temperature setting selection. Depending on food to be cooked or as per recipe guidelines, ingredients can be added prior to hotplate reaching desired temperature or once desired temperature has been reached.

5. To turn the hotplate ON, select the desired temperature setting using the variable temperature control dial. The temperature setting can be adjusted between settings 1 to MAX at any time during the cooking process.

NOTE: The heating indicator light will illuminate red when the hotplate is preheating and cooking. The heating light may cycle on and off during operation. This cycling is normal and is an indication that the correct temperature is being maintained.

NOTE: When using the hotplate for the first time, the hotplate may give off vapours for up to 15 minutes. This is normal due to the protective substances on the heating elements. There is no need for concern and the vapours will dissipate with use.

6. Once all ingredients have been cooked to the desired level of doneness, turn the variable temperature control dial to the OFF position, then switch off at the power outlet and remove the power cord from the power outlet.



WARNING: Do not operate the hotplates without a cooking vessel (pot or pan) positioned on the hotplate heating surface.

Using Your Kambrook Hotplate continued



WARNING: Fully unwind power cord before use. do not allow power cord to come in contact with hotplate. Do not move hotplate until it has completely cooled down.



WARNING: Always keep in mind that the hotplate will continue to radiate residual heat after being switched off.



WARNING: No more than 5 litres of water can be boiled at any one time. For more efficient performance, it is recommended to use a lid when boiling water.

Care, Cleaning and Storage

1. Turn the variable temperature control dial to the OFF position, then switch off at the power outlet and remove the power cord from the power outlet.
2. Before cleaning, ensure the hotplate surface has completely cooled down.
3. To clean the hotplate surface, wipe over with a soft, damp cloth. A multi-purpose spray cleaner may be used to clean the hotplate surface. Remove all cleaner residues and dry thoroughly.
4. If necessary, the exterior surrounding the hotplate may be wiped over with a soft, damp cloth using mild detergent. Remove all detergent residues and dry thoroughly.
5. Once the hotplate is completely cool, cleaned and dry as above, store the hotplate in a convenient place on the bench top or in a cupboard. Do not store anything on top of the hotplate.

NOTE: The hotplates should be completely cooled down before storing.

NOTE: To minimise staining or rusting marks on the hotplate surface, do not leave any food spillage and/or liquids on the hotplate surface for a long period of time.

NOTE: Do not use abrasive or harsh cleaning solutions or metal scourer pads, as continued use will scratch the hotplate surface making subsequent cleaning more difficult.

