


E-MANUAL

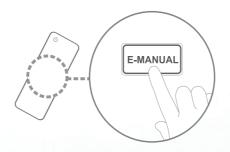

Thank you for purchasing this Samsung product. To receive more complete service, please register your product at

www.samsung.com/register

Model _____ Serial No.____

Contents

Channel Setting		Preference Features		Other Information	
Using the INFO button (Now & Next guide)	1	Executing initial setup	58	Viewing the e-Manual	101
Memorizing channels	2	Setting the Time	59	 Using the Self Diagnosis 	102
Using the Channel menu	3	Using the Sleep Timer	61	 Updating the Software 	104
Locking Programme	15	Setting the On / Off Timer	62	 Changing the Use Mode 	106
Other Features	17	 Economical Solutions 	67	 Viewing the Contact Samsung 	107
		Other Features	69	Using the Sports Mode	108
Basic Features				 Using the Wireless Network 	109
		Advanced Features		Managing the Network Connected Devices	123
 Changing the Preset Picture Mode 	27			Using the DLNA Functions	126
 Adjusting Picture Settings 	28	 Using the Source List 	77		
Changing the Picture Options	36	 Connecting a USB Device 	78		
Changing the Preset Sound Mode	47	 Using the Media Contents 	84		
Adjusting Sound Settings	48	 Playing the Photos / Videos / Music 	86		
Selecting the Sound Mode	57	Using the 3D function	94		

□ Using the INFO button (Now & Next guide)

The display identifies the current channel and the status of certain audio-video settings.

The Now & Next guide shows daily TV programme information for each channel according to the broadcasting time.

- When you press the **INFO** button, a channel information banner will appear on the top of the screen. And then press the **ENTER** button, you can see the details of the programme.
 - Scroll ◀, ► to view information for a desired programme while watching the current channel.
 - Scroll ▲, ▼ to view information for other channels. Scroll ▲, ▼ to view information for other channels.

- Memorizing channels
- Auto Tuning(depending on the country)
 - $\textcircled{\begin{tabular}{ll} \ragged MENU \hline \square } \to Broadcasting \to Auto Tuning \to ENTER \ragged \ragge$
 - Automatically allocated programme numbers may not correspond to actual or desired programme numbers. If a channel is locked, the PIN input window appears.
- Auto Tuning
 Channel Type (Digital & Analogue / Digital / Analogue): Select the channel source to memorise.

- Using the Channel menu
 - $\begin{tabular}{ll} \hline \raise MENU & \longrightarrow Broadcasting \to Channel List \to ENTER \blacksquare \\ \hline \end{tabular}$

Channel List

The Channel List contains the channels your TV displays when you press the channel button. You can view channel information, All, TV, Radio, Data/Other, Analogue or Favourites 1-5.

Press ► (Mode) button to change the channel mode, or press ◄ (Sorting) button to change the channel order according to channel number or name on the list.

When you press the **CH LIST** button on the remote control, **Channel List** screen will be displayed at once.

Channel Sorting

 Number / Name: Arranges the channel order according to channel number or name on the list.

Channel Mode

- Edit Favourites: Set channels you watch frequently as favourites.
 - For detailed information about using Edit Favourites, refer to "Edit Favourites".
- Favourites 1-5: Shows all favourite channels, arranged in up to five groups. Each group has a separate screen.
 - The TV displays Favourites 1-5 only if you have added favourites using Edit Favourites.
- All: Shows all currently available channels.
- TV: Shows all currently available TV channels.
- Radio: Shows all currently radio channels.
- Data/Other: Shows all currently available MHP or other channels.
- Analogue: Shows all currently available analogue channels.


Guide

$\textcircled{\begin{tabular}{ll} \ragged MENU & \longrightarrow Broadcasting \rightarrow Guide \rightarrow ENTER \end{tabular} }$

The EPG (Electronic Programme Guide) information is provided by broadcasters. Using programme schedules provided by broadcasters, you can specify programmes you want to watch in advance so that the channel automatically changes to the selected programme channel at the specified time. Programme entries may appear blank or out of date depending on a channel status.

- Red (Quick Nav): Viewing the TV programmes on the list quickly using
 ▲/▼/◄/▶ buttons.
- B Green (Channel Category): Select the type of channels you want to display.
- Yellow (Schedule Manager): Moves to the reserved programmes in Schedule Manager.

Schedule Manager

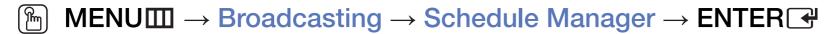

You can set a desired channel to be displayed automatically at the intended time. In addition, you can view, modify or delete a channel you have reserved to watch.

- You must set the current time first using the $Time \rightarrow Clock$ function in the System menu to use this function.
- 1. Press the Schedule on the Schedule Manager screen. The Schedule Viewing menu appears.
- 2. Press the $\triangle/\nabla/\triangle/$ buttons to set each option menu.
 - Aerial: Select the desired broadcasting signal.
 - Channel: Select the desired channel.

- Repeat: Select Once, Manual, Sat~Sun, Mon~Fri or Everyday to set at your convenience. If you select Manual, you can set the day you want.
 - \nearrow The (\checkmark) mark indicates the day you've selected.
- Date: You can set the desired date.
 - It is available when you select **Once** in **Repeat**.
- Start Time: You can set the start time you want.
- If you want to edit or cancel a reserved schedule, select the reserved schedule on **Schedule Manager**. Then press the **ENTER** button and select the **Edit** or **Delete**.

Edit Channel



You can edit or delete channels.


- 1. Go to Edit Channel screen.
- 2. Press the \triangle/∇ buttons to select the desired channel, then press the ENTER \Box button. The (\checkmark) mark indicates the channel you've selected.
 - You can select more than one channel.
 - Press the **ENTER** again to deselect the channel.

- Using the coloured and function buttons with the Edit Channel.
- Red (Change Number): Changes channel order on the channel list.
- Green (Lock / Unlock): Lock a channel so that the channel cannot be selected and viewed. / Unlock the channel that you locked.
 - This function is available only when the **Channel Lock** is set to **On**.
 - The PIN input screen appears. Enter your 4-digit PIN. Change the PIN using the **Change PIN** option.
- Yellow (Delete): Deletes a channel from the channel list.

- D Blue (Select All / Deselect All): Selects or deselects all channels at once.
- [0~9] (Go To): Goes to channel directly by pressing numbers (0~9).
- \$\frac{1}{2}\$ (Page): Move to previous or next page.
- (Done): Completes changing the channel order.
- π (Tools): Displays the option menu. The option menu items that appear may differ depending on the channel status and type.
 - Sorting (digital channels only): Changes the list ordered by channel number or channel name.

- Category: Change the channel mode to All, TV, Radio, Data/Other,
 Analogue, Recently Viewed, Most Viewed. The selected channel mode is displayed.
- Edit Favourites: Go to Edit Favourites screen directly.
- Rename channel (analogue channels only): Assign a name of up to five characters to a channel. For example, Food, Golf, etc. This makes it easier to find and select the channel.
- Channel Info: Display details of the selected channel.
- Information: Display details of the selected programme.

Edit Favourites TOOLS 和

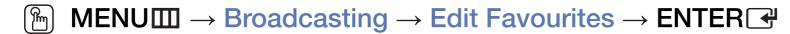

You can add, edit or delete favourite channels.

- 1. Go to Edit Favourites screen.
- 2. Press the ▲/▼ buttons to select the desired channel, and then press ENTER → button.
- 3. Choose a specific favourite list among Favourites 1-5 using **B** (Change Fav.) button, and then press the **C** (Add) button. The selected channel has been added in Favourites 1-5.
 - One favourite channel can be added in several of favourites among Favourites 1-5.

- Using the coloured and function buttons with the Edit Favourites.
 - Red (Category / Change order)
 - Category: Changes the channel mode to All, TV, Radio, Analogue,
 Data/Other, Recently Viewed, Most Viewed. The selected channel mode is displayed.
 - Change order: Changes the favourite channel order.
 - ─ (Done): Completes changing the channel order.
- B Green (Change Fav.): Changes favourite list among Favourites 1-5.
- Yellow (Add / Delete)
 - Add: Adds selected channels to Favourites 1-5.
 - Delete: Deletes the favourite channel from Favourites 1-5.
- Blue (Select All / Deselect All): Selects or deselects all channels at once.

- [0~9] (Go To): Goes to channel directly by pressing numbers (0~9).
- \$\frac{1}{2}\$ (Page): Move to previous or next page.
- $\sqrt{100}$ (Tools): Displays the option menu. The option menu items that appear may differ depending on the channel status and type.
 - Copy to favourites: Edit the selected favourite channel in Favourites
 1-5. You can add or delete from favourite list.
 - Rename Favourites: Assign your own favourite channel name.
 - Edit Channel: Go to Edit Channel screen directly.
 - Information: Display details of the selected programme.

- □ Locking Programme
- Programme Rating Lock (depending on the country)
 - $^{\frown}$ MENU \rightarrow Broadcasting \rightarrow Programme Rating Lock \rightarrow ENTER $^{\frown}$

Prevent unauthorized users, such as children, from watching unsuitable programme with a user-defined 4-digit PIN code. If the selected channel is locked, the " \square " symbol will be displayed.

The items of **Programme Rating Lock** differs depending on the country.

Channel Lock



MENU → Broadcasting → Channel Lock → ENTER

Lock channels in Channel menu to prevent unauthorized users, such as children, from watching unsuitable programme.



Available only when the **Source** is set to **TV**.

- Other Features
- Channel Settings

 - Country (Area)

(depending on the country)

Select your country so that the TV can correctly auto-tune the broadcasting channels.

The PIN input screen appears. Enter your 4 digit PIN number. The default PIN number is "0-0-0-0."

Manual Tuning

Scans for a channel manually and stores in the TV.



According to the channel source, Manual Tuning may be supported.

• **Digital Channel Tuning**: Scans for a digital channel manually and stores in the TV. Press the **New** button to search the digital channels. When scanning has finished, a channel is updated in the channel list.



- Analogue Channel Tuning: Scans for an analogue channel. Press the New button to search the channels by adjusting the Programme, Colour System, Sound System, Channel, Search.
 - (Z) Channel mode
 - P (programme mode): When tuning is complete, the broadcasting stations in your area have been assigned to the position numbers from P0 to P99. You can select a channel by entering the position number in this mode.
 - C (aerial channel mode) / S (cable channel mode): These two modes allow you to select a channel by entering the assigned number for each aerial broadcasting station or cable channel.

Fine Tune

(analogue channels only)

If the signal is weak or distorted, fine tune the channel manually.

- Fine tuned channels are marked with an asterisk "*".
- To reset the fine-tuning, select Reset.

Transfer Channel List

(depending on the country)

Imports or exports the channel map. You should connect a USB storage to use this function.

- The PIN number input screen appears. Enter your 4 digit PIN number.
- Supported file systems are FAT and exFAT.

Subtitle TOOLS




Use this menu to set the **Subtitle** mode.

- Subtitle: Switches subtitles on or off.
- Subtitle Mode (Normal / Hearing Impaired): Sets the subtitle mode.
- Subtitle Language: Sets the subtitle language.
 - If the programme you are watching does not support the **Hearing**Impaired function, **Normal** automatically activates even if the **Hearing**Impaired mode is selected.
 - English is the default in cases where the selected language is unavailable in the broadcast.
- Primary Subtitle: Sets the primary subtitle.
- Secondary Subtitle: Sets the secondary subtitle.

Audio Options

(digital channels only)

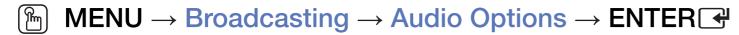

■ Audio Language TOOLS ☐


Change the default value for audio languages.

Primary Audio / Secondary Audio: You can set the primary or secondary audio.

 \mathcal{D} The available language may differ depending on the broadcast.

Audio Format

When sound is emitted from both the main speaker and the audio receiver, a sound echo may occur due to the decoding speed difference between the main speaker and the audio receiver. In this case, use the TV Speaker function.

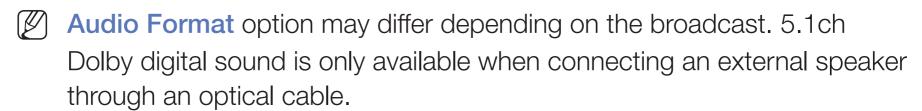

Audio Description (not available in all locations)

This function handles the Audio Stream for the AD (Audio Description) which is sent along with the Main audio from the broadcaster.

Audio Description: Turn the audio description function on or off.

Volume: Adjust the audio description volume.

Teletext Language

(depending on the country)

- MENU → Broadcasting → Teletext Language → ENTER
- Teletext Language
 - English is the default in cases where the selected language is unavailable in the broadcast.
- Primary Teletext / Secondary Teletext
 - Primary Teletext and Secondary Teletext may not be supported in some locations.

Digital Text

(depending on the country)

MENU → Broadcasting → Digital Text → ENTER

If the programme broadcasts with digital text, this feature is enabled.

Only MHEG EPG will function in New Zealand.

Edit Channel Number

(New Zealand only)



Use this to change channel number. When channel number is changed, channel information is not updated automatically.

- ☐ Changing the Preset Picture Mode
- Picture Mode TOOLS □
 - MENU → Picture → Picture Mode → ENTER

Select your preferred picture type.

- When connecting a PC, you can only make changes to the **Entertain** and **Standard**.
- Dynamic: Suitable for a bright room.
- Standard: Suitable for a normal environment.
- Natural for LED 6 series : Suitable for reducing eye strain.
- Movie: Suitable for watching movies in a dark room.
- Entertain: Suitable for watching movies and games.
 - It is only available when connecting a PC.

- □ Adjusting Picture Settings
- Samsung MagicAngle for LED 19", 22" models
 - $\textcircled{\begin{tabular}{ll} \raggreenth{ MENU} \raggreenth{ \end{tabular} } \to \textbf{Picture} \to \textbf{Samsung MagicAngle} \to \textbf{ENTER} \\ \blacksquare \end{tabular}$

Adjust screen viewing Angle to optimize screen quality according to your viewing position.

 Samsung MagicAngle: When viewing the screen at an angle from below or above by setting the appropriate mode for each position, you can obtain a similar picture quality as viewing the screen directly from the front.

Off: Select when viewing from the front position.

Lean Back Mode: Select when viewing from a slightly lower position.

Standing Mode: Select when viewing from the upper position.

- Mode: Adjust screen viewing angle.
- When Samsung MagicAngle is set to Lean Back Mode or Standing Mode, Gamma is not available.

Backlight for LED TV / Cell Light for PDP TV / Contrast / Brightness / Sharpness / Colour / Tint (G/R)

Your television has several setting options for picture quality control.

MOTE

- In analogue TV, AV modes of the PAL system, the Tint (G/R) function is not available.
- When connecting a PC, you can only make changes to
 Backlight for LED TV Cell Light for PDP TV, Contrast, Brightness and Sharpness.
- Settings can be adjusted and stored for each external device connected to the TV.
- Lowering picture brightness reduces power consumption.

Picture Size



Set the various picture options such as picture size and aspect ratio.

- The available items may differ depending on the selected mode.
- Depending on the input source, the picture size options may vary.
- Picture Size TOOLS: Your cable box/satellite receiver may have its own set of screen sizes as well. However, we highly recommend you use 16:9 mode most of the time.

Auto Wide (New Zealand and Singapore available): Automatically adjusts the picture size to the **16:9** aspect ratio.

16:9: Sets the picture to 16:9 wide mode.

Wide Zoom: Magnifies the picture size more than 4:3.

Adjusts the Position by using ▲, ▼ buttons.

Zoom: Magnifies the 16:9 wide pictures vertically to fit the screen size.



4:3: Sets the picture to basic (4:3) mode.

Do not watch in 4:3 format for a long time. Traces of borders displayed on the left, right and centre of the screen may cause image retention (screen burn) which are not covered by the warranty.

Screen Fit: Displays the full image without any cut-off when HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) signals are inputted.

Smart View 1 for LED 6 series: Reduces original screen by 50%.

Smart View 2 for LED 6 series: Reduces original screen by 25%.

MOTE

- Smart View 1 is enabled only in HDMI mode.
- Smart View 2 is enabled only in DTV and HDMI modes.
- The picture size can vary depending on the input resolution when content is played using Videos under Media Play.
- Zoom/Position: Adjust the picture size and position. It is only available in Zoom.
- Position: Adjust the picture position. It is only available in Screen Fit or Wide Zoom.



- After selecting Screen Fit in HDMI (1080i / 1080p) or Component (1080i / 1080p) mode, you may need to centre the picture:
 - 1. Select the Position. Press the ENTER button.
 - 2. Press the \triangle , ∇ , \triangleleft or \triangleright button to move the picture.
- If you want to reset the position you adjusted, select Reset in the Position screen. The picture will be set to its default position.
- If you use the **Screen Fit** function with HDMI 720p input, 1 line will be cut at the top, bottom, left and right as in the overscan function.
- 4:3 Screen Size: Available only when picture size is set to Auto Wide. You can determine the desired picture size at the 4:3 WSS (Wide Screen Service) size or the original size. Each country requires different picture size.



You can watch the TV tuner and one external video source simultaneously. PIP (Picture-in-Picture) does not function in the same mode.

NOTE

- If you turn the TV off while watching in PIP mode, the PIP window will disappear.
- You may notice that the picture in the PIP window becomes slightly unnatural when you use the main screen to view a game or karaoke.

PIP settings

Main picture	Sub picture
Component, HDMI	TV

- PIP: Activate or deactivate the PIP function.
- Channel: Select the channel for the sub-screen.
- Size: Select a size for the sub-picture.
- Position: Select a position for the sub-picture.
- Sound Select: You can choose the desired sound in PIP mode.

- Changing the Picture Options
- Advanced Settings
 - $\fbox{MENU} \longrightarrow \textbf{Picture} \rightarrow \textbf{Advanced Settings} \rightarrow \textbf{ENTER} \raiset{\raise}$

(available in **Standard / Movie** mode)

You can adjust the detailed setting for the screen including colour and contrast.

- When connecting a PC, you can only make changes to the White Balance and Gamma.
- Dynamic Contrast: Adjust the screen contrast.
- Black Tone: Select the black level to adjust the screen depth.
- Flesh Tone: Adjust the flesh tone colour.

- RGB Only Mode: Displays the Red, Green and Blue colour for making fine adjustments to the hue and saturation.
- Colour Space: Adjust the range of colours available to create the image.
 To adjust Colour, Red, Green, Blue and Reset, set Colour Space to

Custom. for PDP TV / LED 6 series

White Balance: Adjust the colour temperature for a more natural picture.
 R-Offset / G-Offset / B-Offset: Adjust each colour's (red, green, blue) darkness.

R-Gain / G-Gain / B-Gain: Adjust each colour's (red, green, blue) brightness.

Reset: Resets the White Balance to its default settings.

• 10p White Balance for PDP TV / LED 6 series: Controls the white balance in 10 point interval by adjusting the red, green, and blue brightness.

Available when the picture mode is set to **Movie** and when the external input is set to all input.

Some external devices may not support this function.

Interval: Select interval to adjust.

Red: Adjust the red level.

Green: Adjust the green level.

Blue: Adjust the blue level.

Reset: Resets the 10p White Balance to its default settings.

Gamma: Adjust the primary colour intensity.

- Expert Pattern for PDP TV/LED 6 series: By running the Expert Pattern function, the picture can be calibrated without a generator or filter. If the OSD menu disappears or a menu other than the Picture menu is opened, the calibration is saved and the Expert Pattern window disappears.
 - While the Expert Pattern is running, sound is not outputted.
 - Only enabled on Component / HDMI mode.
- Motion Lighting: Reduce power consumption by brightness control adapted motion.
 - This function is not supported in 3D mode. for PDP 4900 / LED 6 series
 - Only available in **Standard** mode.
 - When changing a setting value of **Backlight** for LED TV / Cell Light for PDP TV, Brightness or Contrast, Motion Lighting will be set to Off.

Picture Options



When connecting a PC, you can only make changes to the Colour Tone.

Colour Tone

Warm1 or Warm2 will be deactivated when the picture mode is Dynamic.

Settings can be adjusted and stored for each external device connected to an input on the TV.

- Digital Clean View: If the broadcast signal received by your TV is weak, you
 can activate the Digital Clean View feature to reduce any static and ghosting
 that may appear on the screen.
 - When the signal is weak, try other options until the best picture is displayed.

Auto Visualisation: When changing analogue channels, displays signal strength.

- Only available for analogue channels.
- (V) When the INFO button is pressed, the signal strength bar is displayed.
- (P) When bar is green, you are receiving the best possible signal.
- MPEG Noise Filter: Reduces MPEG noise to provide improved picture quality.

- HDMI Black Level: Selects the black level on the screen to adjust the screen depth.
 - Available only in **HDMI** mode (RGB signals).
- Film Mode: Sets the TV to automatically sense and process film signals from all sources and adjust the picture for optimum quality.
 - The Cinema Smooth function is only activated when HDMI 24Hz signal is inputted. for PDP TV
 - Available in TV mode and external input mode which supports SD (480i / 576i) and HD (1080i) except in when connected to a PC.
 - If the screen does not seem natural, change its option to Off / Auto1 / Auto2 in Film Mode.
- Analog Clean View (analogue channels only): Reduces diagonal noise in picture caused by the crosstalk of signals.

- Motion Plus for LED 6 series: Removes drag from fast scenes with a lot of movement to provide a clearer picture.
 - The Info screen on your TV displays the resolution and frequency of the incoming signal (60Hz), but not the frequency the TV is generating for the image it is displaying by using **Motion Plus** function.
 - If noise occurs on the screen, please set up the Motion Plus to Off. If Motion Plus is Custom, you can set up the Blur Reduction, Judder Reduction or Reset manually.
 - If Motion Plus is Demo, you can compare the difference of on and off modes.

Blur Reduction: Adjusts the blur reduction level from video sources.

Judder Reduction: Adjusts the judder reduction level from video sources when playing films.

LED Clear Motion: Removes drag from fast scenes with a lot of movement to provide a clear picture.



The screen may become slightly darker when you play LED Clear Motion.


Reset: Reset the custom settings.

• Black Optimiser for PDP TV: Realizes of the black colour deeply and expands the contrast ratio.



When the TV is operating other applications, it will be deactivated. (ex. Media Play, PIP, Teletext)

Picture Off

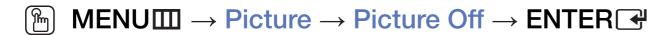

The screen is turned off but the sound remains on. Press any button except volume button to turn on the screen.

Reset Picture



Resets your current picture mode to its default settings.

- ☐ Changing the Preset Sound Mode
- Sound Mode

 - Standard: Selects the normal sound mode.
 - Music: Emphasizes music over voices.
 - Movie: Provides the best sound for movies.
 - Clear Voice: Emphasizes voices over other sounds.
 - Amplify: Increase the intensity of high-frequency sound to allow a better listening experience for the hearing impaired.
 - If Speaker Select is set to External Speaker, Sound Mode is disabled.

- Adjusting Sound Settings
- Sound Effect

(standard sound mode only)

- $\begin{tabular}{ll} \hline \raise MENU & \longrightarrow Sound \longrightarrow Sound Effect \longrightarrow ENTER \blacksquare \\ \hline \end{tabular}$
- DTS TruSurround

This function provides a virtual 5.1 channel surround sound experience through a pair of speakers using HRTF (Head Related Transfer Function) technology.

DTS TruDialog

This function allows you to increase the intensity of a voice over background music or sound effects so that dialogue can be heard more clearly.

Equaliser

Use Equaliser to customize sound setting for each speaker.


Balance: Adjusts the balance between the right and left speaker.

100Hz / 300Hz / 1kHz / 3kHz / 10kHz (Bandwidth Adjustment): Adjusts the level of specific bandwidth frequencies.

Reset: Resets the equaliser to its default settings.



3D Audio for PDP 4900 / LED 6 series

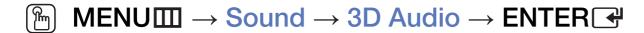

3D audio technology provides the immersive sound corresponding to the pop-up effect of 3D video by audio depth control in perspective.

Available in only when watching 3D image.

Speaker Settings

- MENU → Sound → Speaker Settings → ENTER
- Speaker Select TOOLS,

A sound echo may occur due to a difference in decoding speed between the main speaker and the audio receiver. In this case, set the TV to **External Speaker**.

- When Speaker Select is set to External Speaker, the volume and MUTE buttons will not operate and the sound settings will be limited.
- When Speaker Select is set to External Speaker.
 - TV Speaker: Off, External Speaker: On
- When Speaker Select is set to TV Speaker.
 - TV Speaker: On, External Speaker: On
- If there is no video signal, both speakers will be mute.

Auto Volume

To equalize the volume level on each channel, set to **Normal**.

Night: This mode provides an improved sound experience compared to Normal mode, making almost no noise. It is useful at night.



To use the volume control on the source device connected to the TV, set **Auto Volume** to **Off** on the TV. Otherwise, a change to the volume control of the source device may not be applied.

Additional Settings



- DTV Audio Level (digital channels only): This function allows you to reduce the disparity of a voice signal (which is one of the signals received during a digital TV broadcast) to a desired level.
 - According to the type of broadcast signal, MPEG / HE-AAC can be adjusted between -10dB and 0dB.
 - To increase or decrease the volume, adjust between the range 0 and -10 respectively.

 Digital Audio Out: Digital Audio Out is used to provide digital sound, reducing interference going to speakers and various digital devices such as a DVD player.

Audio Format: You can select the Digital Audio output format. The available Digital Audio output format may differ depending on the input source.

By connecting to 5.1ch speakers in a Dolby Digital setup, maximize your interactive 3D sound experience.

Audio Delay: Correct audio-video sync problems, when watching TV or video, and when listening to digital audio output using an external device such as an AV receiver (0ms ~ 250ms).

- **Dolby Digital Comp**: This function minimizes signal disparity between a dolby digital signal and a voice signal (i.e. MPEG Audio, HE-AAC, ATV Sound).
 - Select Line to obtain dynamic sound, and RF to reduce the difference between loud and soft sounds at night time.

Line: Set the output level for signals greater or less than -31dB (reference) to either -20dB or -31dB.

RF: Set the output level for signals greater or less than -20dB (reference) to either -10dB or -20dB.

Reset Sound




Reset all sound settings to the factory defaults.

☐ Selecting the Sound Mode TOOLS ☐

When you set to Dual I-II, the current sound mode is displayed on the screen.

	Audio Type	Dual I-II	Default
A2 Stereo	Mono	Mono	Automatic change
	Stereo	Stereo ↔ Mono	
	Dual	Dual I ↔ Dual II	Dual I
NICAM Stereo	Mono	Mono	Automatic change
	Stereo	Mono ↔ Stereo	
	Dual	Mono → Dual I	Dual I
		Note: No	

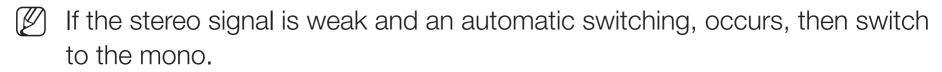

- Only activated in stereo sound signal.
- Only available when the **Source** is set to **TV**.

- Executing initial setup
- Setup

Configure the channels and the time when setting up the TV for the first time or when resetting the unit.

Execute the initial setup following instructions that the TV guides.

- □ Setting the Time
- Time
 - $\begin{tabular}{ll} \hline \begin{tabular}{ll} \hline \endth \endth \endth \endth \endth \endth \endth \endth \endth \$

The current time will appear every time you press the **INFO** button.

- Clock: Setting the clock is for using various timer features of the TV.
 If you disconnect the power cord, you have to set the clock again.
 Clock Mode: Set up the current time manually or automatically.
 - Auto: Set the current time automatically using the time from a digital channel.
 - The aerial must be connected in order to set the time automatically.

- Manual: Set the current time manually.
- Depending on the broadcast station and signal, the auto time set up may not be correct. In this case, set the time manually.

Clock Set: Set the Date and Time.

- Available only when Clock Mode is set to Manual.
- You can set the **Date** and **Time** directly by pressing the number buttons on the remote control.

Time Zone (Australia only): Select your time zone.

 \nearrow This function is only available when the **Clock Mode** is set to **Auto**.

Time Offset for PDP 4900 series: Adjusts the time when your TV receives the time information via Internet. Set the right time by selecting an offset.

The current time will be set through a network, if the TV fails to receive the time information including the broadcast signal from TV stations. (ex: Watching TV via set-top box, Satellite receiver, or etc)

Using the Sleep Timer

- MENU → System → Time → Sleep Timer → ENTER
- Sleep Timer TOOLS: Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes)
 - Use the ▲/▼ buttons to select a period of time, and then press ENTER ♣. To cancel the Sleep Timer, select Off.

□ Setting the On / Off Timer

On Timer: You can set up three separate On Timer configurations.
 Setup: Select Off, Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun or
 Manual to set at your convenience. If you select Manual, you can set up the day you want to activate the timer.

 \nearrow The \checkmark mark indicates the day you've selected.

Time: Set the hour and minute.

Volume: Set the desired volume level.

Source: To select the source of the content that will play when the TV turns on. You can:

- Select TV and have the TV display a specific air channel.
- Select USB and have the TV play back photo or audio files from a USB device.
- Select a source on your TV that you have connected a set-top box to, and have the TV display a channel from the set-top box.
- The USB device must be connected to your TV before you can select USB.

- If you select a source other than TV or USB, you must:
 - Have a cable or satellite set-top box attached to that source
 - Set the set-top box to the channel you want to watch when the TV goes on
 - Leave the set-top box turned on.
- When you select a source other than TV or USB, the Aerial and Channel options will disappear.

Aerial (when the Source is set to TV): Select ATV or DTV.

Channel (when the Source is set to TV): Select the desired channel.

Music / Photo (when the Source is set to USB): Select a folder in the USB device containing music or photo files to be played when the TV is turned on automatically.

- If there is no music file on the USB device or the folder containing a music file is not selected, the timer function does not operate correctly.
- When there is only one photo file in the USB device, the slide show will not play.
- If a folder name is too long, the folder cannot be selected.
- Each USB you use is assigned its own folder. When using more than one
 of the same type of USB, make sure the folders assigned to each USB
 have different names.

- It is recommended that you use a USB memory stick and a multi card reader when using On Timer.
- The On Timer function may not work with USB devices with a built-in battery, MP3 players, or PMPs made by some manufacturers because these devices take a long time to be recognized.
- Off Timer: You can set up three separate Off Timer configurations.
 Setup: Select Off, Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun or
 Manual to set at your convenience. If you select Manual, you can set up the day you want to activate the timer.
 - \mathbb{Z} The \checkmark mark indicates the day you've selected.

Time: Set the hour and minute.

- Economical Solutions
- Eco Solution
 - $\textcircled{MENU} \longrightarrow \textbf{System} \rightarrow \textbf{Eco Solution} \rightarrow \textbf{ENTER} \textcircled{\#}$
 - Energy Saving: This adjusts the brightness of the TV in order to reduce power consumption.
 - Eco Sensor for PDP TV/LED 6 series: To enhance your power savings; the picture settings will automatically adapt to the light in the room.
 - If you adjust the **Backlight** for LED TV / Cell Light for PDP TV, the Eco Sensor will be set to Off.
 - Min. Backlight for LED TV / Min Cell Light for PDP TV : When Eco Sensor is On, the minimum screen brightness can be adjusted manually.
 - If Eco Sensor is On, the display brightness may change (become slightly darker or brighter) depending on the surrounding light intensity.

- No Signal Power Off: To avoid unnecessary energy consumption, set how long you want the TV to remain on if it's not receiving a signal.
 - Disabled when the PC is in power saving mode.
- Auto Power Off: The TV will be automatically turned off when no user operation is received for 4 hours.
 - If the Auto Power Off option is set to Off, the TV will stay on even if no operations are performed on the TV.

- Other Features
- Auto Protection Time for LED TV
 - MENUШ → System → Auto Protection Time → ENTER →
 - Auto Protection Time: If the screen remains idle with a still image for a certain period of time defined by the user, the screen saver is activated to prevent the formation of ghost images on the screen.

Screen Burn Protection for PDP TV

$\textcircled{\begin{tabular}{ll} \raggreenthat{MENU} \to System \to Screen Burn Protection \to ENTER \blacksquare \\ \end{matrix}$

To reduce the possibility of screen burn, this unit is equipped with Pixel Shift screen burn prevention technology. Pixel Shift moves the picture slightly on the screen. The Time function setting allows you to programme the time between movement of the picture in minutes.

Your TV also has the following additional screen burn protection functions:

- Pixel Shift
- Auto Protection Time
- Scrolling
- Side Grey

- Pixel Shift: Using this function, you can set the TV to move pixels minutely on the PDP screen in a horizontal or vertical direction to minimize after images on the screen.
 - Available Pixel Shift Settings and Optimum Settings

	Item	TV / HDMI
Horizontal	0~4	4
Vertical	0~4	4
Time (minute)	1~4 min	4 min

- The Pixel Shift value may differ depending on the monitor size (inches) and mode.
- This function is not available in the Screen Fit mode.
- Auto Protection Time: If the screen displays a still image for a certain period of time you define, the TV activates the screen saver to prevent the formation of burnt in ghost images on the screen.

- Scrolling: This function removes after-images on the screen by illuminating all the pixels on the PDP according to a pattern. Use this function when there are after images or symbols on the screen, especially when you displayed a still image on the screen for a long time.
 - The after-image removal function has to be executed for a long time (approximately 1 hour) to effectively remove after-images on the screen. If the after-image is not removed after you apply the function, repeat the function again.
 - Press any key on the remote control to cancel this feature.
- Side Grey: When you watch TV with the screen ratio set to 4:3, using the Side Grey function can prevent damage to the edges of the screen by adjusting the white balance on the extreme left and right sides.

General

MENU → System → General → ENTER


 Game Mode: When connecting to a game console such as PlayStation™ or Xbox™, you can enjoy a more realistic gaming experience by selecting game mode.

NOTE

- Precautions and limitations for game mode
 - To disconnect the game console and connect another external device, set Game Mode to Off in the setup menu.
 - If you display the TV menu in Game Mode, the screen shakes slightly.

- Game Mode is not available in TV mode.
- After connecting the game console, set Game Mode to On.
 Unfortunately, you may notice reduced picture quality.
- If Game Mode is On:
 - Picture Mode is set to Standard and Sound Mode is set to Movie.
- Panel Lock: Lock or unlock all the keys on the panel.
- Boot Logo: Display Samsung logo when the TV is turned on.

Change PIN

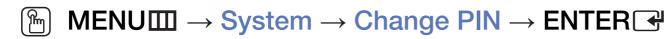

Change your password required to set up the TV.

The PIN input screen appears before the setup screen.

Enter your 4-digit PIN. Change the PIN using the Change PIN option.

DivX® Video On Demand



Shows the registration code authorized for the TV. If you connect to the DivX web site and register with 10-digit registration code, you can download the VOD activation file.

Once you play it using Videos, the registration is completed.

For more information on DivX® VOD, visit http://vod.divx.com.

☐ Using the Source List

Source List

- $\begin{tabular}{ll} \hline \raggreent \hline \raggre$
- When you press the **SOURCE** button, **Source** screen will be displayed at once.
- You can only choose external devices that are connected to the TV. In **Source**, connected inputs are highlighted.
- For the detailed information, refer to "Changing the Input Source" in User Manual.

□ Connecting a USB Device

- **1.** Turn on your TV.
- 2. Connect a USB device containing photo, music and movie files to the USB port on the side of the TV.
- **3.** When USB is connected to the TV, popup window appears. You can select the **Photos**, **Videos** or **Music** directly.

- It might not work properly with unlicenced multimedia files.
- Need-to-Know List before using Media Contents
 - MTP (Media Transfer Protocol) is not supported.
 - Supported file systems are FAT and exFAT.
 - Certain types of USB Digital camera and audio devices may not be compatible with this TV.
 - Media Contents only supports sequential jpeg format.
 - Media Contents only supports USB Mass Storage Class (MSC) devices.
 MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives, Flash Card Readers (USB HUB are not supported). Devices should be connected directly to the TV's USB port.

- Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.
- The HDD (Hard Disk Drive) connected to USB is not supported.
- Do not disconnect the USB device while it is loading.
- The higher the resolution of the image, the longer it takes to display on the screen.
- The maximum supported JPEG resolution is 15360 x 8640 pixels.
- For unsupported or corrupted files, the "Not Supported File Format" message is displayed.
- The scene search and thumbnail functions are not supported in the Videos.

- MP3 files with DRM that have been downloaded from a non-free site cannot be played. Digital Rights Management (DRM) is a technology that supports the creation, distribution and management of the content in an integrated and comprehensive way, including the protection of the rights and interests of the content providers, the prevention of the illegal copying of contents, as well as managing billings and settlements.
- PTP connection mode is fully available only with digital cameras. When connecting a smartphone or tablet to the TV using PTP mode, it may not be recognized.
- A USB device that requires high power (more than 500mA or 5V) may not be supported.
- If the TV has been no input during time set in Auto Protection Time, the screen saver will run.

- The power-saving mode of some external hard disk drives may be released automatically when connected to the TV.
- If a USB extension cable is used, the USB device may not be recognized or the files on the device may not be read.
- If a USB device connected to the TV is not recognized, the list of files on the device is corrupted or a file in the list is not played, connect the USB device to the PC, format the device and check the connection.
- If a file deleted from the PC is still found when Media Contents is run, use the "Empty the Recycle Bin" function on the PC to permanently delete the file.
- If the number of files and folders saved on a USB storage device is approximately over 4000, the files and folders may not appear and some folders may not be opened.

Disconnecting a USB Device

- 1. Press the **SOURCE** button.
- 2. Select a desired USB device, and then press the **TOOLS** button. The **Tools** menu appears.
- 3. Select Disconnect USB Device, and then wait until the selected USB device is disconnected. You can remove a USB device from the TV.
- To remove a USB device from the TV, we recommend use **Disconnect USB Device** function.

□ Using the Media Contents

 $\textcircled{MENU} \longrightarrow \textbf{Applications} \rightarrow \textbf{Media Play} \rightarrow \textbf{ENTER} \textcircled{+}$

Enjoy photos, music and movie files saved on a USB Mass Storage Class (MSC) device.

- 1. Press the **MEDIA.P** button.
- 2. Press ◀/▶ button to select desired menu (Photos, Videos, Music), then press the ENTER → button.
- Press ◄/► button to select desired device, then press the ENTER → button again.
- **4.** Press the $\triangle/\nabla/\blacktriangleleft/\triangleright$ button to select the desired file in the list, then press the **ENTER** button or \triangleright (Play) button.

Playing the selected files

- Press the ▲ button to select Options at the top of each main screen and select Play Selected.
- 2. Select the desired files.
 - The check box appears to the left of the selected files.
 - Press ENTER button again to deselect the file.
- 3. Press the ▲ button to select Play.
 - You can select or deselect all files pressing the Select All / Deselect All.

☐ Playing the Photos / Videos / Music

During playing a file, press the $\triangle/\nabla/\blacktriangleleft/\triangleright$ button to select the desired menu.

- When the option menu is not displayed, press the **TOOLS** button or **ENTER** button.
- You can also use ►/II/ ►/ buttons on the remote control during playback.
- If you press the **INFO** button during playback, you can view the playback information.

Playback menu

Button	Operation	Photos	Videos	Music
(/)	Previous / Next	•		
	Start Slide Show / Stop Slide Show	•		
	Play / Pause	Mini Player*	•	•
M / M	Previous / Next	Mini Player*	•	•
4 / >	Rewind / Fast forward		•	•

^{*}When setting the Background Music to Mini Player in Photos, these buttons appear.

Setting menu

Photos

Button	Operation		
	Slide Show Settings	You can set the Speed and Effects during the slide show.	
(Q)	Zoom	You can zoom into images in full screen mode.	
[O]	Rotate	You can rotate images in full screen mode.	
	Background Music / Mini Player	You can set background music when watching a slide show. / You can control simple playback menus.	
#	Settings	Picture Mode / Sound Mode: You can adjust the picture or sound setting.	
		Information: You can see detailed information about the played file.	





During the slide show, you can adjust the slide show speed using ◄ (REW) or ► (FF) button.

Supported Photo Formats

For the details, refer to "Specifications" in User Manual.

Videos

Button	Operation		
Q	Search	Search Titles: You can move the other file directly.	
		Search Time Bar: You can search the video using ◀ and ▶ button at one minute interval or entering the number directly.	
		It may not be supported depending on the input source.	
(\$)	Repeat Mode	You can play movie files repeatedly.	
	Picture Size	You can adjust the picture size to your preference.	
\$	Settings	Subtitle Settings: You can play the video with subtitles. This function only works if the subtitles are the same file name as the video.	
		Audio Language: You can change the audio language if the video has more than one language.	
		Picture Mode / Sound Mode: You can adjust the picture or sound setting.	
		Information: You can see detailed information about the played file.	

- If video time information is unknown, play time and progress bar are not displayed.
- In this mode, you can enjoy movie clips contained on a Game, but you cannot play the Game itself.
- Supported Subtitle / Video Formats
 - For the details, refer to "Specifications" in User Manual.

Music

Button	Operation		
(\$)	Repeat	You can play music files repeatedly.	
[x]	Shuffle	You can play the music randomly.	
	Sound Mode	You can adjust the sound setting.	

- Only displays the files with supported music file extension. Other file extensions are not displayed, even if they are saved on the same USB device.
- If the sound is abnormal when playing music files, adjust the **Equaliser** in the **Sound** menu. (An over-modulated music file may cause a sound problem.)
- Supported Music Formats
 - For the details, refer to "Specifications" in User Manual.

Setting the Encoding language

Set the encoding language if the text is not supported.

- Press the ▲ button to select Options at the top of music main screen and select Encoding.
- 2. Select the desired encoding language.

□ Using the 3D function

for PDP 4900 / LED 6 series

Viewing TV using the 3D function

IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D PICTURES.

Read and understand the following safety information before using the TV's 3D function.

MARNING

- Some viewers may experience discomfort while viewing 3D TV such as dizziness, nausea and headaches. If you experience any such symptom, stop viewing 3D TV, remove 3D Active Glasses and rest.
- Watching 3D images for an extended period of time may cause eye strain. If you feel eye strain, stop viewing 3D TV, remove your 3D Active Glasses and rest.

- A responsible adult should frequently check on children who are using the 3D function. If there are any reports of tired eyes, headaches, dizziness, or nausea, have the child stop viewing 3D TV and rest.
- Do not use the 3D Active Glasses for other purposes (such as general eyeglasses, sunglasses, protective goggles, etc.)
- Do not use the 3D function or 3D Active Glasses while walking or moving around. Using the 3D function or 3D Active Glasses while moving around may result in injuries due to running into objects, tripping, and/or falling.

Before using 3D function...

- 3D Active Glasses from Samsung's previous product (IR type) or other manufacturers not be supported.
- When the TV is initially powered on, may take some time until the 3D display is optimized.

- The 3D Active Glasses may not work properly if there is any other 3D product or electronic devices turned on near the glasses or TV. If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses.
- Be sure to stay within the viewing angle and optimum TV viewing distance when watching 3D pictures. Otherwise, you may not be able to enjoy proper 3D effects.
- The ideal viewing distance should be three times or more the height of the screen. We recommend sitting with viewer's eyes on a level with the screen.
- If you can not play 3D videos in some of the BD players, take out the disk from player and put it again, or restart the BD player.





This exciting new feature enables you to view 3D content.

- "Full HD 3D Glasses™" Logo indicates compatibility between display products and 3D Glasses which are compliant with the "Full HD 3D Glasses™" format, and does not indicate picture quality of display products.
- Some 3D modes may not be available depending on the format of the image source.
- When you watch 3D images under flickering lighting such as a fluorescent lamp (50Hz ~ 60Hz) or a 3 wavelength lamp, you may notice some screen flickering. If this occurs, dim or turn off the light.

3D Mode

If you want to feel the 3D effect fully, please wear the 3D Active Glasses first, and then select **3D Mode** from the list below that provides the best 3D viewing experience.

	3D Mode	Operation	
Off	Off	Turns the 3D function off.	
2D→3D	2D → 3D	Changes a 2D image to 3D. Some file format may not be supported.	
* *	Side by Side	Displays two images next to each other.	
*	Top & Bottom	Displays one image above another.	



3D Mode is set to memorised configuration value automatically, when changing the input source.

- 3D Perspective: Adjust overall 3D perspective of on-screen image.
- Depth: Adjust overall depth.
- L/R Change: Swap the left and right pictures.
- $3D \rightarrow 2D$: Displays the image for the left eye only.
 - This function is deactivated when 3D Mode set to " , or " of ".

Support resolution (16:9 only)

HDMI

Source	Resolution	Frequency (Hz)
* * / *	1280 x 720p	50 / 59.94 / 60 Hz
/ m	1920 x 1080i	50 / 59.94 / 60 Hz
	1920 x 1080p	23.98 / 24 / 25 / 29.97 / 30 / 50 / 59.94 / 60 Hz
Frame Packing	1280 x 720p	50 / 59.94 / 60 Hz
	1920 x 1080i	50 / 59.94 / 60 Hz
	1920 x 1080p	23.98 / 24 / 25 / 29.97 / 30 Hz

Components & DTV

Source	Resolution	Frequency (Hz)
Components	1280 x 720p	50 / 59.94 / 60 Hz
	1920 x 1080i	50 / 59.94 / 60 Hz
	1920 x 1080p	23.98 / 24 / 25 / 29.97 / 30 / 50 / 59.94 / 60 Hz
DTV	1280 x 720p	50 / 59.94 / 60 Hz
	1920 x 1080i	50 / 59.94 / 60 Hz
	1920 x 1080p	25 Hz

Videos / Photos (In Media Play)
 For the details, refer to "Specifications" in User Manual.

- ☐ Viewing the e-Manual
- e-Manual
 - $\textcircled{MENU} \longrightarrow \textbf{Support} \rightarrow \textbf{e-Manual} \rightarrow \textbf{ENTER} \textcircled{-}$

You can read the introduction and instructions about the TV features stored in your TV.

For the detailed information about e-Manual Screen, refer to "How to use the e-Manual" in User Manual.

- □ Using the Self Diagnosis
- Self Diagnosis

Self Diagnosis might take few seconds, this is part of the normal operation of the TV.

- Picture Test: Use to check for picture problems.
- Sound Test: Use the built-in melody sound to check for sound problems.
 - If you hear no sound from the TV's speakers, before performing the sound test, make sure **Speaker Select** is set to **TV Speaker** in the **Sound** menu.
 - The melody will be heard during the test even if **Speaker Select** is set to **External Speaker** or the sound is muted by pressing the **MUTE** button.

- Signal Information (digital channels only): HDTV channel's reception quality is either perfect or the channels are unavailable. Adjust your aerial to increase signal strength.
- Reset: Reset all settings to the factory defaults except network settings.
 - The PIN input screen appears before the setup screen.
 - Enter your 4-digit PIN. Change the PIN using the Change PIN option.

- Updating the Software
- Software Update
 - MENU → Support → Software Update → ENTER

The **Software Update** menu lets you upgrade your TV's software to the latest version.

Current version: This is the software version already installed in the TV.

When software is upgraded, video and audio settings you have made will return to their default settings. We advise you to write down your settings so that you can easily reset them after the upgrade.

Update now

- By USB: Insert a USB drive containing the firmware upgrade file, downloaded from "www.samsung.com" into the TV.
 - Please be careful not to disconnect the power or remove the USB drive until upgrades are complete. The TV will be turned off and on automatically after completing the firmware upgrade.
- Auto update: A manual upgrade will be automatically performed at selected time. Since the power of the unit is turned on internally, the screen may be turned on slightly for the product. This phenomenon may continue for more than 1 hour until the software upgrade is complete.

- □ Changing the Use Mode
- Use Mode
 - $\begin{tabular}{ll} \hline \ragged MENU & \longrightarrow Support \rightarrow Use\ Mode \rightarrow ENTER \\ \hline \ragged & \rightarrow Use\ Mode \\ \hline \agged & \rightarrow Use\ Mode \\ \$

Select the **Use Mode** suitable for your place. We strongly recommend you select **Home Use**.

- Home Use: Home Use is the default setting.
- Store Demo: Store Demo is for retail environments only. If you select Store Demo, some functions will not work, and the picture settings will be reset every 30 minutes.

- Viewing the Contact Samsung
- Contact Samsung

View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centres, and how to download products and software.

- Using the Sports Mode
- Sports Mode

This mode provides optimized condition for watching sports games.

- When the **Sports Mode** is **On**, the picture and sound modes are set to **Stadium** automatically.
- If you turn the TV off while watching **Sports Mode**, the **Sports Mode** will be disable.

☐ Using the Wireless Network

for PDP 4900 series

Using wireless IP sharer (router or modem), you can connect your TV to the wireless network.

For detailed settings for wireless network connection, refer to the User Manual.

MOTE

- To use a wireless network, your TV must be connected to a wireless IP sharer (either a router or a modem). If the wireless IP sharer supports DHCP, your TV can use a DHCP or static IP address to connect to the wireless network.
- Select a channel for the wireless IP sharer that is not currently being used.
 If the channel set for the wireless IP sharer is currently being used by another device nearby, this will result in interference and communication failure.

- You need to change the wireless router's security settings to AES. WEP security settings don't support WPS Connection.
- If HIGH PURE THROUGHPUT (Greenfield) 802.11n mode is selected and the Encryption type is set to WEP for your wireless router, Samsung TVs will not support a connection in compliance with new Wi-Fi certification specifications.
- If your wireless router supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode.


- If your router, modem, or device is not certified, it may not connect to the TV via the "Samsung Wireless LAN Adapter".
- Connection Methods: You can setup the wireless network connection like below.
 - Auto Setup (Using the Auto Network Search function)
 - Manual Setup
 - WPS(PBC)
 - Wi-Fi Direct

- Ensure the TV is turned off before you connect the Samsung Wireless LAN Adapter.
- The Samsung Wireless LAN Adapter may not be recognized when using a connection via a USB hub or via a USB extension cable other than the cable supplied.
- You must use the "Samsung Wireless LAN Adapter" (WIS12ABGNX, WIS09ABGNX) to use a wireless network. Samsung Wireless LAN Adapter and the USB extension Cable are sold separately and are offered by select retailers and Ecommerce sites.

How to connect the Samsung Wireless LAN Adapter

- 1 Connect using the USB right angle adapter.
- 2 Connect via an extension cable



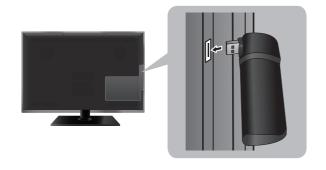



- The picture may appear corrupted or have static for some channels when the TV is connected to the Samsung Wireless LAN Adapter. In such a case, connect the Samsung Wireless LAN Adapter using a USB cable in a place that is not affected by radio interference.
- The position of port may differ depending on the model.

Network Status



MENUШ → Network → Network Status → ENTER →

You can check the current network and Internet status.

Network Settings



MENUⅢ → Network → Network Settings → ENTER →

Set the network connection to use AllShare™.



The Internet can't be used other than content sharing via AllShare™.

Auto Network Setup

Most wireless networks have an optional security system that requires devices that access the network to transmit an encrypted security code called an Access or Security Key. The Security Key is based on a Pass Phrase, typically a word or a series of letters and numbers of a specified length you were asked to enter when you set up wireless security for your wireless network. If you use this method of setting up the network connection, and have a Security Key for your wireless network, you will have to enter the Pass Phrase during the setup process.




When connecting Samsung Wireless LAN Adapter, the screen pop-up appears directly to set wireless network.

- Go to Network Settings screen.
 (Network → Network Settings)
- 2. The Network function searches for available wireless networks. When done, it displays a list of the available networks.
- 3. In the list of networks, press the ▲ or ▼ button to select a network, and then press ENTER → button.
 - If the wireless router is set to Hidden (Invisible), you have to select **Add**Network and enter the correct network name and Security key to establish the connection.
- **4.** If the Security screen pop-up appears, go to step 6. The wireless router which does not have wireless security, go to step 7.





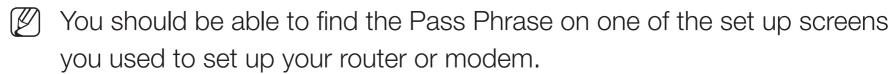

- 6. The network connection screen appears, and network setting is done.
 - If it fails to set Security key (Security or PIN), select Retry or IP Settings.
 - If you want to set connection manually, select the IP Settings. Refer to following "How to set up manually".
 - If you select Change Network, you can select other wireless networks.

How to set up WPS(PBC)

If your router has a WPS(PBC) button, follow these steps:

- 1. The Network function searches for available wireless networks. When done, it displays a list of the available networks.
- 2. Select the WPS(PBC).
- **3.** Press the WPS(PBC) button on your router within 2 minutes. Your TV automatically acquires all the network setting values it needs and connects to your network.
- 4. The network connection screen appears, and network setting is done.

Manual Network Setup

Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.

You can find the network connection values in control panel of Windows computers.

How to set up manually

To set up your TV's cable network connection manually, follow these steps:

- 1. Select the IP Settings on network connection screen.
 - When it fails to connect the wireless network automatically, the IP Settings is available to select.
- 2. Set IP setting to Enter manually.
- 3. Move to each field using $\triangle/\nabla/\blacktriangleleft/\triangleright$ buttons. Enter the network connection values, and then select $\bigcirc K$.
- 4. The network connection screen appears, and network setting is done.

The check list for wireless network connection failure

When wireless network connection failed, try to apply the following information to each issue.

Issues		Solutions and Explanations
Wireless network connection failed.	•	No wireless router selected. Go to Network Settings to select your router.
	•	Samsung Wireless LAN adapter is required to use a wireless network.
	•	Make sure the TV is connected to a wireless IP sharer (Router).
IP auto setting failed.	•	Try the following to set your IP address automatically or set your IP address manually by selecting IP Settings.
	•	Ensure DHCP server is enabled on router and unplug and re-plug-in the router.
	•	Check if you need to enter a security key to use the router.
	•	Contact your Internet Service Provider for more information.

Issues	Solutions and Explanations
Unable to connect to wireless router.	 Check that the router is turned on, and if it is on, try turning it off and on again.
	Check if you need to enter a security key to use the router.
Unable to connect to the network.	 Check if your IP address is set correctly in IP Settings.
	 Check if you need to enter a security key to use the router.
	Contact your Internet Service Provider for more information.
Connected to your local network, but cannot connect to the Internet.	 Check your Internet LAN cable is connected correctly to LAN port of router.
	 Check the DNS settings in IP Settings.
	 If the problem persists, contact your Internet Service Provider to access the Internet.
Network setup complete, but cannot connect to the Internet.	Confirm that your router is connected to the Internet.
	If the problem persists, contact your Internet Service Provider to access the Internet.

If Your TV Fails to Connect to the Internet

Your TV may not be able to connect to the Internet because your ISP has permanently registered the MAC address (a unique identifying number) of your PC or modem, which it then authenticates each time you connect to the Internet as a way of preventing unauthorized access. As your TV has a different MAC address, your ISP can not authenticate its MAC address, and your TV can not connect.

To resolve this problem, ask your ISP about the procedures required to connect devices other than a PC (such as your TV) to the Internet.

If your Internet service provider requires an ID or password to connect to the Internet, your TV may not be able to connect to the Internet. If this is the case, you must enter your ID or password when connecting to the Internet.


The internet connection may fail because of a firewall problem. If this is the case, contact your Internet service provider.

If you cannot connect to the Internet even after you have followed the procedures of your Internet service provider, please contact Samsung Electronics.

□ Managing the Network Connected Devices

for PDP 4900 series

Wi-Fi Direct

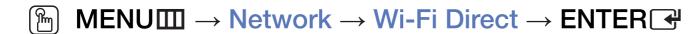

Set to connect the TV to wireless mobile devices. Using this function, you can connect wireless mobile devices with your TV directly without a wireless router.

- You can use this function when connecting the Samsung Wireless LAN Adapter.
- It only supports Media Play function.
- It may not be supported depending on the mobile device.

How to connect the device to your TV using Wi-Fi Direct function

- Using this function, you must turn on Wi-Fi Direct function on your device.
- Go to Wi-Fi Direct screen. The TV starts to search devices.
 (Network → Wi-Fi Direct)
- 2. Select the desired device, and then press the ENTER button.
- **3.** When connection message appears on your device, let you allow it. Your TV automatically acquires all the network setting values it needs and connects to your network.
- If you want to disconnect the device, select the connected device, and press the **ENTER** button to select **Disconnect**.

AllShare Settings



Set whether to allow a network connected device like a smartphone or tablet to share content or control TV using an application downloaded on your mobile device. For details, refer to the "Using the AllShare Settings function".

Device Name

- MENU → Network → Device Name → ENTER
- Change the TV's name.
- When selecting **User Input**, you can key in a name for your TV manually. Use ▲/▼/◄/▶ buttons to select characters, and then select **Done**.

□ Using the DLNA Functions

for PDP 4900 series



You can play media contents including videos, photos and music saved on your mobile phones or the other devices (such as your PC) by controlling them on the TV via the network.

- First, configure your network. For detailed procedures on using the Network Setup, refer to the "Network Settings" instructions.
- For more information, visit "www.samsung.com" or contact the Samsung call centre. Mobile devices may need additional software installation. For details, refer to each device's user's guide.
- If your Samsung TV connects to a non-Samsung DLNA server, a compatibility issue may occur during video playback.

- By connecting your Samsung TV to a network via AllShare™, you can use Samsung's original functions as follows:
- Playback of various video formats (DivX, MP4, 3GPP, AVI, ASF, MKV, etc.)
- Bookmark function (to resume video playback)
- Auto-chaptering (scene navigation)
- Digital content management
- Compatibility with various subtitle formats (SRT, SMI, SUB, TXT, TTXT)
- And many others
- To use the original DLNA functions of Samsung fully, it is recommended that you use the AllShare™ software provided with your TV.

Playing the media contents saved on the devices

- 1. Connect the mobile phone or other devices which support AllShare™ function, and then play the media contents of each device. The popup screen appears on the bottom of your TV.
- 2. Select the Allow to accept the connected devices. The media contents of the devices can be playing on your TV.
 - You can find the allowed devices on the AllShare Settings.

Using the Media Play function, play the media contents of the devices connected to DLNA function.

- 1. Press the MEDIA.P button to select Media Play.
- 2. Press ▲/▼ button to select desired menu (Videos, Photos, Music), then press the ENTER → button.
- 3. When the DLNA device is selected, press the ENTER → button again.
- **4.** Press the $\triangle/\nabla/\triangle$ button to select the desired file.
- 5. Press the ENTER button.



- Contents may not be played on your TV depending on their resolution and format.
- The ENTER → and
 buttons may not work depending on the type of media content.
- Using the mobile device, you can control the media playing. For details, refer to each mobile's user's guide.

Using the AllShare Settings function

MENUШ → Network → AllShare Settings → Content Sharing → ENTER →

Shows a list of mobile phones or connected devices which have been set up with this TV for using the **AllShare Settings** function.

- The AllShare Settings function is available in all devices which support DLNA DMC.
- Allow / Deny: Allows/Blocks the devices.
- Delete: Deletes the devices from the list.
 - This function only deletes the name of the devices from the list. If the deleted device is turned on or tries to connect to the TV, it may appear on the list again.

Connecting to the PC through network

You can play pictures, music and videos saved on your PC through a network connection in the **Media Play** mode over your TV.

- If you want to use **Media Play** to play files saved on your PC over your TV, you should download "AllShare PC Software" and users manual from "www. samsung.com".
- 1. For more information on how to configure your network, refer to the "Network Settings".
 - You are recommended to locate both TV and PC in same subnet. The first 3 parts of the IP address of the TV and PC should be the same and only the last part (the host address) should be changed. (e.g. IP Address: 123.456.789.**)

- 2. Connect the PC on which you will install or have installed AllShare PC software and your TV to the same network.
- Functions that are not supported when connecting to a PC through a network:
 - Background music when watching a slide show.
 - The ◄ (REW) or ► (FF) button while a movie is playing.
- The DivX DRM, Multi-audio, embedded caption does not supported.
- AllShare PC Software should be permitted by the firewall programme on your PC.

- When you use **Media Play** mode through a network connection, according to functions of the provided server:
- The sorting method may vary.
- The ◀ (REW), ► (FF) or ☐ (Pause) buttons may not work depending on the content information.
- When playing the video through network, it may not work depending on the network status. When you play video over a network connection, the video may not be played smoothly.