

THANK YOU for purchasing the Ninja® Foodi® PossibleCooker

VISIT US ONLINE AT:
ninjakitchen.com.au | ninjakitchen.co.nz

Or follow us on any of our social media pages:



 
@ninjakitchenau | @ninjakitchennz

RECORD THIS INFORMATION

Model Number: _____
Serial Number: _____
Date of Purchase: _____
(Keep receipt)
Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 220-240V ~ 50-60Hz
Power: 1400 Watts



This marking indicates this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

SHARKNINJA PTY. LTD.
Suite 23.02, Level 23,
45 Clarence St, Sydney NSW 2000
AU +61 2 8801 7666
NZ +64 800 112 660
ninjakitchen.com.au
ninjakitchen.co.nz

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

FOODI, NINJA, and POSSIBLECOOKER are registered trademarks of SharkNinja Operating LLC.

© 2024 SharkNinja Operating LLC.

MC1101ANZ_IB_MP_Mv6



NINJA Foodi
POSSIBLECOOKER
MC1101ANZ | Owner's Guide



IMPORTANT SAFEGUARDS
HOUSEHOLD ONLY • READ ALL INSTRUCTIONS BEFORE USE

	Read and review instructions to understand operation and use of product.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only.

WARNING
To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- 1 To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- 2 This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge if they have been given supervision and instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 3 Keep the appliance and its cord out of reach of children. **DO NOT** allow children to play with or use the appliance. Close supervision is necessary when used near children.
- 4 A short-power supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord. **DO NOT** use an extension cord with this product.
- 5 Spilled food can cause serious burns.
- 6 To reduce the risk of fire, **DO NOT** place appliance on stovetops or other hot surfaces or in a heated oven.
- 7 **DO NOT** use the appliance without the cooking pot installed.
- 8 **CAUTION:** A heated pot may damage countertops or tables. When removing the hot pot from the multicooker, **DO NOT** place it directly on any unprotected surface. **ALWAYS** set the hot pot on a trivet or a rack.
- 9 To protect against risk of electrical shock, do not immerse the multicooker housing in water or any other liquid. If housing falls into liquid, unplug the cord from outlet immediately. **DO NOT** reach into the liquid.
- 10 Before placing removable cooking pot in the cooker base, ensure pot and cooker base are clean and dry by wiping with a soft cloth.
- 11 **DO NOT** heat with empty cooking pot more than 10 minutes. Damage to cooking surface will occur.
- 12 **DO NOT** use this appliance for deep-frying.
- 13 **CAUTION:** Sear/Sauté reaches high temperatures. If unmonitored, food may burn on this setting. Use care when touching hot surfaces and when removing food to avoid burns. Do not use the lid and do not leave your cooker unattended while using Sear/Sauté.
- 14 Avoid sudden temperature changes, such as adding refrigerated foods to a heated pot.
- 15 **CAUTION:** The cooking pot and lid get very hot while using Sear/Sauté. Use care when touching hot surfaces and when removing food to avoid burns.
- 16 Caution should be used when searing meats and sautéing. Keep hands and face away from the removable cooking pot, especially when adding new ingredients, as hot oil may splatter.
- 17 This appliance is for household use only. **DO NOT** use this appliance for anything other than its intended use. **DO NOT** use in moving vehicle or boats. **DO NOT** use outdoors. Misuse may cause injury.

IMPORTANT SAFEGUARDS

HOUSEHOLD ONLY • READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use appliance for other than intended use.

- 18 Intended for countertop use only. Ensure the surface is level, clean, and dry. **DO NOT** place the appliance near the edge of a countertop during operation.
- 19 **DO NOT** use the appliance if there is damage to the power cord or plug. Regularly inspect the appliance and power cord. If the appliance malfunctions or has been damaged in any way, immediately stop use and call Customer Service.
- 20 This appliance has a polarised plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarised outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to modify the plug in any way.
- 21 **ALWAYS** ensure the appliance is properly assembled before use.
- 22 **DO NOT** use accessory attachments not recommended or sold by SharkNinja. **DO NOT** place accessories in a microwave, toaster oven, convection oven, or conventional oven, or on a ceramic cooktop, electrical coil, gas burner range, or outdoor grill. The use of accessory attachments not recommended by SharkNinja may cause fire, electric shock, or injuries.
- 23 When using this appliance, provide at least 6 inches (15.25 cm) of space above and on all sides for adequate air circulation.
- 24 **DO NOT** operate your appliance in a garage or under a wall cabinet. When storing in an appliance garage always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
- 25 **ALWAYS** follow the maximum and minimum quantities of liquid as stated in instructions and recipes.
- 26 To avoid possible steam damage, place the unit away from walls and cabinets during use.
- 27 **NEVER** use Slow Cook setting without food and liquids in the removable cooking pot.
- 28 **CAUTION:** The cooking pot and lid get very hot while using Slow Cook and Braise. Use care when touching hot surfaces and when removing food to avoid burns.
- 29 **DO NOT** move the appliance when in use.
- 30 Prevent food contact with heating elements. **DO NOT** overfill cooking pot. Overfilling may cause personal injury or property damage or affect safe use of the appliance.
- 31 **DO NOT** use this unit to cook instant rice.
- 32 Electrical outlet voltages can vary, affecting the performance and heat output of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.
- 33 Should the unit emit black smoke, unplug immediately and wait for smoking to stop before removing the cooking pot.
- 34 **DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use protective hot pads or insulated oven mitts and use available handles and knobs.
- 35 Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Improper use, including moving the cooker, may result in personal injury such as serious burns.
- 36 When unit is in operation, hot steam may be released into the air via the steam hole in the top of the lid. Place unit so steam hole is not directed toward, electrical outlets, cabinets or other appliances. Keep your hands and face at a safe distance from steam hole.
- 37 When using SLOW COOK setting, **ALWAYS** keep the lid closed.
- 38 The base unit, inner cooking pot and glass lid become extremely hot during the cooking process. Avoid hot steam and air while removing the inner cooking pot and glass lid from the base unit. **ALWAYS** place them on a heat-resistance surface after removing. **DO NOT** touch accessories during or immediately after cooking.

 
SAVE THESE INSTRUCTIONS

- 39 **ONLY** lift the lid from the handle on the front of the unit. **DO NOT** lift lid from side area as scalding steam will release.
- 40 Removable inner cooking pot can be extremely heavy when full of ingredients. Care should be taken when lifting pot from cooker base.
- 41 **DO NOT** touch accessories, including the thermometer (not available on all models), during or immediately after cooking, as they become extremely hot during the cooking process. To prevent burns or personal injury, **ALWAYS** use care when handling the product. Use long-handed utensils and protective hot pads or insulated oven mitts.
- 42 Cleaning and user maintenance shall not be done by children.
- 43 Allow unit to cool before cleaning, disassembly, putting in or taking off parts and storage.
- 44 When not in use and before cleaning, turn the unit off and unplug from socket to disconnect.
- 45 **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- 46 Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.
- 47 **DO NOT** let cord hang over edges of tables or counters or touch hot surfaces. **NEVER** use outlets below counter.
- 48 The appliances is not intended to be operated by means of an external timer or separate remote control system.

SAVE THESE INSTRUCTIONS

PARTS

- A Rice Spoon
- B Glass Lid
- C Pot Side Handles
- D 6L Cooking Pot
- E Main Unit Handles
- F Main Unit
- G Control Panel
- H Steam Rack

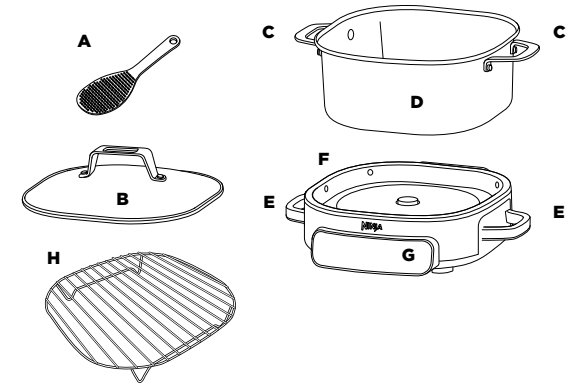


BEFORE FIRST USE

- 1 Remove and discard any packaging material, stickers, and tape from the unit.
- 2 Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
- 3 Wash the main base unit, inner cooking pot, glass lid, and rice spoon with a damp, soapy cloth, then rinse with a clean, damp cloth and dry thoroughly. **NEVER** submerge the main unit in water.
- 4 We recommend turning the unit on and running it for 10 minutes without adding food. Make sure the area is well ventilated. This removes any packaging residue and odor traces that may be present. This is completely safe and not detrimental to the performance of the PossibleCooker™.

Warning: When using this appliance, provide at least 15cm of space above and on all sides for adequate air circulation

 GETTING TO KNOW THE NINJA FOODI POSSIBLECOOKER

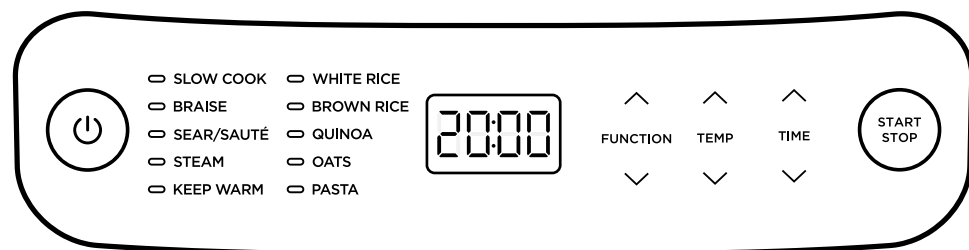

COOKING FUNCTIONS

SLOW COOK: Cook food at a lower temperature for a longer period of time.

BRAISE: Transform tougher cuts of meat by first browning at high heat (with oil) and then simmering in liquid at low heat.

SEAR/SAUTÉ: Use the unit as a cooktop for browning meats, sautéing veggies, simmering sauces, and more.

STEAM: Gently cook delicate foods, such as fish and vegetables, using steam.

KEEP WARM: Reheat or keep cooked food warm for longer periods of time.

WHITE RICE: Cook a variety of white rice—long grain, jasmine, basmati, arborio, etc.

NOTE: If no cooking function is chosen within 10 minutes, the unit will shut off.

BROWN RICE: Cook picture-perfect brown rice.

QUINOA: Cook quinoa to perfection.

OATS: Cook rolled or steel-cut oats with ease.

PASTA: Cook dry pasta without needing to drain the water.

OPERATING BUTTONS

(P) (POWER): The Power button shuts the unit off and stops all cooking modes.

FUNCTION arrows: Use the up/down arrows to select a cook function.

TEMP arrows: Use the up/down arrows to the left of the display to adjust the cooking temperature.

TIME arrows: Use the up/down arrows to the right of the display to adjust the cooking time.

START/STOP button: Press this button to begin cooking. Pressing START/STOP during cooking will stop the current function.

USING THE NINJA FOODI POSSIBLECOOKER

Slow Cook

- 1 Use the $\wedge \vee$ FUNCTION arrows to select SLOW COOK.
- 2 Use the $\wedge \vee$ TEMP arrows to select HI or LO.
- 3 Use the $\wedge \vee$ TIME arrows to select a time between 3 and 12 hours in 15 minute increments.

NOTE: SLOW COOK LO time may be adjusted between 6 and 12 hours. SLOW COOK HI may be adjusted between 2 and 12 hours.

- 4 Press START/STOP to begin cooking.
- 5 When cook time reaches zero, the unit will beep, automatically switch to KEEP WARM, and begin counting up.

NOTE: The unit will automatically shut off after 12 hours on KEEP WARM.

Braise

- 1 Sear ingredients in the pot using the SEAR/SAUTÉ instructions.
- 2 Once complete, deglaze with wine or stock.

NOTE: To deglaze, pour 1 cup liquid into pot. Scrape brown bits from bottom of pot and mix into cooking liquid.

Sear/Sauté

- 1 Use the $\wedge \vee$ FUNCTION arrows to select SEAR/SAUTÉ.
- 2 Use the $\wedge \vee$ TEMP arrows to choose HI, MED, or LO.

NOTE: Time is not adjustable when using Sear/Sauté function.

NOTE: It is recommended to let the unit heat up for 5 minutes prior to adding ingredients.

USING THE NINJA FOODI POSSIBLECOOKER - CONT

- 3 Press START/STOP to begin cooking.
- 4 Press START/STOP to turn off the SEAR/SAUTÉ function when cooking is complete.

NOTE: DO NOT use metal utensils, as they will scratch the nonstick coating on the pot.

NOTE: You can use this function with or without the lid placed on the pot.

Steam

- 1 Add at least 250ml water or stock into the pot. Place rack into pot and place ingredients on the rack.
Use the $\wedge \vee$ FUNCTION arrows to select STEAM.
Use the $\wedge \vee$ TIME arrows to select a time.
Press START/STOP to begin cooking.

Keep Warm

- 1 Use the $\wedge \vee$ FUNCTION arrows to select KEEP WARM. Temperature will default and the unit will start counting up.
- 2 Use the $\wedge \vee$ TIME arrows to select a time in 1-minute increments up to 1 hour or 5 minute increments up to 6 hours.

White Rice

- 1 Add desired amount of rice.
- 2 Add water to the corresponding line on the pot and place the lid on to the pot.
- 3 Use the $\wedge \vee$ FUNCTION arrows to select WHITE RICE.

NOTE: Time and temp are not adjustable when using White Rice function.

- 4 Press START/STOP to begin cooking. An animation will display while cooking.

NOTE: For best results, keep lid on during cooking.

- 5 When rice is done cooking, the unit will beep, automatically switch to KEEP WARM, and begin counting up.

NOTE: The unit will automatically shut off after 12 hours on KEEP WARM.

Brown Rice

- 1 Add desired amount of rice.
- 2 Add water to the corresponding line on the pot.
- 3 Use the $\wedge \vee$ FUNCTION arrows to select BROWN RICE.

NOTE: Time and temp are not adjustable when using Pasta function.

- 4 Press START/STOP to begin cooking. An animation will display while cooking.

NOTE: For best results, keep lid on during cooking.

- 5 When rice is done cooking, the unit will beep, automatically switch to KEEP WARM, and begin counting up.

NOTE: The unit will automatically shut off after 12 hours on KEEP WARM.

Quinoa

- 1 Add desired amount of QUINOA.
- 2 Add water to the corresponding line on the pot.

NOTE: Time and temp are not adjustable when using QUINOA function.

- 3 Use the $\wedge \vee$ FUNCTION arrows to select QUINOA.
- 4 Press START/STOP to begin cooking. An animation will display while cooking.

NOTE: For best results, keep lid on during cooking.

- 5 When quinoa is done cooking, the unit will beep, automatically switch to KEEP WARM, and begin counting up.

NOTE: The unit will automatically shut off after 12 hours on KEEP WARM.

Oats

- 1 Add desired amount of oats.
- 2 Add water to the corresponding line on the pot.
- 3 Use the $\wedge \vee$ FUNCTION arrows to select Oats.

NOTE: Time and temp are not adjustable when using Oats function.

- 4 Press START/STOP to begin cooking. An animation will display while cooking.

NOTE: For best results, keep lid on during cooking.

- 5 When oats are done cooking, the unit will beep, automatically switch to KEEP WARM, and begin counting up.

Pasta

- 1 Add desired amount of dried pasta to the cooking pot.
- 2 Add recommended amount of water.
- 3 Use the $\wedge \vee$ FUNCTION arrows to select PASTA.

NOTE: Time and temp are not adjustable when using Pasta function.

- 4 Press START/STOP to begin cooking. An animation will display while cooking.

NOTE: For best results, keep lid on during cooking.

- 5 When pasta is done cooking, the unit will beep, automatically switch to KEEP WARM, and begin counting up.

NOTE: The unit will automatically shut off after 12 hours on KEEP WARM.

CLEANING & MAINTENANCE

Cleaning: Dishwasher & Hand Washing

The unit should be cleaned thoroughly after every use

- 1 Unplug the unit from the wall outlet before cleaning.
- 2 To clean the cooker base and the control panel, wipe them clean with a damp cloth.
- 3 The cooking pot, glass lid and rack, can be washed in the dishwasher.

- 4 If food residue is stuck on the cooking pot, fill pot with water and allow to soak before cleansing. If food residue is stuck on glass lid or rice spoon, use a non-abrasive cleanser. **DO NOT** use scouring pads. If scrubbing is necessary, use a non-abrasive cleanser or liquid dish soap with a nylon pad or brush.
- 5 Air dry all parts after each use.

NOTE: NEVER put the cooker base in the dishwasher or immerse it in water or any other liquid.

TROUBLESHOOTING GUIDE

The unit won't turn on.

- Make sure the power cord is securely plugged into the outlet.
- Try plugging the cord into a different outlet.
- Reset the circuit breaker if necessary.

"ADD POT" error message appears on display screen.

- Cooking pot is not inside the cooker base. Cooking pot is required for all functions.

Why is the time counting down so slowly?

- You may have set hours rather than minutes. When setting time, the display will show HH:MM and the time will increase/decrease in minute increments.

The unit is counting up rather than down.

- The Slow Cook cycle is complete and the unit is in Keep Warm mode.

"E1", "E2"

- The unit is not functioning properly. Please contact Customer Service at **AU** 02 8801 7666 or **NZ** 0800 112 660. We ask that you register your product online at **AU** ninjakitchen.com.au or **NZ** ninjakitchen.co.nz and have the product on hand when you call, so we may better assist you.

Why did the unit shut off?

- If a cook function is not chosen within 10 minutes after turning on the unit, it will automatically shut off.

HELPFUL HINTS

- 1 Inner cooking pot is oven safe up to 240°C.
- 2 Use the Keep Warm mode to keep food at a warm, food safe temperature after cooking.
- 3 Refrain from removing the lid during a cook cycle.
- 4 The cooking pot is **NOT** stovetop safe.
- 5 The glass lid can be cleaned in the dishwasher.
- 6 Preheat time will vary depending on quantity and temperature of ingredients.
- 7 **ALWAYS** use oven mitts when removing the cooking pot from the base unit.
- 8 Store extra food in sealed, freezer friendly containers.

WARRANTY

TWO (2) YEAR LIMITED REPLACEMENT WARRANTY

For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase. This warranty does not replace but is in addition to your statutory rights.

If your product becomes defective due to faulty material or workmanship within a period of 2 years from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:** We will replace the defective/faulty part with a new product, free of charge, or if the unit is deemed defective/faulty we replace the unit with an equivalent or upgraded model, at our discretion.
- **For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase. Please note: **Your warranty is subject to the following conditions.**

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident

What is not covered?

- Accessories supplied with the item.
- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.