

BLANCO



Performance First

EN GUIDE TO INSTALLATION

Oven

Dear Customer,

*Thank you for buying a **BLANCO oven**.*

Before we continue telling you about this oven, we cordially invite you to become part of the Blanco family by subscribing online. Please visit our website where you can easily subscribe and request such things as 'invitations to future cooking classes' and gourmet recipes. Go to www.meaappliances.com.au and fill in the subscription details.

*You will find that the clean lines and modern look of your **Blanco oven** blends in perfectly with your kitchen décor. It is easy to use and performs to a high standard.*

*Blanco also makes a range of products that will enhance your kitchen such as cooktops, rangehoods, dishwashers and microwaves, sinks and taps. There are models to complement your new **Blanco oven**.*

Of course, we make every effort to ensure that our products meet all your requirements, and our Customer Relations department is at your disposal, to answer all your questions and to listen to all your suggestions (see back cover of manual).

Please complete the warranty section of this manual and keep your receipt as proof of purchase. Retain all documents relating to the purchase of this product.

Blanco is committed to providing increasingly efficient products, that are easy to use, respect the environment, and are attractive and reliable.

BLANCO

1 / NOTICES TO THE USER	
• Safety Recommendations _____	4
• Environment _____	5
• Child safety _____	5
2 / INSTALLING YOUR APPLIANCE	
• Choice of location _____	6
• Building in _____	6
• Electrical connection _____	7
• Changing the power cable _____	8
3 / DESCRIPTION OF YOUR APPLIANCE	
• Introduction to your oven _____	9
• Description of the accessories _____	10
• Description of your programmer _____	11
4/USING YOUR APPLIANCE	
• Using the programmer _____	12
◦ How to set the time _____	12
◦ How to change the time _____	12
◦ Immediate cooking _____	13
◦ Programmed cooking _____	38
◦ Economic* cooking _____	16
◦ Grill+ _____	17
◦ Using the timer function _____	18
◦ Display brightness _____	18
5 / OVEN COOKING MODES _____	19
6 / CARING FOR AND CLEANING YOUR APPLIANCE	
• Cleaning the outer surfaces _____	21
• Cleaning the door _____	21
• Pyrolytic oven cleaning _____	22
• Instructions and security _____	23
• Immediate self-cleaning _____	24
• Delayed self-cleaning _____	25
7 / TROUBLESHOOTING _____	26
• Changing the bulb _____	27
8 / EASY COOK _____	28
9 / AFTER-SALES SERVICE _____	34

**Warning**

Keep this user guide with your appliance. If the appliance is ever sold or transferred to another person, ensure that the new owner receives the user guide. Please become familiar with these recommendations before installing and using your oven. They were written for your safety and the safety of others.

• SAFETY RECOMMENDATIONS

– This oven was designed for use by private persons in their homes. It is intended solely for cooking foodstuffs. This oven does not contain any asbestos-based components.

– This appliance is to be used by adults. Make sure that children do not touch it and that they do not treat it as a toy. Make sure that they do not touch the appliance's control panel.

– When you receive the appliance, unpack or have it unpacked immediately. Give it an overall inspection. Make note of any concerns or reservations on the delivery slip and make sure to keep a copy of this form.

– Your appliance is intended for standard household use. Do not use it for commercial or industrial purposes or for any other purpose than that for which it was designed.

– Do not modify or attempt to modify any of the characteristics of this appliance. This would be dangerous to your safety.

– Keep small children away from the appliance while it is in use. Thus you will prevent them from burning themselves by tipping over cookware. Moreover, the front of your appliance is hot during use and during cleaning (pyrolysis).

– Never pull your appliance by the door handle.

– Before using your oven for the first time, heat it up while empty for approximately 15 minutes. Ensure that the room is sufficiently ventilated. You may notice a particular odour or a small amount of smoke. All of this is normal.

– During cooking, ensure that the door of your oven is firmly closed so that the seal can properly fulfil its function.

– When in use, the appliance becomes hot. Do not touch the heating elements located inside the oven. You are at risk of incurring serious burns.

– When inserting or removing your dishes from the oven, do not bring your hands near to the upper heating elements; use insulated cooking mitts.

– After cooking, do not touch the cookware (grid, turnspit, etc.) with bare hands

– Never place aluminium paper directly in contact with the bottom element (See the "Description of your oven" chapter), the accumulated heat could cause deterioration of the enamel.

– Do not place heavy items on the open oven door; ensure that children cannot climb or sit on it.

– To avoid damaging the control panel of your appliance, do not leave the door open when the oven is functioning or still hot.

– The oven must be turned off for all attempts to clean the cavity.

– Intensive and prolonged use of the appliance may require additional ventilation achieved by opening the window or increasing the power of the mechanical fan.

– In addition to the accessories provided with your oven, only use dishes that are resistant to high temperatures (follow manufacturer's instructions).

– After using your oven, ensure that all the controls are in the off position.

– Never use steam or high-pressure devices to clean the oven (requirement imposed by electrical safety).

– For your safety, your oven is equipped with an AUTOMATIC STOP, if you forget to turn off your oven by mistake. After 10 hours of operation, the AS (Automatic Stop) feature is activated and your oven stops running. AS appears instead of the time and a series of 2 successive beeps is emitted for a short time.

• CARE FOR THE ENVIRONMENT

– This appliance's packing materials are recyclable. Recycle them and play a role in protecting the environment by depositing them in municipal containers provided for this purpose.

– Your appliance also contains many recyclable materials. It is therefore marked with this logo to indicate that used appliances must not be mixed with other waste. Recycling of the appliances organised by your manufacturer will thus be undertaken in optimum conditions, in accordance with European directive 2002/96/CE relative to electrical and electronic equipment waste. Consult your city hall or your retailer to find the drop-off points for used appliances that is nearest to your home.



– We thank you for your help in protecting the environment.



Warning

Installation should only be performed by qualified installers and technicians.

This appliance complies with the following European directives:

- Low Voltage Directive 73/23/CEE modified by directive 93/68/CEE for attribution of CE approval.


- Electromagnetic Compatibility Directive 89/336/CEE modified by directive 93/68/CEE for attribution of CE approval.

- CE Regulation 1935/2004 concerning materials and objects designed to come into contact with foodstuffs.

• CHILD SAFETY (depending on model)


• SAFETY ACTIVATION

- Open the door.
- Press the switch on the panel until the system is engaged and then close the door (fig.1).

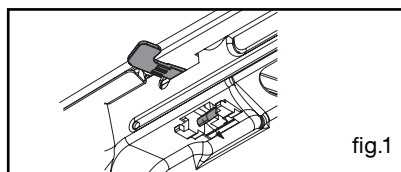


• OPEN WITH SAFETY ENGAGED

- Press the lever and then open the door (fig.2).

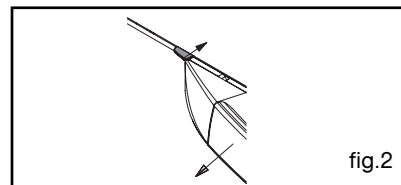

• SAFETY DEACTIVATION

- Open the door and press the switch on the panel (fig.3).

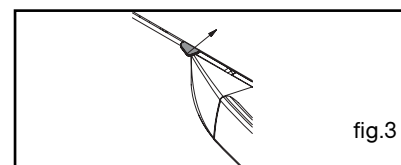

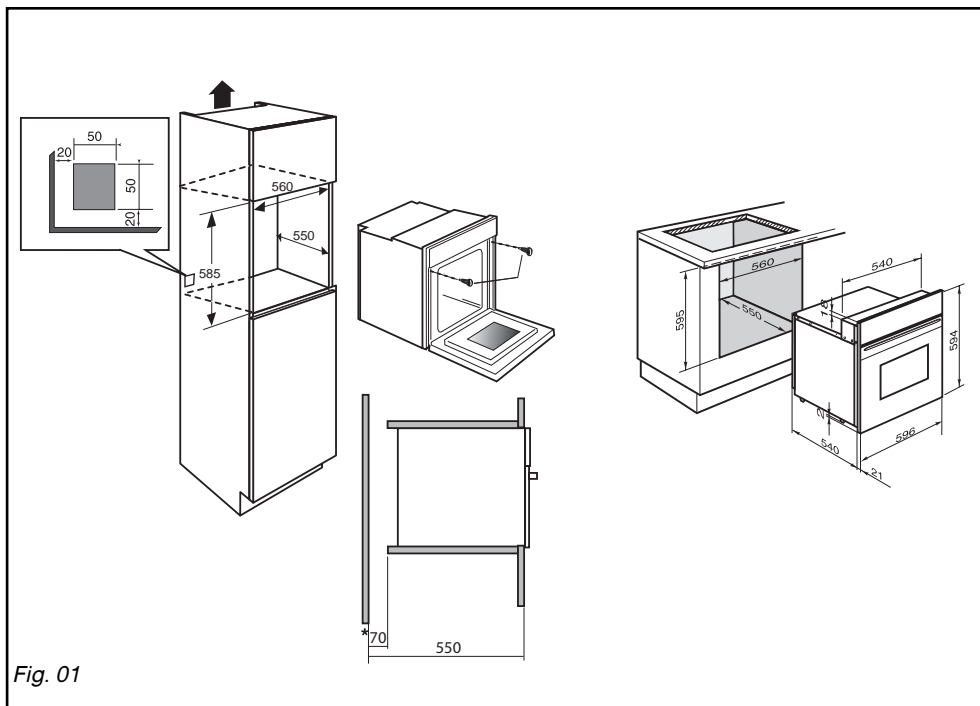


Fig. 01

• CHOICE OF LOCATION

The diagrams above indicate the dimensions of a cabinet that would be acceptable for your oven.

The oven can be installed under a work top or in a column of cabinetry (open* or closed) having the appropriate dimensions for built-in installation (see adjacent diagram).

Your oven has optimised air circulation that allows it to achieve remarkable cooking and cleaning results if the following guidelines are respected:

- Centre the oven in the cabinet so as to guarantee a minimum distance of 5 mm between the appliance and the neighbouring cabinet.
- The destination cabinet must be made of or coated with a material that is heat resistant.
- For greater stability, attach the oven in the cabinet with two screws through the holes

provided for this purpose on either side of the front side panels (fig.1).

• BUILD-IN

To do this:


- 1) Remove the rubber screw covers to access the mounting holes.
- 2) Drill a Ø 2 mm hole in the cabinet panel to avoid splitting the wood.
- 3) Attach the oven with the two screws.
- 4) Replace the rubber screw covers (they also serve to absorb the shock caused by closing the oven door).

(*) If the cabinet is open, its opening must be 70 mm (maximum).



Tip

To be certain that you have properly installed your appliance, do not hesitate to call on a household appliance specialist.

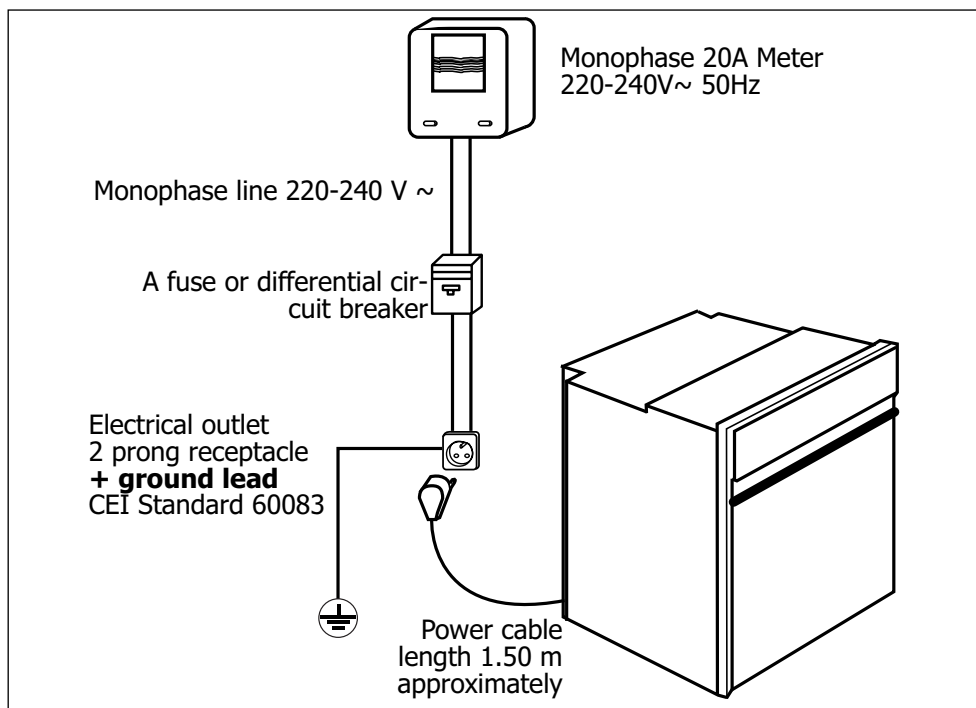

• ELECTRICAL CONNECTION

Electrical safety must be provided by a correct build-in. During build-in and maintenance operations, the appliance must be unplugged from the electrical grid; fuses must be cut off or removed.

The electrical connections are made before the appliance is installed in its housing.

Ensure that:


- the electrical installation has sufficient voltage,
- the electrical wires are in good condition
- the diameter of the wires complies with the installation requirements.

Your oven must be connected with a power cord (standardised) with three 1.5 mm² conductors (1 ph +1 N + ground) that must be connected to a monophase 220-240 V~ net-

work via a CEI 60083 standardised receptacle (1 ph +1 N + ground lead) or an all-pole cut-off device, in compliance with installation regulations.



Warning

The safety wire (green-yellow) is connected to the appliance's terminal  and must be connected to the ground lead of the electrical set-up.

In the case of a hook-up with electrical outlet, it must be accessible after installation.

The fuse in your set-up must be 16 amperes.

If the power cable is damaged, it must be replaced by a cable or a special kit available from the manufacturer or its After-Sales Service Department.

**Warning**

We cannot be held responsible for any accident resulting from an inexistent, defective or incorrect ground lead.

If the electrical installation at your residence requires any changes in order to hook up your Appliance, call upon a professional electrician.

If the oven malfunctions in any way, unplug the appliance or remove the fuse corresponding to the sector where the oven is hooked up.

• CHANGING THE POWER CORD

– The power cable (H05 RR-F, H05 RN-F ou H05 VV-F) must be of sufficient length to be connected to the build-in oven while it sits on the floor in front of the cabinet.

To do this the appliance must be disconnected from the electrical network:

– Open the inspection flap located at the lower right of the back cover by unscrewing the two screws, then pivot the inspection flap.

– Strip 12 mm along each wire of the new power cable.


– Carefully twist together the strands.

– Loosen the screws from the terminal board and remove the power cord to be replaced.

• Introduce the power cable through the side of the cover in the cable clip located to the right of the terminal board.

– All the strands of the electricity wires must be captured under the screws.

– The phase wire on the L terminal.

– The green-yellow coloured ground wire should be connected to the terminal .


– The neutral conductor (blue) on the N terminal.

– Screw down tightly the screws on the terminal board and check the connection by pulling on each wire.

– Attach the cable with the cable clip located to the right of the terminal board.

– Close the inspection flap using the two screws.

• INTRODUCTION TO YOUR OVEN

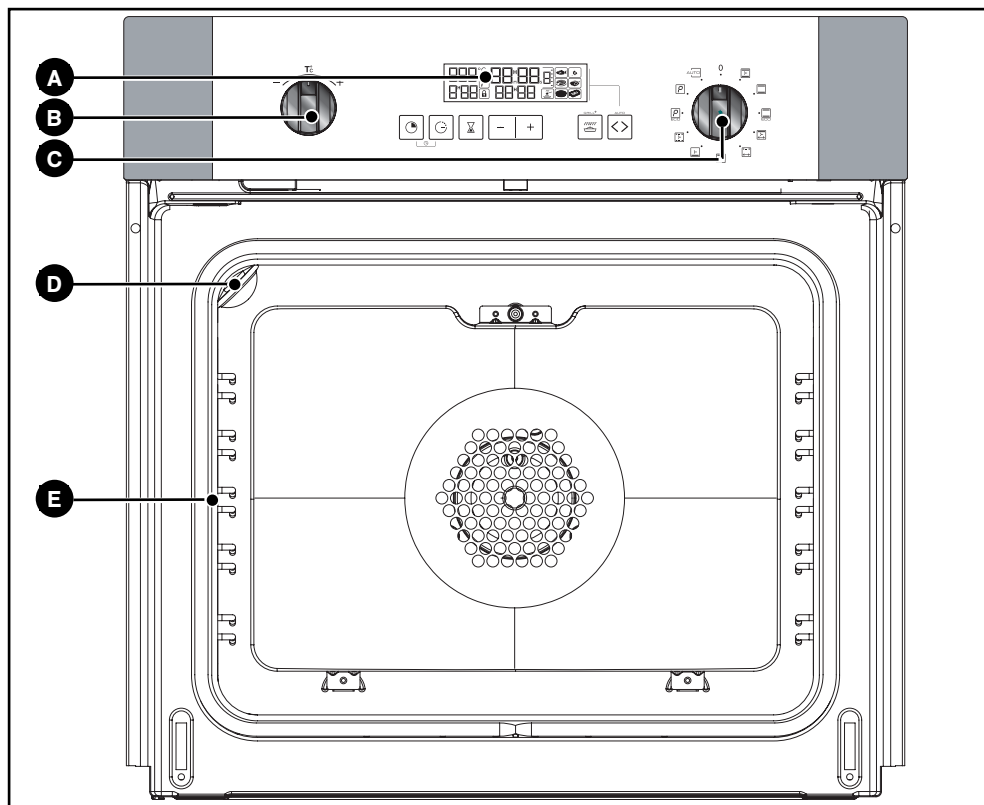

A Programmer

B Temperature selector

C Function selector

D Lamp

E Shelf support indicator



Tip


This Guide to Installation and Use is valid for several models. Minor differences in details and fittings may emerge between your appliance and the descriptions provided.

• ACCESSORIES

• **Anti-tipping safety grid (fig.1)**


The grid can be used to hold all dishes and moulds containing foodstuffs to be cooked or browned.

It can be used for barbecues (to be placed directly on the grid).

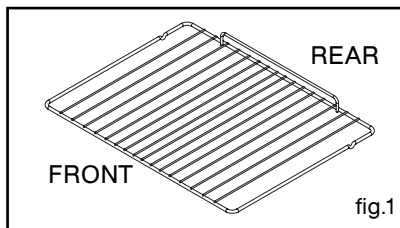

• **Multi-purpose dish (fig.2)**


Inserted under the grid, it catches barbecue juices and grease. It can also be used half-full of water for double-boiler cooking methods. Avoid placing roasts or meats directly in the dish because you are certain to have major spattering on the oven walls.

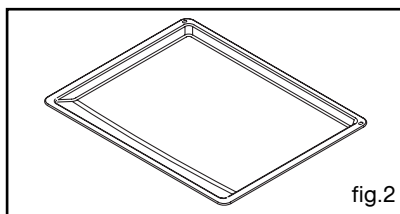

• **Hollow dish fitted with a special barbecue support grid (fig.3)**

It is used to collect juices and grease from cooking with the high grill or the pulsed grill. It can be used as a cooking dish when suitable for the size of the item to be cooked (e.g. whole poultry surrounded with vegetables, at moderate temperature).


Never place this dish directly on the base, except in GRILL position.

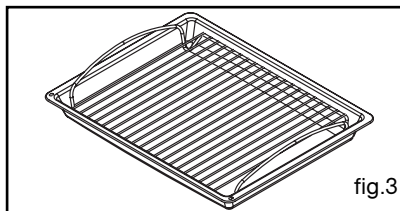

• **Sliding system (fig.4)**

Thanks to this system, you can totally remove your enamelled dishes and easily access your preparations while they are cooking.


It absolutely must be removed during PYROLYSIS function.

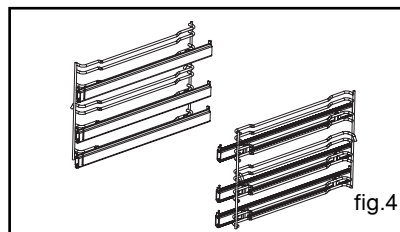

Tip

To clean dishes coated with anti-adhesive enamel, let them cool before cleaning them manually with a dish soap. Avoid scouring sponges. Do not cut on it with a knife or a metallic pizza cutter; use plastic or silicone utensils instead.

• INTRODUCTION TO THE PROGRAMMER

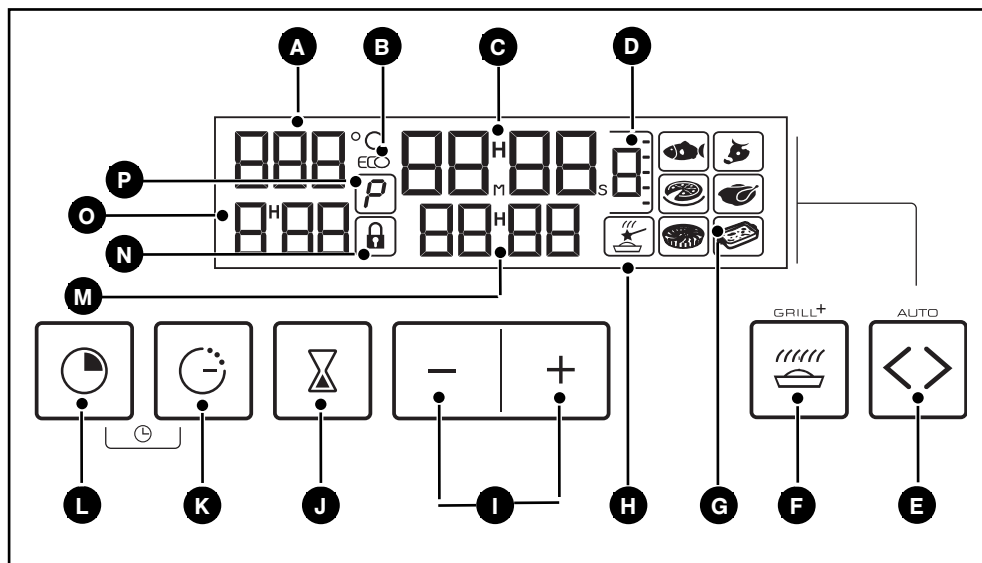

- | | |
|--|--|
| A Temperature display | I Touch controls for setting time |
| B ECO indicator (cooking and self-cleaning) | J Timer touch control |
| C Time and duration display | K Cooking end time touch control |
| D Shelf number indicator | L Cooking time touch control |
| E EASY COOK function button | M Cooking end time indicator |
| F EASY COOK plates indicator | N Door locked indicator |
| G EASY COOK indicator | O Cooking time indicator |
| H | P Self-cleaning indicator |

•How to set the time.

- When the power is on



The display flashes 12:00. (fig.1)

Set the time by pressing the + or - buttons (continued pressure on the button runs through the numbers quickly) (fig.2).

Example: 12:30

The adjusted time is automatically recorded after a few seconds.

The display stops flashing.

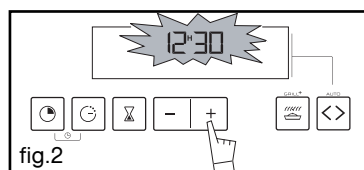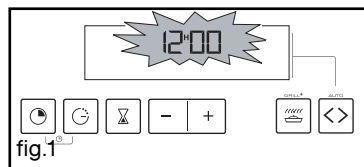




- To reset the time on the clock

The function selector must be in position 0 (fig. 1).

Press buttons “ ” and “ ” at the same time for a few seconds (fig.2), then release them when the time of day begins to flash. The sound of beeping shows that you can set it now.

Adjust the time setting using the + or - buttons (fig.3).

The adjusted time is automatically recorded after a few seconds.

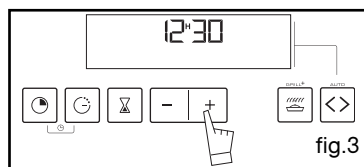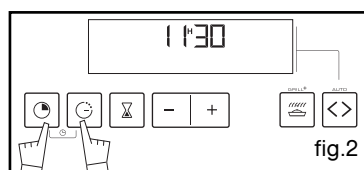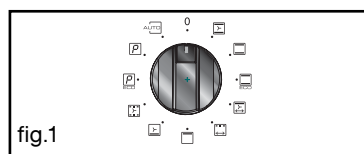

• Immediate cooking

– The analog programmer should display only the time;

It should not be flashing (fig 1).

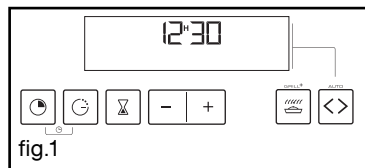



fig.1

Turn the function selector to the position of your choice.

Example: position  (fig.2).

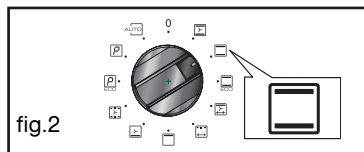


fig.2

Your oven will offer you the best temperature for this type of cooking.

You can also adjust the temperature by moving the temperature selection knob to + or - (fig.3)

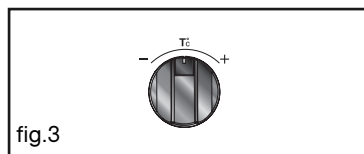


fig.3

Example: temperature reference 210°C (fig.4).

Put your plate in the oven following the recommendations provided.

After doing this, the oven heats up, and the temperature indicator flashes.

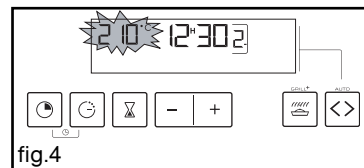


fig.4

A series of beeps will be emitted when the oven reaches the selected temperature.
The temperature stops flashing.



Warning

After a cooking cycle, the cooling fan continues to operate for a period of time to guarantee good oven reliability.



Warning

All cooking is done with the door closed.




Warning


Do not hang a towel or cloth on the oven handle.


• PROGRAMMED COOKING

- *Cooking with immediate start and programmed cooking time*

- Select the cooking mode desired and adjust the temperature (fig.1).

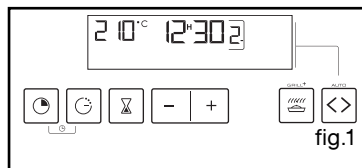

- Press the “” button until the cooking time indicator starts to flash.

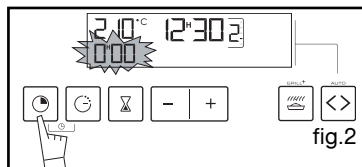

The display flashes 0:00 to tell you that you can now set it (fig.2).


- Press the + or - button to set the time you require.

Example: 30 min cooking (fig.3).

The cooking time is automatically recorded after a few seconds.

The display stops flashing.

Time counting takes place immediately after setting.

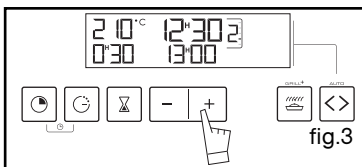

After these three steps, the oven heats up:


A series of beeps will be emitted when the oven reaches the selected temperature.

At the end of cooking (end of programmed time),


- the oven switches off,

- 0:00 flashes (fig.4).

- A series of beeps is emitted for a few minutes. Press any button to stop the beeping.

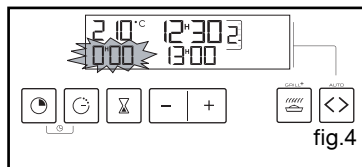


The display goes back to showing the time of day by moving the function selector back to 0 (fig.5).

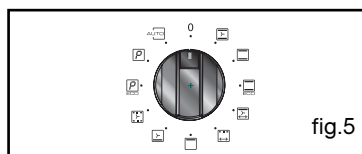


• PROGRAMMED COOKING

- Cooking with delayed start and selected end time

Proceed as with programmed cooking.

- After setting the cooking time, press the “” button until the end cooking time indicator flashes.


The end cooking time display to indicate that setting is now possible (fig.1).

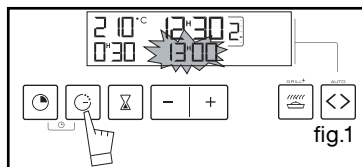


- Press the + or - button to set the cooking time you require.

Example: end cooking at 1:00 pm (fig.2).

The end of cooking is automatically recorded after a few seconds, The display stops flashing.

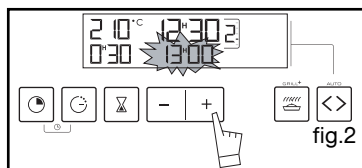

After these 3 actions, the start of cooking is delayed so that cooking will end at 1:00 pm.

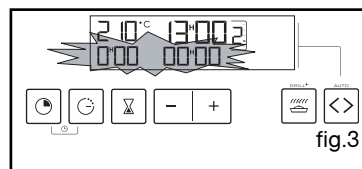


At the end of cooking (end of programmed time),

- the oven switches off,

- 0:00 and the cooking time flash (fig.3).


- A series of beeps is emitted for a few minutes. Press any button to stop the beeping.

The display goes back to showing the time of day by moving the function selector back to 0 (fig.4).

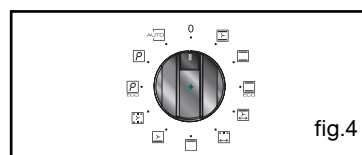


• ECONOMIC * COOKING

– The analog programmer should display only the time (fig.1).

– Rotate the function selector to the “” POSITION. The “ECO” indicator comes on on the display (fig.2).

– Place your plate in the oven as recommended on the display.

Example: position “” -> shelf 1 or 2 recommended (fig.3).

– Your oven recommends the optimal temperature for the chosen cooking mode at 200°C.

But you can adjust it by moving the temperature selector to + or - (fig.4).

Example: position “” adjusted to 190°C (fig.5).

The temperature indicator flashes. Three beeps will indicate to you that the set temperature has been reached.

***This position makes it possible to save up to 20% energy while still offering identical cooking results.**

The ECO position is used for energy labelling.

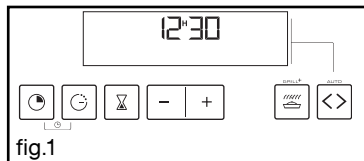


fig.1

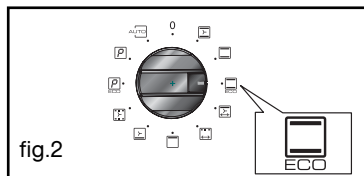


fig.2

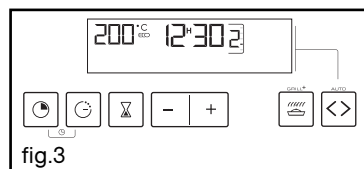


fig.3

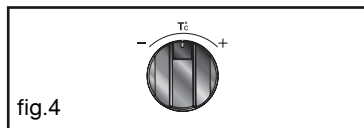


fig.4

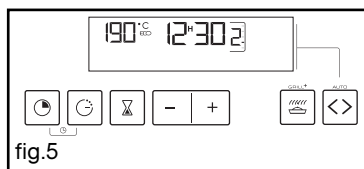


fig.5



Warning

After a cooking cycle, the cooling fan continues to operate for a period of time to guarantee good oven reliability.

• GRILL⁺



– This function allows you to combine the chosen cooking method with a function that “browns” your dish at the end of cooking; this can be accomplished by turning on the grill for the last five minutes of the programme.



It is only active for the following cooking functions: “ ”

This function can be programmed at the start of cooking by adding 5 minutes to the cooking time or simply at the end of cooking by pressing the “ ” button.

– Set the cooking mode chosen and if necessary adjust the temperature.

– Press the “GRILL⁺” button, cooking time flashes at 0:05 (this cooking time is the minimum required to activate the “ ” function in the cooking sequence chosen).

– Press the + or - buttons to adjust the total cooking time. The cooking time is recorded automatically after a few seconds; the display stops flashing.

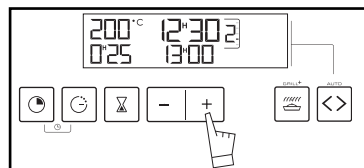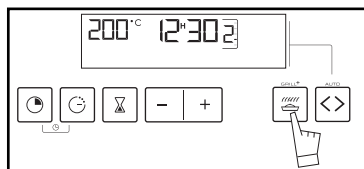

– After these 3 actions, the oven heats up and the icon “ ” lights up, showing you that the function is in operation.

Do not put plates too close to the grill so they don't brown too fast. Follow 1st or 2nd steps (starting from the bottom).

Sample dishes:

– Gratins on pasta, cauliflower, endives, shellfish, crumbles, etc.

Programming examples: Onion soup au gratin:

– Select the cooking sequence and temperature: 180°C, the programme: “ ” and the time: 25 minutes.

The stock will be heated for 20 minutes and browning will carry on for the remaining 5 minutes.



Warning

Every time the function selector is rotated, the function is deactivated “ ”.



Tip


It is possible to activate or deactivate this option at any point during cooking by adjusting the “ ” knob.


You can also activate this function with delayed cooking.

• USE OF THE TIMER FUNCTION


- The programme selector on your oven can be used as a separate timer which can be used when the oven is off.

In this case, the timing display takes priority over the time of day display.

- Press the “” button (fig.1) until it reads 0.00.

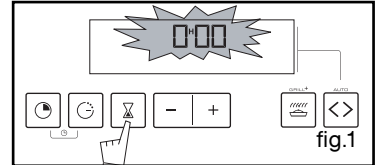

- Adjust the time chosen by pressing + or - (fig.2) buttons until you reach the time required (maximum 60 minutes).

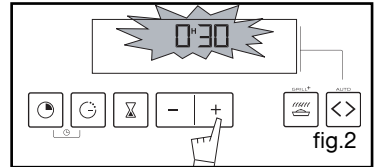

The display stops flashing and the timer starts, counting the time in seconds. Once the time has elapsed, the timer sounds a series of beeps to let you know. Press any button to stop the beeping.



Warning

It is possible to change or cancel the timer programme at any time.

• ADJUSTING THE BRIGHTNESS OF THE DISPLAY




You can adjust the brightness of your display. To do this:

- Set and validate the time on your programme selector at 0:10 (fig.1).

- Press buttons + and - at the same time for ten seconds or so until “CO” is displayed in order to go back to setting mode (fig.2).

- Press buttons + or - to obtain the brightness you require.

Once you have set the brightness to the level you require, wait a few seconds and reset the programme selector to the time of day.

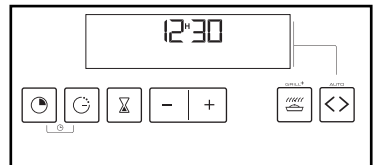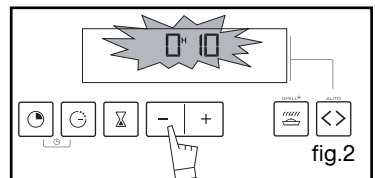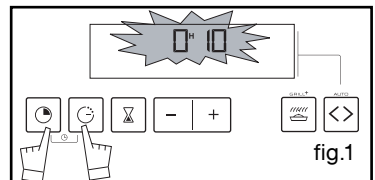

**CIRCULATING HEAT**

(recommended temperature **180°C** - Min. 35°C - Max. 235°C)

- Cooking is controlled by the heating element located at the back of the oven and by the fan.
- Preheating unnecessary except for cooking programmes requiring very short times (biscuits on several levels).
- Recommended for preserving tenderness in meats, vegetables and fish and for multiple cooking on up to three levels.

**TRADITIONAL**

(recommended temperature **225°C** - Min 35°C Max - 275°C)

- Cooking controlled by the upper and lower heating elements with no fan.
- Requires preheating before the dish is placed in the oven.
- Recommended for **slow, gentle cooking**: tender game meat, etc. To seal **roasts** of red meat. To simmer in a **covered stew pan** dishes that were begun on the hob (coq au vin, stew, etc.).

**PULSED GRILL**

(recommended temperature **200°C** - Min. 180°C - Max. 230°C)

- Cooking is controlled alternately by the upper element and the fan.
- Preheating unnecessary. Roasts and poultry that are juicy crispy and all over.
- Recommended for all **poultry** or **roasts** to seal and cook through **leg roast, beef ribs** For preserving tenderness in filets of **fish**.

*

**TRADITIONAL ECO**

(recommended temperature **200°C** - Min 35°C Max - 275. C)

- Cooking controlled by the upper and lower heating elements with no fan.
- This position makes it possible to save approximately 25% while maintaining cooking properties. The ECO position is used for the energy label performance.
- You will save energy throughout the cooking cycle, but the time may be slower.

**PULSED BOTTOM ELEMENT**

(recommended temperature **205°C** - Min 35°C Max - 275. C)

- Cooking is controlled by the bottom element combined with a slight dose of the grill and with the fan.
- Cooking heat from the bottom with a small amount of heat from the top. Place the grid on the lowest shelf support.
- Recommended for **moist dishes** (quiches, juicy fruit tarts, etc.). The crust will be thoroughly cooked on the bottom. Recommended for **dishes that rise (cake, brioche, kouglouf, etc.)** and for **soufflés** that will not be stuck by a crust formed on the top. Cooking multiple items on up to three levels.

**LOW TEMPERATURE STABILISATION/BREAD DOUGH**

(recommended temperature **80°C** - Min 35°C Max - 100°C)

- Heat regulated by the upper and lower elements with use of fan.
- Recommended for **rising dough for bread, brioche, kouglof**, etc. while not exceeding 40° (plate heating, defrosting).

**HIGH GRILL**

(recommended temperature **275°C** - Min 180°C Max - 275°C)

- Cooking controlled by the upper element without the fan.
- Preheat the oven for five minutes. Slide the drip tray onto the lower shelf support to collect greases.
- Recommended for grilling **chops, sausages, slices of bread, prawns placed on the grid**.

** Programme(s) used to obtain the results indicated on the energy label in compliance with European standard EN 50304 and in accordance with European Directive 2002/40/CE.*

• CLEANING THE OUTER SURFACES

To clean the window of the electronic timer, as well as the oven door, use a soft cloth moistened with a glass cleaner.

Do not use abrasive cleaning products or hard, metallic scrubbers to clean the oven's glass door, which could scratch the surface and cause the glass to shatter.

To preserve your appliance, we recommend that you use Clearit cleaning products.



**Professional expertise
serving individuals**

Clearit offers you professional products and solutions designed for the daily care of your household appliances and kitchens.

They are on sale at your regular retailer, along with a complete line of accessories and consumable products.

• CLEANING THE DOOR





Warning

Before unclipping the glass, let the appliance cool down.


- Open the door all the way and fix it in place using the two red stops (fig.1).

They are supplied in your appliance's plastic pouch.

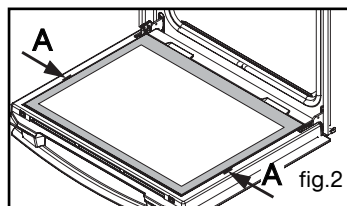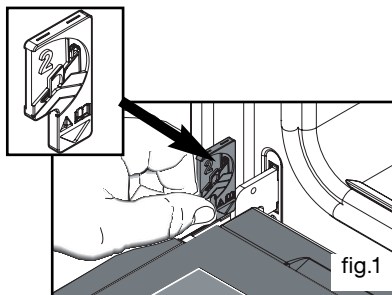

- Remove the first clipped in glass as follows: Insert the other two red stops in the **A** locations provided for this purpose (fig.2).

Create a lever effect on these parts to unclip the glass (fig.3).

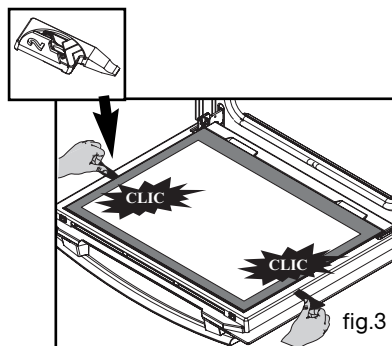

- Clean the glass using a soft sponge and dish soap.

Do not immerse the glass in water.

Do not use abrasive creams or scrubbing sponges. Rinse with clean water and dry with a lint-free cloth.

- If necessary, remove the door's inner glass assembly. This assembly is composed of one or two sheets of glass (depending on model), each of which has a black rubber corner pad (fig.4).

- After cleaning, reposition the four rubber pads, taking care to follow the indications on the glass:

* top left: L

* top right: R

Place your inner glass assembly in the door so that L and R are located on the hinge side.

- If your oven is equipped with a single inner sheet of glass, it must be located as close as possible to the clipped glass.

- Clip in your last glass sheet by placing the indication "PYROLYSIS" so that it faces you (fig.5).

- Remove the red plastic stops.

Your appliance is again operational.

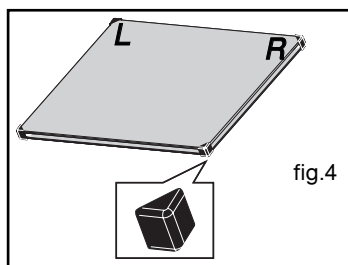


fig.4

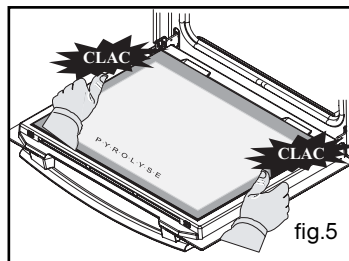


fig.5

• PYROLYTIC OVEN

- This type of oven cleans by high-temperature destruction of the soiling that comes from spattering and spillover.

- The smoke produced is destroyed as it passes through a catalyser.

You should not wait until the oven is excessively coated in grease to initiate a cleaning cycle.

In what situations should pyrolysis be used?

- When your oven smokes during preheating or smokes profusely during cooking.

- When your oven releases an odour even cold after various cooking programmes (lamb, fish, barbecue, etc.).

Pyrolysis is not necessary after each cooking cycle, but simply when the level of dirtiness warrants it.

Cooking programs that produce little soiling	Biscuits, vegetables, pastry, quiches, soufflés, etc.	Splatter-free cooking: Pyrolysis is not warranted.
Cooking programmes that produce soiling	Meats, fish (in a dish), stuffed vegetables	Pyrolysis is warranted after three cooking cycles.
Cooking programmes that produce heavy soiling	Large cuts of meat on the spit.	Pyrolysis can be carried out after cooking of this type, if there was extensive spattering.

- **SAFETY RECOMMENDATIONS**

**Warning**

- Before beginning pyrolysis, remove all the accessories inside the oven, including all cookware.



Before beginning pyrolysis, clean any major spill residue that may have occurred to avoid the risk of a fire or the production of excessive smoke.

- During pyrolysis, the surfaces become hotter than during normal use; children must be kept away.

- Do not cover the interior of the oven with aluminium paper to avoid having to clean: by provoking overheating, this would damage the enamel that coats the cavity.



• IMMEDIATE SELF-CLEANING


Ensure that the analog programmer displays the time of day and that it is not flashing.

All you have to do is position your cooking selector-switch on the  "Self-cleaning" position or the  "ECO self-cleaning" position (fig.1).


The period of time during which the oven cannot be used is 2hrs 30 mins (2 hours for cleaning + 30 minutes cooling time) in "Self-cleaning" mode or 2hrs (1hr 30 mins cleaning + 30 minutes cooling time) in "ECO self-cleaning" mode (this period of time cannot be changed). This period of time includes cooling up to the time the door unlocks.

The display will tell you at what time you can use your oven again (fig.2).

The  on the display will tell you that you are in a self-cleaning cycle or  ECO in an ECO self-cleaning cycle.

During the self-cleaning cycle, a padlock  appears on the display, to tell you that the door is locked (fig.3).

At the end of the self-cleaning cycle, the display will tell you (see (fig.2)).

When the padlock  has disappeared from the display, the door can now be opened.

Rotate the function selector to the 0 position (fig.4).

When the oven is cool, use a damp cloth to remove the white ashes. The oven is clean and once again ready for the cooking application of your choice.

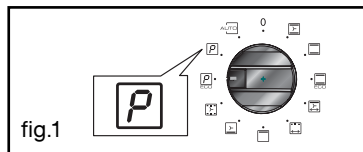


fig.1

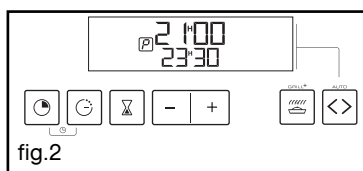


fig.2

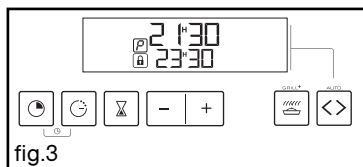


fig.3



fig.4



Warning

Before beginning a self-cleaning cycle, remove the pots and pans from the oven and clean any major spill residue.




Warning

Do not hang a towel or cloth on the oven handle.

• **DELAYED SELF-CLEANING**

Follow the instructions described in the “immediate self-cleaning” paragraph, then


Press button “”, the indicator at the end of the cooking cycle flashes to show that setting can now be carried out.

Press the + or - buttons to set the time desired.

Example: Self-cleaning ends at 4:00 pm.

After these actions, self-cleaning is delayed to that it finishes at 4:00.

When the pyrolysis cycle is over, return the function selector to 0.

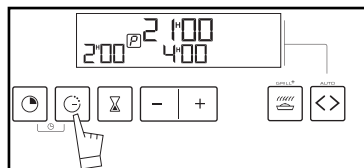

If you have any doubts about the satisfactory working of your oven this does not necessarily mean there has been a malfunction. ***In any event, check the following items:***

YOU OBSERVE THAT...	POSSIBLE CAUSES	WHAT SHOULD YOU DO?
The oven is not heating	<ul style="list-style-type: none"> - The oven is not connected. - Your fuse is out of order. - The selected temperature is too low. 	<ul style="list-style-type: none"> ➡ Plug in your oven. ➡ Replace the fuse in your electrical set-up and check its capacity (16A). ➡ Increase the selected temperature.
The padlock is flashing	<ul style="list-style-type: none"> - Problem with the door's locking mechanism. 	<ul style="list-style-type: none"> ➡ Call the After-Sales Service Department.
The light in your oven is no longer working.	<ul style="list-style-type: none"> - The light is out of order. - The oven is not connected or the fuse is not working. 	<ul style="list-style-type: none"> ➡ Replace the bulb. ➡ Plug in your oven or replace the fuse.
The pyrolysis cleaning cycle does not begin.	<ul style="list-style-type: none"> - The door is not properly closed. - The locking system is defective. 	<ul style="list-style-type: none"> ➡ Make sure the door is closed. ➡ Call the After-Sales Service Department.
Your oven starts beeping.	<ul style="list-style-type: none"> - During cooking. - At the end of cooking. 	<ul style="list-style-type: none"> ➡ The recommended temperature of your choice has been reached. ➡ Your programmed cooking cycle is finished.
The cooling fan keeps working when the oven has been switched off.	<ul style="list-style-type: none"> - The fan should work for a maximum of one hour after cooking, or when the oven temperature is greater than 125°C - If it does not stop after 1 hour. 	<ul style="list-style-type: none"> ➡ Open the door to speed up oven cooling ➡ Call the After-Sales Service Department.
The oven does not heat up and "DEMO" flashes up on the display about every 8 seconds.	<ul style="list-style-type: none"> - Your oven has been programmed for a demonstration. 	<ul style="list-style-type: none"> ➡ Set the time at 0:00. Press + and - for 10 seconds until you hear a beep.



Warning

- The appliance may only be repaired by professionals. Repairs not carried out according to the rules may be a source of danger to the user.



Tip

In all cases, if your efforts have been unsuccessful, contact the After-Sales Service Department immediately.

**Warning**

- Disconnect your oven before performing any task on the bulb to avoid the risk of electric shock and, if necessary, let the appliance cool down.

**Tip**

To unscrew the view port and the light, use a rubber glove, which will make disas-

• CHANGING THE BULB


The bulb is located on the ceiling of your oven's cavity.

- Disconnect the oven.
- Unscrew the view port (fig.1).
- Unscrew the bulb in the same direction.


Bulb specifications:

- 15 W
- 220-240 V ~
- 300°C
- E 14 cap

- Replace the bulb then reposition the view port and reconnect your oven.

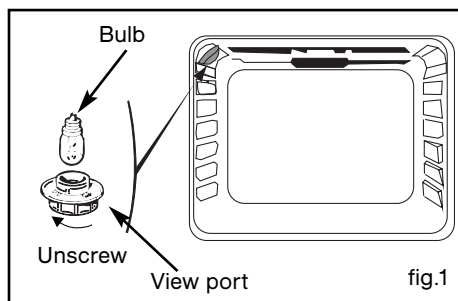


• ADVANTAGES AND PRINCIPLES

Using the "  " function means you no longer have to select the temperature and cooking time


These two parameters are automatically calculated by your oven in order to give you optimal cooking.

This "  " cooking mode takes place in 2 steps:

1) The first step (acquisition) during which the oven will use its electronic sensors to record the specific cooking data for your dish.

This step is represented by  flashing in the right-hand area of the display: this may take between 5 and 40 minutes depending on cooking mode chosen.


DO NOT OPEN THE DOOR DURING THIS PHASE or you may disturb the recording of data.

2) In the second step (calculation, the oven sets the cooking time necessary. The icon for the "  " animation appears. The oven shows the cooking time remaining as well as the actual time at the end of cooking. If you wish to interrupt the dish (basting, turning the piece of food, etc) you may open.

3) At the end of cooking you will hear a series of beeps.

• HOW TO USE THE APPLIANCE

a) Instant cooking:

Position the cooking selector on the "  " function.


Using the "  " button, choose the dish.

Place it on the shelf recommended on the display. Close the door. The oven begins cooking.

The seeking procedure begins, shown by the animation on the display: a time is suggested.


When cooking is complete, the oven emits several beeps.

b) Delayed cooking:

Position the cooking selector on "  ".

Choose your dish by pressing the "  " button.

Place your dish in the oven and close the door

Position the mode selector on "  ".

Press the + or - buttons to set the end cooking time desired.

Example.: End of cooking 1:00 pm.

After these actions, the start of cooking is delayed.


The cooking end time is estimated based on the average basic time. Just as for immediate cooking, this time will be optimised during the cooking programme; therefore, the time may vary by a few minutes (over or under) compared to the initial time selected.

• TIPS

As soon as the icon "🍳" stops flashing, you may open the oven door

If, however, you open the door while the icon is lit, your oven sounds a warning beep and the dish icons flash.

Cooking in "AUTO" mode **MUST START WITH THE OVEN COLD**, you should wait until the oven has completely cooled down before beginning a second cooking cycle in this mode (if you do not, the cooking time indicators, "🍳" and the dishes flash on the display, while a series of beeps will prevent you from starting to cook).

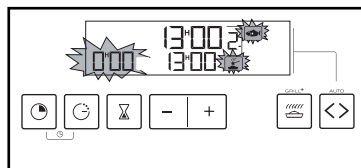

9 / IF AN OPERATING FAULT OCCURS

YOU SHOULD CHECK THAT...	THE CAUSES POSSIBLE	WHAT SHOULD YOU DO?
Beeping + the EASY COOK icon flashes	<ul style="list-style-type: none"> - You have opened the door during the seek stage: the programme is cancelled. - The oven is hot 	➡ Allow the oven to cool down before re-starting cooking.

**FISH**

- **Whole fish (sea bream, hake, trout, mackerel, etc.) with herbs and spices and white wine, roast fish**

TIPS:

- use this function for whole fish, cooked in the dish (for grilled fish or fish cooked in foil, the oven must be preheated).

**ROAST BEEF**

- **Roast beef (rare to medium rare)**

TIPS:

- If you prefer meat well-done, opt for a traditional cooking function.
- take the roast from the refrigerator at least 1 hour before beginning cooking (see tips on the next page). Remove most of the bacon strips, place the roast on an earthenware dish with a little water and a teaspoonful of oil. Add salt only when cooking is finished.

**PIZZA**

- **fresh ready-made pizza**
- **ready to use pizza bases**
- **special pizza bases**
- **frozen pizza (rolled in cheese, small loaves (packed))**

TIPS:

- put it on the grill for a crispy crust
- put it on the enamel plate to get a soft crust.

**CHICKEN**

- **chickens from 1 kg to 1.8 kg**
 - **duckling, guinea fowl, etc.**

TIPS:

- spit cooking: don't forget to put a drip tray on the first shelf to catch the fat.
- cooking in a dish: preferably made of earthenware to avoid grease spattering
- prick the poultry skin to avoid spattering.

**TARTS**

- **Fresh tarts**
- **Frozen tarts**
- **Quiches**
- **Raw frozen meat pastries**

TIPS:

- use a non-stick aluminium mould: the pastry will be crisper underneath
- ready-made frozen tarts and quiches: remove the aluminium tray before putting them on the grill

**VEGETABLES**

- **tomatoes, stuffed peppers**
- **lasagna (fresh or frozen)**
- **cottage pie, brandade, pastry gratins, etc.**

TIPS:

- carefully match the size of your plate to the amount you have to cook to prevent the juice boiling over.

FISH

When you buy fish, the smell should be pleasant and not too fishy.

The body should be firm and rigid and the scales should be firmly stuck to the skin; the eye should be bright and rounded and gills will appear shiny and moist.

BEEF (MEAT IN GENERAL)

It is essential to take all meat out of the refrigerator well before cooking: cold-hot temperature shocks toughen meat; this way you will produce a roast beef that is golden outside, red inside and warm in the middle. Do not salt before cooking: salt absorbs the blood and dries out the meat. Use a spatula to turn the meat: if you prick it the blood will drain away. Always let meat sit after cooking for 5 to 15 minutes: wrap it in a sheet of aluminium and place it just inside a warm oven: this way the blood, drawn to the outside, will flow back and moisten the roast.

Use earthenware roasting dishes: glass promotes grease spattering.

Do not cook in the enamelled drip tray.

PIZZA:

To prevent cheese or tomato sauce from dripping in the oven, you can place a piece of greaseproof paper between the grill and the pizza.

CHICKEN:

Carefully match the plate to the size of the chicken so that the grease doesn't burn.

TARTS/QUICHES:

Do not use glass and porcelain dishes, they are too thick and make cooking time longer, preventing the base from turning crisp and golden.

With fruit, the bottom of the tart is in danger of becoming soggy: just add a few spoonfuls of fine semolina, crushed biscuit crumbs, almond powder or tapioca, which will absorb the juice during cooking.

With high-water content or frozen vegetables (leeks, spinach, broccoli or tomatoes) you can sprinkle on a tablespoon of cornmeal.

VEGETABLES

To make a smoother potato gratin, the potatoes should be precooked cut into medallions in milk or milk and cream for about twenty minutes.

To make stuffed tomatoes: after having cut open a head, remove the seeds, salt the inside and put them back on the grill so that they drain before you stuff them.

FISH

Black sea bream with dry cider:

1 black sea bream weighing 1.5 kg.
 500 g button mushrooms.
 2 tart apples.
 2 shallots
 2 tablespoons of heavy cream
 100 g butter.
 1/2 litre cider. Salt, pepper.

Clean and scale the fish. Place it in a buttered dish on the finely minced shallots and sliced mushrooms. Add the cider, salt and pepper and a few knobs of butter. Place it in the oven. Cook the apples in unpeeled quarters in the butter. When cooking is complete, transfer the fish to a warm dish, strain the juice and deglaze the dish with the cream.

Add the cream to the juice, serve with apples and mushrooms.

ROAST BEEF Accompanying sauces.**PARSLEY SAUTERNES or ROQUEFORT SAUCE**

Sauté 2 tablespoons of minced shallots in the butter.

Add 10 cl Sauternes, let it evaporate.

Add 100 g Roquefort, let it melt slowly.

Add 20 cl liquid cream, salt, pepper. Bring to a boil.

COGNAC sauce with PINK PEPPER:

Sauté 2 tablespoons of minced shallots in the butter.

Add 15 cl Sauternes, let it evaporate.

Add the yolk of an egg, 1 spoonful of ketchup, 200 g of butter Salt, pepper.

While beating, add 3 spoonfuls of Cognac and 1 teaspoonful of crushed red berries.

FRUITY PEAR sauce with CRESS:

Cook 1 pear, covered in white wine. Drain, mix.

Blanch 1/2 bunch of cress, drain, chop.

Sauté 1 tablespoon of chopped shallots in the butter.

Moisten with the cooking juices. Evaporate off.

Add the pear, the cress and 20 cl of liquid cream.

Salt, pepper, lightly boil.

Place in the oven. Cut the unpeeled apples into quarters and simmer them in the butter. When cooking is complete, transfer the fish to a warm dish, strain the juice and deglaze the dish with the cream. Add the cream to the juice, serve with apples and mushrooms.

PIZZA

Base: 1 pizza crust

*vegetable: 6 tablespoons tomato sauce + 100 g diced zucchini + 50 g diced bell peppers + 50 g sliced eggplant + 2 small sliced tomatoes + 50 g shredded gruyere + oregano + salt + pepper.

*roquefort and smoked ham: 6 tablespoons tomato sauce + 100 g smoked ham + 100 g roquefort in small chunks + 50 g walnuts + 60 g shredded gruyere.

*sausage and fromage blanc: 200 g drained fromage blanc spread on the crust + 4 sausages, sliced + 150 g ham, slivered + 5 olives + 50 g shredded gruyere + oregano + salt + pepper.

CHICKEN

Stuff with a good bunch of fresh tarragon or coat it with a mixture made of 6 cloves of crushed garlic and a big pinch of salt and a few peppercorns.

TARTS / QUICHES

Non-stick aluminium mould 30 cm in diameter.

Glazed puff-pastry apple tart:

1 puff pastry base spread out with its sheet, pricked with a fork.

200 ml cream brought to a boil with a vanilla bean.

2 beaten eggs with 30 g sugar, add the cooled cream.

2 apples cut into cubes rolled in 70 g crushed pralines.

Remove the cream and the apples. Place in the oven.

QUICHES :

Base: 1 aluminium mould, diameter 27 to 30 cm

1 pressed base, ready to use

3 beaten eggs + 50 cl heavy cream

salt, pepper, nutmeg.

Assorted garnishes:

200 g of precooked bacon pieces,

or - 1 kg cooked endives + 200 g shredded gouda

or - 200 g broccoli + 100 g larding bacon + 50 g blue cheese

or- 200 g of salmon + 100 g of drained cooked spinach

VEGETABLES**Tomatoes stuffed with hot goat's cheese.**

8 tomatoes

300g of fresh goat's cheese

4 soup spoons of olive oil

1 small bunch of fine herbs (chives or basil)

Salt, pepper.

Wash the tomatoes, remove the core and carefully remove the pulp.

Turn them around to drain them well.

Using a fork, mix the cheese and olive oil, add the fine herbs chopped mint, salt and pepper

Replace the stalk and arrange them on a plate. Place in the oven.

Serve warm on a bed of green salad.

Any maintenance on your equipment should be undertaken by:

- either your dealer,
- or another qualified mechanic who is an authorized agent for the brand appliances.

When making an appointment, state the full reference of your equipment (model, type and serial number). This information appears on the manufacturer's nameplate attached to your equipment.