

OPERATION, MAINTENANCE AND SAFETY INSTRUCTIONS

FOR EVERDURE PATIO HEATERS HOPE201 & HOPE201ST



HOPE201



HOPE201ST

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT: Read the safety precautions of this booklet carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage. If you are unsure about anything regarding your patio heater or these instructions, please contact Everdure on 1300 766 066 in Australia or (09) 415 6000 in New Zealand before operating your appliance.

1. Read all instructions carefully before using the patio heater.
2. Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
3. This appliance is a patio heater, and is designed to be used in an area protected from rain (IP 24). Do not use this appliance outdoors.
4. Remove the package and ensure that the appliance is undamaged (keep packing box for later storage). In case of doubt do not use the appliance and contact Everdure Service. Do not let children play with any parts of the package.
5. Handle the appliance with care. Do not drop or impact, or subject to high levels of vibration.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Extreme caution is necessary when the appliance is used by or near children or individuals with decreased mental and physical capacity and whenever the appliance is left operating unattended.
7. Before you use the appliance, check if the voltage marked on the rating label corresponds to the mains in your home. The appliance must be connected to a grounded power supply.
8. Avoid using extension cords as the extension cord may overheat and cause a risk of fire. Do not use this appliance with a programmer, timer or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
9. Do not pull the power cord to disconnect with the power source. Always grasp the plug to pull it out.
10. Do not insert any objects into the head of the appliance as it may cause an electric shock or fire or damage to the appliance. Do not block or tamper with the appliance in any manner while it is in operation. To prevent a possible fire, do not block the air inlet or outlet in any manner. Do not place on soft surfaces, like a bed, where openings may become blocked
11. Do not leave the appliance unattended for any extended time. Always unplug the appliance when not in use. The main power switch should not be used as the sole means of disconnecting the power
12. This head of the appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always let the appliance cool down before touching it. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the front of the heater and keep them at least 1 foot (0.3m) from the sides and rear. The head of the appliance must be fixed or placed in a position that is a minimum of 1.8m from the floor (or at the lower setting of the stand), 0.3m from the ceiling and 0.1m from the rear wall.
13. The appliance has hot and arcing or sparking parts inside. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres.
14. This appliance is intended for general domestic use ONLY. Do not use in barns or stables, or in areas used for the propagation & raising of animals. Do not use in greenhouses or on building sites. Do not use appliance as a sauna heater or to dry clothes or other fabrics.
15. This appliance is not intended for use in wet or damp locations. Never locate an electrical appliance where it may fall into a bathtub, pool, shower or other water container.
16. When using an appliance supplied with a stand, always place the stand on an even, level surface.
17. Do not install or use this appliance directly below a power socket. The power socket should be within reach. Do not lay the power cord behind or under combustible surfaces (such as rugs or wood). Protect the power cord from accidental entanglement, tripping etc. Do not wrap the power cord around the appliance head.
18. Clean appliance with a damp cloth only (do not immerse in water or spray with aerosols). Do not clean elements. Allow to dry fully before use.
19. Note: 2 dark areas or white may appear on the elements soon after the appliance is started. This is a normal condition & will not affect the performance of the appliance.



WARNING:

To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by a special cord or assembly available from an authorised person. In order to avoid overheating, do not cover the heater. The heater must NOT be located immediately below a socket outlet. Do not use the heater in the immediate surrounding of a bath, shower or swimming pool.

GENERAL SPECIFICATIONS

Power Supply: 220-240V 50Hz.

Power Usage: Low – 650W.

Mid – 1300W.

High – 2000W.

Element Type: Quartz tube.

 
Element Life: ~3000 hours.

IP Level: IP24.


Net Weight: HOPE201 – 2.3kg.

HOPE201ST – 10.7kg.

Cord Length: 4 metres.

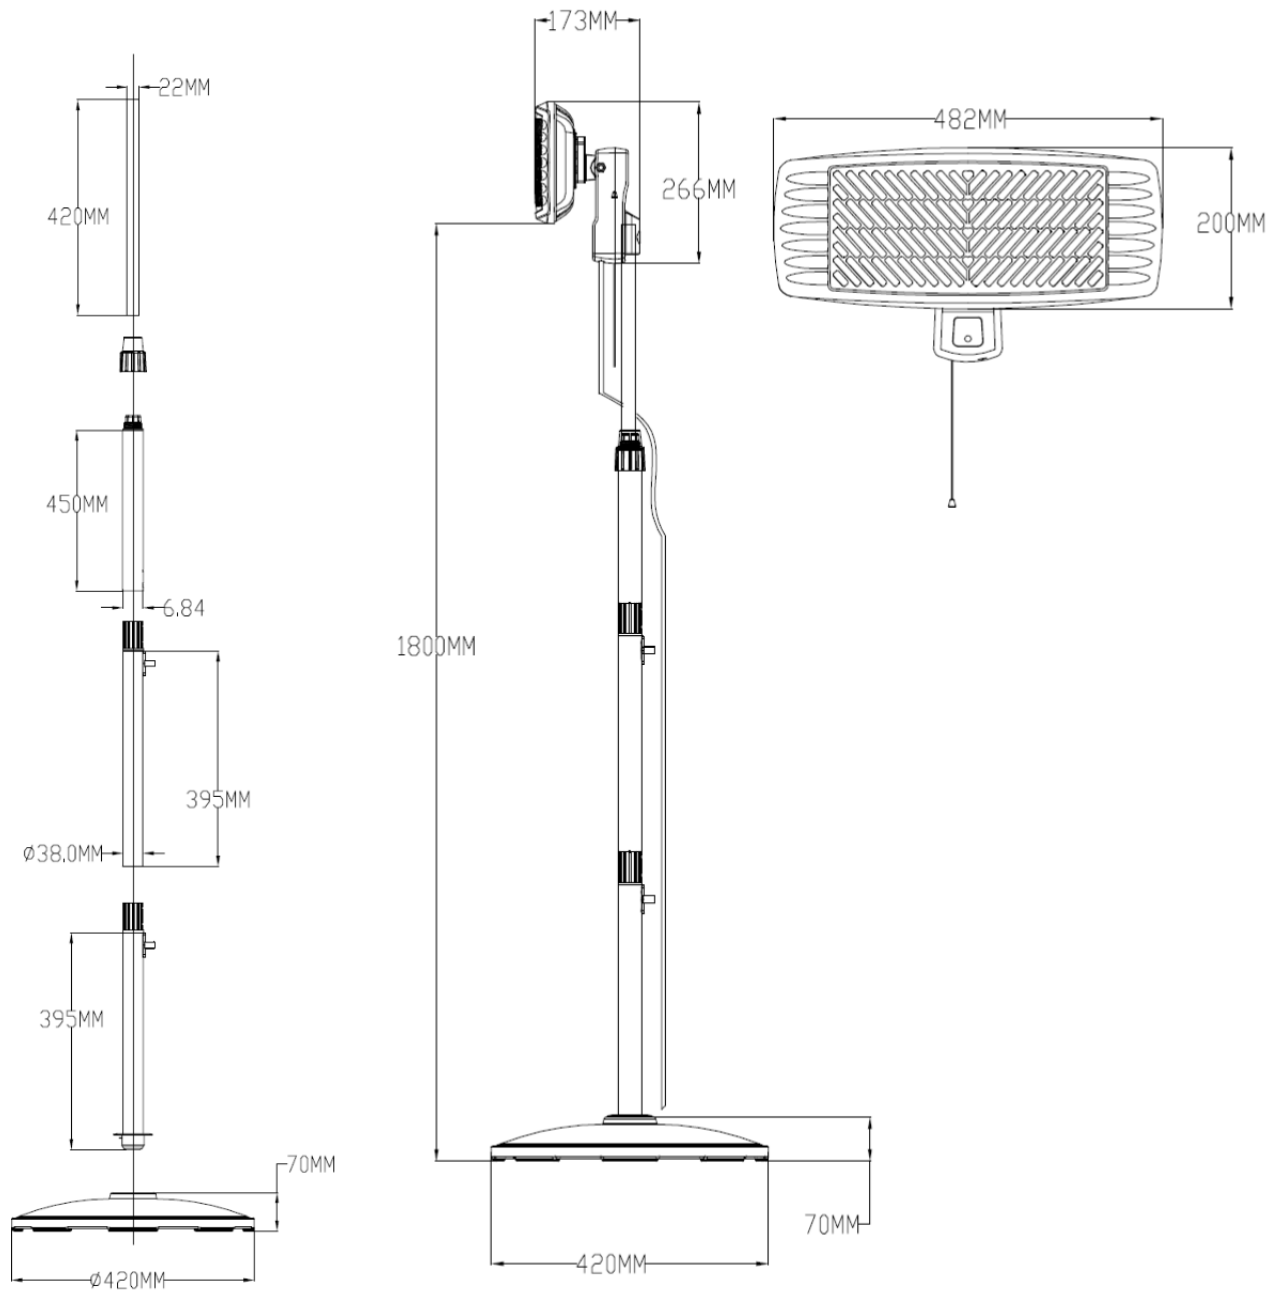


HOPE201 INSTALLATION

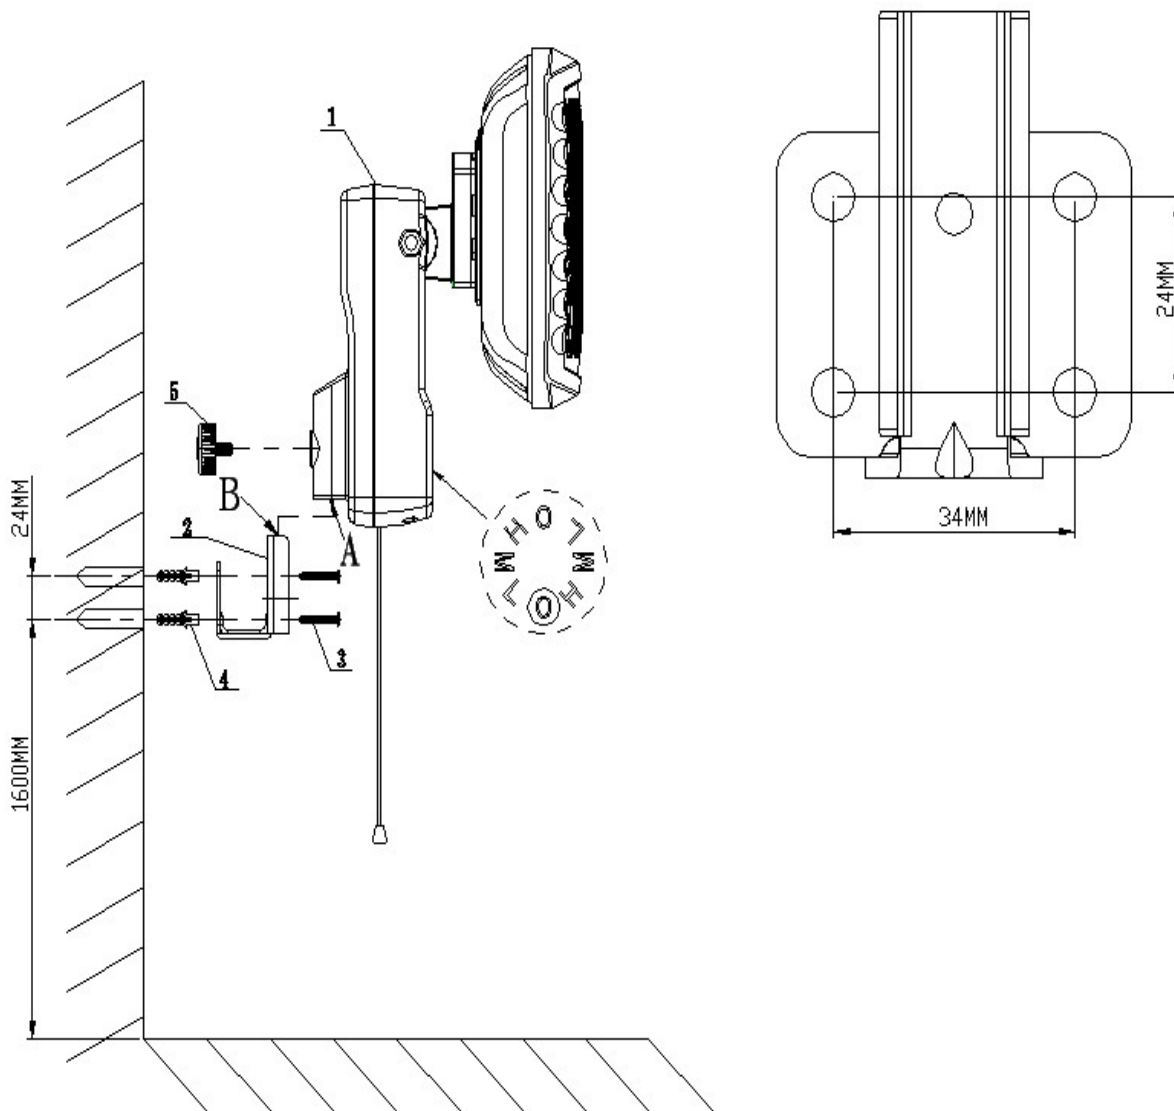 

- 1) Pick an appropriate position for the heater (noting the minimum distances from floor, ceiling and combustibles, protection from elements and placement of the power socket as specified in the safety instructions within this manual and in the diagram above).
- 2) Mark out four positions for the screws using the mounting bracket (2).
- 3) Drill four holes into the wall to fit the four supplied plastic plugs (note that for walls made from materials other than brick or concrete, other mounting fixtures would be needed). Place all four plastic plugs (4) into the holes taking care they are flush or slightly inset into the wall.
- 4) Place the mounting bracket over the four holes (orientation as above) and use the four screws (3) supplied to fix the mounting bracket to the wall. Check for strength.
- 5) Place the head unit (1) onto the mounting bracket (A over B) and fix into place using the screw knob (5).
- 6) Set the power to "0", plug in the power cord and turn on power at wall socket.

 HOPE201ST INSTALLATION

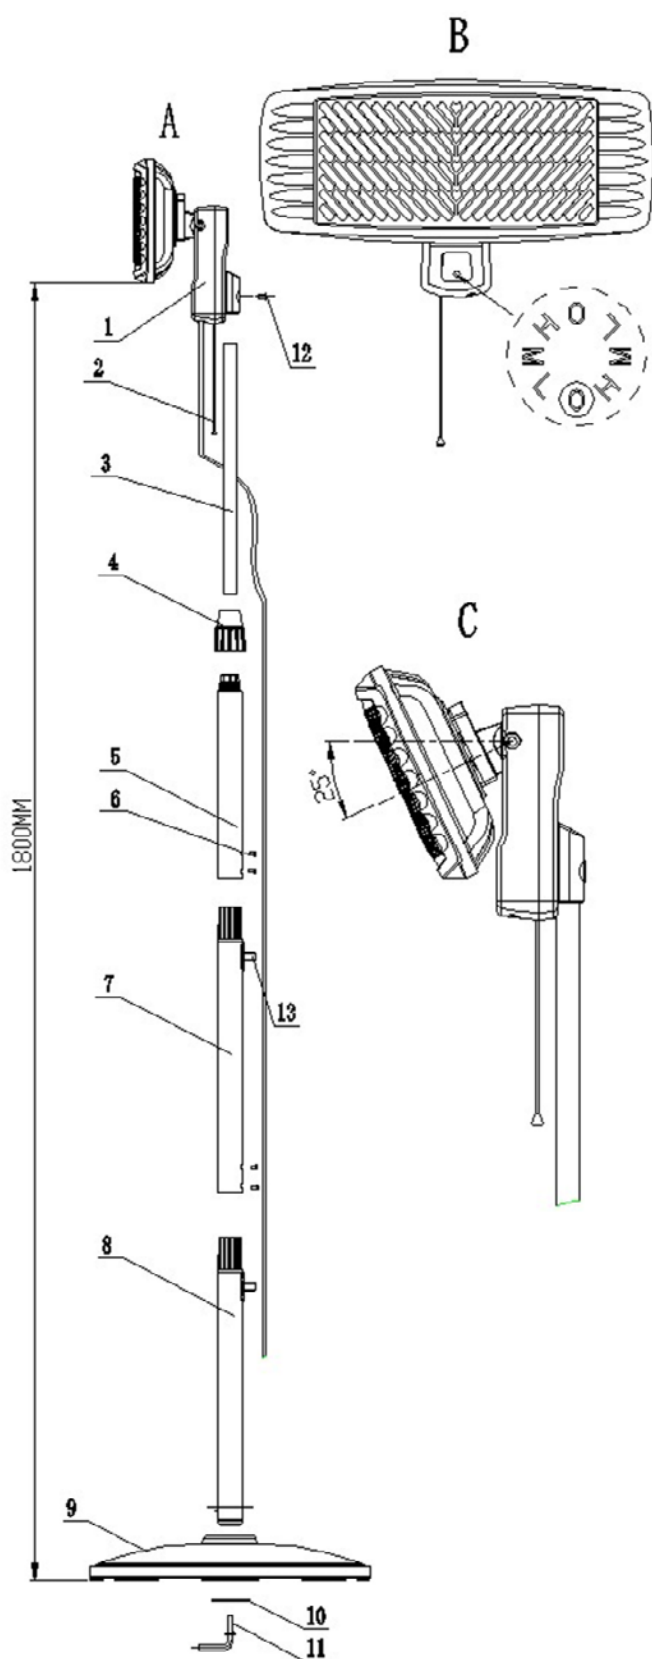

- 1) Take lower tube (8) and place into the base (9) with the welded plate to the bottom. Place the washer (10) over the tube and fix into place with thumb screw (11).
- 2) Take the central tube (7) and place over the end of the lower tube. Fix in place using two M6x12mm screws (6).
- 3) Take the upper tube (5) and place over the central tube. Fix in place using two M6x12mm screws (6).
- 4) Place the adjustment knob (4) over the adjustment tube (thread down). Push the adjustment tube into the upper tube and adjust the height. Tighten the adjustment knob into the thread of the upper tube to fix the adjustment tube in place.
- 5) Place the adjustment tube into the back of the head unit and fix into place with M6x15mm screw (12).
- 6) Set the power to "0", plug in the power cord and turn on power at wall socket.

OPERATING INSTRUCTIONS

Before turning the appliance on, adjust the angle of the head unit (up to 25°) to suit the room.

The appliance is operated with the use of a pull string (located centrally below the head unit). Pulling the string down once, moves the function along one spot in the following, repeated sequence:

Off, Low, Mid, High.

Always turn the appliance off at the wall and unplug the power cord when not in use.

CLEANING & MAINTENANCE

 **WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING, DO NOT IMMERSE APPLIANCE IN WATER**

Clean appliance with a damp cloth only (do not immerse in water or spray with aerosols). Do not clean elements. Allow to dry fully before use.

HINTS & TIPS

Where possible your electric patio heater should be connected to a power outlet that uses a separate 10 amp power circuit. This will avoid overloading your household fuse.

In the event that your household fuse is overloaded and trips, please note this is normally caused by the use of excessive power outlets at the same time your patio heater is operating (for example, a steam iron, kettle, toaster etc.). Please ensure to check the use of the power circuit and adjust when patio heater is in use (i.e. turn off the patio heater when boiling a kettle).

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference.

Due to continual product development, Everdure reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.

OTHER PRODUCTS AVAILABLE FROM EVERDURE



Barbecues



Cooking Products



Gas Heaters

HEAT LIVE RELAX

A division of Shriro Australia Pty Ltd
104 Vanessa St Kingsgrove NSW 2208
In Australia: 1300 766 066
In New Zealand: (09) 415 6000
www.everdure.com

IM Ref: HOPE201(ST) 18/2013/10

