

Coffee-Center

Supremo SL/XSL



Operating instructions

Dear V-ZUG Customer

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.
Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Symbols used



Denotes important safety precautions. Failure to observe said precautions can result in injury or damage to the appliance or fittings!



Indicates step-by-step instructions.



Indicates a list.



Denotes useful tips for the user.

Validity

The model number corresponds to the first three numbers on the identification plate. These operating instructions apply to the model:

Type	Model no.
CCS-SL	301

Variations depending on the model are noted in the text.

Contents

Safety precautions	4
Appliance description	6
Operating and display elements	6
Operating panel.	6
Behind the operating panel.	7
Behind the service door	7
Accessories	7
Using for the first time	8
Water hardness	8
Filling the water tank	8
Filling with coffee beans.	8
Switching on the appliance.	9
Venting the system.	9
User Settings/Programming	10
Preparing coffee	12
AromaControl	12
Espresso	12
Cappuccino	13
Drawing hot water/steam	14
Care and maintenance	15
Water tank/Coffee bean hopper.	15
Drip tray/Dregdrawer	15
Dispensing head.	16
Nozzle.	16
Brew unit.	16
Descaling	17
Rinsing cycle	19
Trouble-shooting	20
Technical data	21
Disposal	22
Repair service	23

Safety precautions



The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is however essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions. These operating instructions must be retained and passed onto future owners.

- | | |
|--|---|
| Emergency | ■ Immediately remove plug from the mains or switch off the mains fuse. |
| Appliance may be used exclusively | ■ Indoors.
■ For preparing coffee and hot water as well as for frothing milk and steaming drinks.
■ For household purposes. |
| Never use the appliance | ■ For other purposes other than those described above, otherwise danger may result. |
| Installation | ■ Use the appliance only after it has been installed.
■ The appliance must be installed and connected up to the electricity supply according to the separate installation instructions. The necessary work should be carried out by a qualified fitter/electrician.
■ Please read the section «Using for the first time» before using the appliance for the first time. |
| Mains connection | ■ The appliance must be connected to a suitable mains socket.
■ Mains voltage must correspond to the specifications on the identification plate on the appliance
■ Recommendation: connect the appliance via a residual current device (RCD). |

Safety precautions

Dangers

- The appliance must not be used by children or persons not instructed in the use of the appliance.
- The appliance is dangerous to children. Keep children away from the appliance. Switch off the appliance when unattended.
- Keep packaging material out of the reach of children.
- Do not point the steam-/hot water nozzle at yourself or others (danger of scalding).
- Do not insert any objects into the openings of the appliance (Danger! High voltage!).
- If accessible, do not touch the plug with wet hands or pull it out of the mains socket by the cable.
- Caution: you may scald yourself if you come into contact with hot water, steam or the nozzle.
- Do not remove the drip tray during preparation, otherwise you may scald yourself with hot drinks.

Defects

- Do not use the appliance if it is faulty or faults are suspected, e.g. if the appliance has been dropped.
- Any repairs should only be carried out by Customer Services or authorised and qualified persons.
- Do not use the appliance if the mains cable is defective. Have the mains cable replaced only by Customer Services (Danger! High voltage!).
- Switch off the appliance before opening the service door. Danger of scalding!

Cleaning/ Descaling

- If possible, disconnect the plug from the mains and allow the appliance to cool down before cleaning.
- Do not spray the appliance down with water.
- Do not dry any part of the appliance in the oven or microwave.

Before prolonged periods of non-use

- Empty the water tank and coffee bean hopper.
- Empty and clean the drip tray and dregdrawer.
- Switch off the appliance.

Spare parts


- In the interests of safety, use only original spares and accessories.

Fire

- In the event of fire, use only carbon dioxide (CO₂) to extinguish flames.

Appliance description

Operating and display elements

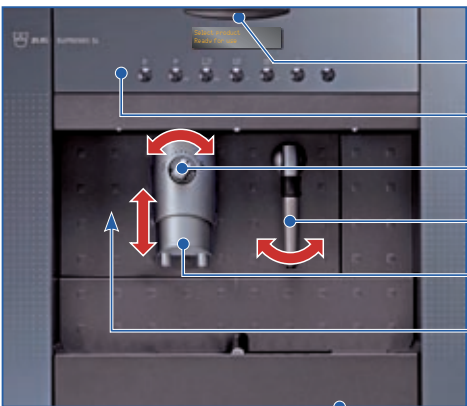

To open panel, press strip handle

Strip handle


Operating panel (can be folded out)

AromaControl

Nozzle

Dispensing head

Service door

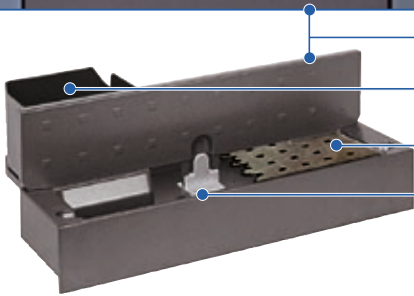


Drip tray

Dregdrawer

Drip grill

Display
«Drip tray»

Operating panel (can be folded out)

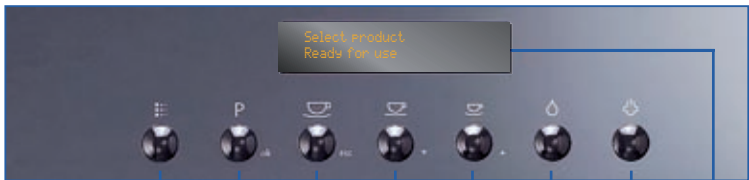

Descal
Programming, Standby,
User Settings

Large coffee

Coffee

Espresso


Hot water

Steam

Plain text display

Appliance description

Behind the operating panel


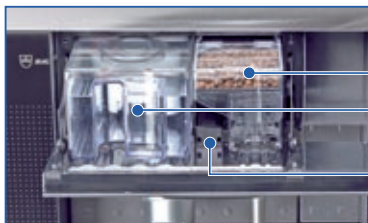


Coffee bean
hopper

Water tank

Main switch

Behind the service door

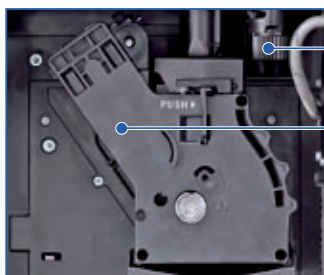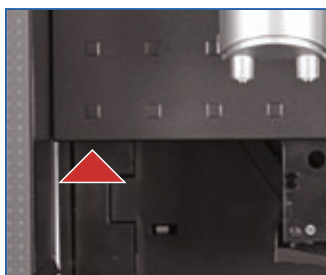

Grinder setting

Brew unit

Accessories



Key



Brush



Drip guard



Water filter
«Aqua Prima»
Available from
specialist retailers



Water-hardness
test strip



Detergent
tablets

Using for the first time

Water hardness

Range/User settings	Hardness 1	Hardness 2	Hardness 3	Hardness 4
Water-hardness test strip				
Corresponds to German degree of hardness [°dH]	0–7	7–14	14–21	above 21
Corresponds to French degree of hardness [°fH]	0–12.5	12.5–25	25–37.5	above 37.5

To test for water hardness: hold strip under water for one second. Take a reading after one minute. To set water hardness, see «User Settings/Programming».

Filling the water tank



- Open operating panel by pressing on strip handle
- Remove water tank



- Insert water filter according to instructions in package



- Fill with fresh water (max. 1.7 l)




- Insert water tank




The appliance can also be used without a water filter, though this requires more frequent descaling. Using the water filter improves the quality of the coffee, and places less strain on the parts of the appliance.

- To programme water filter, see «User Settings/Programming».


Filling the hopper with coffee beans

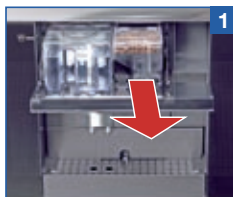

- Remove coffee bean hopper

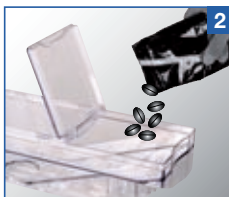

- Fill with coffee beans (max. 300 g)

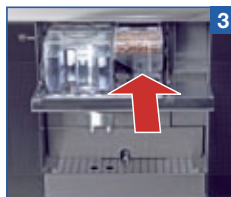

- Insert coffee bean hopper

Using for the first time

Switching on the appliance



- ▶ Switch on appliance at main switch



- ▶ Close operating panel. «Ventilate» appears in plain text display




- ▶ For language settings, see «User Settings/Programming».


Ventilating the system




- ▶ Place a tall vessel under nozzle



- ▶ Press the  key and draw hot water until a steady jet of water is produced

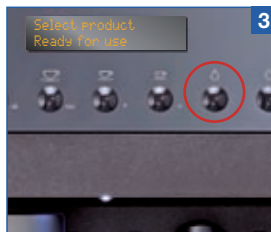

- ▶ Press the  key again to interrupt the flow of hot water. «Select product» and «Ready for use» appear in the plain text display









User Settings/Programming



The flashing ★ symbol in the plain text display denotes the user setting selected.

1 Start ▶ P	2 Function ▶	3 Settings ▶
		or
Cancel by pressing «esc»	Select Confirm	Select Confirm Cancel
Standby	Energy saving	
Appliance switches over	to energy-saving mode.	
Rinsing	Rinsing	▶ On - Off
Circuit is automatically rinsed when appliance is switched on. Coffee is prepared using fresh water.		
Language	Language	▶ Deutsch - Français - ...
Select language for the plain text display. The following languages can be select: German, French, English, Spanish, Dutch, Italian, Russian and Turkish.		
Contrast	Contrast	▶ 10 20 30 40 50 60 70 80 90 100
Adjust contrast for the plain text display.		
Illumination	Illumination	▶ On - Off
Switch the illumination on/off.		
Water hardness	Water hardness	▶ Hardness 1 - ... 2 - ... 3 - ... 4
The appliance should be	adjusted to the degree of water hardness (see «Descaling»).	
Water filter	Waterfilter	▶ On - Off - Reset
Use only when inserting water filter for the first time. filter!		Important: reset after each change of
Temperature	Temperature	▶ low - medium - high
Select temperature for preparing coffee.		

User Settings/Programming

1 Start ▶ P	2 Function ▶	3 Settings ▶
	  ▶ 	  ▶  or 
Cancel by pressing «esc»	Select Confirm	Select Confirm Cancel
Aroma of espresso	Aroma espresso ▶	Mild - Normal - Strong
Select amount of ground coffee for espresso.		
Aroma of coffee	Aroma coffee ▶	Mild - Normal - Strong
Select amount of ground coffee for coffee.		
Aroma of large coffee	Aroma large coffee ▶	Mild - Normal - Strong
Select amount of ground coffee for large coffee.		
Prebrewing	Prebrewing ▶	Off - On - long
The coffee is moisturized first of all. This is the best way of bringing out the taste. If setting is «large», the coffee is pre-brewed for 4 seconds.		
Total coffees	Total coffees	
The total number of coffee portions served is displayed.		
Timer	Timer ▶	Standby after X:XX
Select duration according to which the appliance is set to «Standby» (can be preset 3 hours).		
Clock	Clock ▶	Automatic On/Off - Clock time On/Off time - Show clock time
	Automatic On/Off ▶	Yes - No
Set whether or not switch on/off times are activated.		
	Clock time ▶	XX:XX
Set clock time.		
	On/Off time ▶	On time XX:XX Off time XX:XX
Set switch on/off times		
	Show clock time ▶	Off - On
Set whether to show clock time.		
Rinsing cycle	Rinsing cycle ▶	Yes - No
The rinsing cycle is for degreasing the brew unit.		
Factory settings	Factory settings ▶	Yes - No
Restores all settings to the factory default settings.		
Exit	Exit	
Exit from program mode		

Preparing coffee

Espresso



Hot water and steam can scald! Point nozzle at drip tray!

Energy saving

- Can be cancelled by pressing the **P** key

Place 1 or 2 cups under dispensing head

- Preheat cups
- For large cups: push dispensing head up





Espresso



AromaControl

Strength of coffee is fully adjustable.

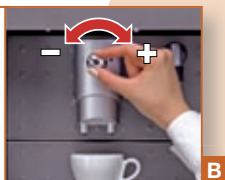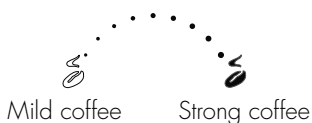


Start preparation

- Press the required key:
- 1 cup = 1x
- 2 cups = 2x




Settings

Amount to be filled

- Place cup below dispenser head
- Hold down the  key until the required quantity is reached.
- The quantity remains stored in the memory

Grinder setting

No coffee beans should be in the grinder when changing the grinder setting

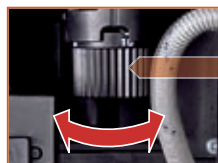

2 • 4 • 6 • 8 • 10
Fine Coarse



After starting the steam function, some condensed water will be produced at first.



Cappuccino



A



Put the milk into a suitable vessel.

- Cold milk froths better
- Fill vessel no more than $\frac{1}{3}$ full

B



Start steam



Caution: steam spray!

- Point nozzle at drip grill

C



Frothing the milk


- Rotate vessel when frothing the milk



As soon as there is enough froth

D



- Stop the steam by pressing the  key
- Remove vessel
- Prepare coffee



For cappuccino, pour coffee directly into the milk froth.



Amount for grinding

This can be selected before preparation, see «User Settings/Programming».

- Aroma of espresso
- Aroma of coffee
- Aroma of large coffee

Cleaning the nozzle



Caution: hot part. There is a danger of burning yourself!

Clean nozzle immediately after use with a damp cloth

Drawing hot water/steam



Danger: hot water and steam can scald!
Point nozzle at drip tray.

Hot water

1




► Place cup under nozzle


2a




Start hot water

► Press the  key

Stop hot water

► Press the  key

2b

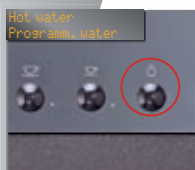


Adjusting the filling amount

► Press and hold the  key

After about 5 seconds the second line switches to programming mode

As soon as the desired amount is reached

► Press the  key

Steam


1




► Place cup under nozzle

After steam function has started, some condensed water is produced at first

2a

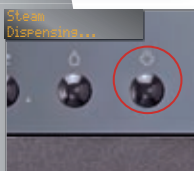


Starting steam


► Press the  key

► Warm the drink by rotating vessel


Stop steam

► Press the  key

2b

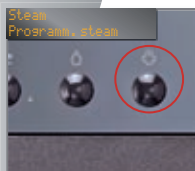


Adjusting the steam duration

► Press and hold the  key

After about 5 seconds the second line switches to programming mode

As soon as the desired amount is reached

► Press the  key

Care and maintenance




If required, wipe the appliance with a damp cloth. Clean the brewing group and accessories on a weekly basis under flowing water, without detergent. Never wash appliance parts in the dishwasher, and never dry them in the oven or microwave.


Water tank/Coffee bean hopper



► Switch off appliance

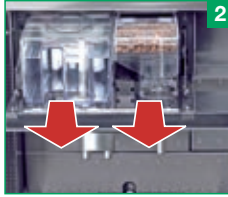

► Remove tank/coffee bean hopper

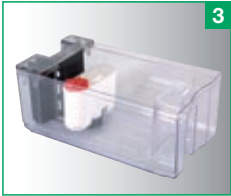


► Clean tank
(including strainers)




► Empty/Clean the coffee bean hopper

Drip tray/Dregdrawer

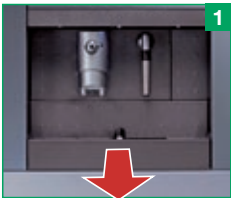

► Remove drip tray

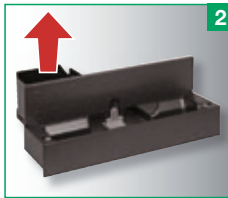

► Remove dregdrawer




► Clean dregdrawer

Care and maintenance


Dispensing head



- Push back dispensing head, push drip guard to AromaControl position.
- Remove drip tray

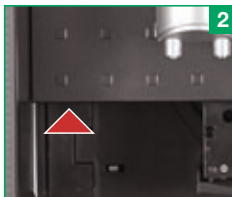

- Open service door (push button is behind cover).

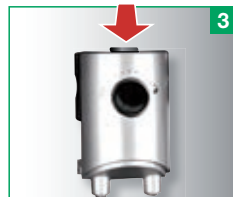

- Push top button and pull dispensing head forwards. Clean without detergent under the tap.
- Push dispensing head onto holder until it rests in.

Nozzle



- Pull lower part of nozzle downwards



- Clean under the tap without detergent


Brew unit



- Push drip guard to AromaControl position
- Remove drip tray
- Open service door (pushbutton behind cover)
- Press PUSH and pull brew unit forwards
- Insert key, turn anti-clockwise and remove the top strainer
- Clean/dry everything



Proceed with care when using the key.

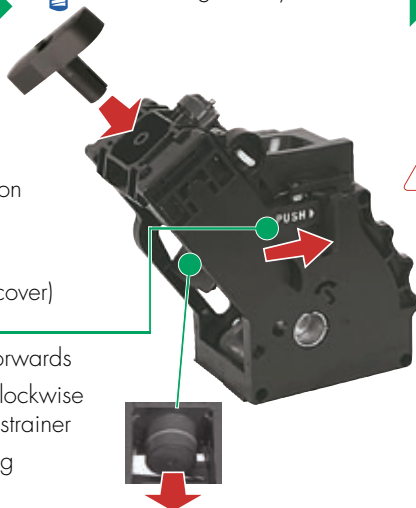

Do not press PUSH when reassembling

- Reassemble strainer and brew unit in reverse sequence.
- Close service door of brew unit.

Descaling


Whenever plain text display shows **Decalcify** or as required.



Under no circumstances use vinegar, as appliance will otherwise be damaged.
Use commercially available descaling agents that are suitable for this appliance.

If the appliance is switched off during descaling, then descaling will continue after the appliance is switched on again. Descaling lasts approx. 30 minutes.

Preparation

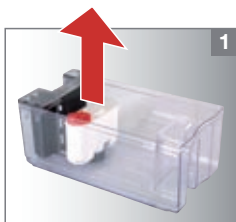

- Remove water filter



- Use descaler according to manufacturer's instructions and fill with at least 1 litre of water.
Re-insert water tank.




- Place large vessel below nozzle




- Press key

Starting descaling

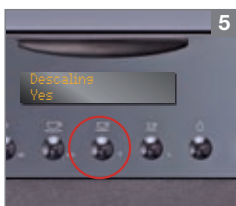

- Press the key, select **Yes**

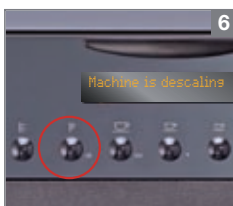

- Press the **P** key, this starts the descaling

Rinsing occurs at 1-minute intervals until the message
Rinse machine
Fill watertank
is displayed. For further information, see «Rinsing».


Descaling


Rinsing




- Rinse water tank thoroughly
- Fill with fresh water



- Press the  key, Rinsing begins

Press the  button to cancel and to continue the procedure

The cleaning process is completed as soon as the water tank is empty and **Rinsing finished** **Press water key** is displayed in the text indicator.

- Press the  key

Finishing descaling



- Rinse water tank thoroughly





- Put back water filter



- Fill with fresh water
- Insert water tank



- Press the  key. Ventilating begins
- Draw hot water until a steady jet of water is produced
- Press the  key to finish

Rinsing cycle

Every 14 days or after 250 cups



Before starting the rinsing cycle, empty drip tray and have a spare vessel handy. Large amounts of water will be produced (approx. 8.5 dl), therefore watch vessel closely.




Switch the appliance on prior to the cleaning cycle. Once started, a rinsing cycle cannot be interrupted.




- Add detergent tablet to the brew unit
- Insert brew unit




- Fill water tank
- Insert water tank

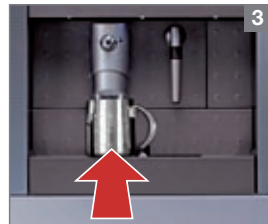


- Place vessel below dispensing head

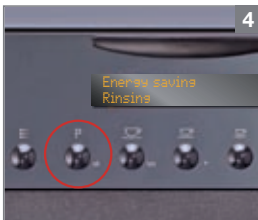

- Press key **P**

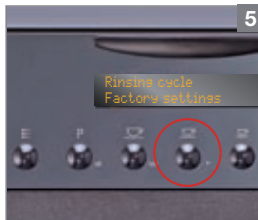

- Select **Rinsing cycle** by pressing key ▼
- Confirm by pressing key **P**

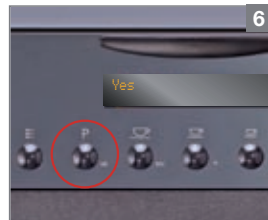

- Select **Yes** by pressing key ▼
- Confirm by pressing key **P**
- Approx. 8.5 dl water is pumped off in approx. 7 minutes.



For optimum cleaning, we recommend the detergent tablets manufactured by Saeco. These can be obtained from our Customer Services or through specialist dealers.




If other products are used, damage may result, for which no responsibility can be accepted.

Trouble-shooting

Problem	Solution	See page ▼
■ Appliance does not switch on	<ul style="list-style-type: none"> ▶ Turn on main switch ▶ Check power connection ▶ Check fuse in house wiring system 	9
■ Coffee is not hot enough	<ul style="list-style-type: none"> ▶ Preheat cups with hot water ▶ Set brewing temperature correctly 	14 10
■ No hot water or steam produced	<ul style="list-style-type: none"> ▶ Switch off appliance! Clean nozzle 	16
■ Heating up takes a long time	<ul style="list-style-type: none"> ▶ Descale appliance 	17
■ Brew unit cannot be removed for cleaning	<ul style="list-style-type: none"> ▶ Close service door ▶ Switch on appliance (brew unit is initialised) 	
■ Brew unit cannot be reinstalled after cleaning	<ul style="list-style-type: none"> ▶ Press PUSH so that locking/unlocking lever rests in 	
■ Coffee produced is too little, or none is produced at all	<ul style="list-style-type: none"> ▶ Check grinder setting and AromaControl 	12
■ No illumination	<ul style="list-style-type: none"> ▶ Switch on main switch ▶ Adjust illumination 	9 10
Message	Solution	
Energy saving	<ul style="list-style-type: none"> ▶ Press the P key 	
Decalcify	<ul style="list-style-type: none"> ▶ Descale appliance 	
Fill watertank	<ul style="list-style-type: none"> ▶ Fill water tank with fresh drinking water 	
Coffee beans empty	<ul style="list-style-type: none"> ▶ Fill coffee bean hopper and press the required button. 	
Dregdrawer full	<ul style="list-style-type: none"> ▶ Open service door, empty dregdrawer, appliance is reset. 	
Close control panel	<ul style="list-style-type: none"> ▶ Close the operating panel 	
Brewunit missing	<ul style="list-style-type: none"> ▶ Insert the Brewunit in it's place. 	

Trouble-shooting

Message	Solution
Brewunit blocked	► Insert brew unit correctly
Dregdrawer missing	► Insert drip tray/dregdrawer correctly
Close door	► Close service door
Ventilate	► Ventilation system (on initial use). Press the  key
Brewunit blocked	► Call Customer Services
Grinder blocked	► Call Customer Services
Fault on water system	► Call Customer Services

Technical data

Voltage, current and power rating

■ 230 V ~50 Hz, 10 A, 1250 W

Weight

■ Approx. 13 kg

Water tank (with water filter)

■ 1.8 l (1.7 l) – removable

Capacity of coffee bean hopper

■ 300 g

Capacity of dregdrawer

■ 12 pieces

Capacity of drip tray

■ 0.8 l

Pump output

■ 15 bar

Grinder

■ Rotary ceramic grinder

Height adjustment of dispensing head

■ 80–105 mm, at rear 155 mm

Illumination

■ 3 LEDs

Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.


Disconnection

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!

Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by a qualified electrician. Then cut off the mains cable.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.
- The symbol  on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

Repair service



The «Trouble-shooting» section will help you to carry out small repairs yourself, saving you the time and trouble of calling out a service engineer and the cost that goes along with it.

Whether you contact us for repairs or orders, please always state the serial number (FN) and the name of the appliance. Enter these details below and also on the service sticker which comes with the appliance. Stick it in a conspicuous place or in your telephone or address book.

FN

Appliance

You will also find the same details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance.



Open the operating panel.

The identification plate is situated on the right-hand side, next to the coffee bean hopper

V-ZUG Ltd

Industriestrasse 66, CH-6301 Zug
vzug@vzug.ch, www.vzug.com

J300.352-2