

Kambook - Australia

Ground Floor, Suite 2, 170-180
Bourke Rd
Alexandria NSW 2015, Australia

Locked Bag 2000
Botany NSW 1455
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337
www.kambook.com.au

Kambook - New Zealand

Private Bag 94411
Botany, Manukau
Auckland 2163
New Zealand
Customer Service Line/
Spare Parts 0800 273 845
Customer Service Fax 0800 288 513
www.kambook.co.nz

KAMBOOK

THE SMARTER CHOICE

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book.

Issue A16

KAMBROOK

THE SMARTER CHOICE



INSTRUCTION BOOKLET

Suits all KIR795 models

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273845 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

As part of our commitment to the environment, and as members of the Australian Packaging Covenant, we have reduced the size of our instruction manuals on this product.

If you are finding it difficult to read this manual, you can download a PDF version from our website, www.kambrook.com.au.

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Steamline Detach Steam Iron	p7
Using Your Kambrook Iron	p8
Care, Cleaning and Storage	p14

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Steamline Detach Steam Iron

- Carefully read all instructions before operating the iron for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the iron for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this iron.
- When unpacking the iron, check to see you have received all the items listed in the parts list, before discarding the packaging.
- Always ensure the iron is properly assembled before use. Follow the instructions provided in this book.
- Do not touch hot surfaces. High temperatures are generated during use, which could cause burns. Always use the handle and warn others (especially children) of the possible dangers of burns from steam, hot water or hot soleplate, especially when ironing vertically.
- Do not use outdoors or in bathrooms.
- Always test the iron on a small discreet part of the fabric to be ironed to ensure the iron has reached its optimum temperature.
- Never use the vertical steam shot while clothes are on the body or direct the steam towards people.
- Do not place the iron near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the iron on a sink drain board.
- Auto-off safety protection is designed as a safety feature only. The iron should not be left on deliberately while unattended. If the safety auto-off has activated and no further ironing is required, we recommended that the iron is switched off at the power outlet and unplugged.
- Do not allow the cord to touch hot surfaces.
- The iron must be used and rested on a stable surface.

- Always set the temperature control dial to MIN, switch the iron off and remove the plug from the power outlet when filling the water tank. Do not touch the hot surface of the soleplate or the skirt area above the soleplate at any time; especially when the water tank is not attached.
- Only push the self-clean lever when you want to activate the self-cleaning function. Do not push this lever whilst ironing. Boiling water and steam will drip from the holes on the soleplate during the cleaning process. Due caution and attention should be exercised.
- If the iron is set to a low temperature on the temperature control (i.e. synthetic or silk) and also on any of the steam control settings, there may be leakage from the soleplate. This is due to the iron temperature not being high enough to vaporize the water and create steam. Therefore, ensure that the steam control is always set to correspond with the setting on the temperature control as seen in Table A under 'Setting the Temperature' on page 10.
- Always turn the variable temperature control dial to minimum, switch off at the power outlet and then unplug the iron when not in use.
- When placing the iron on its heel, ensure that the surface on which the heel is placed is stable.
- If the iron is not used for an extended period, disconnect the iron from the power outlet.
- Do not use the iron if it has been dropped, if there are visible signs of damage or if it is leaking.
- Always switch the iron off and then unplug from the power outlet:
 - Before filling or emptying the water tank.
 - Before leaving the iron unattended.
 - Before cleaning and maintenance, unless otherwise specified in this booklet.
 - Immediately after use.
- The iron incorporates a thermal safety fuse to protect it from overheating. However, the iron should not be left unattended while it is connected to the power outlet. Special care should always be taken when there are children in the home/ vicinity of the iron.
- Allow the iron to cool completely before storing in an upright position on its heel.
- Do not leave the iron unattended while in use, connected or on an ironing board.
- Store the iron out of reach of children.
- Do not allow the iron to lay flat on the soleplate when stored as residual water may seep through the steam holes, if the tank is not empty.
- Always store the iron in the upright position on its heel.
- Do not store the iron with water in the water tank. Always empty the tank after use.
- Ensure the iron is cool before storing or wrapping the cord around the storage heel facility.
- To prevent damage to the iron do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.
- Regularly inspect the supply cord, plug and actual appliance for any damage. If damage is found in any way, or the iron has been dropped, immediately cease use of the appliance and return the entire appliance to your nearest authorized Kambrook Service Centre for examination, replacement or repair.

Important Safeguards For All Electrical Appliances

 
- Keep the iron clean. Follow the cleaning instructions provided in this instruction book.
- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorized Kambrook service centre for examination and / or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

Your Kambrook Steamline Detach Steam Iron

1. Detachable 180ml water tank: For hassle free filling.
2. Fine misting spray nozzle.
3. Water tank inlet.
4. Variable steam control and self-clean switch:
 - When moved from the left to the centre, allows you to control the amount of steam required.
 - When moved and held to the right, activates the self-clean function; removing any impurities.
5. Fine misting spray button: Assists in the removal of tough creases and wrinkles.
6. Shot of steam button: For an extra burst of steam when ironing thicker fabrics.
7. Water tank release button: To easily detach and reattach the water tank.
8. Iron handle grip.
9. Temperature control dial: Ranging from MIN for synthetics to MAX for linen.
10. Power / auto-off indicator light.
11. 2200 watt: For rapid heat and fast steam.
12. 3 metre power cord with 360° cord grommet: For better reach and manoeuvrability.
13. FabriGlide soleplate: For a smooth gliding performance over all ironable fabrics.
14. Collar tip: To easily reach difficult areas like pockets, buttons and collars.

Not Shown

- 3 way auto-off safety protection: Iron automatically switches off when left unattended:
 - Auto-off if left sitting flat on its soleplate
 - Auto-off if left on its heel
 - Auto-off if inadvertently tipped over on its side
- Vertical shot of steam: Assists in the removal of creases and freshening up hanging garments or curtains.
- Anti-drip system: Prevents water leaking.

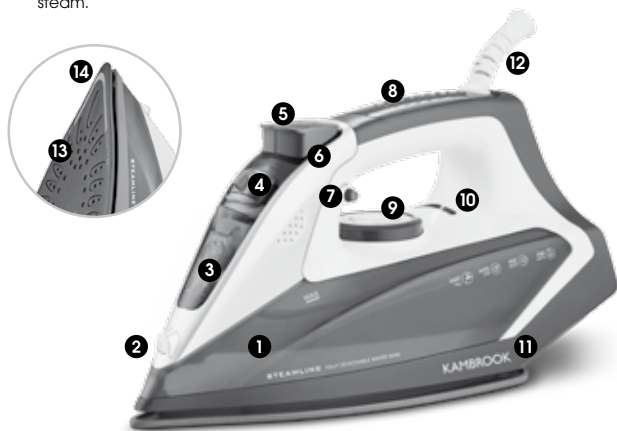

Using Your Kambrook Iron

Before First Use

Remove any promotional material or packaging from the iron. Remove any stickers or protective covers from the soleplate.

Ensure that the iron is fully assembled and the water tank is securely attached to the iron body before operating.

When operating the iron for the first time, test on an old piece of fabric to ensure that the soleplate and water tank are completely clean.

During the first use, some vapour may emit. This vapour is due to the initial heating of the materials used in the iron. This vapour will not harm the performance of the iron and is safe.

NOTE: As an important part of the Kambrook quality control process, your iron has been individually tested. As a result, there may be a small amount of condensation or water droplets on the inside of the water tank. There is no need for concern.

Filling the Water Tank

The Steamline Detach iron should not be operated without the water tank securely in place and water in the water tank. Ensure that the iron is switched off and disconnected from the power outlet before filling the water tank.

The Steamline Detach iron is designed to be used with tap water. The hardness of tap water can vary in different regions; water testing kits can be purchased online or at water filtration specialists to determine the hardness of your tap water.

If your tap water is particularly hard, it is recommended that distilled or demineralised water be used with this iron. Not doing so can lead to in a build-up of impurities in the iron resulting in a loss of steaming power.

The unique feature of the Kambrook Steamline Detach Iron is the fully detachable water tank for filling right at the tap.

Before detaching the water tank, ensure that the steam control switch is set to NO STEAM.

To remove the water tank, hold the iron handle securely in your right hand with your thumb resting on the tank release button (See Fig. 1).

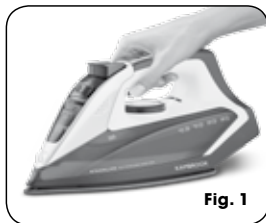 


 
Fig. 1

Meanwhile, place your left hand, with your fingers resting on the indentations, on both sides of the front of the iron (See Fig. 2).

 


Fig. 2

Press firmly on the water tank release button with your right thumb and pull the water tank horizontally away from the iron using your right hand (See Fig. 3).

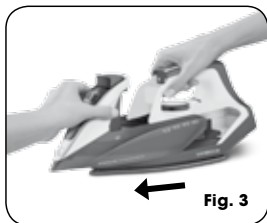

Once fully removed, open the water tank inlet cover and pour water into the water inlet. Be careful not to exceed the 'MAX' level (180ml) marked on the water tank. (See Fig 4).

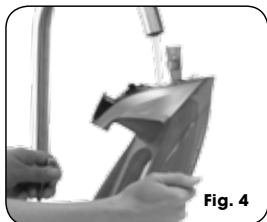

When the water tank is filled, close the water tank inlet cover and slide the tank back onto the iron body, ensuring the tank securely clicks back into place.

Setting the Temperature

Before commencing ironing, sort all items to be iron according to the International Textile Care Labelling Code (see Table A) or by the type of fabric. Most items of laundry have markings corresponding with this code.

Iron delicate fabrics that require the lowest temperatures first followed by harder fabrics that require higher temperatures.

Place the iron on its heel and turn the temperature control dial to MIN.

Plug the power cord into a 230V or 240V power outlet and turn on. The power indicator light will illuminate, indicating the iron is on.

Select the temperature setting required by rotating the temperature control dial so that the desired setting is aligned with the notch under the handle. Wait for two to five minutes for the iron to reach the selected temperature.









CAUTION: Do not touch any hot surfaces!



CAUTION: Never add perfume, vinegar or other chemical liquids to the water in the water tank. This could result in damage to the iron.

Using Your Kambrook Iron continued...

Table A.

NOTE:  on label means: "This article cannot be ironed" (e.g. chlorofibre, acrylic, elastodiene)			
Label Code	Kind of Textile	Temperature Control	Variable Steam Control
(see garment instruction)			(advised position)
	synthetic modacry polypropylene polyurethane acetate triacetate matalized cupro plyamide (nylon) polyester modal viscose (rayon)		 NO STEAM
	silk wool		
	cotton		
	linen		



CAUTION: Always test the iron on a small discreet part of the fabric to be ironed to ensure the temperature is not set too high.

NOTE: For delicate materials such as synthetic or silk, set the temperature control dial between MIN and • and test the temperature by ironing a small discreet part of the fabric. Once the desired temperature is found, continue ironing the remainder of the fabric.

Operating the Steam Control

Refer to the Variable Steam Control column of the International Textile Care Labelling Code (Table A.) for the level of steam advised for various fabric types. As indicated, steam ironing is only possible at higher temperature settings.

Adjust the amount of steam required using the steam control switch. To operate the variable steam control, ensure there is sufficient water in the water tank and the tank is properly attached to the iron body. Plug the power plug into a 230V or 240V power outlet and switch the power on. With the iron positioned on its heel, select the desired temperature setting within the steam range and allow the iron to heat for two to five minutes.

Once heated, select the desired steam level. When positioned to the left, the steam control is set to the no steam/dry ironing option. When positioned in the centre of the switch, the iron is set to maximum steam output (See Fig 5). Set the steam control switch to the required setting. The iron is now ready to commence ironing.



If more water is required while ironing, simply detach the water tank and stand the iron on its heel. Fill up the water tank as per the instructions under 'Filling the Water Tank' and reattach the water tank to the iron body.

Once the water tank has been removed, do not leave the iron face down on any fabric or on the ironing board, always rest the iron on its heel.

Operating the Shot of Steam

The shot of steam function provides an extra burst of steam when ironing heavier fabrics and removing stubborn creases. The shot of steam function can be used at all steam levels as long as the iron has reached the selected temperature for steaming.

Hold the iron horizontally and slightly above the fabric surface, firmly press and release the shot of steam button. The steam will penetrate the fabric and assist in the removal of wrinkles.

Alternatively, hold the iron vertically and slightly away from the hanging fabric, firmly press and release the shot of steam button. Vertically steaming is useful for getting wrinkles out of hanging garments or curtains when the fabric is not supposed to come into direct contact with the iron soleplate.



CAUTION: Never use the vertical shot of steam while clothes are on the body or direct the steam towards people.

Using Your Kambrook Iron continued...

NOTE: For optimal steam power, leave an interval of 4 seconds between pressing the shot of steam button.

Using the Fine Mist Spray

The fine mist spray can be used to dampen difficult to iron fabrics, dry areas, woollen items and accidental creases.

Position the iron on the fabric, pointing the iron tip towards the desired area. Firmly press the fine misting spray button and a fine spray of water will be produced from the spray nozzle at the front of the iron.

Anti-Drip System

The Steamline Detach also features an anti-drip system. The iron will automatically close the steam valve when the soleplate temperature is too low to produce steam. This prevents water from the water tank escaping through the soleplate. The steam valve will open again once the soleplate reaches the required temperature.



CAUTION: The iron incorporates a thermal safety fuse to protect the iron from overheating. However, the iron should not be left unattended while it is connected to the power outlet. Special care should always be taken when there are children in the vicinity of the iron.

Safety Auto-Off

The Steamline Detach features 3 way auto-off safety protection. This feature is designed to automatically switch the iron off if it is left unattended with no movement for a specified period of time.

When the iron is left in a horizontal position, resting face down on the soleplate, or if it is accidentally tipped onto its side, the auto-off feature will activate after 30 seconds.

When the iron is left in a vertical position, resting on its heel, the auto-off feature will activate after 8 minutes.

When the auto-off feature activates, the auto-off indicator light will begin to flash and the iron will emit six beeps. The auto-off indicator light will continue to flash until the iron is moved or until it is switched off and unplugged from the power outlet.

To reactivate the iron, simply move it until the auto-off light stops flashing and remains illuminated. Allow two to five minutes for the iron to reach the selected temperature again.



CAUTION: The safety auto-off is designed as a safety feature only. The iron should not deliberately be left on while unattended. If the safety auto-off has activated and no further ironing is required, the iron should be switched off and unplugged from the power outlet.



CAUTION: Always turn the temperature control dial to MIN, switch off and unplug the iron from the power outlet when not in use.

After Each Use

Once all ironing has been completed, set the steam control switch to NO STEAM, set the temperature control dial to MIN and place the iron on its heel.

Switch the power off and disconnect from the power outlet. Remove the water tank from the iron, open the water tank inlet cover and (over a sink or bucket) invert the iron to empty any remaining water from the tank. Reattach the water tank and allow the iron to cool before storing.



CAUTION: Do not store the iron with water in the water tank. Always empty the tank after use. Ensure the iron is cool before storing or wrapping the cord.

Care, Cleaning and Storage

Using the Self-Clean Function

The Steamline Detach Iron has a self-clean function that is designed to assist with the removal of scale and impurities. This function helps to maintain optimum performance of the iron. To use the self-clean function:

- Fill the water tank to the MAX level indicated.
- Set the temperature control dial to MAX and the steam control switch to NO STEAM.
- Place the iron on its heel, insert the power plug into the power outlet and switch on.
- Allow the iron to heat for two to five minutes and reach the selected MAX temperature.
- Switch the iron off and disconnect it from the power outlet.
- Hold the iron horizontally over a sink, push and hold the steam control switch fully to the right to activate the self-clean. Steam and boiling water will emit from the holes in the soleplate.
- Hold the iron in this position until all water has dripped out of the water tank.

NOTE: Repeat the self-clean process if the iron still contains impurities.



CAUTION: Only move the steam control switch to the right when you want to activate the self-clean function. Do not do this whilst ironing. Boiling water and steam will drip from the holes on the soleplate during the cleaning process. Due caution and attention should be exercised.

Cleaning the Soleplate and Exterior

Ensure that the iron is disconnected from the power outlet and has completely cooled before cleaning.

To remove residue that may have built up overtime, wipe the soleplate and steam holes with a damp cloth and dry thoroughly with a soft dry cloth. For any stubborn residues that still remain on the soleplate, commercial soleplate cleaners purchased from small appliance retailers can be used.

To clean the outer housing of the iron, use a soft damp cloth and polish with a dry cloth.

NOTE: Never use abrasives or scouring pads to clean the soleplate of the iron. Avoid hard contact with metal objects. Do not scratch or damage the surface of the soleplate.

NOTE: Do not use harsh or abrasive cleaners on the surface of the iron. Never immerse the iron in water or any other liquid.

Storage

Ensure that all water has been emptied from the water tank before storage.

Ensure that the iron is cool and clean before storing.

Store the iron on its heel in a cupboard or on a bench. Do not store the iron horizontally on its soleplate.

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a single page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page, leaving small margins at the top and bottom. There are no vertical margin lines, and the page is completely blank except for the lines themselves.