

DWA315X

smeg freestanding/built-in dishwasher



30cm
maximum
plate
diameter

ALSO AVAILABLE IN BLACK: DWA315B AND
WHITE: DWA315W

EAN	8017709183936
size	598mmW x 850mmH x 596mmD
capacity	15 placesettings
finish	silver control panel, stainless steel door panel
programs	seven wash programs — soak, normal ECO, crystal, normal, ECO, auto 40-50, auto 60-70, super six specialised programs — speedy 27 minutes, delicate quick, eco quick, daily quick, normal quick, strong and fast
baskets	grey upper: removable flex-duo cutlery tray middle: 3-level adjustment, EasyGlide lower: completely foldable with glass holder, cutlery basket
wash system	orbital ceiling spray upper spray arm six spray directions (alternating wash system)
water softener	electronic adjustable
temperatures	38, 45, 50, 65, 70°C
water connection	single, cold/hot water max 60°C
timer	0–24 hour delay timer with auto soak
filtration	5-stage water filtration system
drying	natural condenser, auto door open option at end of cycle
safety	TOTAL ACQUASTOP LED on/off light end-cycle acoustic indicator self-balancing hinges
noise	47 dBA
water	9.8 litres
energy	1.9 kWh, 10 amps 230-240V, 50 Hz

ORBITAL WASH SYSTEM

Smeg's orbital wash system has two spray arms which operate simultaneously in opposite directions to ensure water is evenly distributed throughout the inner cavity for a perfect wash.

DELAY START TIMER

Delay Start option allows for up to 24-hours delay start — allowing you to take advantage of off-peak energy usage times.

TOTAL ACQUASTOP

Acquastop is a water safety device that operates when the dishwasher is not in operation by restricting mains pressure at the tap, and not at the dishwasher.

ULTRAFast PROGRAM

The Ultrafast program has been developed especially for slightly dirty dishes that are to be washed immediately after use. This program takes only 27 minutes.

HYCLEAN

Hyclean mode is compatible with most programs with a temperature more than 50°C. 99.9% of bacteria are eliminated due to high water temperature (70°C) and longer washing time.

ENERSAVE

This option reduces the temperature of final rinse, saving energy. It is activated after selecting the desired program by pressing the button (indicator lights). Moderately increases the duration of the cycle.

FLEXIZONE

The new half-load FlexiZone allows you to wash a reduced load, saving energy, water and time, and there are no restrictions on where items are placed. Traditional half loads allow only one of the baskets to be used.



DWA315X


smeg freestanding/built-in dishwasher

SAVE ON ENERGY AND PROTECT THE ENVIRONMENT





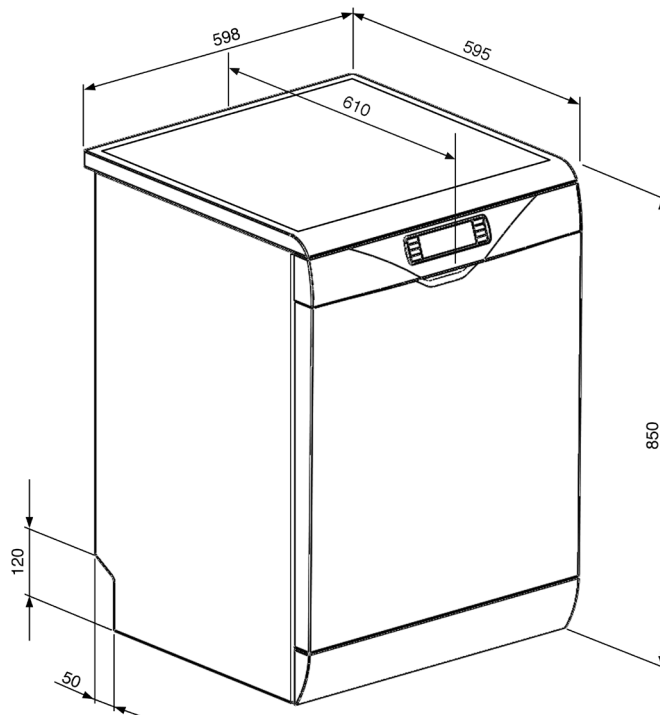


- always try to run the dishwasher full loaded
- do not wash dishes in running water
- use the washing program that is most appropriate for each type of load
- do not carry out any preliminary rinsing
- if available, connect the dishwasher to a hot water supply up to 60°C

The phosphates contained in dishwasher detergents are harmful to the environment. To avoid using excessive amounts of detergent and to save on electricity, observe the following:

- separate the more delicate items from dishes that are more resistant to aggressive detergents and high temperatures;
- do not pour the detergent directly onto the dishes.



PLEASE NOTE: drawings are not to scale. They are to assist only.

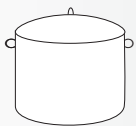PROGRAM	LOAD	PROGRAM PROGRESS	DURATION	CONSUMPTION	
			minutes	water litres	power kWh
SOAK 	pans and dishes awaiting completion of load	cold prewash	15	3.5	0.02
NORMAL ECO 45 	crockery and cutlery normally soiled	cold prewash wash at 49°C rinse at 41°C dry	140	9.8	0.65
DELICATE 	delicate dishes with normal soiling	cold prewash wash at 45°C cold rinse rinse at 70°C dry	75	12.5	1.1
ECO 50 	dishes with normal dirt, even with dried-on residue	cold prewash wash at 55°C rinse at 70°C dry	100	11	1.3
AUTO 40-50 	mixed dishes with normal dirt, washed immediately after use	when the 'AUTO' program is selected, the dishwasher recognises the type of dirt and automatically adjusts the washing parameters as appropriate			
AUTO 60-70 	pans and dishes with normal dirt, dried-on residue	when the 'AUTO' program is selected, the dishwasher recognises the type of dirt and automatically adjusts the washing parameters as appropriate			
SUPER 	very dirty pans and dishes, with dried-on residue	hot prewash wash at 70°C code rinse (2) rinse at 70°C dry	155	15.5	1.60