

BLANCO



Performance First

Instructions for the Use and Care and Installation of

BRF61X BRF61W
BRF62X BRF92X

Range Hood



Dear Customer

You will find that the modern look of your Blanco rangehood blends in perfectly with your kitchen décor. It is easy to use and performs to a high standard.

Blanco also makes a range of products that will enhance your kitchen – such as cooktops, ovens, dishwashers, microwaves, sinks and taps. There are models to complement your new Blanco rangehood. Blanco now has a range of laundry products to choose from.

Of course, we make every effort to ensure that our products meet all your requirements, and our Customer Relations Department is at your disposal, to answer all your questions and to listen to all your suggestions.

Please complete the warranty section of this manual and keep your receipt as proof of purchase. Retain all documents relating to the purchase of Blanco product.

Blanco is committed to providing increasingly efficient products that are easy to use, respect the environment and are attractive and reliable.

BLANCO

GENERAL

Carefully read the following important information regarding installation safety and maintenance. Keep this information booklet accessible for further consultations.

This apparatus was designed to be used in the suction version (air evacuated externally), in the filter version (internal air recycling) or in centralized exhausting version.

SAFETY PRECAUTION

1. Take care when the range hood is operating simultaneously with an open fireplace or burner that depend on the air in the environment and are supplied by other than electrical energy, as the cooker hood removes the air from the environment which a burner or fireplace need for combustion. The negative pressure in the environment must not exceed 4Pa (4x10⁻⁵ bar). Provide adequate ventilation in the environment for a safe operation of the range hood. Follow the local laws applicable for external air evacuation.

General Warnings.

- **The appliance is not intended for use by young children or infirm persons without supervision.**
- **Young children should be supervised to ensure that they do not play with the appliance.**
- **If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.**
- **There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.**
- **Ensure that the range hood is cleaned frequently.**
- **There is a risk of fire if cleaning is not carried out in accordance with the instructions.**
- **Do not flambé under the range hood.**

Warnings for Installation:

- The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- The minimum distance from the highest part of the hob of the cooking appliance and the range hood shall not be less than 600mm.
- The regulations concerning the discharge of exhaust air have to be fulfilled.

INSTALLATION INSTRUCTIONS

• Electric Connection

The appliance has been manufactured as a class II, therefore no earth cable is necessary.

The connection to the mains is carried out as follows:

BROWN = L line

BLUE = N neutral

If not provided, connect a plug for the electrical load indicated on the description label. Where a plug is provided, the range hood must be installed in order that the plug is easily accessible.

An omnipolar switch with a minimum aperture of 3mm between contacts, in line with the electrical load and local standards, must be placed between the appliance and the network in the case of direct connection to the electrical network.

- **ATTENTION:** if the lamps will not operate, check that the lamps are screwed in properly.

• MOUNTING THE RANGE HOOD UNDERNEATH A WALL CABINET - (Fig.2)

Fix the range hood to the wall cabinet base with 4 screws suitable for the type of model respecting the indicated measures (Fig.2B). The apparatus is equipped with 2 air exits, one is situated in the upper section and the other is located at the back of the cooker hood either air exit may be used according to installation requirements. If the back air exit is to be used then remove the metal sheet that closes the perforation with small hammerings. A connection ring (C) for the connection of the chimney flue to the air exit is included and a plug/covering for the other air exit which will not be used is also supplied.

• MOUNTING THE RANGE HOOD TO THE WALL - (Fig.3)

Mark out the 4 holes (C & P) as per the dimensions "A" and "B" (Fig. 4) corresponding to the model purchased. Use screws and expanding anchors suited for the type of wall (for example: cement, plaster, etc.). Hang the range hood on the wall using the 2 holes "C" (Fig.3). Finally fix the cooker hood to the wall using the two lower safety holes "P".

• CHANGING THE RANGE HOOD FROM SUCTION VERSION TO FILTER VERSION - (Fig.5)

To change to the filter version (which is still possible even after use in the suction version), you will require two active

carbon filters, not provided, however can be ordered as an accessory. The active carbon filters serve as air purifiers for the air that will be recycled into the environment via the perforations on top front of the range hood. The filters are not washable or regenerative and must be replaced on average every 4 months with regular use. The saturation of the active carbon depends on the length of time of use of the cooker hood, from the type of cooking and the regular cleaning of the anti-grease filter. The active carbon filter "C" must be placed on the suction group situated inside the cooker hood and centred by rotating the filter clockwise for about 90° until it locks into place. Remove the "G" grill in order to carry out this operation. Close the appropriate upper and lower air exit covers. Rotate the knob "L" from the "A" position to the "B" position. The cooker hood is then ready for operation in filter version mode.

REPLACING THE GLOBE.

- Take out the anti-grease filters.
- From the inside press gently down in the center area of the plastic light cover.
- The cover will 'pop' out.
- Change the globe.
- Re-install the cover, position the cover so that the 'clips' will fit into the corresponding holes in the rangehood then simply press the cover in.

Globe 240volts 40Watts Tube E14.

USE AND MAINTENANCE

- It is recommended to operate the appliance prior to cooking.

It is recommended to leave the appliance in operation for 15 minutes after cooking is terminated in order to completely eliminate cooking vapours and odours.

The proper function of the cooker hood is conditioned by the regularity of the maintenance operations, in particular, the active carbon filter.

- The anti-grease filters capture the grease particles suspended in the air, and are therefore subject to clogging according to the frequency of the use of the appliance.

In order to prevent fire hazard, it is recommended to clean the filter by carrying out the following instructions:

- Remove the filters from the range hood approximately every 4 months and wash them in a solution of water and neutral liquid detergent, leaving to soak.
- Rinse thoroughly with warm water and leave to dry.
- The filters may also be washed in the dishwasher.

The aluminium panels may alter in colour after several washes. This is not cause for customer complaint or replacement of panels.

- The active carbon filters purify the air that is replaced in the environment. The filters are not washable or re-useable and must be replaced at maximum every four months. The saturation of the active carbon filter depends on the frequency of use of the appliance, by the type of cooking and the regularity of cleaning the anti-grease filters.

- Clean the fan and other surfaces of the range hood regularly using a cloth moistened with denatured alcohol or non abrasive liquid detergent.

THE MANUFACTURER DECLINES ALL RESPONSIBILITY FOR EVENTUAL DAMAGES CAUSED BY BREACHING THE ABOVE WARNINGS.

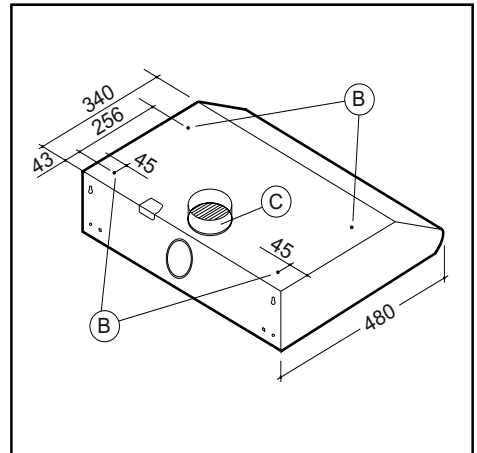 


Fig.2

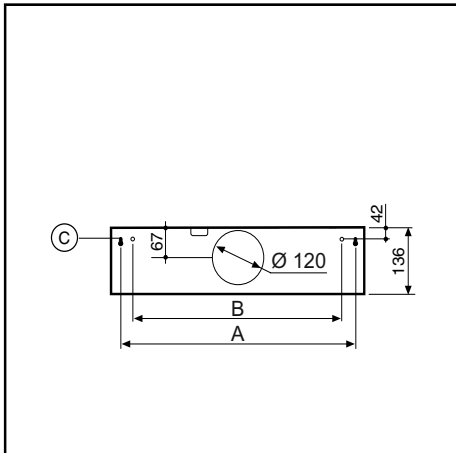 


Fig.3

cm.	A	B
50	455	408
60	555	508
70	655	608
80	755	708
90	855	808

Fig.4

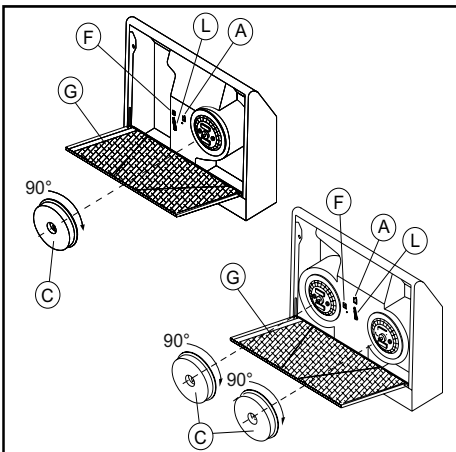 


Fig.5

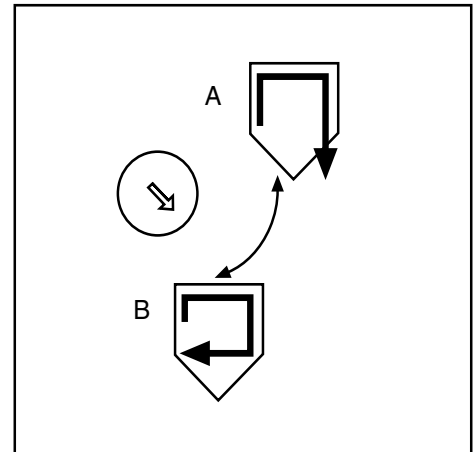 


Fig.6

BLANCO CONTACT INFORMATION.

NEW SOUTH WALES

Head Office, Sales & Marketing Office

104 Vanessa Street

Kingsgrove NSW 2208

Telephone: 02 9503 2888

Facsimile: 02 9503 2810

NSW Showroom*

40 Ebley Street

Bondi Junction NSW 2022

Telephone: 02 9386 1190

Facsimile: 02 9386 1671

Agent and Sales Office.

Hi –Performance Marketing.

7 Coleman Street

Mascot NSW 2020

Telephone: 02 88354937

Facsimile: 02 90048739

Service and Spare Parts

All General Whitegoods Service

Telephone: 02 8788 8666

Facsimile: 02 9756 1091

AUSTRALIAN CAPITAL TERRITORY

Service and Spare Parts

Detlevs Appliance & Electrical Care

1/88 Sheppard Street

Hume

ACT 2905

Telephone: 02 6280 1033

Facsimile: 02 6260 1035

VICTORIA

State Office and Showroom*

35 Centre Road

Scoresby VIC 3179

Telephone: 03 8756 7888

Facsimile: 03 8756 7907

Service and Spare Parts

Advantage Appliances

Telephone: 03 9543 2088

Facsimile: 03 9544 2102

QUEENSLAND

State Office and Showroom*

Citilink Business Centre

153 Campbell Street

Bowen Hills QLD 4006

Telephone: 07 3253 2000

Facsimile: 07 3216 1688

Service and Spare Parts

Tri-Us Appliances

Telephone: 07 3290 4833

Facsimile: 07 3290 2911

Endeavour Appliances

Telephone: 07 3872 7444

Facsimile: 07 3852 2465

Platinum Appliance Service.

Telephone: 07 38621154

Facsimile:

07 38621114

SOUTH AUSTRALIA & NORTHERN TERRITORY

Agent and Sales Office

S C Lighting & Electrical Supplies

47 North Terrace

Hackney SA 5069

Telephone: 08 8362 4599

Facsimile: 08 8362 4591

Service and Spare Parts

Prestige Appliance Repair Centre

Telephone: 08 8352 2022

Facsimile: 08 8352 3044

WESTERN AUSTRALIA

Agent and sales Office

Elite Appliance Marketing Pty Ltd

Unit 4

14 Main Street

Osborne Park WA 6017

Telephone: 08 9201 0311

Facsimile: 08 9201 0366

Service and Spare Parts

Metropolitan Appliance Repairs

Telephone: 08 9330 1724

Facsimile: 08 9317 1296

TASMANIA

Agent and Sales Office

Mark Pearce Agencies

23 Tranmere Road

Howrah TAS 7018

Tel/Fax: 03 6247 9215

Service and Spare Parts

Electrical Equipment Service (Launceston)

Telephone: 03 6339 3873

Facsimile: 03 6339 4588

Baldocks Appliance Service (Hobart)

Telephone: 03 6234 5995

Facsimile: 03 6234 8134

* Showroom open six days a week

TOLL FREE NUMBERS

Blanco Sales & Advisory Centre 1800 828 899

Blanco After Sales Customer Service 1800 646 843

Website:

www.meaappliances.com.

