



**Electrolux**




ESI 7 Series

# UltraSteam™ Pro and UltraSteam™ Pro Jeans

Instructions for Use

## Components

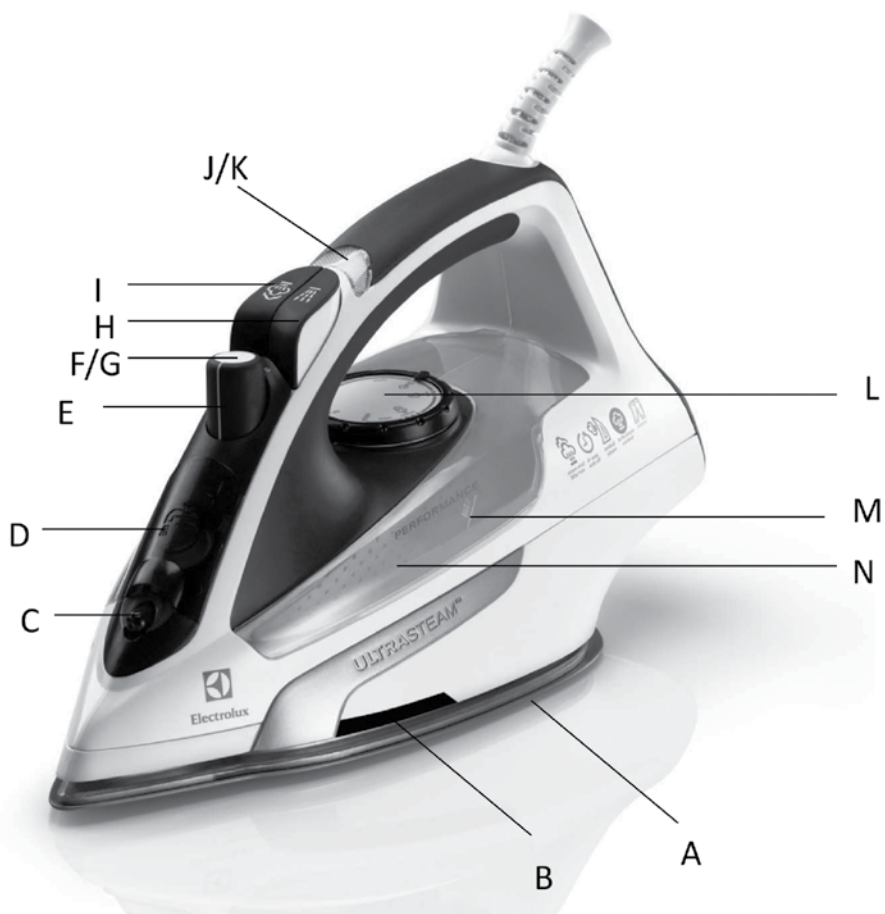

- A. UltraSteam™ soleplate
- B. SafeTouch™ hot soleplate safety indicator
- C. Spray nozzle
- D. Water filling inlet cover

- E. Steam selector (For ESI7304 only)
- F. Auto-clean button
- G. "No steam" button (For ESI7504 only)
- H. Spray button
- I. Turbo steam button

- J. Temperature indicator light
- K. Auto-safety shut off indicator light
- L. Temperature selector
- M. Maximum water level indicator
- N. Water tank

\*Due to the Electrolux policy of continual product development; specifications, colours and details of our products and those mentioned in this manual are subject to change without notice.

# Instruction book

Before using the iron for the first time, please read the safety advice.

## Safety advice

**Before using the iron for the first time, read the following instruction carefully and save for future reference. The following advice will help you to use your new iron safely.**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance should only be connected to a power supply if its voltage and frequency comply with the specifications written on the rating plate.
- The iron is not to be used if it has been dropped, if there are visible signs of damage to the plug, the main cord, to the iron itself or if it is leaking.
- The appliance must only be connected to an earthed socket.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person, in order to avoid hazard.
- The iron must be used and rested on a stable surface. When placing the iron on its rubber-napped heel, ensure that the surface on which the heel is placed is stable.
- Never leave the appliance unattended while connected to the supply mains.
- The appliance must be switched off and the main plug withdrawn each time after use, before refilling, cleaning and maintenance.
- The plug must be removed from the socket outlet before the water tank is filled with water.
- The main cable must not come into contact with any hot parts of the appliance.
- Do not immerse the appliance in water or any other liquid.
- Do not exceed the maximum filling volume as indicated on the water tank.
- The soleplate of the iron and nearby surfaces can become extremely hot and may cause burns if touched. Please be especially careful when handling the iron after use, or when re-filling the water tank during use.
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.

## Safety Features



### 1. 3-way auto safety shut off.

If the iron is left unattended, resting on the soleplate or on the side, it will automatically turn off after 30 seconds. If left unattended resting on the heel, it will turn off after 8 minutes. The auto-safety shut off indicator light (K) will start flashing orange and a sound alert will beep 6 times to indicate that the iron has been switched off. If you wish to turn it back on again, move the iron gently until the temperature indicator light (J) turns red. It will turn green once the temperature selected is reached, meaning the iron is ready to use again.



### 2. SafeTouch™ hot soleplate safety indicator

The iron is equipped with a SafeTouch™ hot soleplate safety indicator (B) located at the front. The indicator stripe is black when the iron is cold. As soon as the soleplate reaches 40°C, the stripe turns red indicating that the soleplate is hot and should not be touched. Once the iron is unplugged, the stripe will slowly revert to black as the soleplate cools down. Wait for the stripe to revert to black again before touching the soleplate or storing the iron.

# Getting Started



## 1. Before first use.

Remove all adhesive and gently rub with a dampened cloth before plugging in the iron.

We recommend that you rinse the water tank by operating the steam in a horizontal position away from your linen for one minute. When the iron is turned on for the first time, harmless vapours/odours may be emitted temporarily. This will cease quickly.



## 2. Filling the water tank.

Make sure the iron is unplugged.

Set the temperature selector (L) to position 0. Open the water filling inlet cover (D). Using the beaker provided, pour water up to maximum level. Close the cover until it clicks.


**Caution:** Do not exceed the maximum water level as indicated on the water tank (N).

**Type of water to be used:** This iron has been designed to use normal tap water. If the tap water in your area is very hard, you can fill the tank with 50% tap water and 50% bottled distilled water. Never use distilled water only. Never put scented water, vinegar or ironing aids in the water tank. This may cause brown spitting and staining.



## 3. Plug the power cable into a power outlets.


Set the temperature selector (L) according to the fabric type by referring to the garment label or the ironing chart below. The temperature indicator light (J) turns red. When the temperature indicator light (J) turns green, the iron is ready to use. The light will switch between red and green as the iron is maintaining the selected temperature.

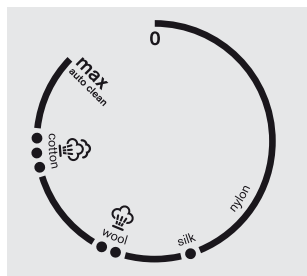

## 4. Adjust steam and temperature settings for the model without the auto-steam function (ESI7304).

Set the temperature selector (L) according to the fabric type by referring to the ironing chart. Then adjust the steam output by setting the steam selector (E) according to the fabric type by referring to the ironing chart below.

For "Dry ironing", set the steam selector (E) to the position "off".

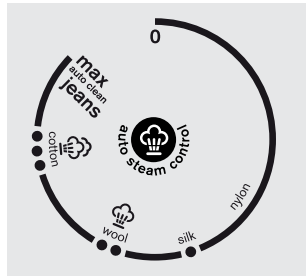

## 5. Adjust the ironing settings for the models equipped with the auto-steam function (ESI7504).

The auto-steam function regulates the steam amount according to the temperature set. Set the temperature selector (L) according to the fabric type by referring to the ironing chart below, the steam output will be automatically adjusted to deliver the most effective combination for the type of fabric selected. For "Dry ironing", press down the "no steam" button (G). To come back to steam function, press again the button.



**Tips:** Setting the right temperature: Check the laundry care label for the fabric type. If you select a lower temperature setting whilst in use, wait for a few minutes before ironing to make sure the iron has cooled down. Setting the right amount of steam: Always make sure that the steam setting selected is suitable for the temperature set and fabric type. The iron is equipped with an anti-drip device to prevent water from dripping out of the soleplate when the temperature selected is too low.




#### 6. Using the Spray mist to remove stubborn creases.

Ensure the water tank is at least 1/4 full. Use the spray mist to pre-dampen fabrics by pressing the spray button (H) several times to release a fine mist.



#### 7. Turbo steam function.

Make sure the temperature selector (L) is set on \*\*\* or higher. To release a Turbo shot of steam, press the Turbo steam button (I) 1 or 2 times. Always wait for a few seconds after each shot before pressing the button again.

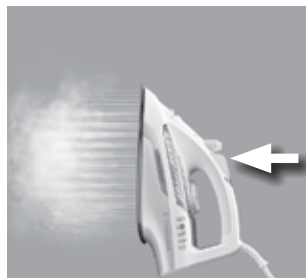

#### 8. Vertical steaming.

Vertical steam function is ideal for steaming curtains, suits, dresses and delicate fabrics. Hang item on a hanger (always use a hanger, never use on a garment while someone is wearing it), hold the iron at a distance of 10 cm, set the iron on \*\*\* or higher and press the Turbo steam button (I) 1 or 2 times. Always wait for a few seconds after each shot before pressing the button again. Never direct steam at someone.

## Ironing chart

Fabric	Temperature setting	Steam setting (For ESI7304)	Ironing recommendation
Acrylic	•	off	Dry iron on reverse side.
Acetate	•	off	Dry iron on reverse side while still damp or use spray to dampen.
Nylon, Polyamide & Polyester	•	off	Dry iron on reverse side while still damp or use spray to dampen.
Rayon	•	off	Dry iron on reverse side of fabric.
Viscose	•	off	Dry iron using a dampen ironing cloth to prevent shine marks.
Silk	•	off or	Dry iron using a dampen ironing cloth to prevent shine marks.
Wool & wool blends	**		Steam iron on reverse side or use ironing cloth.
Cotton blends	**		Check garment label and follow manufacturer's instructions. Use setting for the fibre requiring lowest setting.
Cotton	***		Dry iron on reverse side.
Corduroy	***		Steam iron on reverse side or use ironing cloth.
Linen	*** to "max"		Steam iron on reverse side or use ironing cloth to prevent shine marks, especially with dark colours.
Denim	*** to "max" (For ESI7304) JEANS (For ESI7504)		Use turbo steam function if needed.

For model ESI7504, the auto-steam system adjusts automatically the steam output and ensures you always get the ideal amount of steam according to the temperature selected.


**Please note:** When set on the • program, the iron will not produce steam. The iron heats up faster than it cools down.

# Cleaning and Care



## 1. Unplug the iron before cleaning.

Always place the iron on its heel rest and allow cooling down. To clean exterior surfaces, use a damp soft cloth and wipe dry. Do not use any chemical solvents, as these will damage the surface.

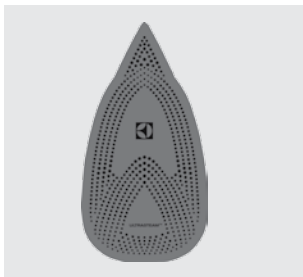

## 2. Cleaning the soleplate.

Do not use scouring pads or harsh cleaners on the soleplate as these may damage the surface. To remove burnt residue, iron over a damp cloth while the iron is still hot. To clean the soleplate, simply wipe with a soft damp cloth and wipe dry.



## 3. Permanent anti-scale cartridge

The permanent anti-scale cartridge prevents scale from building up into the soleplate and will help to extend the life of the iron if the auto-clean function is performed regularly. This system is permanent and does not need to be replaced.



## 4. Auto-clean function.

The auto-clean function helps to slow down scaling and build up in the iron. It is recommended to perform the auto-clean function every 4 weeks.



## Auto-clean function for model without auto-steam function (ESI7304).

Fill the water tank up to 100ml with cold tap water. Place the iron on its heel rest. Plug the iron and set the temperature selector (L) to the MAX position. When the temperature indicator light (J) turns green, unplug the iron, and hold it over a sink, then turn the steam selector (E) to the auto-clean position and pull out the button (F). Gently shake over the sink until all the water is gone. Insert the auto-clean button (F) back and press until it clicks. Turn the iron on the MAX setting to dry the soleplate. Once the temperature indicator light (J) turns green again, unplug the iron, let it cool down on its heel rest and wipe the soleplate with a dry cloth.



## Auto-clean function for model with auto-steam function (ESI7504).

Fill the water tank up to 100ml with cold tap water. Place the iron on its heel rest. Plug the iron and set the temperature selector (L) to the MAX/autoclean position. When the temperature indicator light (J) turns green, unplug the iron, and hold it over a sink, then pull out the auto-clean button (F). Gently shake over the sink until all the water is gone. Insert the auto-clean button (F) back and press until it clicks. Turn the iron on the MAX setting to dry the soleplate. Once the temperature indicator light (J) turns green again, unplug the iron, let it cool down on its heel rest and wipe the soleplate with a dry cloth.

- Attention, if the temperature selector (L) is not on MAX/auto clean position, it will not be possible to pull out or place back the auto-clean button (F).

# Troubleshooting

Problem	Possible cause	Solution
The soleplate is not heating even though the iron is plugged in	There is a connection problem.	Check the main power supply cable, the plug and the wall outlet.
	The temperature selector (L) is in • position.	Select the adequate temperature - see "Ironing Chart".
	The iron has been left unattended for some time and the 3-way auto safety shut off function has switched the iron off.	To turn the iron back on, gently move the iron until the temperature indicator light (J) turns on red or if you have finished ironing, unplug and store the iron.
The iron does not produce steam	There is not enough water in the tank.	Fill the water tank - see "Getting started".
	The "No steam" button (G) is set to "off" position (for model ESI7504).	Set the "No steam" button (G) to the "On" position.
	The steam selector (E) is set to "off" position.	Set the steam selector between minimum steam and maximum steam - See "Ironing Chart".
	The iron is not hot enough and the anti-drip device has been automatically activated.	Set the temperature selector (L) to a position between *** and MAX. Place the iron on its heel rest and wait until the temperature indicator light (J) turns on green.
	There is a build up of scale in the soleplate.	Carry out the auto-clean function - see "Cleaning and Care".
The spray function does not work	There is not enough water in tank.	Fill the water tank - see "Getting started"
The turbo steam function does not work	The turbo steam function was used too frequently within a short period of time.	Continue ironing on horizontal position for a while and wait before using the turbo steam or vertical steam functions again.
	The iron is not hot enough.	Adjust the temperature selector (L) to ***. Put the iron in vertical position and wait until the temperature indicator light (J) turns on green.
Flakes and impurities come out of the soleplate during ironing.	You have used hard water or pure distilled water, which has caused scale flakes to develop in the water tank.	Perform the auto-clean function - see "Cleaning and Care".
The iron spits and stains the linen	You are using either pure bottled distilled water, vinegar, scented, starch or chemical descaling agents.	Always use normal tap water with no additives- See "Getting Started". Perform the auto-clean function - see "Cleaning and Care".
	You are ironing new garments before washing them or linen which has not been rinsed sufficiently.	Always clean new garments before ironing and make sure linen is rinsed sufficiently. Perform the auto-clean function - see "Cleaning and Care"
The soleplate is brown and may stain the linen	You have set the temperature selector (L) on a too hot position.	Check the laundry care label of the garments and select the adequate temperature - see "Ironing Chart". Clean the soleplate using a damp cloth while the iron is still warm. Do not use chemicals or scouring pads.



# Electrolux



## **Electrolux Home Products Pty Ltd**

ABN 51 004 762 341

163 O'Riordan Street, Mascot, NSW 2020, Australia

Customer Service Phone: 1300 365 305

[www.electrolux.com](http://www.electrolux.com)

## **Electrolux Small Appliances**

A division of Electrolux (NZ) Limited

3 - 5 Niall Burgess Road, Mt. Wellington, Auckland, New Zealand

Phone: (09) 9573 2220 - Customer Service Phone: 0508 730 730

[www.electrolux.com](http://www.electrolux.com)

\*Due to the Electrolux policy of continual product development; specifications, colours and details of our products and those mentioned in this manual are subject to change without notice.

APAC-ESI7304\_7504-IFU-AU-1