

The Miele Turbobrush complies with all legal safety requirements. Improper use can cause both personal injury and property damage.

Before using the appliance, read the Operating Instructions carefully. They give information on the safety, operation and care of the appliance.

Keep these instructions in a safe place for future reference.

## **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

### **Correct usage**

- ▶ The Turbobrush must only be used for household purposes to vacuum and brush **dry** floor surfaces.
- ▶ Do not use on people or on animals.
- ▶ The manufacturer cannot accept responsibility for damage or injury when this appliance is used in a manner inconsistent with its designed purpose, or if the instructions in this manual are not followed. Use only as described in this manual.

### **Child Safety**

- ▶ Exercise extreme caution when using near children. Moving parts and suction can cause injury.
- ▶ Do not allow appliance to be used as a toy.

### **Technical safety**

- ▶ Before connecting the Turbobrush to the vacuum cleaner, make sure the vacuum cleaner is turned off and disconnected from the electrical outlet.

- ▶ Do not unplug vacuum by pulling on cord. To unplug, grasp the plug, not the cord.
- ▶ Turn off all controls before unplugging vacuum cleaner.
- ▶ Do not submerge the Turbobrush into any liquid. Clean only with a dry cloth or slightly damp cloth to avoid any moisture getting into the vacuum cleaner, which could lead to the danger of an electric shock.

### Daily Use

- ▶ Do not touch the brush roller while it is rotating.
- ▶ Do not use the Turbobrush at head level. Long hair, ties, scarves, etc. could be sucked in and become entangled in the brush roller.
- ▶ Keep hair, loose clothing, curtains, fingers and all parts of the body away from openings and moving parts.
- ▶ Turn off all controls before unplugging. Unplug from the outlet when not in use and before servicing.
- ▶ Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present, to avoid risk of fire.
- ▶ Do not use the Turbobrush on surfaces that can unravel or be sucked in.
- ▶ Do not vacuum liquids or damp dirt. This could impair the function and electrical safety of the vacuum cleaner, and could create a risk of electric shock. Freshly shampooed carpets or upholstery should be completely dry before they are vacuumed up.
- ▶ Do not vacuum items which are heavy, hard or have sharp edges. They could cause a blockage and damage the appliance.

► Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

### **Disposing of an old appliance**

► Before discarding an old appliance, the power cord should be removed. Unplug the vacuum. Cut the power cord of the appliance as close to the vacuum as possible and cut the plug off the cord. The plug cut from the cord should be disabled and properly discarded. Under no circumstance should this plug be inserted into a socket (electric shock hazard.)

## Features of the Turbobrush

The Turbobrush is driven by the suction power of the vacuum cleaner. The brush roll rotation increases the intake of threads, hair and lint. Four wheels keep the turbobrush 1/16" (1.5 mm) from the floor.

## Operation

The Turbobrush is intended for cleaning short-to-medium pile carpeting.

Read these Operating Instructions carefully and completely before using this appliance. Failure to do so can result in property damage or personal injury to you or others.

- Uneven surfaces should not be vacuumed with the Turbobrush. The brush could come into contact with the floor and cause damage.
- Please consult the carpet manufacturer before vacuuming carpets such as: saxony with very long-pile, berber and sheepskin rugs, and valuable hand-knotted carpets, e.g. Persian and similar. There is a danger of the threads being pulled out.

## Using the Turbobrush

- To achieve the best results, slowly pass the Turbobrush back and forth over the carpet or flooring.

 
For carpets with fringes, always draw the Turbobrush from the carpet across the fringe towards the rest of the floor.

## Attaching the Turbobrush to the Miele Vacuum Cleaner

### Model STB 205

This Turbobrush is intended for use with Miele vacuum cleaners only.

- Insert the suction wand into the neck of the Turbobrush as shown. If the locking mechanism does not completely engage, gently twist the wand while it is in the neck until it clicks into place.

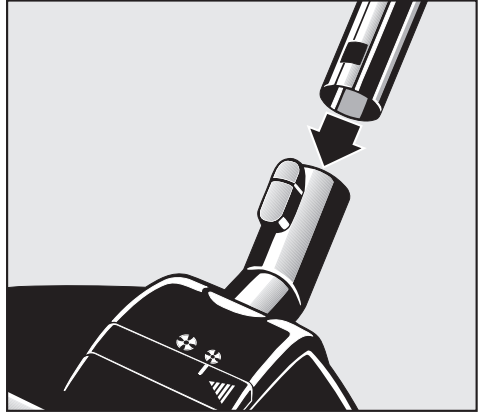


## Using the Sliding Air Flow Regulator


The Turbobrush is driven by the suction power of the vacuum cleaner. Deeper pile carpeting can be drawn into the suction opening, thereby obstructing airflow and impeding the action of the wheel

- This can be remedied by sliding the air flow regulator to the left as shown in the left hand illustration.

For routine cleaning of low-to-medium pile carpeting, or for deep cleaning in general, slide the airflow regulator to the right as shown in the far right illustration.

 
- See right hand illustration to close the Airflow Regulator.

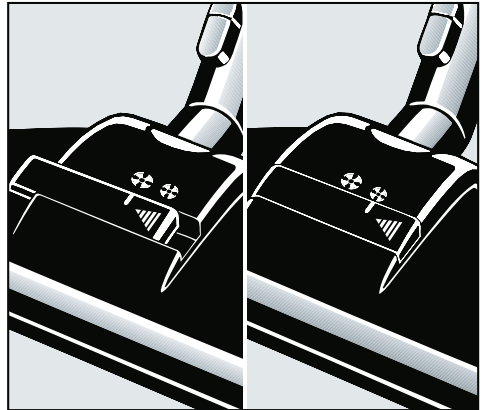

 Always turn off the vacuum cleaner and disconnect the plug from the electrical supply before cleaning or servicing the Turbobrush or vacuum.

## Removing threads and hairs

 - Cut any threads or hairs that have become entangled on the brush roller with a pair of scissors. The cut pieces will be drawn in by the suction power of the vacuum cleaner the next time it is used.

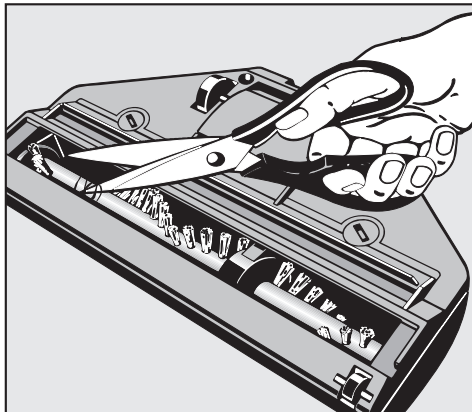

More obstinate tangles or blockages can be removed after opening the roller cover. Any large particles which have been drawn in can then be removed.

- Loosen the two locking screws using a coin or screwdriver, and remove the roller cover.
- Remove any items stuck in the brush compartment or wrapped around the roller brush.
- Replace the cover and tighten the locking screws.
- Tighten the locking screws.

