



Before using your washer dryer machine, please read this manual carefully and keep it for future reference.

Washer Dryer OWNER'S MANUAL

MODEL: OWD735W

Read This Manual

Inside you will find many helpful hints on how to use and maintain your washer dryer machine properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your washer dryer machine. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of Troubleshooting Tips first, you may not need to call for service.



CAUTION: HOT SURFACE !



CAUTION: RISK OF FIRE !

Contents

Safety Precautions	3
Overview of Washer dryer	8
Install Washer dryer	9
Operating Washer dryer	12
Checklist and Preparation before Washing Clothes	12
View of Control Panel.....	17
Select the procedure	18
Table of Washing and drying Procedures	22
Maintenance	23
Cleaning and Maintenance of Washer dryer Cabinet	23
Troubleshooting.....	26
Remove the problems	27
Product Specifications	27
Appendix	28
Care Label.....	28
Warranty Card	29

Safety Precautions

■ Safety Precautions

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
2. Electrical connection must be made as per local wiring rules and regulations. Do not disconnect the appliance with wet hands or bare feet, and do not disconnect the power cord with extreme force.
3. Remove appliance from power supply before cleaning or performing maintenance.
4. The electrical connection must be accessible after installation.
5. The appliance is not intended to be operated by means of an external timer or separate remote control system.
6. In certain circumstances electrical appliances may be a safety hazard. Check the conformity of voltage and power settings, which are specified on the information plate attached to the appliance and/or packaging, with the usage conditions available.
7. Do not place heavy objects in or on these appliances, or use for storage, or let children play or swing from the door. Do not use the appliance until fully installed.
8. The electrical connection must be accessible after installation.
9. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
10. The appliance is not to be used if industrial chemicals have been used for cleaning.
11. **WARNING:** Clean the lint trap regularly.

Safety Precautions

12. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
13. CAUTION - If this appliance is supplied from a cord extension set or an electrical portable device, the cord extension set or electrical portable device must be positioned so that it is not subjected to splashing or ingress of moisture.
14. Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
15. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent – this will reduce, but not eliminate, the hazard. The “cool down” cycle of tumble dryers should not be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.
16. Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/gasoline, Dry-cleaning solvents or other flammable or explosive substances should not be placed in this appliance. Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot remover (some brands), turpentine, waxes and wax removers.
17. Item containing foam rubber (also known as latex foam) or similarly texture rubber-like materials should not be dried in a tumble dryer on a heat setting. Foam rubber materials can, when heated, produce fire by spontaneous combustion.
18. Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
19. Undergarments that contain metal reinforcements should not be placed in a the appliance. Damage to the appliance can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.

P.04

Safety Precautions

20. Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a appliance.
21. Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a tumble dryer.
22. Do not cover the air inlet or exhaust openings.
23. If appliances has ventilation openings in base, ensure carpet does not obstruct the openings.
24. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the appliance door is restricted.
25. The maximum mass of dry load for washing is 7kg & for drying is 3.5kg.
26. The final part of a tumble dryer cycle (cool down cycle) occurs without heat to ensure articles are left at temperatures that won't damage them.
27. WARNING: Never stop a dryer before the end of the drying cycle unless all items are quickly removed and spread out to allow heat dissipation.
28. Do not overturn the appliance either during operation or during maintenance.
29. Always remove items from pockets (especially flammables like matches).
30. This appliance is for indoor use only.
31. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and Breakfast type environments
32. Packaging materials can be dangerous to small children - dispose of wisely.
33. Do not install in wet rooms (like bathrooms) or areas with caustic or explosive gases.
34. All travelling bolts must be removed before operation, otherwise the appliance will be damaged.
35. Run the appliance washing cycle once without clothes before use.
36. Do not wash or dry carpets or floor rugs in this appliance.
37. Take care of hot water that is released when draining.
38. Never refill water by hand during a washing cycle.
39. After a washing cycle, wait 2 minutes before opening the door.
40. Do not close the door with excessive force.

P.05

Safety Precautions

- 41. Please remember to disconnect water and power supplies when the appliance will not be used for long periods of time.
- 42. Do not climb the appliance or sit on the top cover.
- 43. This appliance should not be installed in a humid place.
- 44. Do not build this appliance in.
- 45. Before opening the door after a washing or drying cycle, check that the drum has stopped spinning. Do not add or remove clothes while the drum is spinning.
- 46. The transport bolts should only be reinstalled into this appliance by an authorised person.
- 47. Do not allow the water drained out of the appliance to accumulate.
- 48. When moving the appliance, never hold extruding parts of the appliance (especially the door).
- 49. CAUTION – Do not connect to the hot water supply.


P.06

Safety Precautions


P.07

Overview of Washer Dryer

■ Component

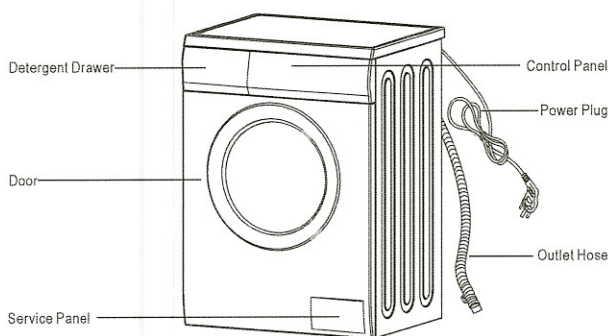

■ Accessories

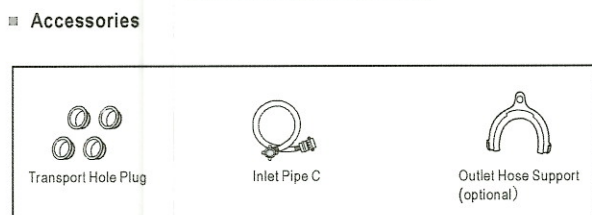

P.08

Install Washer Dryer

■ Unpacking the washer dryer machine

Unpack your washer dryer machine and check if there is any damage during the transportation. Also make sure that all the items in the attached bag are received.

If there is any damage to the washer dryer machine during the transportation, or any item is missing, please contact the local dealer immediately.


■ Dispose the packing materials

The packing materials of this machine may be dangerous to kids. Please dispose them properly and avoid easy touch by kids. Please dispose the related packing materials according to the relevant local regulations. Please do not throw the packing materials away together with the other daily living rubbishes.

■ Remove transport bolts

Before using this washer dryer machine, transport bolts must be removed from the backside of this machine. Please take the following steps to remove the bolts:

1. Loosen all bolts with spanner and then remove them.
2. Stop the holes with transport hole plugs.
3. Keep the transport bolts properly for future use.

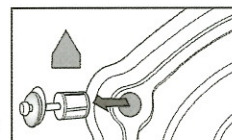

■ Select the location

Before installing the washer dryer machine, the location characterized as follows shall be selected:


- Rigid, dry, and level surface (if not level, please make it level with reference to the following figure "Adjust Leg")
- Avoid direct sunlight
- Sufficient ventilation
- Room temperature is above 0°C
- Keep far away from the heat resources such as coal or gas.

Make sure that the washer dryer machine will not stand on power cord.

Do not install the washing machine on the carpet floor.

■ Adjust Leg

1. When positioning the washer dryer machine, please first check if the legs are closely attached to the cabinet. If not, please turn them to their original positions with hand or spanner and tighten the nuts with spanner.
2. After positioning the washer dryer machine, press four corners on top cover of washer dryer machine in sequence. If the washing machine is not stable when being pressed, this leg shall be adjusted.

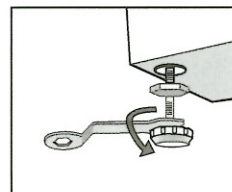


P.09

Install Washer Dryer

3. Ensure the positioning status of washer dryer machine. Loosen the lock nut with spanner and turn the leg with hand until it closely contacts with the floor. Press the leg with one hand and fasten the nut closely to the cabinet with the other hand.
4. After being locked properly, press four corners again to make sure that they have been adjusted properly. If it is still unstable, it has to repeat Steps 2 and 3.
5. Put a solid cylinder (e.g. pop cans) oppositely on the top cover of the washer dryer machine from in the left, right, front and back directions. If the cylinder keeps stable, the washer dryer machine is positioned level. If it rolls, the washer dryer machine is positioned unlevel. The rolling direction is the direction of lower ground surface. Then, the two legs in this direction shall be raised at the same time until the washer dryer machine is level. Steps 1~3 are repeated to make the bottom legs closely against the ground and the nuts shall be locked tightly.

■ Connect inlet pipe

 Connect the cold water inlet pipe as indicated in the diagram.




■ Install inlet pipe

1. Connect the elbow to tap and fasten it clockwise.
2. Connect the other end of inlet pipe to the inlet valve at the backside of washing machine and fasten the pipe tightly clockwise.

Notes: after connection, if there is any leakage with hose, then repeat the steps to connect inlet pipe. The most common type of tap shall be used to supply water. If tap is square or too big, then standard tap shall be changed.

■ Place outlet hose



There are two ways to place the end of outlet hose:
1. Put it beside the water trough.

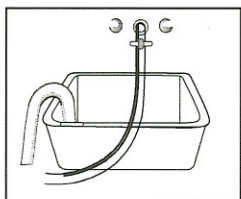

P.10

Install Washer Dryer

2. Connect it to the branch drain pipe of the trough.

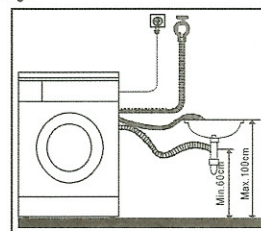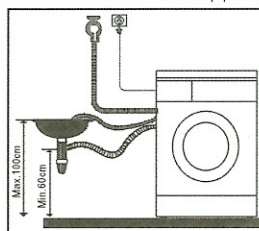


- It can drain the water up and down, outlet hose shall not be installed at a height beyond 100cm and its end shall not be immersed in water.


Position outlet hose properly so that the floor will not be damaged by water leakage.

Notes:

If the machine has outlet hose support, please install it like the following pictures.

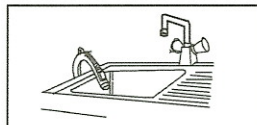

- Position outlet hose properly so that the floor will not be damaged by water leakage.

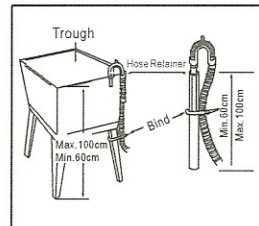

- If outlet hose is too long, do not force it into washer dryer machine as it will cause abnormal noises.

■ Electrical Connection

- As the maximum current through the unit is 10A when you are using its heating function, please make sure the power supply system (current, power voltage and wire) at your home can meet the normal loading requirements of the electrical appliances.
- Please connect the power to a socket which is correctly installed and properly earthed.
- Make sure the power voltage at your place is same to that on the appliance data label.
- Power plug must match the socket and cabinet must be properly and effectively earthed.
- Do not use multi-purpose plug or socket as extension cord.
- Do not connect and pull out plug with wet hand.
- When connecting and pulling out the plug, hold the plug tightly and then pull it out. Do not pull power cord forcibly.

P.11

Install Washer Dryer

⚠ WARNING

1. **This machine must be earthed properly.** If there is any short circuit, earthing can reduce the danger of electrical shock.
This appliance is equipped with power cord, which includes plug, earthing wire at earthing terminal.
2. Washer dryer machine shall be operated in a circuit separate from other electrical appliances. Otherwise, power protector may be tripped or fuse may be burned out.

Operating Washer Dryer

■ Checklist and Preparation before Washing Clothes


Please read this operation method carefully to avoid the troubles of washing machine and damages of clothes. Always read the detergent manufacturer's instructions for best results.

Check if the first-washed clothes will leach colour

After a white towel touched with liquid detergent is used to wash the invisible corners of the clothes, check if the white towel is stained with clothes' original color.

For clothes such as scarves and others that the colour leaches from, always wash separately first before washing with other clothes.

As for the stains on sleeves, collars and pockets, use the liquid detergent and wash it with brush gently. Finally put them into the washer dryer machine to achieve more ideal washing effects. As for temperature-sensitive clothes, they shall be washed as required in the labels. Otherwise, it may cause color change or distortion.

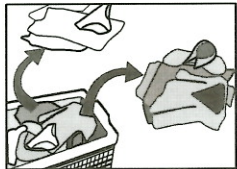

Keep in Mind:

Never put the clothes to be washed in washer dryer for a long period of time. Otherwise it may get moldy and cause spots. Therefore, please wash the clothes in time. The clothes also may get color changed or distorted if they are not washed according to the stated washing temperature.

Clothes that can not be washed by washer dryer machine

The clothes that may get distorted if being immersed in water:
Ties, waistcoats, western-style clothes, outer garments etc. may have obvious shrinkage if being immersed in water; the decolorised clothes such as blended spinning clothes of artificial fiber etc.

P.12

Operating Washer Dryer

Wrinkle-style clothes, embossed clothes, resin clothes etc. may get distorted when being immersed in water. Among cotton and wool materials, the clothes that get easily distorted are wrinkle-style silk, fur products and fur decorations;
Clothes with decoration, long dress and traditional clothes etc are the products to get decolorised easily.

Please do not wash the clothes without material labels and washing requirements. Never wash the clothes stained with the chemicals such as gasoline, petroleum, benzene, paint thinner and alcohol.

Please pay attention with regard to detergents

"Low bubble" detergent or washing powder or washing powder special for drum washing machine shall be selected according to fiber types (cotton, synthetic fiber, soft products and wool products), colors, washing temperatures, dirty degrees and types. Otherwise, excessive bubbles may be generated and overflowed out of the drawer so that accidents may take place.

Bleach belongs to alkali type and can damage clothes, so it is suggested to use as little as possible.

Powder detergents can easily leave the residues in the clothes so as to generate the bad smell, so they shall be sufficiently rinsed.

Detergent can not easily get dissolved completely if there is too much detergent or water temperature is rather low. It can remain in clothes, pipes and washing machines to pollute the clothes.

Washing shall follow the weight of clothes, dirty degrees, local water hardness as well as the recommendations from the detergent manufacturers. Please consult the water company if you are not clear of water hardness.


Notes:

Keep detergents and additives in safe and dry places out of reach from children.

■ Checklist and Preparation before Washing Clothes

Please take out the items out of the pockets.

Please check the pockets of the clothes to be washed, empty the rigid items such as decorations and coins, otherwise washing machine may be damaged.

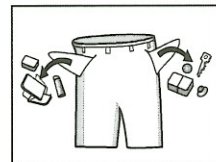

For the clothes to be washed, they are classified according to the following characteristics:

The symbol types of care labels: the clothes to be washed are classified into cotton, blended fiber, synthetic fiber, silk, wool and artificial fiber.

P.13

Operating Washer Dryer

Color: white and colorful colors shall be identified. All new colorful articles shall be washed in a separate wash.

Size: the articles of different sizes are washed together to increase the washing effects. Sensitivity: soft articles shall be washed separately. As for new pure wool textiles, curtains and silks, the soft washing procedure shall be selected. Check the labels in all washing articles.

The clothes shall be sorted before being put into washer dryer. As for the curtains with hooks, the hooks shall be removed before being washed.

The decorations on the clothes may damage the washer dryer machine. As for the clothes with buttons or embroideries, they shall be turned over before being washed.

Clean up fasteners:



Zips shall be zipped close and buttons or hooks shall be fixed. The loose band or ribbon shall be bound together.



It is suggested to put bras into the pillow slip with zip or buttons sealed to prevent the steel wire from popping out of bras into the drum and damaging the machine.

Especially delicate textiles such as laced curtains, straight jackets, small articles (tight socks, handkerchiefs, ties etc.) shall be put into string bag for washing.

When washing a single big and heavy dress such as Turkish towels, jeans, wadded jackets etc., the uneven weight distribution may cause the appliance to vibrate more than normal. To remedy this, add smaller clothes at the same time to redistribute the weight more evenly.

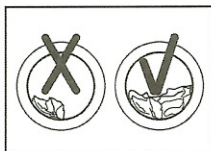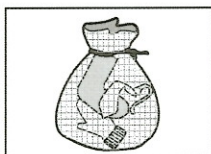

Clean away dusts, stains and pet hairs from the clothes.

The clothes may be damaged and disturb washing effects during the friction between dusts, stains and clothes.

To protect baby skin

Baby articles (baby clothes and towels) including nappies shall be washed separately. If they are washed together with the adults' clothes, they may be infected. Rinsing times shall be increased to ensure the thorough rinsing and cleaning without the detergent residues.

It is suggested that the parts that are easily stained such as white sockets, collars and sleeves etc. shall be hand washed before being put into washing machine to achieve more ideal washing effects.

Please use powder or liquid detergents. The residues of the soap could remain in the gaps of the clothes if soap is used.

Operating Washer Dryer

Pre-wash cotton cloth

Modern washer dryers together with modern detergents can make washing much more efficient, saving energy, time, water and detergent. If cotton clothes are very dirty, albumen-based detergent can be used for pre-washing.

Confirm the washing capacity:

Do not overload the appliance. Use the following table to confirm the maximum loading capacity.

Fiber Type	Maximum Loading Capacity
	7.0kg
Cotton	7.0kg
Synthetic	3.5kg
Wool	2.0kg

Note: The rated capacity is the maximum capacity, make sure that the dry clothes which are loaded to the appliance do not exceed the rated capacity each time.

Clothes that Pil easily should be turned inside out when washed.

Clothes that pil easily should be washed separately from other clothes so the fibre does not build up on the other clothes. Black clothes should be washed separately from cotton clothes as the dyes can leach into the cotton clothes, staining them.

Washing machine shall not wash water-proof materials (ski suits, outside napkin pads, curtains).

As for the fiber products that water can not get soaked easily into such as water-proof cushions, and clothes, it is better not to wash. Otherwise there will be water bursting out or abnormal vibration to cause danger while rinsing and draining so that the clothes also may be damaged. (Such as outside napkin pads, raincoats, umbrella, ski suits, car covers, sleeping sacks etc.)

Cautions during Draining

Draining of normal clothes:

Excess water is removed through a drainage hose. If water-proof materials are used, their slower release of water will result in an uneven weight distribution within the appliance, which could cause the appliance to vibrate.

Drying hints

Clothes could be dried after spinning.

Please don't press the button speed when spinning to ensure the clothes spin properly.

As for synthetic textiles, the proper spin speed should be selected before dry them.

To ensure quality dry the textiles, please classify them according to their kinds and the drying temperature.

Synthetic should better be taken out before drying out by out to protect them and please set the proper drying time according to their load.

Operating Washer Dryer

■ Washing Clothes at first time

Before washing clothes at first time, the washing machine shall be operated in one round of the whole procedures without clothes in as follows:

1. Connect power source and water.
2. Put a little detergent into the box and close it.
3. Press the button "On/Off".
4. Press the button "Start/Pause".

The drawer is separated as follows:

I: Pre-detergent.

II: Main detergent, softener, pre-dip, bleaching or decontaminating products.

☼: Washing additive, such as fabric softener or tackifier.

■ Put detergent into washer dryer machine.

1. Pull out the drawer.
2. Fill pre-detergent into Case I (when necessary).
3. Fill detergent into Case II.
- option1: detergent (powder) . option2(liquid)
4. Fill softener into Case ☼ (when necessary).

Notes:

- Thick detergents or additives can be mixed with a little water to make it easier for them to flow through the piping, and reduce the chance of blockages.
- Please choose suitable type of detergent for the various washing temperature to get the best washing effect with less water and energy consumption.

■ Start up washer dryer machine

Connect the power. Check if water pipes are connected properly. Open the tap completely. Put in the clothes to be washed and fill in the detergent and softener. Then press the button "On/Off". Select the proper procedures and functions and press the button "Start/Pause".

■ Select the procedure

The proper washing procedures shall be selected according to the types, quantities, and dirtiness of the clothes to be washed in combination with the following washing temperature table.

90 °C	Seriously soiled , pure white cotton or flax (for example: coffee table cloths, canteen table cloths, towels, bed sheets)
60 °C	Moderately soiled, colorful flax, cotton and synthetic articles with certain decolorising degree (for example: shirts, night pajamas; Slightly soiled , pure white flax (for example: underwear)
40 °C, 30 °C, 20 °C Cold water	Normally soiled articles (for example: synthetic and wool)

Operating Washer Dryer

First, turn the rotary switch to select the corresponding procedures according to the types of textiles.

Second, select the proper temperature according to the dirtiness. Generally, the higher the temperature is, the more the power is consumed.

Last, select the proper revolution speed. The normal textiles are recommended with 1000~1200rpm and the delicate textiles with 600~800rpm. The higher the revolution speed is, the dryer the textiles will be, and the louder the noise.

The surfaces of delicate textiles will have wrinkles and the working life of washing machine will be shortened.

PLEASE NOTE: to protect the clothes, the lower revolution speed shall be selected for delicate textiles. The main washing procedures depend on the types of the clothes to be washed. The main washing troubles can be selected as follows:

- 1Hour W/D

For small synthetic clothes or shirts, load limitation is 1 kg (about 4 shirts). When you have an urgent appointment but no more clean shirt left in your cupboard, this program will help you. Time duration is only 1 hour including wash and dry. Remark: Big towels or jeans is not suitable for this program, they will enlarge the time duration and affect the moisture content.

- Cotton

You can select this procedure to wash the daily washable clothes. The washing period is quite long with quite strong washing intension. It is recommended to wash the daily cotton articles, for example: bed sheets, quilt covers, pillowcases, gowns, underwear etc.

- Synthetic

You can select this procedure to wash the quite delicate clothes. The procedure is shorter compared with that for cottons and the washing intension is quite gentle. It is recommended to wash synthetic articles, for example: shirts, coats, blending. As for curtains and laced textiles, the procedure "Synthetic" shall be selected. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.

- Baby Care

You can select this procedure to wash your baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.

- Mix

You can select this procedure wash the tough clothes, that need much more time and strength. It is used for the daily clothes, such as sheets, chained, pillowcases bathrobe and underwear made from cotton.

- Dry Only

Select Dry programme to dry clothes, the drying temperature is different. Select the drying time according to the load.

- Cotton ECO

To increase the washing effects, main additional washing time is increased.

It is recommended to wash the clothes for babies or worn by the persons with allergic skin.

- Sport Wear

You can select this procedure to wash the activewear.

Operating Washer Dryer

- Quick

This procedure is suitable for washing few and not very dirty clothes quickly.

- Delicate

You can select this procedure to wash your delicate clothes. Its washing intensity is gentler and revolution speed is less compared with the procedure "Synthetic". It is recommended for the articles to be washed softly.

- Wool

You can select this procedure to wash the wool textiles labeled with "Machine Wash". Please select the proper washing temperature according to the label on the articles to be washed. Furthermore, the proper detergent shall be selected for wool textiles.

- Colours

You can choose the program washing brightly coloured clothing, it can protect the bright colours better.

- Jeans

This program is specially designed for washing jeans.

- Spin Only

Separate spin only procedure. Soap water or rinse water shall be drained out before spinning.

- Rinse&Spin

Separate Rinse&Spin Procedure.

- My Cycle

Press Dry button 3sec. for my cycle to memory the procedure. The default my cycle is cotton.

The main function can be selected as follows:

- Delay

Delay function can be set with this button, the delaying time is 0-24 H.

Set the Delay function:

1. Select a programme;
2. Press the Delay button to choose the time;
3. Press Start/Pause to commence the delay operation.

Cancel the Delay function: Press the Delay button until the display will be 0H. It should be pressed before starting the program. If the program already started, should press the On/Off button.

Notes: If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, press the Start/Pause button the left time is continues.

- Speed Wash

The function can decrease the washing time.

- Extra Rinse

The laundry will undergo extra rinse once after you select it.

- Extra Wash

So dirty clothes can choose this function. It can select the prewash function to increase the washing effect, you need to put detergent into the Case (I) when using pre-wash function.

Operating Washer Dryer

- Prewash

The Prewash function can get an extra wash before main wash.

- Soak

When water reaches the target level, sock for 20 minutes and then the motor do not rotate.

- Anti -crease

Anti -crease function can be used to reduce the wrinkles of clothes.

- Reload

This operation can be executed during the washing procedure. When the drum of the washer dryer machine is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully. To press "Start/Pause" for 3 sec. to reload, and start the clothes adding in the midway function. Please follow the steps as below:

1. Wait until the drum stops rotation.
 2. The door lock is unlocked.
 3. Close the door when the clothes needs are loaded and repress the «Start/Pause» button.
- Notes: Don't use the Reload function when the water surface over the edge of the inner tub and the temperature is higher.

- Child Lock

To avoid that the washing procedure cannot operate normally due to the mis operation by kids during the washing procedure, you can select this function. In this case, the other buttons except On/Off button can not work, at this state, the machine power off when press the key on/off. The machine remembers the program child lock and the program during powered off when press the key on/off again.

Press Function and Select together 3 seconds during the running procedure, the buzzer will beep, Start/Pause button as well as the rotary switch are locked. Press the two buttons for 3 seconds together and buzzer will beep to release to locking. But cut off the power supply, the kid's protection is also release to locking. The kid's protection will not be cancelled after all procedures are completed.

- Suppression of the acoustic signals

This is an additional buzzer function on your appliance. After deactivating the buzzer function, the buzzer will be closed.

After starting the machine, press the "Temp.&Spin" button for 3 seconds and you will hear a beep, then the buzzer will be closed. To restart the buzzer function, press the "Temp.&Spin" button again for 3 seconds. The setting will be kept until the next reset.

Warning: After deactivating the buzzer function, the sounds will not be activated any more.

- Bubble Removal Function

Bubble Check Function: Redundant bubbles will occur when there is excessive detergent, which will affect wash and rinse effects. The procedure will check automatically and one bubble removal procedure will be added automatically to remove bubbles when excessive bubbles are checked.

Operating Washer Dryer

■ Table of Washing and drying Procedures

Procedure	Load(kg)	Detergent Box		Delay	Speed Wash	Extra Rinse	Prewash	Extra Wash	Soak	Anti-Crease	Default Temp. (°C)	Default Time	Default Speed (RPM)
Description		Case I	Case II	Softener tank									
Cotton ECO	7.0	×	×	●	×	×	×	×	×	×	60	7.0kg	1400
Sportswear	3.5	×	×	●	×	×	×	×	×	×	40	4.50	1400
Quick	2.0	×	×	●	×	×	×	×	×	×	Cold	0.15	800
Delicate	2.5	×	×	●	×	×	×	×	×	×	30	0.50	600
Wool	2.0	×	×	●	×	×	×	×	×	×	40	1.07	600
Colours	3.5	×	×	●	×	×	×	×	×	×	Cold	1:10	1000
Jeans	7.0	×	×	●	×	×	×	×	×	×	60	1.45	800
Spin Only	7.0	×	×	×	×	×	×	×	×	×	-	0:12	1000
Rinse&Spin	7.0	×	×	×	×	×	×	×	×	×	-	0:20	1000
Dry Only	3.5	×	×	×	×	×	×	×	×	×	-	3:32	1400
Mix	7.0	×	×	×	×	×	×	×	×	×	40	1:13	800
Baby Care	7.0	×	×	×	×	×	×	×	×	×	30	1:20	800
Synthetic	3.5	×	×	×	×	×	×	×	×	×	40	1:40	800
Cotton	7.0	×	×	×	×	×	×	×	×	×	40	2:40	800
1 Hour W/D	1.0	×	×	×	×	×	×	×	×	×	Cold	0:59	1400

Energy test program: Cotton ECO 60°C, Speed: the highest speed; Other as the default.

Half load for 7.0kg machine; 3.5kg.

Cotton Eco 60°C is the standard washing program and "Dry only" is the standard drying programs to which the information in the label and the fiche relates, and they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry that the actual water temperature may differ from the declared cycle temperature.

Notes: The parameters in this table are only for user's reference. The actual parameters may be different with the parameters in above mentioned table.

● Means must ○ Means optional × Means not necessary

Maintenance

Before your maintenance starts, please do pull out the power plug or disconnect power and close the tap.

⚠ WARNING

- Solvents are forbidden to avoid that the washer dryer machine is damaged, and toxic gases are generated or exploded.
- Never use water to sprinkle and wash the machine.
- It is forbidden that the detergents containing PCMX are used to clean the machine.

■ Cleaning and Maintenance of Washer Dryer Machine Cabinet

Proper maintenance on the washer dryer machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use the wet cloth to wipe it off immediately. No sharp items are allowed to strike the cabinet.

Notes: formic acid and its diluted solvents or equivalent are forbidden.

■ Clean Internal Drum

The rusts left inside the drum by the metal articles shall be removed immediately with chlorine-free detergents.

Never use steel wool.

■ Dispose a Frozen Washer dryer Machine

When the temperature drops below zero and your washer dryer machine gets frozen, you may:

1. Disconnect the power supply for the machine.
2. Wash the tap with warm water to loosen inlet pipe.
3. Take down inlet pipe and immerse it in warm water.
4. Pour warm water into washing drum and wait for 10 minutes.
5. Reconnect inlet pipe to the tap and check whether inlet and outlet are working normally.

Notes: when the washing machine is reused, make sure the ambient temperature is above 0°C

■ Anti-freeze

If your machine is located in the room where it can get frozen easily, please drain the remaining water inside drain pipe and inlet pipe thoroughly.

Remove the remaining water in inlet pipe:

1. Close the tap.
2. Screw off the inlet pipe from tap and put its end into the container.
3. Start up any procedure except single Wash or Drain procedure. Water will be drained out of inlet pipe if any for about 40 seconds.
4. Reconnect the inlet pipe to tap.

Remove the remaining water in drain pump

⚠ WARNING

To avoid burning, it shall be done after the hot water inside the machine cools down.

