



CHiQ

▶ **USER MANUAL**

MODEL

WFL8TOL52W




Thank you for choosing **CHiQ** brand washing machine.

Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

This manual may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

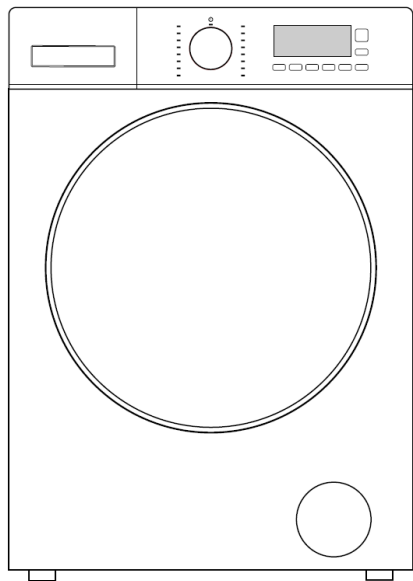

Technical date	
Model	WFL8TOL52W
Rated washing capacity (kg)	8
Rated voltage	220--240V~
Rated frequency	50Hz
Rated power (W)	2000
Washing noise level (dB)	62
Spinning noise level (dB)	76
Spin speed (rpm)	1400
Water pressure (MPa)	0.03 ~ 1.0
Waterproofing grade	IPX4
Water consumption (litres per wash)	81
Energy consumption (kWh per year)	308
Net weight (kg)	65
Outer dimension (WxDxH mm)	600 X 577 X 847

Safety instruction. 2-3-4-5

Safety instruction

Disposal

Installation. 6-7-8-9

Unpacking,

Remove the transport bolts

levelling

Choosing the right location

Connecting the electricity and water supplies

Technical date

Description of the washing machine. 10-11

Control panel

Display

Preparing and sorting laundry. 12-13

Preparing the laundry

Sorting the laundry according to colour and degree of soiling

Sorting laundry according to their care label specifications

Wash cycles and options. 14-15

Table of wash cycles

M. Smart wash cycle

Ozone program

Drum lamp

Stains removal

How to use the appliance. 16-17-18

Before loading your first load of laundry

Daily use

Preparing the laundry

How to use the washing machine

Care and maintenance. 19-20-21

Cutting off water and electricity supplies

Cleaning the appliance's exterior

Cleaning the drum

Descaling the washer

Caring for the door and drum of your appliance

Checking the water inlet hose

Cleaning the detergent dispenser

Cleaning the water inlet strainers

Cleaning the drain pump

Troubleshooting. 22-23-24

Safety instruction

Before using the appliance, read these safety instructions. Keep them nearby for future reference. These instructions and the appliance itself provide important safety warnings, to be observed at all times. The manufacturer declines any liability for failure to observe these safety instructions, for inappropriate use of the appliance or incorrect setting of controls.

Young children (0-3 years) should be kept away from the appliance. Young children (3-8 years) should be kept away from the appliance unless continuously supervised. Children from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe use and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision. Keep all laundry aids (including detergent, bleach, fabric softener, etc.) out of the reach of children.

PERMITTED USE

- ❖ **CAUTION:** The appliance is not intended to be operated by means of an external switching device, Such as a timer, or separate remote controlled system.
- ❖ This appliance is intended to be used in household and similar applications, it is **not** in applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, bed & breakfast and Areas for communal use in blocks of flats or in laundrettes.
- ❖ Do not load the machine above the maximum capacity (kg of dry cloth) indicated in the program table.
- ❖ This appliance is not for professional use. Do not use the appliance outdoors.
- ❖ Do not use any solvents (e.g. turpentine, benzene), detergents containing solvents, scouring powder, glass or general purpose cleaner, or flammable fluids; do not machine wash fabric that have been treated with solvents or flammable liquids.
- ❖ Do not machine wash fiberglass materials (such

as curtains and windows coverings that use fiberglass materials). Small particles may remain in the washing machine and stick to fabrics in subsequent wash loads causing skin irritation.

- ❖ Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- ❖ Remove all objects from packets such as lighters and matches.
- ❖ Make sure there is no water in the drum before opening the door.
- ❖ Never wash the carpet in the washing machine.
- ❖ Keep pets away from the washing machine.
- ❖ Exercise caution when pumping out hot detergent solution.
- ❖ Do not fill water during washing cycle manually.
- ❖ Please close the loading door correctly, if it is difficult to close it, please check if the laundry is caught in the door.
- ❖ Water may reach very high temperatures during the wash cycle.
- ❖ Do not reach into the appliance if the wash drum is moving.
- ❖ Do not temper with the controls.
- ❖ Never open the door forcibly or use it as a step.
- ❖ Do not allow anyone to climb, lean or hang on any part of the washing machine including any protruding components such as the appliance door or a pullout shelf.

Safety instruction

INSTALLATION

- ❖ The appliance must be handled and installed by two or more persons – risk of injury. Use protective gloves to unpack and install – risk of cuts.
- ❖ The washing machine must be installed and operated in a room with a drain.
- ❖ Installation, including water supply (if any) and electrical connections and repairs must be carried out by a qualified technician. Keep children away from the installation site. After unpacking the appliance, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-Sales Service. Once installed, packaging waste (plastic, Styrofoam parts etc.) must be stored out of reach of children – risk of suffocation. The appliance must be disconnected from the power supply before any installation operation – risk of electric shock. During installation, make sure the appliance does not damage the power cable – risk of fire or electric shock. Only operate the appliance when the installation has been completed.
- ❖ Do not install your appliance where it may be exposed to extreme conditions, such as: poor ventilation, temperatures below 5 °C or above 35 °C.
- ❖ Do not expose the washing machine in the place with causticity or explosibility gas.(e.g. dust, steam and gas, etc.)
- ❖ Do not install the washing machine in a bathroom or a room very wet.
- ❖ The washing machine should not be installed in an outdoor environment, not even where the area is sheltered, because it may be very dangerous to leave it exposed to damp, rain and thunderstorms.
- ❖ When installing the appliance make sure that the four feet are stable and resting on the floor, adjusting them as required, and check that the appliance is perfectly to level using a spirit level.
- ❖ The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washer dryer, in such way that a full opening of the washer-dryer door is restricted.
- ❖ Make sure that the ventilation openings in the base of your washing machine (if available on your model) are not obstructed by a carpet or other material.
- ❖ When moving, do not lift the washing machine by the knobs or detergent drawer, without lifting it by the worktop or top lid; during transport, never rest the door on the trolley.
- ❖ **The washing machine is fitted with transport bolts to prevent any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed. After their removal, cover the openings with the 4 enclosed plastic caps.**
- ❖ Connect the water inlet hose(s) to the water supply in accordance with the regulations of your local water company.
- ❖ Use only the new hose-sets supplied with the appliance to connect the appliance to water supply. The old hose-sets should not be reused.
- ❖ The supply water pressure must be in the 0.03—1MPa range,

Safety instruction

ELECTRICAL WARNING

- ❖ It must be possible to disconnect the appliance from the power supply by unplugging it if plug is accessible, or by a multi-pole switch installed upstream of the socket in accordance with the wiring rules and the appliance must be earthed in conformity with national electrical safety standards.
- ❖ When the washing machine is installed, the mains socket must be within easy reach. Do not pull on the power cord or appliance to unplug the machine.
- ❖ When heating, the maximum current of the washing machine is 10A, so please make sure that the power supply system (voltage, current and the cable) is applicable to the load of the applied appliance.
- ❖ In order to ensure your safety, you must plug the cable into a socket which connected to earth. And please check your socket to make sure that it is connected with reliable earth correctly.
- ❖ Do not use extension leads, multiple sockets or adapters.
- ❖ The electrical components must not be accessible to the user after installation.
- ❖ Do not operate this appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.
- ❖ If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard – risk of electric shock.

CLEANING AND MAINTENANCE

- ❖ **WARNING:** Ensure that the appliance is switched off and disconnected from the power supply and turn off the water tap before performing any maintenance operation; never use steam cleaning equipment – risk of electric shock.
- ❖ Use caution when draining hot water from the drum such as during pump maintenance or when using emergency door open procedure.

SERVICE

- ❖ Do not repair or replace any part of the appliance unless specifically stated in the user manual. Use only authorized After-sales Service. Self or non-professional repair may lead to dangerous incident resulting in live or health threatening and/or significant property damage.
- ❖ In the event of fault and/or malfunction, turn off the washing machine, close the water tap and do not tamper with the machine. Immediately contact the Customer Service Centre and only use original spare parts.
- ❖ Always unplug the washer-dryer from the power supply before attempting any service. Disconnect the power cord by grasping the plug, not the cord.
- ❖ Before the appliance is removed from service or discarded, remove the door to prevent children from playing or hiding inside. Also remove the power cord/plug.

Installation

DISPOSAL OF PACKAGE MATERIALS

The packaging material is 100% recyclable and is

marked with the recycle symbol .

The various parts of packaging must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

DISPOSAL OF HOUSEHOLD APPLIANCES

This appliance is manufacture with recyclable or reusable materials. Dispose of it in accordance with local waste disposal regulations. For further information on the treatment, recovery and recycling of household electrical appliances, contact your local authority, the collection service for household waste or the store where you purchased the appliance. This appliance is marked in compliance with European Directive 2012/19/EU. Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent negative consequences for the environment and human health.

The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection center for the recycling of electrical and electronic equipment.

Installation

Unpacking

1. Remove the washer from its packing.
2. Make sure that the washer has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process.


Remove the transport bolts

1 CAUTION

DAMAGE TO THE APPLIANCE OR INJURY POSSIBLE

- The machine is secured for transport with transport bolts. Transport bolts that are not removed can damage the drum during operation of the machine, the washer will vibrate, and it will be much noisier during spin cycles if the transport bolts are not removed before use. Be sure to remove all 4 transport bolts completely before first use. Keep the transport bolts. If a pedestal was purchased with the washer, it must be installed first, prior to removing the transport bolts. Please consult the pedestal installation instructions.
- In order to prevent transport damage during later transport, be sure to re-install the bolts before transport.

1. Undo the four transport bolts **A** and remove them.
2. Remove the four spacers **B**. They will fall to the floor when you tip the machine.
3. Insert the four cover caps **C** which will be found in accessory bag.

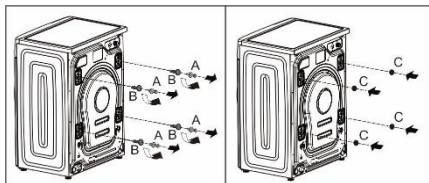

Keep all the parts in safe place: you will need them again if the washing machine needs to be moved to another location.

1 Packaging materials should not be used as toys for children.

Leveling the washer

Importance of leveling the washer

Your new washer uses high spin speeds to remove water at the end of the wash cycle. It is important that your washer is level and that all four washer feet press with equal pressure against the floor. This will help assure the quietest, most vibration-free use of your washer.


Follow these steps:

1. Install the washer on a level and solid surfaces. Preferably in a corner of a room.
2. If the floor is uneven (or out of level) adjust the washer feet as required to level the washer. Do not place anything under the washer feet to help level the washer.
3. Extend the washer feet no more than is necessary. The more the feet are extended, the more vibration the washer will experience. Start with the washer feet turned all the way in and adjust each foot as necessary.
4. Use a bubble level to check the top of the washer to make sure it is level side to side and front to rear.
5. Press down on each corner of the washer top to make sure the washer doesn't "wobble". There should be no "give" or movement. All four washer feet should press equally against the floor. This is just as important as the washer being level to prevent vibration.
6. When the washer is level and does not wobble, lock the washer feet in place by tightening the locknuts against the washer bottom. Be sure to do this without changing the height of the foot (hold the foot while tightening the locknut)

Installation

Procedure for adjusting the washer feet:

1. After determining which washer feet need to be extended, have someone lift up on the washer slightly to take pressure off the foot to be adjusted.
2. Turn the grey plastic foot to extend it downward as far as necessary to raise the corner of the washer the correct amount to level the washer.
3. When the height of the foot is correct, use a 17 mm open end wrench to tighten the locknut against the washer bottom. The locknut should be tighten against the bottom of the washer to lock the foot in place.

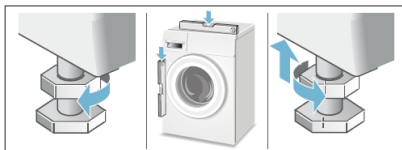

Choosing the Right Location

● Locations the appliance is not to be installed


- In a damp place or where the appliance may be exposed to rain, etc.(As this could cause electric shock or fire)
- Locations that are uneven, or unstable (As this could cause vibration and noise).
- In direct sunlight (As this could cause malfunction or deformation)
- Within, or on top of, unstable surfaces, including but not limited to benchtops, timber shelving, or cabinets

! **CAUTION:** Do NOT install where temperatures may reach freezing

● Set-in Installation

- Install the appliance with easy access to the power plug and socket.
- Install the appliance where there is enough space around it.

- (a) 3cm or more above
- (b) 5cm or more behind
- (c) 2cm or more on the left side
- (d) 2cm or more on the right side
- (e) 64cm or more

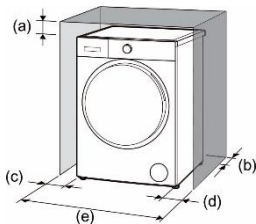


! **CAUTION:** Do NOT let metallic portions of the appliance come into contact with metal sinks or other appliances.

Installation

Connection the electricity and water supplies


Connecting the water inlet hose

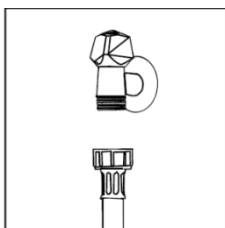

1. Connect one end of the water inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure).

Before performing the connection, allow

the water to run freely until it is perfectly clear.

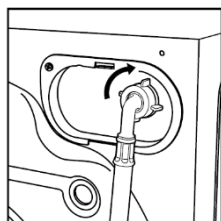


2. Connect another end of the water inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure)

3. Make sure that the hose is not folded over or bent.

❖ The supply water pressure must be in the 0.03—1MPa range, the values indicated in the Technical data table (see page 8).

❖ If the inlet hose is not long enough, contact a specialized shop or an authorized technician.


❖ Never use second-hand water inlet hoses.
Use the new water inlet hose supplied with the machine.

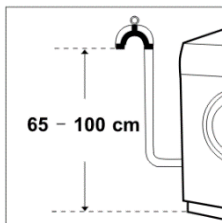


Connecting the drain hose

Connect the drain hose, without bending it, to a draining duct or a wall drain situated between 65 and

100cm from the floor;

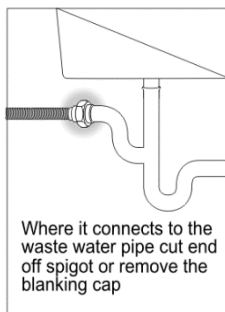

The drain hose may be connected to an under sink trap. Before connecting the drain hose from the machine ensure that any blanks or removable ends have been taken off the spigot,

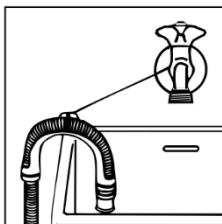

If it is placed over the edge of the basin or sink be sure the free end of the hose should not be under water tap.

Installation

Electric connection

Before plugging the appliance into the mains socket, make sure that:

- The socket is earthed and in compliance with the applicable law.
- The socket is able to sustain the appliance's maximum power load indicated on the Technical Data Plate fixed on the machine.
- The supply voltage is included within the values indicated on the Technical Data Plate fixed on the machine.
- When heating, the maximum current of the washer-dryer is 10A, so please make sure that the power supply system (voltage, current and the cable) is applicable to the load of the applied appliance.
- The socket is compatible with the washer's plug. If this is not the case, replace the socket or the plug by a qualified electrician.

WARNING-----THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

1 Do not use extension cables, multiple sockets or adapters.

1 To remove the plug from the socket, grasp the plug firmly and pull it out. Do not pull at the cable.

1 The electrical components must not be accessible to the user after installation.

1 Do not connect the machine to electrical outlets while your hands are wet or damp.

1 Do not operate this appliance when you are wet or barefoot.


1 Do not operate this appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.

1 **WARNING!** The company denies all liability if and when these norms are not respected.

The water consumption of a cold wash cycle is no higher than a warm cycle.

Description of the appliance

Control panel

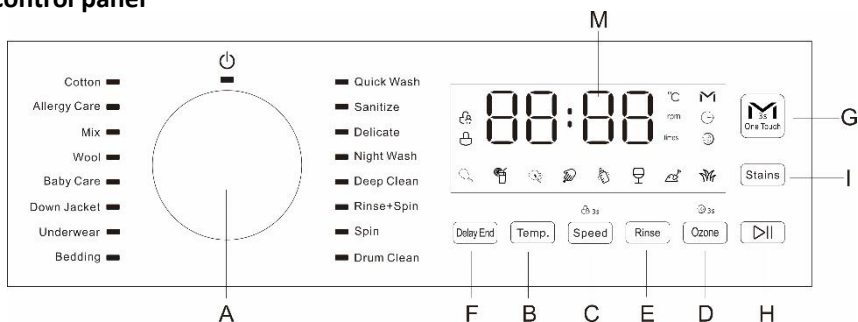

A---WASH CYCLE SELECTOR KNOB: Used to set the desired wash cycle (see “Table of wash cycles”).

- **OFF** position  : Turn the knob to the “” position to switch the machine off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.

B---TEMPERATURE button: Press to change the water temperature for the current cycle, with the changed temperature value appears on digital display.

C---SPEED button: Press to change the spinning speed for the current cycle, with the changed spinning speed value appears on digital display.

- **CHILD LOCK** function: When the cycle is running, if you want to activate the control panel lock, please press and hold the SPEED button for approximately 3 seconds. When the indicator light  is illuminated, the control panel is locked. This means it is possible to prevent wash cycles from being modified accidentally, especially where there are children in the home.

To deactivate the control panel lock, press and hold **SPEED** button for approximately 3 seconds.

- **Cancelling the buzzer:**

Press and hold the **SPEED** button and **ONE TOUCH** button together at the same time for at least 3 seconds, you can turn off the buzzer that sounds during the washing cycle running.

- **To activate the buzzer setting**

Do the same operation as you did for cancelling. The buzzer setting is activated after one beep.

D---OZONE button:

- Short press to select the ozone function, the washer will process the OZONE program only after the final spin cycle
 - Long press to run the OZONE program directly.
- Some programs cannot select the OZONE program.

E---RINSE times button: Press to change the rinse count for the current cycle, the changed rinse count appears on digital display.

F---DELAY END  button: Press to set the washer to finish the selected wash cycle automatically at later time. Choose a delay of 1 to 24 hours (in 1 hour increments).

The hour value appears on digital display indicates the time the wash cycle will finish.

The way to cancel Delay End function:

- Turn the wash cycle knob to reset the wash cycle.

G---ONE TOUCH  button: Press to set the **M-Smart** wash cycle.

For a detailed description, see→ *Wash cycle and options*.

H---START/PAUSE  button:


- Long press the button to start a wash cycle.
- Once the cycle has begun, if you want to pause the wash cycle, please long press the button again. If the **DOOR LOCK** symbol  is not illuminated, the door may be opened, you can add or take out laundry.

To start the wash cycle from the point at which it was interrupted, press the button again.

Description of the appliance

M-Display

The display is useful when programming the machine and provides a great deal of information.

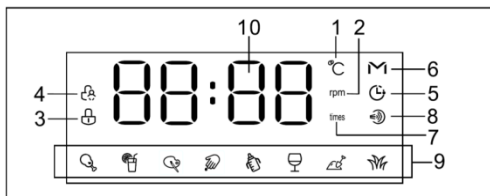

1---Temperature indicator

When a program is selected, the default temperature value of this program will appear on the display, with the corresponding temperature indicator light illuminated.

You can change the temperature value by pressing the **TEMPERATURE** button. If all temperature indicator light are off, it indicated the washer using only cold water without utilized the washer's heater in this program.

2---SPINNING SPEED indicator

When a program is selected, the default spinning speed value of this program will appear on the display, with the corresponding spinning speed indicator light illuminated.

You can change the spinning speed value by pressing the **SPEED** button. If all spinning speed indicator light are off, it indicate the washer does not spin after the final drain process in this program.

3---DOOR LOCK indicator

The lit symbol indicates that the door is locked. To prevent any damage, wait until the symbol turns off before opening the door. To open the door while a cycle is in progress, press the **START/PAUSE** button, if the **DOOR LOCK** symbol is switched off the door may be opened.

4---CHILD LOCK indicator

The lit symbol indicates the **CHILD LOCK** function is activated, the control panel is locked (apart from the **OFF** position on the control panel).

5---DELAY END indicator

The lit symbol indicates the **DELAY END** function is activated. The countdown to the end of the selected wash cycle will appear on the digital display.

6---ONE TOUCH indicator

The lit symbol indicates the **M-Smart** wash program is selected. There are three ways to set the **M-Smart** wash program.

7---RINSE COUNT indicator

When the symbol lit, you can select the rinse count, the selected rinse count will appear on the digital display.

8---OZONE FUNCTION indicator

The lit symbol indicates that the **OZONE** function is activated.

 
9---STAIN TYPE indicator

The **STAIN TYPE** symbol lit indicates the type of dirt has been selected, the washer will optimally adjust the cycle for removing the stains.




10---DIGITAL DISPLAY


1) Wash cycle remaining time



 2) Delay end time



 3) Temperature




4) Spin speed



5) Rinse count



 6) Fault code







Preparing and sorting the laundry

Preparing the laundry

Notice: Damage to the appliance/fabric



Foreign objects (e.g. coins, paper-clips, needles, nails) may damage the laundry or components in the washing machine.

Therefore, note the following tips when preparing your laundry:

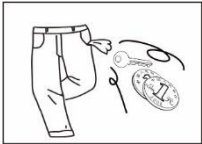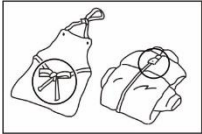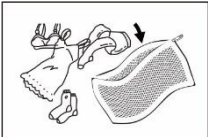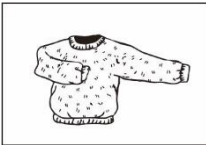- Remove any loose items or metal objects, such as safety pins, paper clips, etc. from the laundry.

- Brush sand, coins, etc. out of pocket and cuffs.
- Close zips and button up cushion covers, duvet covers, etc.

- Remove curtain runners, or secure them in a net bag.
- Particularly delicate items; such as tights or lace curtains, or smaller items, such as tiny socks or handkerchiefs, should only be washed in a net bag or pillow case.

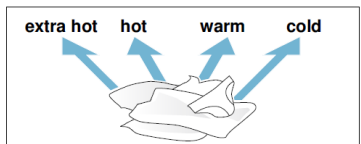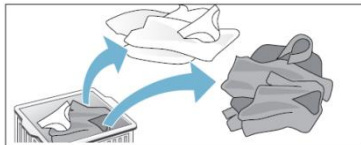- Some items are best turned inside out. These included knitwear, trousers, T-shirts and sweatshirts.

- Make sure that the wire-cup bras are machine washable.
- ! Make sure that wire-cup bras in a pillow case which can be securely closed with a zip or button. If the wire works itself out of the cup it may fall through the holes of the drum and cause extensive damage.

Sorting the laundry according to colour and degree of soiling

Sort laundry items according to color, degree of soiling and recommended wash temperature range.



- Items of clothing can become discoloured.
- Never wash new multi-coloured items together with other items.
- Wash white items separately from colored items. Otherwise, white items may tend to become grey.

Degree of soiling

- **Light soiling**
No visible soiling or stains, but may have absorbed some odor. This could include light weight summer clothes such as T-shirts, shirts, or blouses worn only once. Also to freshen bed linen or guest towels
- **Normal soiling**
Visible soiling and/or a few light stains. This could include clothing such as T-shirts, shirts, or blouses that have been sweated in or worn several times. Also tea towels, hand towels or bed linen used for up to one week or more. Curtains without stains that have not been washed for up to a half year.
- **Heavy soiling**
Visible soiling and stains. This could include kitchen towels, fabric napkins, baby bibs, children's outer clothing or football jerseys and shirts stained with grass or dirt. It could also include working clothes such as overalls and jeans and other clothing worn for outside work and activities.

Preparing and sorting the laundry

Sorting laundry according to their care label specifications

The symbols on labels of your garments will help you in choosing the suitable wash program, the right temperature, wash cycles, and ironing methods. Don't forget to give a glance to these useful indications!

Machine Wash Cycle	 Normal/ Cotton Heavy Duty	 Permanent Press/ wrinkle resistant	 Delicate/ Gentle	 Hand wash	 Do not wash	 Do not wring
Water Temp.	 Hot (50°C/120°F)		 Warm (40°C/105°F)		 Cold/Cool (30°C/85°F)	
Tumble Dry	 Dry	 Normal/ Cotton Heavy Duty	 Permt Press/ wrinkle resistant	 Delicate/ Gentle	 Do not tumble dry	 Do not dry
Special Instruction	 Line dry/ hang to dry	 Drip dry	 Dry flat	 In the shade		
Bleach symbols	 Any bleach (when needed)	 Only non-chlorine bleach (when needed)		 Do not bleach		

Wash cycles and options

Table of wash cycle

Wash cycle	Temp. °C (Max)	Max. Load (kg)	Description	Kind of detergent		
				Detergents		softener
				Universal	Special	
Cotton	60	8	For pure cotton clothes	L / P	---	O
Allergy care	85	3	For clothes that need to remove mites and allergens.	L / P	---	O
Mix	60	8	For mixed washing of cotton, linen and chemical fiber fabrics	L / P	---	O
Wool	40	1	For wool which can be washed by machine	---	L / P	O
Baby care	85	5	For kid's wear	L / P	L	O
Down Jacket	40	2	For down jacket which can be washed by machine	---	L / P	O
Underwear	60	4	For underwear.	L / P	L	O
Bedding	60	5	For large items such as blankets, curtains and bedspreads	L / P	---	O
Quick wash	40	1	For small amount or lightly soiled garments	L / P	---	O
Sanitize	85	3	For clothes needing sterilization and decontamination	L / P	---	O
Delicate	40	3	For washing delicate or soft clothes	L / P	---	O
Night Special	60	8	For washing clothes in night	L / P	---	O
Deep clean	60	8	For heavily soiled clothes	L / P	---	O
Rinse +Spin	---	8	For clothes which just needs rinse and spin	---	---	O
Spin	---	8	For clothes which just needs spin	---	---	---
Drum clean	85	---	For cleaning the drum, no clothes in drum	---	---	---
M-Smart	40	5	Special cycle which can be started simply by pressing the ONE-TOUCH button once.	L / P	---	O

■ L=gel/liquid detergent P=Powder detergent O=Optional ---=No

■ If using liquid detergent, it is not recommended to activate the time delay.

■ Please follow the dosage recommendation on the powder or liquid detergent package.

■ We recommend by using:

Laundry powder 20°C to 80°C

Wool detergent 20°C to 40°C

■ Cotton, 40°C, 1400rpm and the intense option selected is recommended water and energy saving cycle for normally soiled, everyday washing.

The detergent dosage: rated capacity*12.5g*75% and anti-foam aid is 16g.

Detergent dissolvent method: Dissolve the detergent first and pour the dissolved detergent into the machine when the main wash starts.

Wash cycles and options

M-Smart wash cycle

M-Smart wash cycle can intelligently detect the weight of laundry and match different washing time and temperature to realize intelligent washing.

" " is displayed in the detection stage after the cycle is started, and the M-Smart wash cycle can be entered by the following three methods.

- When the washer is OFF, press and hold the ONE-TOUCH button for at least 3 seconds, the washer will run the M-Smart wash cycle directly, with M-Smart indicator light  illuminated.
- When the washer is ON, press and hold ONE-TOUCH button for at least 3 seconds, the washer will run the M-Smart wash cycle directly, with M-Smart indicator light  illuminated.
- When the washer is ON, short press the ONE-TOUCH button, the M-Smart indicator light  illuminated, and then press the START/PAUSE button, the washer runs the M-Smart wash cycle.

Ozone program

When running the **Ozone** program, the water does not fill into the machine, and the clothes are treated with ozone. Two different **Ozone** programs can be selected according to the following methods

1. Selection "Washing + Ozone" program

According to the type of clothes, select the appropriate washing program. Short press the "**OZONE**" button, and the running time of the program displayed on the digital display will increase correspondingly, indicating that the **Ozone** function has been selected. If you want to cancel **Ozone** function, short press the "**OZONE**" button again

2. Selection Ozone program only

When cleaning the object (the surface of the object should be free of oxidation and fading coating or ink printed font or pattern), you can choose to run the **Ozone** program only for cleaning. After the clothes are put in, close the door, turn on the power, turn the knob to turn on the machine, and press and hold the button until the sound comes up, and the **Ozone** program starts to run

Precautions for Ozone program

When running the **Ozone** program, ozone may cause color fading on the surface of dark or easily faded clothes or articles. It is recommended that:

---Only for cleaning white or light colored clothes.

---It is only used for the cleaning treatment of objects without easy oxidation and fading coating or

printing characters or patterns with ink.

---The no fading and easy fading parts on the clothes or objects to be cleaned must be separated before ozone cleaning.

Drum lamp

How to turn on the drum lamp:

1. During selecting the wash cycle or setting the wash option, the drum lamp is lighting.
2. When the machine running is paused, you can turn on the drum lamp through opening the door, and the drum lamp will go off 20 seconds later.
3. When the machine is running, you can turn on the drum lamp by pressing any button.
4. When the machine is running, the drum lamp will light automatically for a good washing effect.

Stains removal

This option allows for selecting the type of dirt so as to optimally adjust the cycle for removing the stains, there are eight types of stains to choose from:

	Oils , Food based		Milk
	Juice		Red wine
	Pigment		Mud
	Blood		Grass

The washer adjusts the average washing temperature, drum movement and soaking time to the specific type of stain. Hot or cold water, gentle or intensive washing and long or short soaking ensure that the wash cycle sequences specially adapted to each type of stain. Selecting this option make sure that stains are treated in the best possible way.

NOTICE: Pressing and holding the button automatically runs through the set type of stains.

The wash cycle duration varies according to the type of selected dirt type.

How to use the appliance

Before loading your first load of laundry

Your new washing machine was tested before leaving the factory. This process involves running various wash cycles. As a result, a small amount of water may remain in the tub and drainage system. Run a **Drum Clean** cycle with no laundry to clean the system before your first load of laundry. First add 1 to 2 tablespoons of detergent to the chamber I. Then run the **Drum Clean** cycle. Wait for the cycle to finish.

Daily use

Preparing the laundry

EMPTY POCKETS

- Coins, paper clips, etc. could damage the load and the washing machine components.
- Tissues will break down during the wash cycle and the fragments will have to be subsequently removed by hand.

CLOSE ALL ZIPPERS, BUTTONS, AND HOOKS. TIE ALL RIBBONS OR BELTS

- Insert the smaller garments (e.g. nylon hosiery, belts, etc.) and garments with hooks (e.g. braziers) into a fabric bag or a pillowcase with zipper. Remove any rings from curtains, or else place the curtains inside a fabric bag together with the rings.

FABRIC TYPE/SYMBOL ON THE WASH LABEL

- Cottons, mixed fibres, easy care/synthetics, wool, hand wash items.
- Color
Separate colored and white items. Wash new colored articles separate.
- Size
Wash items of different sizes in the same wash load, to improve washing efficiency and distribution of the articles in the drum.
- Delicates
Wash delicate items separately; they require gentle treatment.

How to use the washing machine

1. Load laundry

Open the door and load the laundry. Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the “Table of wash cycle”, Overloading the machine will result in unsatisfactory washing results and creased laundry.

2. Close door

Make sure that no laundry gets stuck between door glass and rubber seal. Close the door so that you can hear it click shut.

3. Open water tap

Make sure that the washing machine is connected to the water mains. Open the water tap.

4. Set the desired program

Select the required program with the “Program selector” knob. The duration of the wash cycle is shown on the display. **The washing machine automatically displays the default temperature and spin speed settings** possible for the selected program. Adjust the temperature and/or spin speed setting if needed with the relative buttons.

• Change temperature, if needed

Press the “Temperature” button to progressively lower the temperature setting until cold wash has been set (“---“will be shown on the display). Pressing the button again sets the highest possible setting.

• Change spin speed, if needed

Press the “spin” button to progressively decrease the spin speed until the spin cycle is turned off (“---“ will be shown on the display). Pressing the button again sets the highest possible setting.

• Select options, if needed

Press the button to select the option; the respective symbol on the display illuminates. Press the button again to cancel the option; the light extinguishes.


How to use the appliance

If the selected option is incompatible with the program set, the incompatibility will be signaled by a buzzer (3 beeps) and the corresponding indicator light will flash.

If the selected option is incompatible with another previously set option, only the most recent selection will remain active.

5. Add detergent

Pull out the detergent dispenser and add detergent (and additives/softener) into the relative compartments as described below.

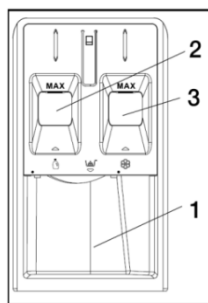

Compartment 1:
Powder washing detergent

Compartment 2:
Liquid washing detergent
The liquid detergent must not exceed the "MAX" level.

Compartment 3:
Additives (Softener, etc.) The fabric softener must not exceed the "MAX" level.

Observe the dosing recommendations on the detergent pack.

Correct dosing of detergent/additives is important, because:

- It optimizes the cleaning result
- It avoids irritating residues of surplus detergent in your laundry
- It saves money by avoiding waste of surplus detergent
- It protects the washing machine by avoiding calcification of components
- It respects the environment by avoiding unnecessary environmental burden.

! Do not use hand washing detergents because these create too much foam.

! Use powder detergent for white cotton garments, for pre-washing, and for washing at temperatures over 60°C.

! Follow the instructions given on the detergent packing.

6. Delaying the end of a program

- To set a program to end at a later time, see the section "Control panel / DELAY END".

7. Start program

- Press the "Start/Pause"  . The relative indicator lamp illuminates, the door locks and the "Door locked"  indicator lights up.
- To avoid overflow, do not open the detergent dispenser during a running program anymore.
- The remaining program duration can vary. Factors like unbalance in the wash load, or foam formation, can have an effect on the program duration.

8. Change the settings of a running program, if needed

You can still change the settings while a program is running. The changes will be applied, provided the respective program phase has not finished yet.

To change the settings of a running program:

- Press "Start/Pause"  to put the running program on pause.
- Change your settings.
- Press "Start/Pause"  again to continue the program.

If you have changed the program, do not add detergent for the new program.

To prevent that a running program is changed by accident (for instance by children), use the "CHILD LOCK" (see section "Control panel / SPEED").

How to use the appliance

Pause a running program and open the door, if needed

Press “Start/Pause”  to pause a running program.

Provided water level or temperature is not too high, the “Door lock”  indicator light turns off. You can open the door, for example to add more laundry, or to remove laundry which was loaded by mistake. Press “Start/Pause”  to proceed with the program.

9. Cancelling a running program, if needed

- Turn the programme selector knob to “OFF” position  until the washing machine stops.
- If the water level and temperature are low enough, the door unlocks may be opened.
- The door remains locked if there is water in the drum. To unlock the door, switch the washing machine on, select the “Spin” program and turn the spin option off by setting the spin speed to “-”.
- The water is emptied and the door unlocks at the end of the program.

10. Switch off the washing machine after program End

- At the end of the cycle, the message “End” is shown on the display.
- The door can only be opened when the symbol “Door locked”  light turns off.
- Check that the “Door locked”  indicator is off, then open the door and take out the laundry.
- Turn the programme selector knob to “OFF” position  to switch the washing machine off.

Leave the door ajar to let the interior of the washing machine to dry.

Care and maintenance

Your appliance is designed to give you years of service. Observe the following instructions to maintain and protect your appliance and keep it in top operating condition.

1 WARNING

RISK OF ELECTRIC SHOCK HAZARD

To avoid risk of electric shock always disconnect the washer from the power outlet prior to cleaning.

Never clean the washer with a pressure washer.

Cutting off the water and electricity supplies

- Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks.
- Unplug the washing machine when cleaning it and during all maintenance work.

Cleaning the appliance's exterior

1 WARNING

RISK OF EXPLOSION

To avoid risk of explosion never clean the washer with flammable solvents.

Clean the appliance's exterior surface when required as follows:

- Use hot soapy water or a mild (non-abrasive) cleaning agent.
- Rub dry with a soft towel.
- Remove residue immediately.
- Do not use high pressure spray.

Cleaning the drum

Metallic debris left in the drum can product rust spots on the drum. Never use steel wool to try to remove these. Use a chlorine-free cleaning agent and follow the manufacturer's instructions.

Descaling the washer

Provided that you use correct amounts of detergent with you wash loads, descaling is not necessary. If descaling the washer drum does become necessary, please follow the descaling product manufacturer's instructions.

Small amounts of descaling agent can be used to remove white spots on the washer drum caused by lime or mineral deposits or small amounts of rust caused by metal objects left in the drum.

NOTICE: Descaling agents contain acids which may attack parts of the washing machine and may discolor the laundry.

Caring for the door and drum of your appliance

- Always leave the porthole door ajar in order to prevent unpleasant odours from forming.

Care and maintenance


Checking the water inlet hose

Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycle, water pressure is very strong and very strong and a cracked hose could easily spilt open.

- 1 Never use second-hand hoses.

Cleaning the detergent dispenser

If there is a buildup of residual detergent or additives, or if the softener compartment is not rinsed out well enough, it may be helpful to clean the dispenser.

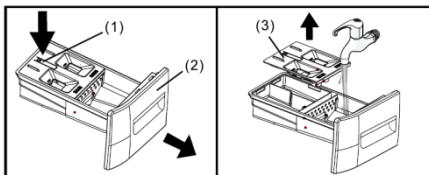

1. Open the detergent dispenser tray fully. Press down on the drawer catch (1) and pull the tray (2) from the washer housing.
2. Remove the liquid detergent cover (3) by grasping it and pulling it upwards from the detergent dispenser tray.
3. Clean the liquid detergent cover and the detergent dispenser tray by holding it under running water. Lightly wipe away any remaining detergent residue.
4. Attach the liquid detergent cover and slide the detergent dispenser tray back in place and close the tray securely.


Tip: Do not operate the washer without the detergent dispenser tray in place. Always keep the tray completely closed.

Cleaning the water inlet strainers


If the washer water supply slows or stops completely, the water inlet strainer may be blocked. Cleaning is recommended every 6 months in any event to reduce chances of valve blockage in areas using hard water.

Normal water pressure from your home, that remains in the supply hoses after turning off the taps, will cause a small amount of water to drip out when you remove the water supply hose from the back of the washer. Be sure to close the taps completely before removing the supply hoses to minimize the amount of water.

Clean the strainer at the water tap end of the hose

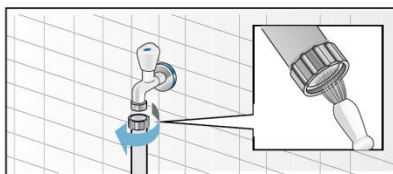

1. Remove the hose from the tap.
2. Rinse the strainer under the running water. Look at the strainer to see if any visible debris is still present. Rinse again if necessary to remove the debris.
3. Reconnected the hose to the tap.

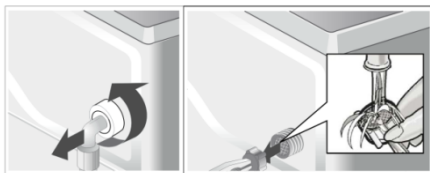

Clean the strainer at the washer end of the hose

1. Remove the hose from the inlet on the back of the washer.
2. Using narrow pliers, grasp and pull the strainer from the inlet port.
3. Rinse the strainer under running water.
4. Reconnect the hose to the back of the washer and turn on the water tap. Check to see if water flows by starting a warm water wash cycle.

NOTICE: Check for leaks to be sure the rubber washers are seated at both ends of the water supply hose and the connections are properly tightened.

Care and maintenance

Cleaning the drain pump

1 WARNING

RISK OF SCALDING

Risk of hot water injury to skin !

Allow the water to cool down prior to actuating the emergency door lock release.

You are responsible for ensuring all safety precautions are followed when draining water from washer and/or manually opening the washer door.

It may be necessary to clean the washer drain pump if the washer fails to drain (sound of the water being pumped from the washer cannot be heard when the washer should be draining and other nearby drains, such as a sink, are draining properly).

The washer pump can become blocked by loose debris (a good reason to check the drum and remove any visible debris after each load). Fabrics that give off large amounts of fluff may also cause blockage.


To access the washer drain pump, the service cover must first be removed (see steps below). With the service cover removed, proceed as follows:

1. If the washer has not been drained, try to drain it now. Turn the program selector knob to the **Spin/Drain**, select **Spin Speed** to **No Spin** and press the **Start/Pause** button. Wait a few moments to let the cycle drain the water from the drum. If the pump is totally blocked, the water will be unable to drain and the cycle will end.
2. Shut off the tap so that no more water flows in and has to be drained. Switch the appliance off. Unplug the power plug.
3. Open the service cover.




4. Use the pull-out drain hose located in the pump access opening to drain the remaining


water into a suitable container (up to 5.3U.S.gallon/20 liters of water may be drained). Pull the sealing cap from the hose and lay the hose over the side of the container and allow the water to finish draining from the drum. When finished, replace the sealing cap into the end of the hose and restore the hose to its storage location.

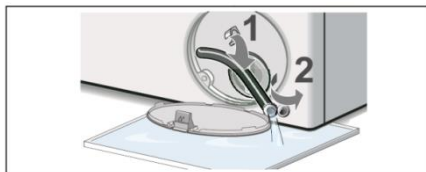

5. Turn the pump cover counterclockwise to remove it. A small amount of residual water may flow out when the cover is removed. Clean the interior of the pump housing, removing any debris or foreign objects. Check to be sure the impeller where at the back of the pump housing can now turn freely. Remove any lint, debris or detergent residue from the threads of the pump cover and the pump cover housing. Replace the pump cover by screwing tightly into position. Handle must be vertically.

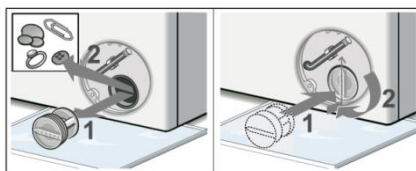

6. Close the service cover. Wipe up any spilled water.

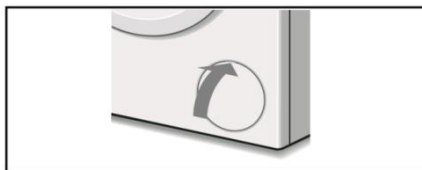

Troubleshooting

Your washing machine could occasionally fail to work. Before contacting the service center, make sure that the problem cannot be solved easily using the following list

Problem	Possible cause / solutions
The machine does not switch on	- The appliance is not plugged into the socket fully, or not enough to make contact. - There is not power to the socket, or the fuse has blown in the mains plug.
The wash cycle does not start	- The door is not closed properly. - The ON/OFF button has not been pressed. - The START/PAUSE button has not been pressed. - The water tap has not been turned on to allow water to flow into the machine. - A delayed start has been set.
The machine does not fill with water or "E02" in the display	- The water inlet hose is kinked. - The water inlet hose is not connected to the water supply. - The water pressure is too low. - The water tap has not been turned on to allow water to flow into the machine. - There is no water supply to the house. - The inlet valve filter is blocked. - The START/PAUSE button has not been pressed.
The machine continuously fills with water and continually drains away or Water left in the drum or Stuck on wash	- The top of the drain hose is too low – It must be fitted at a height between 65 and 100 cm from the floor (see "Installation"). - The drain hose is connected incorrectly to the sink trap allowing water to run into the machine, the drain hose must be positioned higher than the bottom of the sink to prevent water flowing down the drain hose.. - The end of the drain hose has been pushed too far down the standpipe, the "U" bracket should be fitted 100mm from the end of the drain hose.
The machine does not drain or spin or "E03" in the display	- The pump filter is blocked. - The drain hose is kinked (see "Installation"). - New Installation – The blanking cap or spigot has not been removed if connected under a sink. - The drain hose or sink trap is blocked.
The machine does not spin	The Spin Speed is set to "OFF".
The program takes too long	Program times will vary due to water pressure, the incoming water temperature and if the wash load goes out of balance. This will increase the program times accordingly (see "The machine wont spin properly" next page).
The machine vibrates a lot during the spin cycle	- The feet have not been adjusted, enabling the machine to rock. - New Installation – Either the Transit Bolts including the plastic spacer, or the Polystyrene Packaging have not been removed when installing the machine. - The machine is trapped between cabinets and/or walls. - The load is in a slight out of balance condition and machine is spinning, but at a lower speed.
M-Smart wash cycle does not activate	After switching on the machine a cycle other than M-Smart wash cycle was activated. Switch the machine off and press the One Touch button.
The machine is noisy	There will always be some motor, pump and drum noise during spin.

Troubleshooting

Problem	Possible cause / solutions
The machine wont spin properly	• Out of Balance detected when attempting to go into a spin cycle – If this happens the machine will continue to try to repeat the distribution of the load required before the machine will go into higher spin speeds – This will increase the program time accordingly. This is a safety feature to prevent damage. Out of Balance can be caused by washing a single heavy item (eg down, quilt, etc). – Try the programme again using a different load.
The machine leaks from the dispenser	• The dispenser drawer is blocked with detergent and requires cleaning. • The water pressure is too high and requires turning down – turn down the tap on the water supply pipe slightly and try again. • The machine is tilting forwards – It must be level when in its final position.
The machine leaks (other than dispenser)	• The inlet hose is loose, check both the cabinet and tap ends . • The inlet hose is tight but still leaks, if so replace the rubber washers, or the inlet hose is missing the rubber washer. • The drain hose is not fixed in properly.
The machine smells	• The machine requires a service wash. Run a “Drum Clean” wash cycle with detergent and no laundry.
The machine door cannot be opened.	• The door will not open until the door lock indicator light goes out shortly after the program has finished. • If there is no power to the machine you need to perform the manual unlocking procedure.
The water level is too low when the machine is washing	• The water level is correct if it can be seen at the bottom of the door
There is too much foam	• The detergent is not suitable for machine washing (it should display the text “for washing machines” or “hand and machine wash” or the like). • Too much detergent was used – less detergent is required in soft water.
General	• Your washing machine contains sensors that monitor progress during the wash cycle (eg: Water level, Temperature, Out of balance loads, Wash time/progress). Normally, if your machine successfully completes the cycle, there is unlikely to be anything wrong!

In case of the following faults, the fault state will be detected by the microcomputer system, with the buzzer sounds issued and the following fault codes display:

Fault codes	Fault type	Possible cause / solutions
E02	No inlet water	• Check whether the faucet is turned on? Whether the water supply is cut off? Whether the water inlet hose and the filter of the water inlet valve are blocked? and whether the water inlet hose of the washing machine is frozen? In such case, please contact the service center for repair.
E03	Abnormal water drainage	• Clean the pump filter. • Check whether the drain hose is bent, twisted or blocked? If the fault still exists, please contact the service center for repair.
U4	Door lock malfunction	• Close the door again, and then press the “START/PAUSE” button to restart the program. If the fault still exists, please contact the service center for repair.
H	The temperature in the drum is high	• Press the “START/PAUSE” button to suspend the washing machine operation and wait for several minutes. When the temperature in the drum drops to a safe range and the fault code on the display is removed, press the “START/PAUSE” button to continue the rest of the program..
EXX	Other faults	• Turn the washing cycle selector knob to the “OFF” position to turn off the power supply, unplug the power cord, and contact the service center for repair as soon as possible..

Note: Be sure to check the fault cause and eliminate the fault before pressing the **START/PAUSE** button again. If the fault code is removed, the washing machine will continue to run, and if the fault code still exists, please unplug the power cord and call our customer service center for help as soon as possible.

Remember, you will be charged for a service call for problems caused by incorrect installation, as indicated on pages 6 to 9.

Not emptying contents from pockets may cause pump or drain hose blockages, or may damage the machine. Do not wash items which do not have a wash label, or wash items that are not intended as machine washable

For any enquiries, please call the CHiQ Cusotmer care on: 1300 796 688.



Customer Service

1300 796 688

www.chiq.com.au