



Register your new Bosch now:
www.bosch-home.com/welcome



Tumble dryer
WTY877W0AU



BOSCH

en Installation and operating instructions

Your new tumble dryer

You have opted for a tumble dryer manufactured by Bosch.

Please take a few minutes to read and become familiar with the advantages of your tumble dryer.

To meet the high quality demands required by Bosch, every tumble dryer that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.bosch-home.com or contact our Customer Service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before operating the tumble dryer.

Display rules

Warning!

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

Caution!

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

Note/tip

Information about the optimum use of the appliance/any other useful information.

1. 2. 3. / a) b) c)

The steps are represented by numbers or letters.

■ / -

Lists are represented by a small box or a dash.

Contents

	Intended use	4	Clean the fluff filter	20
	Safety instructions	4	Emptying the condensate container	21
	Electrical safety	4		Noises
	Safety for children	5		22
	Appliance safety	5		Cleaning
	Environmental protection	7		23
	Packaging/old appliance	7	Cleaning the dryer and the control panel	23
	Coolant	7	Cleaning the moisture sensor	23
	Energy-saving tips	7	Cleaning the filter in the condensate container	24
	The main points in brief	8		Faults and what to do about them
	Getting to know your appliance	9		25
	Dryer	9		After-sales service
	Control panel	10		27
	Display panel	11		Consumption values
	Laundry	12		28
	Preparing the laundry	12		Technical data
	Sorting washing according to:	12		29
	Programmes and buttons	13		Installation and connection
	Programmes	13		29
	Buttons	14	Scope of delivery	29
	Operating the appliance	16	Installing and connecting the dryer	29
	Loading laundry and switching on the dryer	16	Changing the condensation drain	31
	The basket for woollens	16	Changing the side on which the door is hinged	33
	Drying with the basket for woollens	17	Optional accessories	35
	Setting a programme	18	Transport and frost protection	35
	Starting the programme	19		
	Programme sequence	19		
	Changing the programme or adding laundry	19		
	Cancelling the programme	19		
	Programme end	19		
	Removing laundry and switching off the dryer	19		



Intended use

- For private domestic use only.
- Only to dry and refresh fabrics that have a care label specifying that they are suitable for use in a dryer.
- The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they **are supervised** or have **been instructed** in its use by a responsible adult.
- Keep children under the age of 3 years old away from the dryer.
- This appliance is intended for use up to a maximum height of 4000 metres above sea level.
- Do not let children carry out any unsupervised cleaning or maintenance work on the dryer.
- Keep pets away from the dryer.



Safety instructions

Electrical safety



Warning Risk of death!

There is a risk of electric shock as the dryer is operated with electricity.

You should therefore observe the following:

- Never touch or hold the mains plug with wet hands.
- Only pull out the mains cable directly at the plug and never by the cable, as this could damage it.
- Do not use extension cables, multiple plugs or connectors.
- Only have the mains cable replaced by our after-sales service.

Safety for children



Warning

Risk of death or injury!

You should therefore observe the following:

- Do not leave the dryer unattended when children or other people who cannot assess the risks are nearby.
- Do not let children play with the dryer.
- Children may become entangled in packaging or film if allowed to play with them, or they may pull them over their heads and suffocate. Keep packaging, packaging parts and film out of the reach of children.
- Children may lock themselves in the dryer. Therefore, when an appliance has reached the end of its service life, unplug it from the mains, cut through the mains cable and destroy the lock on the dryer door.

Appliance safety



Warning

Risk of death!

- Do not use the dryer if industrial chemicals have been used to clean it.
- Laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite or cause an explosion when drying is in progress. Before drying, rinse the laundry in hot water with detergent.
- Coal dust or flour in the area around the dryer may cause an explosion.
- Only replace defective components with genuine spare parts.
- The dryer contains the environmentally friendly yet combustible refrigerant R290. Keep naked flames and ignition sources away from the dryer.



Caution: Risk of fire.

Caution!

Risk of material damage to the dryer or fabrics

- Only use the dryer for drying and freshening up fabrics at home and for fabrics that have been washed with water and are suitable for tumble-drying. Any other use is not considered intended use and is prohibited.
- Foamed material or foam rubber may become deformed or melt during drying. Do not dry any laundry that contains foamed material or rubber.
- Do not lean or sit on the dryer door, as the dryer may tip over.
- Loose cables or hoses may cause you to trip. Avoid tripping hazards.
- Light things, such as hair, may be sucked into the air inlet during operation; keep these away from the dryer.
- The last phase of the drying cycle takes place without any heat (cooling cycle) to ensure that the laundry remains at a temperature that will not damage it.



Environmental protection

Packaging/old appliance



Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2012/19/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides a framework for the collection and recycling of old appliances, which is valid across the EU.

Coolant

Caution!

Risk of fire/risk of poisoning/risk of material damage and damage to the appliance


The appliance contains refrigerant which, although it is environmentally friendly, is flammable R290. Failure to dispose of it properly may result in a fire or poisoning.

Dispose of the appliance properly and do not damage the pipes in the refrigerant circuit.

Energy-saving tips

- Spin the laundry before drying. The drier the laundry, the shorter the drying time will be, thus consuming less energy.
- Load the dryer with the maximum load.
Note: Do not exceed the maximum load for the programs, as this prolongs the drying time and increases energy consumption.
- Ventilate the room and keep the air inlet on the dryer free to ensure air exchange.
- Clean the fluff filter after each drying cycle. If the fluff filter is dirty, the drying time is prolonged and energy consumption is increased.
- **Energy saving mode:** If the dryer is not operated for a prolonged period, it automatically switches off before the program starts and when the program has ended to save energy. The display panel and indicator lamps go off after a few minutes and the Start button flashes. To activate the lighting, press any button, open or close the dryer door or turn the program selector.


The main points in brief

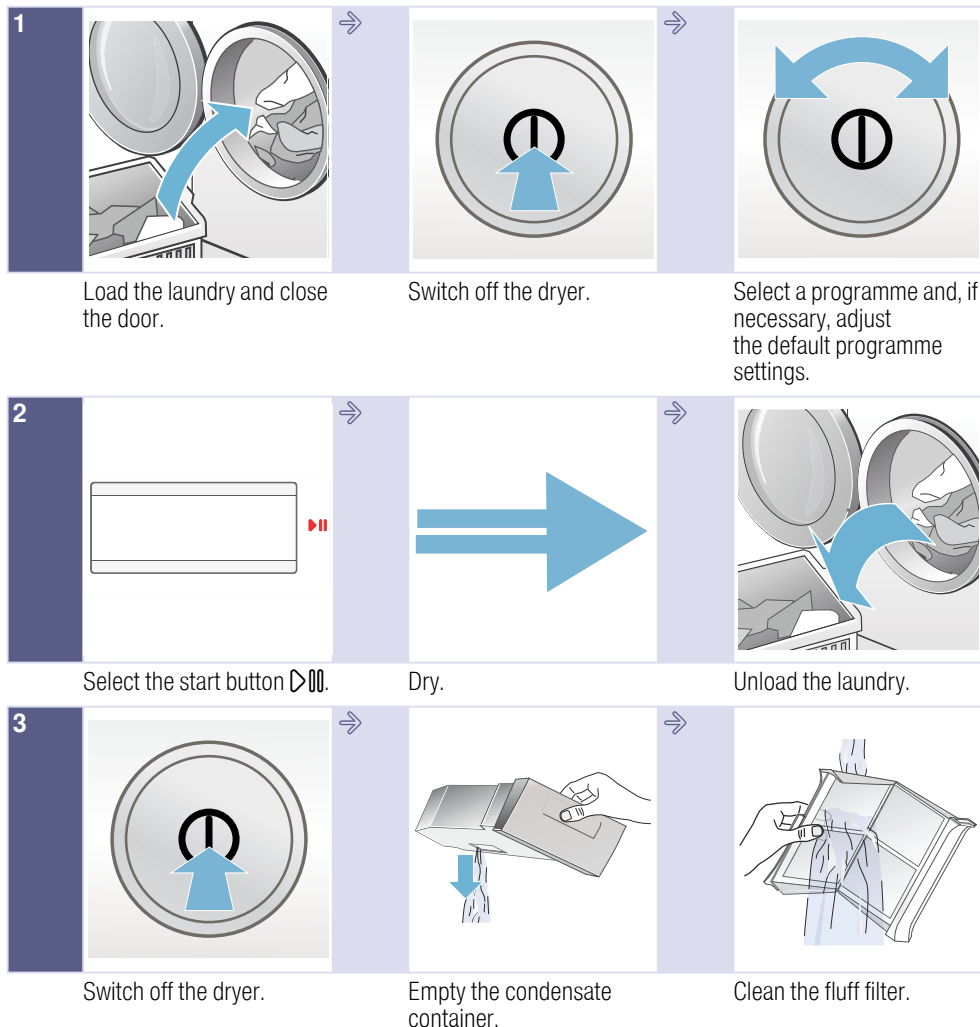



Getting to know your appliance


Dryer

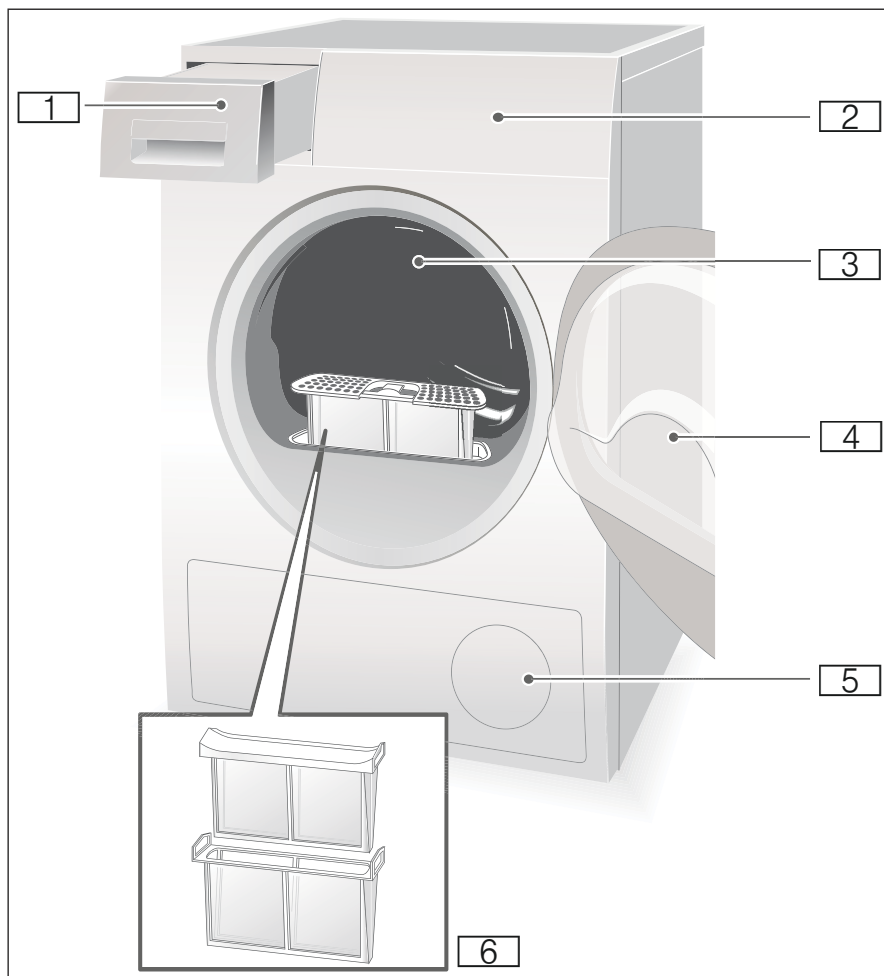

- 1 Condensate container
- 2 Control and display panel
- 3 Drum interior light (depending on the model)
- 4 Dryer door
- 5 Air inlet
- 6 Fluff filter


Control panel

Note: All buttons are sensitive and only need to be touched briefly.

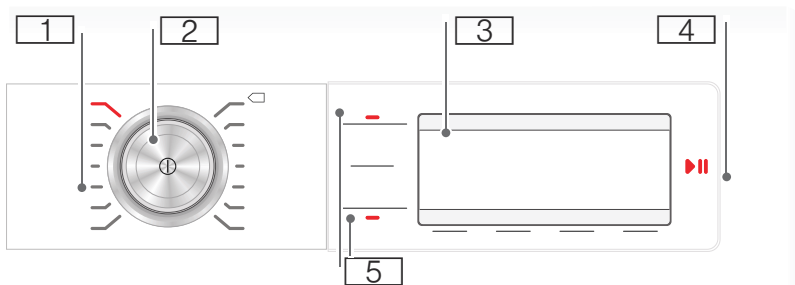

- 1 **Programmes** → *Page 13.*
- 2 **Programme selector** and **On/Off button.**
- 3 **Display panel** with **buttons** → *Page 13.*
- 4 **Start button** for starting, interrupting or cancelling the programme.
- 5 **Buttons** → *Page 14.*

Display panel

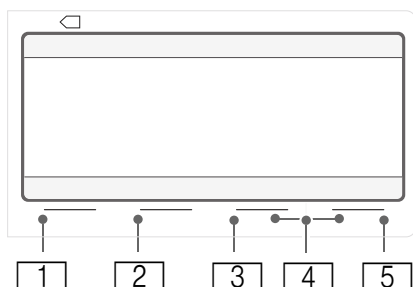

Button

Button	Description	Display
1	Select the dryness level .	Iron Dry Cupboard Dry Cupboard Dry Plus
2	Select Anti-Crease .	120 Anti-Crease function in minutes
3	Select Ready in .	1:40 Expected programme duration in hours and minutes or timed programme selected 3 h Programme delay in hours when "Ready in" time is selected
4	Select Settings 3 sec .	End signal Button signal Automatic switch-off Language
5	Select Options .	Spin class Fine adjustment of the dryness level Low heat
For a detailed description of all buttons, see → <i>Page 14</i> onwards.		

Other displays

Display	Description
Heat exchanger is being rinsed	The heat exchanger is cleaned automatically.
Please empty the condensate container	Empties the condensate container; → <i>Page 21</i> .
Please clean the fluff filters	Cleans the fluff filters; → <i>Page 20</i> .
	Childproof lock; → <i>Page 14</i> .
Pause, Ready/Anti-Crease	Programme progress: Anti-Crease; End and Pause



Laundry

Preparing the laundry



Warning

Risk of explosion or fire!

Remove any cigarette lighters and matches from pockets.

Caution!

The dryer drum and fabrics may be damaged.

Remove all objects from pockets and take note of the following information:

- Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Close zips, hooks and eyes, and do up any buttons.
- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Remove any metal objects, such as paper clips, from pockets.
- Knitted fabrics, such as T-shirts and jerseys, often shrink slightly the first time they are tumble-dried. Use a gentle programme.
- Do not over-dry easy-care laundry. This increases creasing of the laundry.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.

Sorting washing according to:

- ☐ Suitable for tumble drying
- ☐ Dry at normal temperature
- ☐ Dry at low temperature
- ☒ Do not tumble-dry

If you dry thin- and thick-layered fabrics and fabrics with several layers together, these will dry to differing degrees.

To achieve an even drying result, you should therefore only dry laundry of the same type of fabric and structure together. If you feel that the laundry is still too damp afterwards, you can select a time programme for subsequent drying → *Page 13*.

Caution!

Risk of material damage to the dryer or laundry.

Do not dry non-breathable fabrics, such as rubber-coated laundry.





Programmes and buttons





Programmes

Programme and fabrics	Maximum load and programme settings/info
Name of the programme Which fabrics is the programme suitable for?	The maximum load is based on the dry weight of the fabrics Possible programme settings
Cottons Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen.	9 kg
Easy Care Synthetic or blended fabrics.	3.5 kg
Mixed Load Mixed load consisting of cotton and synthetic fabrics.	3 kg
Delicates For delicate, washable textiles, e.g. made of satin, synthetic fibres or blended fabrics.	2 kg
Wool in basket Fabrics made from wool or a wool blend that are suitable for tumble drying. Note: Only dry the fabrics using the basket for woollens → Page 16.	1.5 kg
Timed program cold All types of fabric. For freshening up or airing items of laundry that have not been worn for long.	3 kg You can adjust the programme length using the Dryness level button.
Timed program warm All types of fabric; time programme. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry.	3 kg You can adjust the programme length using the Dryness level button.
Shirts Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics.	1.5 kg
Quilts Fabrics, pillows, quilts or bedspreads filled with synthetic fibres. Dry large items individually. Observe the care label.	2.5 kg

Down Wear Fabrics, pillows, bedspreads or eiderdowns filled with down. Dry large items individually.	1.5 kg
Sportswear Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics.	1.5 kg
Towels Hard-wearing towels made of cotton.	6 kg
SuperQuick 40' Synthetics and light cottons.	2 kg
Allergy Plus Hard-wearing fabrics.	4 kg
Note: Particularly suitable for the highest hygiene requirements.	

Buttons

Buttons	Explanations and notes
Note: Not all buttons and their functions can be selected in all programmes.	
Fine adjust:	Select the dryness level (e.g. Cupboard Dry) or the drying time (20 mins up to 3 hrs 30 mins, depending on the model and programme). Select the dryness level according to the laundry to be dried. If you have selected a dryness level, this is stored for all programmes, except for Cottons, even after the dryer has been switched off.
 Cupboard dry plus	For multi-layered, thick laundry which is difficult to dry.
 Cupboard dry	Normal, single-layered laundry.
 Iron Dry	Normal, single-layered laundry that still needs to be damp after drying and is suitable for ironing or hanging up.
Easy-Iron	The drum moves the laundry at regular intervals for 60 to 120 minutes after drying, in any programme, to prevent creasing.
Finished in	The programme will end in between 1 h and 24 h. Set the "Ready in" time in increments of one hour to delay the start of the programme. The required number of hours after the programme ends is displayed on the display panel.
 Childproof lock	You can activate or deactivate the childproof lock by pressing and holding the "Ready in" button for five seconds.

Options	Select the button and the menu will be displayed in the display panel.
 Spin class	For the spin class, set the spin speed at which the laundry has been spun in the washing machine. This permits the expected drying time to be indicated more precisely. Speeds of between 600 and 1800 rpm can be selected. Default setting: 1000 rpm
 Fine adjustment of the dryness level	If the laundry is too damp after drying, you can finely adjust the dryness levels e.g. Cupboard Dry. The dryness level can be increased in three stages, from +1 to +3. If you have adjusted the dryness level, the setting for all programmes with a selectable dryness level is retained even after the dryer is switched off.
 Low heat	Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane, may increase the drying time.
Memory 1/2	You can save individual programme settings under Memory 1 and 2. Select the required programme settings and press the Memory 1 or Memory 2 button for 3 seconds until the display panel shows that Memory programme 1 or 2 is saved. Your selected programme settings are retained even after the dryer is switched off. Default setting: No Memory programme saved.
basic settings 3 sec.	Press both buttons at the same time and hold them for 3 seconds. The menu will be displayed in the display panel.
End signal, button signal	Select the button signal volume: off - quiet - normal - loud - very loud. Default setting: loud
Automatic switch-off	Automatically switching off the dryer after 15, 30 or 60 minutes, or never automatically switching off. Default setting: 15 minutes
Language	Select the desired language in the display panel.
Start/Pause 	Starts or pauses the programme.



Operating the appliance

Loading laundry and switching on the dryer

Note: The dryer must be correctly positioned and connected, → Page 29.



1. Place the laundry in the drum.
2. Press the ① button to switch the dryer on.
3. Close the dryer door.

Caution!

Risk of material damage to the dryer or laundry.

Do not trap any laundry between the dryer door and the door seal.

Note: The dryer drum is lit up after the door is opened and closed and once the programme has started. The drum interior light goes out on its own.


The basket for woollens

Note: The basket for woollens is supplied with your dryer* or it can be purchased as an accessory from the after-sales service.

Caution!

Risk of material damage to the dryer and fabrics.

Never operate the dryer if the basket for woollens is damaged.

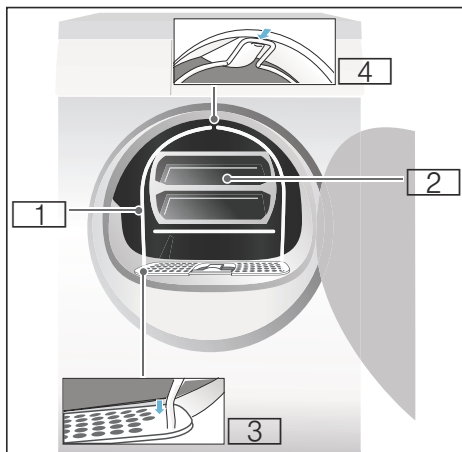


- 1 Basket for woollens
- 2 Insert for the basket for woollens
- 3 Recesses for mounting the basket for woollens
- 4 Notch for the basket for woollens


* Depending on the model

Drying with the basket for woollens

1. Insert the feet of the basket for woollens into the holes on the fluff filter.

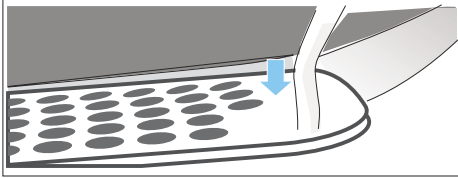

2. Lean the basket for woollens against the upper notch.

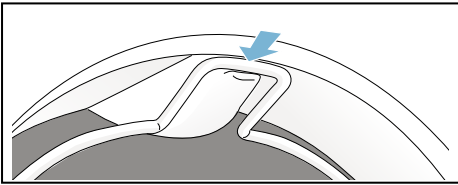

The basket for woollens should now be firmly inserted in the drum.


3. Place the required fabric in the insert of the basket for woollens

Notes


- Spin the fabrics before placing them in the insert.
- Place the laundry loosely in the insert. Do not squash the fabrics.

Application examples:

a) Trousers or skirt

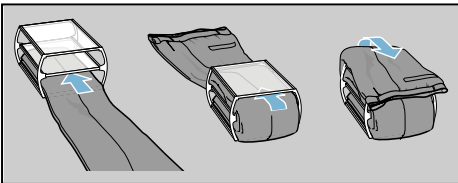


b) Pullover

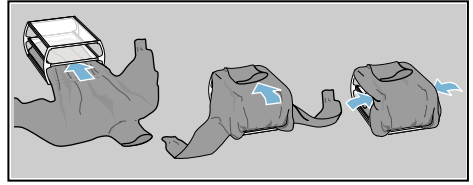

c) Sports shoes


Place sports shoes in the basket for woollens **without** the insert. Pull out the tongues of the shoes and remove the insoles or heel cushions.

Roll up a towel and place it under the sports shoes to create an inclined surface. Place the shoes so that the heels are on the towel.

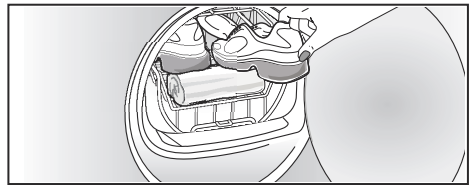

d) Soft toys

Dry soft toys in the basket for woollens without the insert. Only place as many soft toys in the basket for woollens as is possible without any falling out.

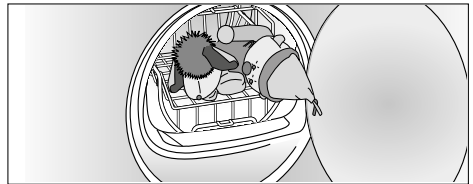


4. Place the insert or the sports shoes in the basket for woollens.

Caution!

Risk of material damage to the fabrics.

Place the fabrics in the insert of the basket for woollens so that they do not come into contact with the drum.

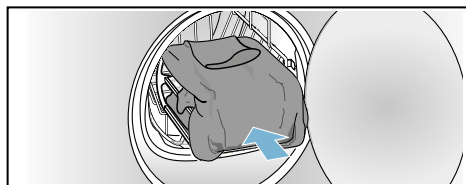

5. Use the programme selector to select the programme for the basket for woollens or a time programme.

6. Set the drying time.

Thin woollen pullover:

Approx. 1:20 hrs

Thick woollen pullover:

Approx. 1:30 hrs - 3:00 hrs

Skirt: Approx. 1:00 hr - 1:30 hrs

Trousers: Approx. 1:00 hrs - 1:30 hrs

Gloves: Approx. 30 min

Sports shoes: Approx. 1:30 hrs/
with airing max. 2:00 hrs


Note: For thicker or multi-layered fabrics, you must extend the drying time, as required, to achieve the required level of dryness.

7. Start the programme.
8. Remove the fabrics and switch off the dryer.

Setting a programme

Note: If you have activated the childproof lock, you must deactivate it before you can set a programme, see → Page 14.

1. Select the required programme; detailed information on the programmes can be found from → Page 13 onwards.

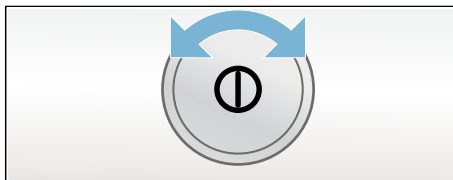

2. Use the programme selector to set the required programme. The default programme settings for the selected programme appear in the display panel.

Note: Default programme settings are standard settings that are already defined when a programme is selected. After selecting a programme, you can see the default programme settings in the display panel.

3. If required, adjust the default programme settings. You can find detailed information on this from → Page 13 onwards.

Starting the programme

Press the Start button.

Note: If you want to lock the programme to prevent it from being inadvertently adjusted, you can select the childproof lock, see → *Page 14*.

Programme sequence

The programme status is displayed in the display field.

Changing the programme or adding laundry

You can remove or add laundry and change or alter the programme at any time during drying.

1. To pause the programme, open the dryer door or press the Start button.
2. Add or remove laundry.
3. Select another programme or an additional function, if required.
4. Close the dryer door.
5. Press the Start button.

Note: The programme duration in the display panel is updated depending on the load and residual moisture in the laundry. The values displayed may change after the programme is changed or the load is adapted.

Cancelling the programme

The programme can be interrupted at any time; to pause, open the dryer door or press the Start button.

Caution!

Risk of fire. Laundry may catch fire.

If you cancel the programme, you must remove the laundry items and spread them out so that the heat can disperse.

Programme end

FERTIG. WAESCHE ENTNEHMEN.
appears in the display panel.

Removing laundry and switching off the dryer

1. Remove the laundry.
2. Press the ① button to switch the dryer off.




Clean the fluff filter


Note: During drying, fluff and hair from the laundry is trapped by the fluff filter. If the fluff filter is blocked or dirty, this reduces the flow of air, which prevents the dryer from achieving its maximum performance. Clean fluff filters also reduce energy consumption and the drying time.

Clean the fluff filter **after each** drying cycle:

1. Open the dryer door and remove all fluff from the door.
2. Pull out the two-part fluff filter.

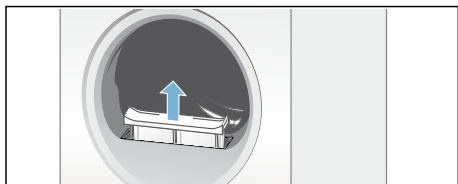


3. Remove the fluff from the recess in the fluff filter.

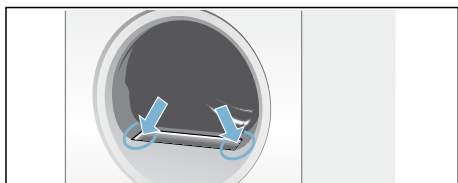


Note: Ensure that no fluff falls into the open shaft.


4. Pull apart the two-part fluff filter.

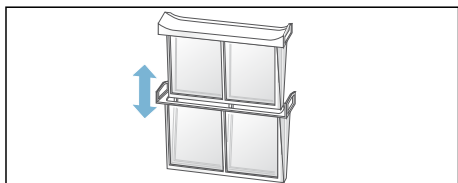


5. Open both filters and remove all the fluff.

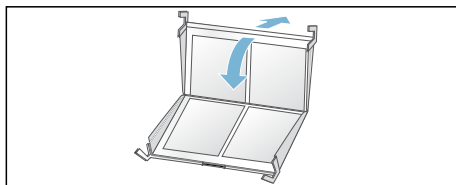

6. Rinse away the fluff under warm, running water.

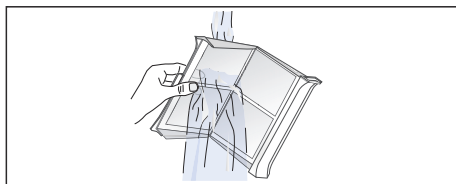

7. Dry the fluff filter, close it and reinsert the two-part fluff filter.

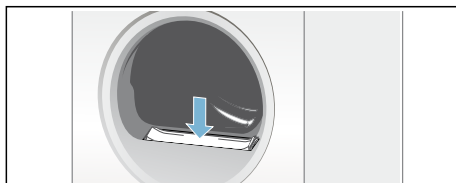

Caution!

The dryer may be damaged.

Do not operate the dryer without a fluff filter or if the fluff filter is defective.


Emptying the condensate container

Notes


- You can drain off the condensation into the waste-water system using an optional condensation drain*. For installation, see → Page 31.
- If you drain the condensation using an optional condensation drain, you do not have to empty the condensate container.

Note: After each drying cycle, empty the condensate container; otherwise the next drying programme may be cancelled as a result of the condensate container being full.

1. Pull out the condensate container horizontally.

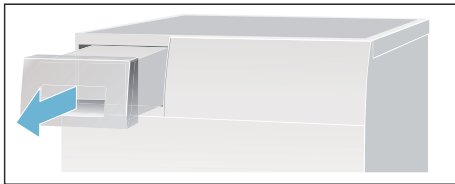

2. Pour out the condensation water.

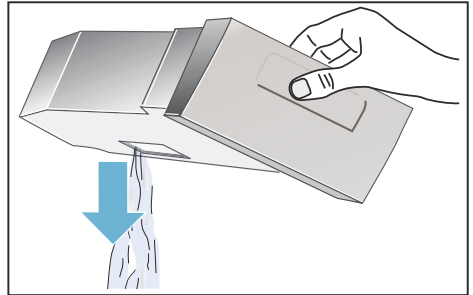


Caution!

Dirty condensation water may be harmful to your health and cause material damage.

Condensation water is not suitable for drinking and may be contaminated with fluff. Do not drink the condensation water or reuse it.

3. Push in the condensate container until you feel it lock back into place in the dryer.

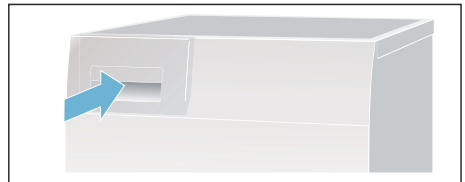


Note: The filter in the condensate container filters the condensation which is used during the dryer's automatic cleaning cycle. The filter is cleaned by emptying the condensation. Nevertheless, you should check the filter regularly for remaining deposits and remove them. See → Page 24.

* Depending on the model


Noises

Note: During drying, the compressor and the pump generate noises which are entirely normal.


From time to time, the compressor in the dryer generates a humming noise. However, the volume may vary depending on the programme and progress of the drying process.

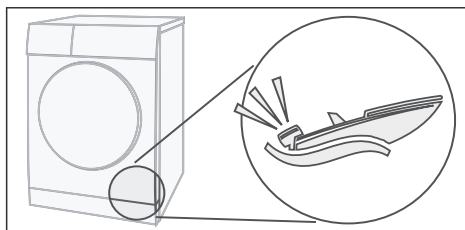


Every now and then, the compressor is ventilated. This creates a whirring noise.

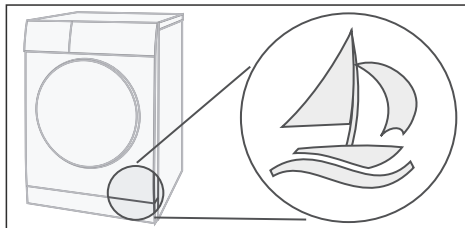

The automatic cleaning of the dryer causes a clicking sound.

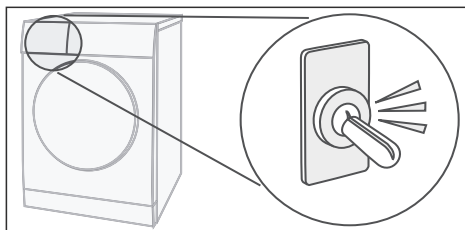

The condensation is pumped into the condensate container using a pump. This generates pumping noises.

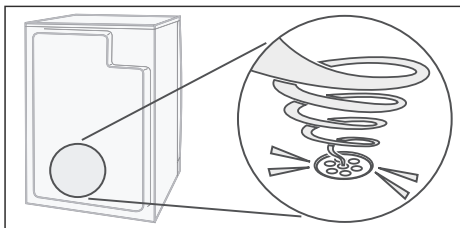



Cleaning

Cleaning the dryer and the control panel



Warning

Risk of death!


There is a risk of electric shock as the dryer is operated with electricity. Disconnect the dryer from the mains before cleaning.

Clean the dryer using only water and a soft, damp cloth.

Remove all detergent residue, spray residue or other residues immediately. Do not use cleaning agents or agents for pre-treating laundry (e.g. prewash sprays, stain removers). Do not use high-pressure cleaners or steam jet cleaners to clean your appliance.

Cleaning the moisture sensor

Note: The dryer is equipped with a stainless-steel moisture sensor. The moisture sensor measures how damp the laundry is. After long periods of use, a fine layer of limescale can form on the moisture sensors. This must be removed regularly.

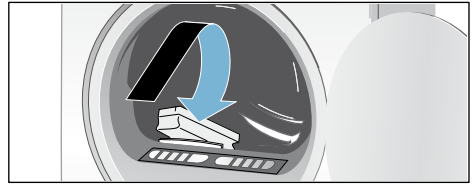

Open the door and clean the moisture sensor with a rough sponge.

Caution!


The moisture sensor may be damaged.

Do not clean the moisture sensor with steel wool and abrasive materials.


Cleaning the filter in the condensate container

Note: The filter in the condensate container cleans the condensation water that is used during the dryer's automatic cleaning cycle.


1. Pull out the condensate container horizontally.
2. Pour out the condensation water.
3. Remove the filter.

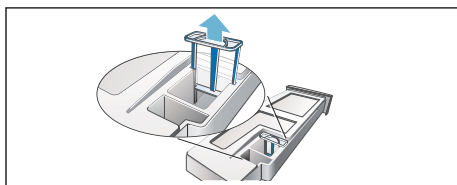

4. Clean the filter under warm, running water or in the dishwasher.

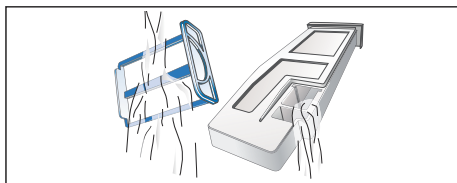

5. Push in the filter until you feel it lock into place.

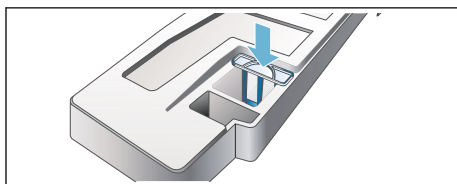

Caution!

The dryer may be contaminated with fluff and thus become damaged.

Only operate the dryer with the filter inserted.

6. Push in the condensate container until you feel it lock into place.



Faults and what to do about them

Faults	Cause/remedy
Please empty the condensate container on the display panel and the drying cycle is interrupted.	<ul style="list-style-type: none"> ■ Empty the condensate container; → <i>Page 21</i> and the dryer; → <i>Page 35</i>. ■ If the optional condensation drain* is installed, the drain hose may be blocked or kinked. Check the hose for deposits and rinse the hose. Lay the hose without any kinks.
Please clean the fluff filters on the display panel.	Clean the fluff filter and press the Start button → <i>Page 20</i> .
Heat exchanger is being rinsed on the display panel.	Not a fault. The heat exchanger is cleaned automatically. Do not pull out the condensate container while this is displayed.
Dryer does not start.	<ul style="list-style-type: none"> ■ Mains plug plugged in or fuse checked? ■ Programme selected? Select a programme. ■ Dryer door open? Close the door. ■ Childproof lock activated? Deactivate the childproof lock. ■ "Ready in" time selected? Programme starts after a delay → <i>Page 14</i>.
Creasing.	<ul style="list-style-type: none"> ■ Creasing occurs when you have exceeded the maximum load or selected the wrong programme for the type of fabric. All the required information can be found in the programme table → <i>Page 13</i>. ■ Remove clothes immediately after drying; creasing may occur if they are left in the drum.
Water is leaking out.	Not a fault; the dryer may be positioned on an incline. Level the dryer.
Laundry is not dried correctly or is still too damp.	<ul style="list-style-type: none"> ■ After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse. ■ Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier → <i>Page 14</i>. ■ Select a programme with a longer drying time or increase the drying level. This does not increase the temperature. ■ Select a timed programme for subsequent drying of laundry that is still damp → <i>Page 13</i>. ■ If you have exceeded the maximum load for the programme, the laundry may not be dried properly. ■ Clean the moisture sensor in the drum. A fine layer of limescale may adversely affect the performance of the sensors and your washing will not dry properly → <i>Page 23</i>. ■ Drying has been interrupted as a result of a power cut, because the condensate container is full or because the maximum drying time has been exceeded. <p>Note: See also the laundry tips → <i>Page 12</i>.</p>
* Depending on the model	

Faults	Cause/remedy
Drying time too long?	<ul style="list-style-type: none"> ■ The fluff filter may be dirty and cause a longer drying time. Clean the fluff filter. ■ If the air inlet on the dryer is blocked or not freely accessible, this may increase the drying time. Make sure that the air inlet remains unobstructed. ■ If the ambient temperature is higher than 35 °C, this may extend the drying time. ■ Insufficient air circulation in the room may increase the drying time. Ventilate the room.
Display panel goes off and Start button flashes.	Not a fault. Energy saving mode is active → <i>Page 7</i> .
Residual water in the condensate container despite the dryer being connected to the condensation drain*.	Not a fault. If the condensation drain is installed, residual water remains in the condensate container due to the dryer's self-cleaning function.
Humidity in the room increases.	Not a fault. Make sure the room is sufficiently ventilated.
Power cut.	The drying programme is interrupted. Remove the laundry and spread it out, or restart the programme.
Unusual noises when drying.	Not a fault. Noises are produced by the automatic cleaning of the heat exchanger → <i>Page 22</i> .
The dryer feels cold despite drying.	Not a fault. The dryer can dry efficiently at low temperatures using a heat pump.
* Depending on the model	

Note: If you cannot rectify the fault yourself by turning the dryer off and on, please contact our after-sales service.



After-sales service

After-sales service

If you cannot rectify the fault yourself (faults, what to do?), please contact our after-sales service. We will always find an appropriate solution to avoid unnecessary visits by engineers.

The contact information for your nearest after-sales service can be found here or in the enclosed after-sales service directory.

Please provide after-sales service with the dryer's product number (E-no.) and production number (FD).

E-Nr. _____ FD _____

You can find this information on the inside of the dryer door or on the rear of the dryer.

Trust the expertise of the manufacturer.

Contact us. You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts.



Consumption values

Consumption values table

Programme	Spin speed used for spinning the laundry	Duration**	Energy consumption**
Cottons		9 kg	9 kg
Cupboard Dry*	1400 rpm	214 min	1.27 kWh
	1000 rpm	240 min	1.42 kWh
	800 rpm	268 min	1.59 kWh
Iron Dry*	1400 rpm	142 min	0.76 kWh
	1000 rpm	164 min	0.95 kWh
	800 rpm	186 min	0.99 kWh
Easy-Care		3.5 kg	3.5 kg
Cupboard Dry*	800 rpm	60 min	0.40 kWh
	600 rpm	73 min	0.46 kWh
For testing in accordance with applicable standard EN61121 the dryer shall be used with external drain set.			
* Programme setting for testing in accordance with the EN 61121 standard.			
** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric, the degree of dryness that has been set and the amount of laundry being loaded.			



Technical data

Dimensions:

85 x 60 x 60 cm

Height x width x depth

Weight:

Approx. 57 kg

Maximum load:

9 kg

Condensate container:

4.6 l

Connected voltage:

220 - 240 V

Connected load:

Max. 700 W

Fuse:

10 A

Drum interior light*

Ambient temperature:

5 - 35 °C



Installation and connection

Scope of delivery

- Dryer
- Installation and operating instructions
- Basket for woollens*
- Condensation drain*

 
Installing and connecting the dryer



Warning

Risk of death!

There is a risk of electric shock as the dryer is operated with electricity.

- Check the dryer for visible damage. You must not operate the dryer if it is damaged.
- Before connecting the dryer to the power supply, ensure that the electric voltage specified on the rating plate matches the voltage of your socket.
- Only use residual current circuit breakers with the following symbol: .
- Ensure that the mains cable is not kinked or trapped, and that it does not come into contact with heat sources or sharp edges.



Warning

Children could lock themselves in the dryer, putting their lives at risk!

Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening.

* Depending on the model



Warning

Risk of fire/risk of poisoning/risk of material damage and damage to the appliance!

The dryer contains refrigerant which, although it is environmentally friendly, is flammable R290.

- Make sure that the air inlet on the dryer is always kept clear and that the room has sufficient ventilation.
- In the event of a leak, any escaping refrigerant could lead to poisoning and create a combustible air/gas mixture if the room is too small. Only operate this appliance in rooms which are sufficiently large. The room must have a capacity of 1 m³ per 8 g of refrigerant. The amount of refrigerant in your appliance can be found on the back of the appliance.
- Do not place the dryer near open fires and ignition sources.

Caution!

Risk of injury

- As the dryer is heavy, you could injure yourself by trying to lift it. Do not lift the dryer on your own.
- You could cut your hands on the sharp edges of the dryer. Do not hold the dryer by the sharp edges.
- Protruding parts on the dryer may break off when it is lifted or pushed. Do not move the dryer by holding onto protruding parts.

Caution!

Risk of material damage to the dryer or fabrics

- Check the dryer for damage caused during transportation. Never operate a dryer if it is damaged.
- Any residual water in the dryer may freeze and damage the dryer. Do not install the dryer in rooms that are at risk of frost.

During installation, ensure that:

- The dryer is placed on a clean, level and firm surface,
- The mains plug can be accessed at all times,
- The area around the dryer is kept clean and
- The dryer is levelled using the threaded feet. Use a spirit level to do this.


Changing the condensation drain

Notes


- The condensation from the dryer can either be discharged into the condensate container or drained off via a connection to the waste-water system. The factory setting is for the condensation from the dryer to be discharged into the condensate container.
- If the condensation drain is installed, residual water remains in the condensate container because of the dryer's self-cleaning function.

Change the condensation drain as follows:


1. Remove the accessory from the dryer drum.

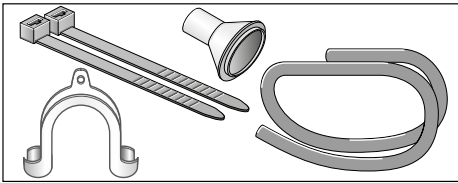


2. Delivery status of the dryer. The hose for discharging the condensation into the condensate container is secured to the connecting piece.
3. Disconnect the hose from the connecting piece and move it into the "parked" position.

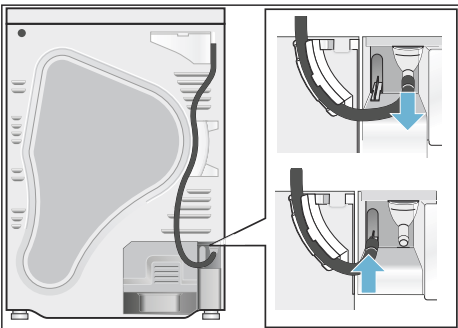

4. Remove the drain hose from the accessory and secure it to the empty connecting piece.

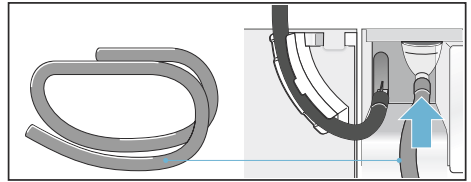

5. Depending on how you connect the hose (A, B or C), secure the drain hose with the remaining accessories on the other side.

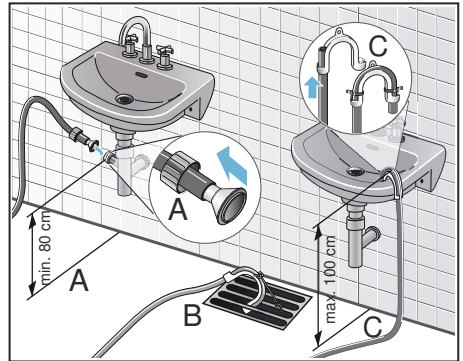

Caution!

Blocked water can be drawn back into the dryer and may cause material damage.


Check that the water drains away from the wash basin quickly. The drain must not be sealed or blocked.

Caution!


Material damage due to leaks or draining water.

Secure the drain hose so that it cannot slip out. Do not kink the drain hose. Observe the height difference between the installation surface and the drain of max. 100 cm, and 80 cm for a drain in a siphon.


6. Pull out the condensate container fully.

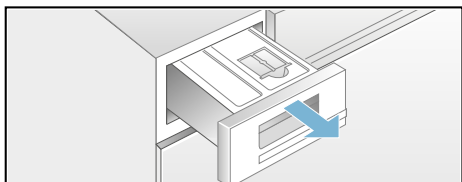


7. Turn the condensate container 180° onto its underside and remove the stopper that is fitted. Turn the condensate container back and insert the stopper into the recess on the top side of the condensate container.

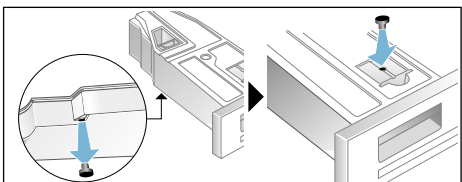

8. Pull the filter out of the notch and place it into the recess on the condensate container.

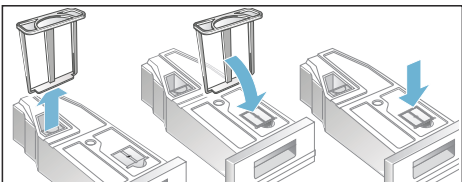

9. Slide in the condensate container until it clicks into place.

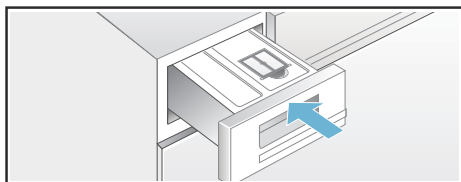


The condensation is now discharged via the drain hose into the waste-water system or into a wash basin.

Note: If you want to change the condensation drain back to the condensate container, carry out these steps in reverse order.


Changing the side on which the door is hinged

Proceed as follows to change the side on which the door is hinged:


1. Set the programme selector to the "Off" position, disconnect the dryer from the mains and open the door.

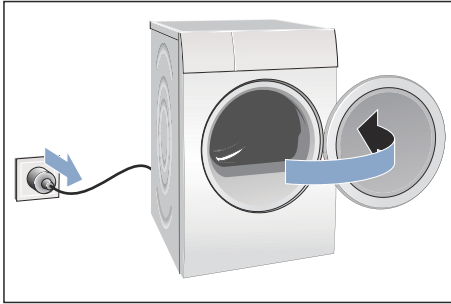


2. Remove the screws from the dryer and then remove the dryer door.
Note: Use a T20 (Torx) screwdriver only. Do not use any other tools to change the side on which the door is hinged.

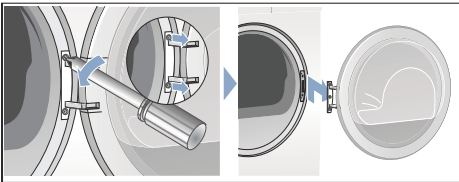


3. Carefully place the dryer door onto a flat surface, and place a hand towel or other such item between the door and the surface to avoid scratching or damaging the door.

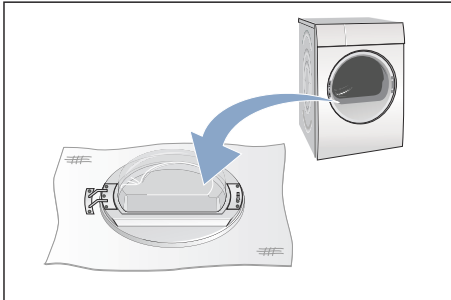


4. Now remove the screws from the door hinge, and remove the hinge from the dryer door.

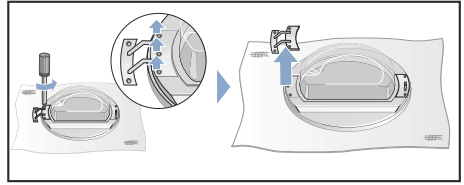


5. Remove the screws from the door handle on the dryer door and remove the door handle.

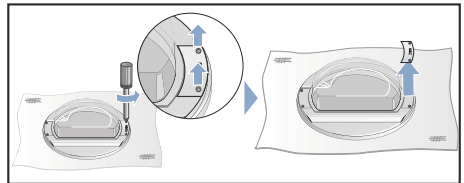


6. Unlock the door ring.

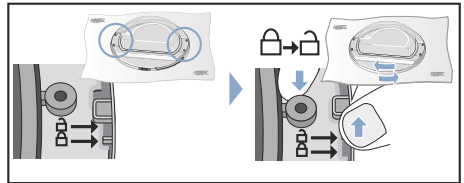


7. Now lift the dryer door from the door ring. Rotate the dryer door and place it back onto the door ring in the corresponding place.

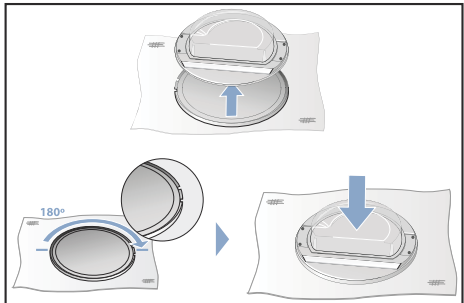


8. Lock the door ring back in place.

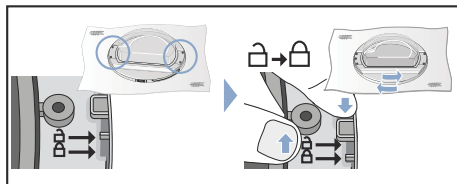


9. Put the door hinge and door handle in place as shown in the picture, and screw them back onto the dryer door.

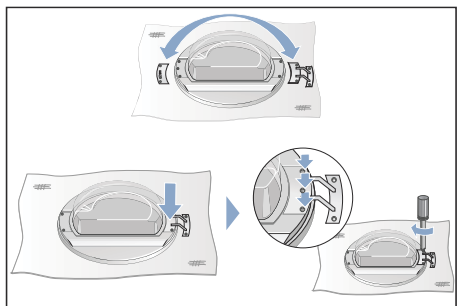


10. Remove the cover from the door lock on the dryer and place it to one side.

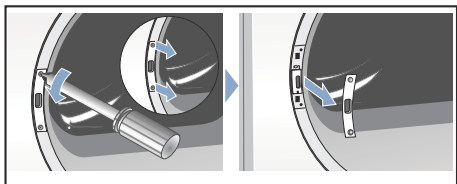


11. Remove the door lock.

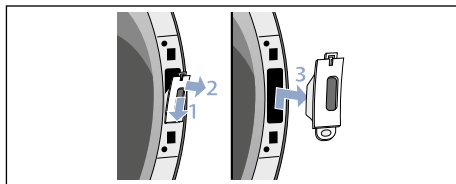


12. Insert the door lock (1.) on the other side of the dryer and screw the cover (2.) back on.

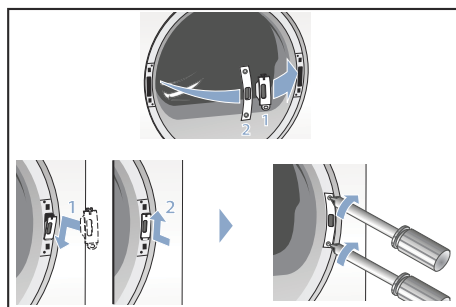

13. Now also screw the dryer door back on.

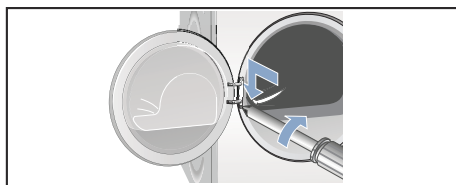

14. You can now reconnect the dryer, close the door and start a programme.

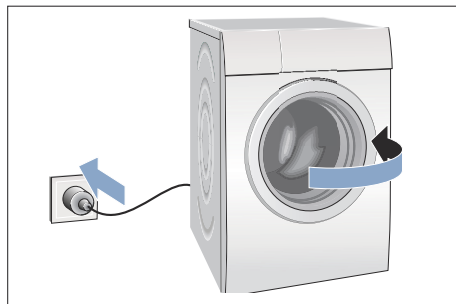

Optional accessories

Order optional accessories* from the after-sales service:

■ **Washer-dryer stack connection set:**

To save space, the dryer can be placed on top of a suitable washing machine of the same width and depth.

The dryer must be secured to the washing machine using this connection set.

Order number with pull-out worktop:

WTZ11400;

Order number without pull-out worktop: **WTZ20410.**

■ **Platform:**

For easier loading and unloading, raise your dryer with a platform.

Transport laundry with the clothes basket integrated into the platform drawer.

Order number: **WMZ20500.**

Transport and frost protection

1. Empty the condensate container.
2. Select any programme using the programme selector.
3. Press the Start button.
4. Wait for 5 minutes.
Note: The condensation is drained.
5. Empty the condensate container again.
6. Switch off the dryer.

Note: Despite draining, there will always be some residual water in the dryer.

Caution!

Any residual water may leak out and cause material damage.

Transport the dryer in an upright position.

Caution!

The dryer contains coolant and may be damaged.

Allow the dryer to rest for two hours before initial use.

* Depending on the model



Advice and repair order in the event of faults

GB 0344 892 8979 (Calls charged at local or mobile rate.)
IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

You can find the contact information for all countries in the attached after-sales service directory.

Robert Bosch Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München, GERMANY



9001054578 (9508)