



OPTI-FRY SMART LOGIC AIR OVEN 8L INSTRUCTION MANUAL

220-240V

1700W

WHOF12KS

CONTENTS

Safety Instructions

Important Safety Instructions.....	1-2
Electrical Requirements.....	3

Setup and Use

Installation Guide.....	3
Parts and Features.....	4
Opti-fry Operation.....	5
Smart Logic Technology.....	6
Cleaning & Care.....	7
Cooking Guide.....	8

Troubleshooting.....9

Peace Of Mind Guarantee10

Limited Warranty.....11-13

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

IMPORTANT SAFETY INSTRUCTIONS



DANGER

DANGER - Immediate hazards which WILL result in severe personal injury or death.



WARNING

WARNING - Hazards or unsafe practices which COULD result in severe personal injury or death.







CAUTION

CAUTION - Hazards or unsafe practices which COULD result in minor personal injury.

1. Read all instructions carefully before using your new Air Oven.
2. Always turn the power off at the power outlet before you insert or remove the power plug. Remove by grasping the plug - do not pull on the cord.
3. **DANGER:** Do not operate Air Oven if:
 - i) the cord or plug is split, melted or damaged.
 - ii) the Air Oven has malfunctioned.
 - iii) the Air Oven has been damaged in any manner.If any of the above incidents occur, return your Air Oven to the nearest authorised service center for examination, repair or adjustment.
4. **DANGER:** Do not under any circumstances immerse the power cord, mains plug or Air Oven body in water or any other liquid.
5. **WARNING:** Use handle grip only as some surfaces may become warm whilst the Air Oven is in use.
6. **WARNING:** If the mains supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
7. **WARNING:** Do not cover the Air Oven whilst in operation as the air inlet and outlet vents must be kept clear.
8. **WARNING:** Ensure bowl is cleaned regularly as build-up of oils and fats may pose a fire hazard.
9. **WARNING:** Exercise caution when removing the bowl from the air oven.
10. **WARNING:** The internal panels of the appliance will become very hot during and after operation. Do not touch.
11. **WARNING:** Do not move Air Oven whilst there is food in the bowl as hot liquids may have collected in the bowl and may leak out whilst moving.
12. **WARNING:** Combustible materials such as paper, curtains, tablecloths, kitchen towels etc. should not be placed near the Air Oven whilst in operation.
13. **WARNING:** Do not place the Air Oven against a wall or against another appliance. Leave at least 10cm free space on the back, sides and above the Air Oven.
14. **WARNING:** Exercise caution when removing the bowl as hot steam and air will expel from the Air Oven.
15. **WARNING:** Immediately unplug the Air Oven if you see any smoke coming from the unit. Wait for the smoke to stop before removing the bowl and bowl insert from the Air Oven.
16. **CAUTION:** Close supervision is necessary when this appliance is used by or near children.

IMPORTANT SAFETY INSTRUCTIONS

17.  **CAUTION:** Keep the Air Oven and its cord out of reach of children less than 8 years old.
18.  **CAUTION:** Wait for the Air Oven to cool before moving. Carry only by the outer side panels.
19.  **CAUTION:** During operation, hot steam is released through the air vent openings. Keep your hands and other body parts at a safe distance from the air vent openings.
20.  **CAUTION:** Allow 30 minutes to cool down after cooking before handling or cleaning.
21. This Air Oven is not intended to be operated by means of an external timer or separate remote-control system.
22. Any appliance that has been dropped or damaged should not be used until examined by an authorised service center.
23. Do not permit the mains supply cord or plug to touch hot objects or allow the power cord to lay across the Air Oven.
24. This appliance is deemed for indoor use only.
25. Do not use harsh or abrasive cleaning agents. The outside surface may be wiped clean with a soft, damp cloth and dried thoroughly. If necessary, a mild dishwashing detergent may be applied to the cloth but not directly applied to the Air Oven.
26. This air oven is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the air oven in a safe way by the person responsible for their safety, and understand the hazards involved.
27. Children should not play with the Air Oven.
28. Your Air Oven should not be unattended while in use.
29. This appliance is intended to be used in private households and not in applications such as: staff kitchen areas, offices and other working environments; farm houses; by guests in hotels, motels and other residential type environments; bed and breakfast type environments.
30. Always use this Air Oven with a power outlet of the voltage (A.C. only) marked on the back of the Air Oven.
31. Do not use the Air Oven for any purpose other than its intended use.
32. Do not place your Air Oven on or near a hot gas flame, electric element, heated oven or any hot surface.
33. Do not place the Air Oven on top of any other appliance.
34. Do not allow the power cord of this Air Oven to hang over the edge of a table or bench top.
35. Keep liquids away from the Air Oven.
36. Do not place anything on top of the Air Oven.
37. Ensure the appliance is placed on a horizontal, even and stable surface.

ELECTRICAL REQUIREMENTS

POWER SUPPLY CORD


1. Do not attempt to modify the power cord or plug in any way.
2. A short power supply cord is provided to reduce the risk of becoming entangled or tripping over a longer cord.
3. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman install an outlet near the appliance.

NOTE: Neither Westinghouse nor the retailer can accept any liability for damage to the product or personal injury resulting due to failure to observe the electrical connection procedures or instructions within this manual.



NOTE: Westinghouse recommends the use of a residual current device (RCD) with a tripping current that does not exceed 30mA in the electrical circuit supplying power to all appliances.

INSTALLATION GUIDE

1. Carefully unpack your Air Oven.
2. Carefully remove packaging around the Air Oven and power cord. Do not remove warning labels.
3. Wash bowl and bowl insert before use.

 **DANGER:** Do not under any circumstances immerse the Air Oven, mains cord or mains plug in water or any other liquid.

PARTS AND FEATURES

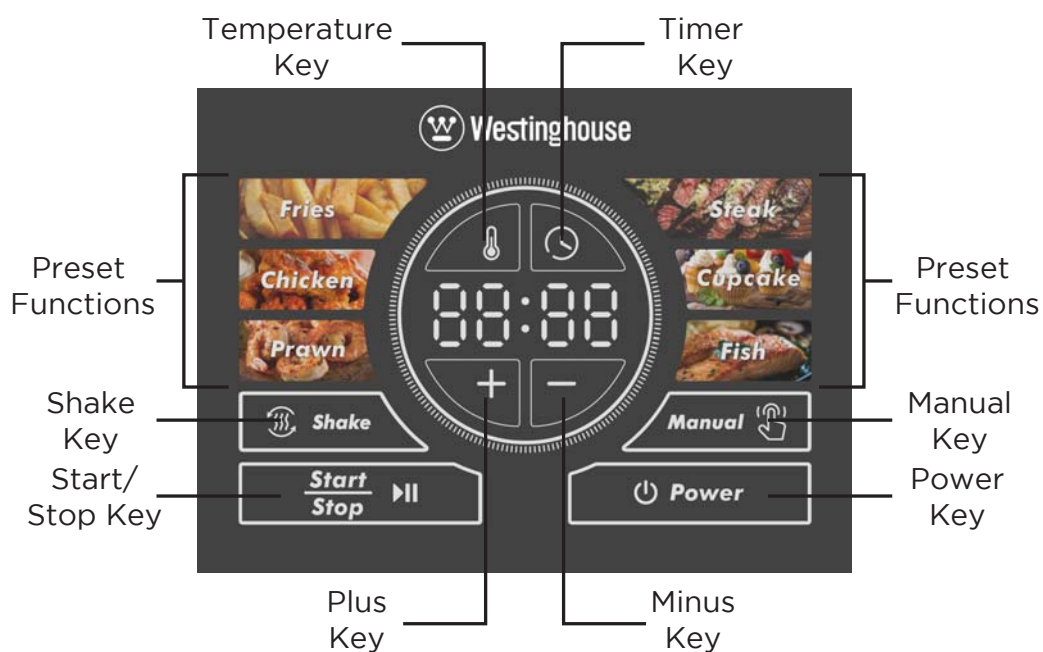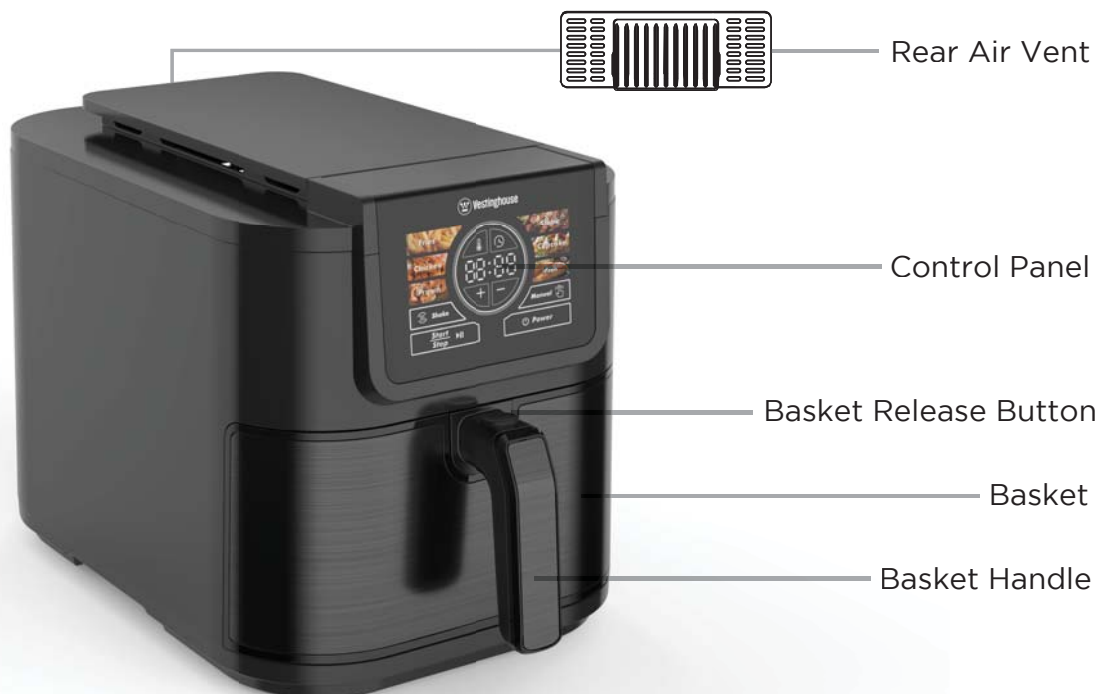


OPTI-FRY OPERATION

Before first use, remove the basket and non-stick insert. Wash with hot water and mild detergent, rinse with fresh water and dry thoroughly. Do not use abrasive cleaning products or abrasive sponges when cleaning**

Before cooking food for the first time, we recommend the unit complete a 10 minute cycle without any food present to disburse any initial burn off smells.

Follow the guide below for this process***

- i) Ensure unit is unplugged from wall power outlet.
- ii) Insert non-stick insert and basket back into the Air Oven after cleaning process.
- iv) Push the power button to turn on the unit and push the Manual function and adjust the temperature to 200 degrees. Set the timer to 20 minutes and press the start/stop key to begin operation.
- vi) Once operation has been completed, your Air Oven is ready for use.


 **WARNING:** Please exercise caution when removing the basket as it will be very hot.

1. Remove the basket from your Air Oven by gripping the basket handle, pushing down on the basket release button and pulling in an outward motion.
2. Place your ingredients into the basket.
3. Slide the basket back into the Air Oven.
4. Press the power key first and then press the desired preset function.

If you would like to use the Manual function, press the manual function and adjust the temperature and timer by pressing either the temperature or timer key and pressing the plus and minus keys to adjust them.

NOTE: When using the Smart Logic functions, the unit will take up to 3 minutes to calculate the ideal cooking time for your food. To indicate this, the display ring will spin during this period. Do not open the basket or turn the unit off whilst this calculation is occurring to avoid delays.

5. Press the start/stop key to begin the cycle.
6. If the shake function has been activated for this cycle, the unit will cease operation and beep to alert the need to carefully remove the basket and shake the contents. Once this has been done, return the basket to the main body carefully to resume operation.
7. Once the time cycle has been completed, remove the basket using the basket handle and basket release button. Enjoy!

 **WARNING:** Use caution removing the basket as hot steam and air will expel from the Air Oven.

SMART LOGIC TECHNOLOGY

The Smart Logic Technology of this air fryer gauges the ambient temperature of your food in the basket.

Based off the function you have chosen it will then calculate the time it will take to cook your food to **PERFECTION**.

How does it know? Through hundreds of tests in the lab where samples were tried again and again to ensure it came out right every time.

You still have the option to cook it the way you want to with the manual selection function.

CLEANING & CARE

⚠ **CAUTION:** Allow 30 minutes to cool down after cooking before handling or cleaning.

CLEANING:

1. ⚠ **WARNING:** Do not under any circumstances immerse the power cord, mains plug or Air Oven body in water or any other liquid.
2. Ensure unit is unplugged from wall power switch before attempting to clean.
3. Do not use harsh or abrasive cleaning agents. The outside surface may be wiped clean with a soft, damp cloth and dried thoroughly. If necessary, a mild dishwashing detergent may be applied to the cloth but not directly applied to the Air Oven.
4. Soaking the basket and drip tray in soapy water will assist in the removal of sticky or tough to remove substances. Do not immerse the basket handle.
5. When washing, non-abrasive cloths and plastic bristle kitchen brushes may be used to remove stubborn food particles from the basket and drip tray. Do not use abrasive cloths and cleaning materials as they will damage the surface.
6. Do not place the basket or drip tray into a dishwasher. They are not dishwasher safe.
7. Ensure all items are dried thoroughly after cleaning and placed back into the Air Oven for storage.
8. Store in a dry place away from steam and humidity where possible.

NOTE: Failure to clean products regularly can be deemed as negligent handling and any faults caused by fat/oil build up will not be covered by the Westinghouse Small Appliances 12 Month Limited Warranty.



Scan this QR code for our intensive guide on cleaning non-stick appliances.

COOKING GUIDE

FOOD	FUNCTION	VOLUME	TEMPERATURE	COOKING TIME
Fries/Chips	Fries (Smart Logic)	50-500g	200°C	18-20min
Frozen Fries/Chips	Fries (Smart Logic)	50-500g	200°C	20-22min
Chicken Breast	Chicken (Smart Logic)	200-500g	180-200°C	20-25min
Chicken Wings	Chicken (Smart Logic)	800g-1kg	180-200°C	20-25min
Chicken Drumsticks	Chicken (Smart Logic)	250g-1kg	180-200°C	20-25min
Prawns	Prawn (Smart Logic)	200-300g	180°C	8-10min
Frozen Prawns	Prawn (Smart Logic)	200-300g	180°C	10-12min
Steak	Steak (Smart Logic)	150-300g	200°C	12-18min
Muffins	Cupcake (Smart Logic)	≈ 320g (40g/pc)	150°C	15-20min
Whole Fish	Fish (Smart Logic)	≈ 300g	180-200°C	15-30min
Frozen Chicken Nuggets	Chicken (Smart Logic)	≈ 200g	180-200°C	10-12min
Whole Chicken	Manual	≈ 2kg	180°C	70-80min
Fresh Vegetables	Manual	≈ 600g	170°C	9-12min
Frozen Spring Rolls	Manual	200-600g	200°C	12-20min
Meat Chops (Bone Removed)	Manual	200-800g	200°C	15-25min
Thin Sausages	Manual	100-500g	200°C	11-17min
Roast Potatoes	Manual	≈ 500g	180°C	25-35min
Frozen Onion Rings	Manual	500g-800g	180°C	10-15min
Fresh Fish Fillet	Manual	200-500g	180-200°C	8-12min
Frozen Fish Fillets	Manual	200-500g	180-200°C	12-15min

This cooking guide is a guide only, ensure your food is entirely cooked before consumption, as differences in size, shape and type can alter the cooking requirements.

TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Air Oven does not turn on.	Air Oven is not plugged in.	Check that Air Oven is plugged into a working power outlet and turned on.
Air Oven does not turn on.	Basket not inserted properly.	Remove basket, check for obstructions then re-insert basket. The Air Oven will start automatically.
Food has not cooked properly.	Too much in the basket.	Remove excess foods from basket and try with smaller batches.
Food has not cooked properly.	Temperature set too low or timer not set for correct amount of time.	Check temperature and times page for temperature and time setting. Set temperature and timer to correct settings.
Food has cooked unevenly	Turning / agitation during the cooking cycle not completed.	Food that lays across one another (eg. Fries) need to be turned or agitated during cooking cycle. Interrupt cycle half way through cycle, remove basket and turn / agitate foods.
Food is not crispy when they come out of the Air Oven.	Food was not oven ready or were made to be cooked in a traditional deep fryer.	Use oven ready foods or lightly brush some oil onto the food prior to cooking. For best results, mix ingredients with 1/2 tbsp. oil in a mixing bowl prior to cooking.
Air fryer does not heat.	Air fryer is calculating cooking time required.	Allow a few minutes for the Smart Logic Technology to calculate the cooking time of your food and the unit will begin heating shortly.
Basket will not fit back into Air Oven.	Obstruction.	Remove basket from Air Oven, check for obstructions and try again.
White smoke coming from appliance.	Foods oily or greasy.	Very oily or greasy foods drip excessive amounts of oil and fats onto the oil catch tray which may heat up and burn off. This is considered normal. Ensure basket and non-stick insert is cleaned after each use.

PEACE OF MIND GUARANTEE

Our Westinghouse small appliances are backed by a 12 month guarantee as part of our dedication to provide quality products for our customers. This means that if you purchase a Westinghouse small appliance which has a manufacturer defect/fault, or does not meet the seller's specifications as a result of a defect/fault, then the seller will either repair or replace the unit, or refund the purchase price of the unit at their own discretion. (refer to clause 4 of the Limited Warranty)

This does not apply to products which have been misused/abused, poorly maintained or serviced, damaged due to negligent handling, accidentally damaged or normal wear and tear. Ensure to follow all instructions within this instruction manual, including the Cleaning & Care section for correct maintenance. (See page 7)

Your warranty does not cover the following:

- Damage caused by power surges, voltage supply issues, power dips or usage of the incorrect voltage.
- Damage caused by service or modification of the unit which are not performed by authorised service centres or personnel.
- Damage caused by the use of accessories, attachments, consumables, parts or devices which are not produced for the product by Westinghouse and its licensees.
- Damage caused by exposure of the product to abnormally corrosive conditions.
- Damage caused by incorrect or improper operation and/or installation.
- Damage caused by a failure to follow additional instructions.
- Products which have had the serial number and/or rating label removed.
- Usage of the product which are outside of the intended applications. (refer to page 1-2)
- Freight costs incurred during a claim, consumables, loss, damage or accessories which require periodic replacement by nature. (filters, seals etc.)

How to claim under this warranty:

1. Carefully check the operating instructions, user manual and the terms of this warranty;
2. Have the model and serial number of the appliance available;
3. Have the proof of purchase (e.g. receipt) available;
4. Return the unit to place of purchase;
5. If unable to return to the place of purchase, call our customer service centre on 1300 883 109.

If your warranty claim is accepted, the product may be replaced with a similar or refurbished unit or repaired using refurbished parts. If your warranty claim is not accepted, the seller will inform you and provide any further options which are available in your situation. If the product is to be repaired or shipped as a result of this, you will be responsible for the cost of repair and/or any freight charges incurred.

For the most up-to-date manuals and FAQ's, please visit the product page of your appliance by scanning the QR code on your appliance's cord label.

LIMITED WARRANTY

1. Nothing in this warranty affects the Consumer's rights under the Australian Consumer Law. The benefits to the Consumer under this Warranty are in addition to the rights and remedies of the buyer under any Consumer Guarantees. The Australian Consumer Law requires that we confirm that:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2. Subject to Clause 1, the Seller warrants that Westinghouse branded products will be free of manufacturing defects and will perform to the Seller's specifications subject to the following clauses.
3. The benefit of this Warranty extends only to the owner of the property in which the Products manufactured or supplied by the Seller are installed and used by the owner for the duration of the Warranty Period under standard domestic applications.
4. The Warranty commences on the date of the purchase of the product and continues for the benefit of the Owner for the Warranty Period. If within the Warranty Period a manufacturing defect is discovered in the Product, or the Product fails to perform to the Seller's specifications as a result of some defect in material or workmanship in the Product, then the Seller will at its own discretion:
 - a.) Repair or replace the Product at the cost of the Seller. Goods repaired or replaced under this Warranty will be warranted for the remaining period of the Warranty. **Products presented for repair may be replaced by refurbished products of the same type rather than being repaired. Refurbished parts may be used to repair the products.**
 - b.) Refund the purchase price paid by the consumer.
5. The Warranty does not apply to Product that :
 - a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
 - b.) Has been misused or neglected.
 - c.) Has been damaged accidentally or by acts of God including fire and flooding.
 - d.) Has been used or operated contrary to operating or maintenance instructions.
 - e.) Has been damaged by the Consumer or a third party authorised to act for the consumer in transit from the Sellers store to the Consumer.

- f.) Has been modified, altered or tampered with by unauthorized persons.
- g.) Damage caused by insects or vermin and claims based on the presence of insects or vermin.
- h.) Has been used in commercial situations or applications.

It also excludes breakables such as glass and ceramic items, consumable items such as those that require periodic replacement as part of the ordinary use, lack of care or maintenance of the product or as directed by the instruction booklet, minor cosmetic issues (including, without limitation, paint and coatings) and normal wear and tear, and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

6. In order to make a claim under the Warranty, the Owner must, where possible return the goods to the Seller's store at the Owner's cost. Proof of purchase must be supplied in all cases.

7. The seller will examine any returned Products and if the Seller determines that there is an apparent defect through no fault of the Owner, the Seller will:

- a.) Make note of the Owner's contact details including the Owner's telephone number which the owner can be contacted during business hours, postal address and e-mail address.

- b.) Make note of the defects reported by the Owner.

- c.) Take back the defective goods from the owner and determine within a reasonable time through dialogue with the Seller whether the goods are defective.

- d.) Advise the owner within a reasonable time frame whether it accepts or rejects the Product claim.

- e.) If the Seller accepts the return of the Product, the Seller must arrange to have

- i) The Product repaired or,

- ii) Replace the damaged or faulty Product or,

- iii) Refund the purchase price.

Note that repairs or replacements may be done with refurbished items or parts, or replaced with a similar item.

8. The Seller will not accept any returned Product which has not been returned strictly in accordance with this Warranty.

9. For the purpose of this Warranty:

- a.) Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010 (Cth).
- b.) Consumer means the Purchaser of goods from the seller.
- c.) Consumer means a Consumer as that term is set out in section 3 of the Australian Consumer Law.
- d.) Consumer Guarantees means the guarantees under the Australian Consumer Law.
- e.) Implied terms means any guarantees, conditions, warranties or other terms implied by any Australian Commonwealth, State or Territory laws, (excluding the Australian Consumer Law) or the law of any other jurisdiction.
- f.) Owner has the meaning set out in clause 3.
- g.) Warranty means this warranty.
- h.) Product means the Product/s bought by the Owner from the Seller that fall under this warranty.
- i.) Warranty Period means:
 - i) In relation to Cast Iron Cookware: 3 Year Limited Warranty.
 - ii) In relation to Non-Stick Cookware: 3 Year Limited Warranty
 - iii) In relation to Cooking Utensils: 3 Year Limited Warranty
 - iv) In relation to Knives/Knife Block Sets: 3 Year Limited Warranty
 - v) In relation to Stainless Steel Cookware: 10 Year Limited Warranty
 - vi) In relation to Chopping boards: 1 Year Limited Warranty
 - vii) In relation to Small Appliances: 1 Year Limited Warranty**



Westinghouse

CUSTOMER SERVICE - 1300 883 109

IMPORTED AND DISTRIBUTED BY RVM AUSTRALIA PTY LTD.
13 Merino Entrance, Cockburn Central, WA 6164
MADE IN CHINA

© 2024 RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.

® and WESTINGHOUSE are trademarks of Westinghouse Electric Corporation.
Used under license by RVM Australia Pty Ltd. All Rights Reserved.