



Refrigerator user manual

Free Standing Appliance

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register



DA68-02493B-10













Safety information

SAFETY INFORMATION

- Before operating the appliance, please read this manual thoroughly and retain it at a safe place near the appliance for your future reference.
- Use this appliance only for its intended purpose as described in this instruction manual. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your refrigerator may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.
- Contains fluorinated greenhouse gases covered by the Kyoto Protocol.
Hermetically sealed system.
Do not vent gases into the atmosphere.
Refrigerant type: R-134a
Quantity: 0.140Kg
Global Warming Potential (GWP) = 1300

Important safety symbols and precautions :

 WARNING	Hazards or unsafe practices that may result in severe personal injury or death .
 CAUTION	Hazards or unsafe practices that may result in minor personal injury or property damage .
	Do NOT attempt.
	Do NOT disassemble.

	Do NOT touch.
	Follow directions carefully.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the contact center for help.
	Note.

**These warning signs are here to prevent injury to you and others.
Please follow them carefully.**

After reading this section, keep it in a safe place for future reference.


CE Notice

This product has been determined to be in compliance with the Low Voltage Directive (2006/95/EC), the Electromagnetic Compatibility Directive (2004/108/EC), RoHS Directive (2011/65/EU), Commission Delegated Regulation (EU) No 1060/2010 and the Eco-Design Directive (2009/125/EC) implemented by Regulation (EC) No 643/2009 of the European Union. (For products sold in European Countries only)

This appliance is intended to be used in household and similar applications such as

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications.

SEVERE WARNING SIGNS FOR TRANSPORTATION AND SITE

-  • When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- R600a or R134a is used as a refrigerant. Check the compressor label on the rear of the appliance or the rating label inside the refrigerator to see which refrigerant is used for your refrigerator.



SEVERE WARNING SIGNS FOR INSTALLATION



- Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).
- Deteriorated insulation of electrical parts may cause an electric shock or fire.
- Do not place this refrigerator in direct sunlight or expose to the heat from stoves, room heaters or other appliances.
- Do not plug several appliances into the same multiple power board.
The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matched the rating plate.
- This provides the best performance and also prevents overloading house wiring circuits, which could cause a fire hazard from overheated wires. If the wall socket is loose, do not insert the power plug.
- There is a risk of electric shock or fire.
- Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- Do not bend the power cord excessively or place heavy articles on it.
- Do not use aerosols near the refrigerator.
- Aerosols used near the refrigerator may cause an explosion or fire.
- Do not install this appliance in a location where gas may leak.
- This may result in an electric shock or fire.



- The installation or any service of this appliance is recommended by a qualified technician or service company.
- Failing to do so may result in an electric shock, fire, explosion, problems with the product, or injury.
- This refrigerator must be properly installed and located in accordance with the manual before it is used.
- Connect the power plug in proper position with the cord hanging down.
- If you connect the power plug upside down, wire can get cut off and cause fire or an electric shock.
- Make sure that the power plug is not squashed or damaged by the back of the refrigerator.
- When moving the refrigerator, be careful not to roll over or damage the power cord.
- This constitutes a fire hazard.
- The appliance must be positioned so that the plug is accessible after installation.



- The refrigerator must be grounded.
 - You must ground the refrigerator to prevent any power leakages or electric shocks caused by current leakage from the refrigerator.
- Never use gas pipes, telephone lines or other potential lightening rods as ground.
- Improper use of the ground plug can result in an electric shock.



- If the power cord is damaged, have it replaced immediately by the manufacturer or its service agent.
- The fuse on the refrigerator must be changed by a qualified technician or service company.
- Failing to do so may result in an electric shock or personal injury.



CAUTION SIGNS FOR INSTALLATION



- Keep ventilation opening in the appliance enclosure or mounting structure clear of obstruction.
- Allow the appliance to stand for 2 hours after installation.



SEVERE WARNING SIGNS FOR USING



- Do not insert the power plug with wet hands.
- Do not store articles on the top of the appliance.
- When you open or close the door, the articles may fall and cause a personal injury and/or material damage.
- Do not put items filled with water on the refrigerator.
- If spilled, there is a risk of fire or electric shock.
- Do not let children hang on the door.
- Failure to do so may cause serious personal injury.
- Do not leave the doors of the refrigerator open while the refrigerator is unattended and do not let children enter inside the refrigerator.
- Do not allow babies or children go inside the drawer.
- It can cause death from suffocation by entrapment or personal injury.
- Do not store volatile or flammable substances such as benzene, thinner, alcohol, ether or LP gas in the refrigerator.
- The storage of any of such products may cause an explosion.

- Do not store low temperature-sensitive pharmaceutical products, scientific materials or other low temperature-sensitive products in the refrigerator.
- Products that require strict temperature controls must not be stored in the refrigerator.
- Do not place or use electrical appliance inside the refrigerator, unless they are of a type recommended by the manufacturer.
- Do not use a hair dryer to dry the inside of the refrigerator. Do not place a lighted candle in the refrigerator for removing bad odors.
- This may result in an electric shock or fire.
- Do not touch the inside walls of the freezer or products stored in the freezer with wet hands.
- This may cause frostbite.
- Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.

- ★ • This product is intended only for the storage of food in a domestic environment.
- Bottles should be stored tightly together so that they do not fall out.
- In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.
- Do not use a ventilating fan.
- A spark may result in an explosion or fire.
- Use only the LED Lamps provided by manufacturer or service agent.
- Children should be supervised to ensure that they do not play with and/or climb into the appliance.

- ✂ • Do not disassemble or repair the refrigerator by yourself.
- You run a risk of causing a fire, malfunction and/or personal injury. In case of malfunction, please contact your service agent.

- ✎ • If the appliance generates a strange noise, a burning or smell or smoke, unplug the power plug immediately and contact your nearest service center.
- Failing to do so may result in an electric or fire hazards.
- If you experience difficulty when changing the light, contact service agent.
- If the products is equipped with the LED Lamp, do not disassemble the Lamp Cover and LED Lamp by yourself.
- Please contact your service agent.

- If any dust or water is in the refrigerator, pull out power plug and contact your Samsung Electronics service center.
- There is a risk of fire.



CAUTION SIGNS FOR USING



- To get best performance from the product,
 - Do not place foods too closely in front of the vents at the rear of the appliance as it can obstruct free air circulation in the refrigerator compartment.
- Wrap the food up properly or place it in airtight containers before putting it into the refrigerator.
- Do not put any newly introduced food for freezing near to already existing food.
- Do not place carbonated or fizzy drinks in the freezer compartment. Do not put bottles or glass containers in the freezer.
- When the contents freeze, the glass may break and cause personal injury and property damage.
- Do not change or modify the functionality of the refrigerator.
- Changes or modifications may result in a personal injury and/or property damage. Any changes or modifications performed by a 3rd party on this completed appliance are neither covered under Samsung warranty service, nor is Samsung responsible for safety issues and damages that result from 3rd party modifications.
- Do not block air holes.
- If the air holes are blocked, especially with a plastic bag, the refrigerator can be over cooled. If this cooling period lasts too long, the water filter may break and cause water leakage.
- Do not put any newly introduced food for freezing near to already existing food.
- Please observe maximum storage times and expiry dates of frozen goods.
- Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in an electric shock, fire or problems with the product.
- When you open the door, be careful not to injure yourself.
- Do not apply strong shock or excessive force onto the surface of glass.
- Broken glass may result in a personal injury and/or property damage.

4_ Safety information



CAUTION SIGNS FOR CLEANING AND MAINTENANCE



- Do not directly spray water inside or outside the refrigerator.
- There is a risk of fire or electric shock.
- Do not use or place any substances sensitive to temperature such as inflammable sprays, inflammable objects, dry ice, medicine, or chemicals near the refrigerator. Do not keep volatile or inflammable objects or substances (benzene, thinner, propane gas, etc.) in the refrigerator.
- This refrigerator is for storing food only.
- This may result in a fire or an explosion.
- Do not spray cleaning products directly on the display.
- Printed letters on the display may come off.
- Remove any foreign matter or dust from the power plug pins. But do not use a wet or damp cloth when cleaning the plug, remove any foreign material or dust from the power plug pins.
- Otherwise there is a risk of fire or electric shock.



- Unplug the refrigerator before cleaning and performing maintenance.



SEVERE WARNING SIGNS FOR DISPOSAL



- Ensure that none of the pipes on the back of the appliance are damaged prior to disposal.
- R600a or R134a is used as a refrigerant. Check the compressor label on the rear of the appliance or the rating label inside the refrigerator to see which refrigerant is used for your refrigerator. When this product contains flammable gas (Refrigerant R600a), contact your local authority in regard to safe disposal of this product. Cyclopentane is used as an insulation blowing gas. The gases in insulation material require special disposal procedure. Please contact your local authorities in regard to the environmentally safe disposal of this product. Ensure that none of the pipes on the back of the appliances are damaged prior to disposal. The pipes shall be broken in the open space.
- When disposing of this product or other refrigerators, remove the door/door seals, door latch so that small children or animals cannot become trapped inside. Leave the shelves in place so that children may not easily climb inside. Children should be supervised to ensure that they do not play with the old appliance.

- Please dispose of the packaging material for this product in an environmentally friendly manner.



ADDITIONAL TIPS FOR PROPER USAGE

- In the event of a power failure, call the local office of your Electricity Company and ask how long it is going to last.
- Most power failures that are corrected within an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off.
- Should the power failure last more than 24 hours, remove all frozen food.
- If keys are provided with the refrigerator, the keys should be kept out of the reach of children and not be in the vicinity of the appliance.
- The appliance might not operate consistently (possibility of temperature becoming too warm in the refrigerator) when sited for an extended period of time below the cold end of the range of temperature for which the refrigerating appliance is designed.
- Do not store food which spoils easily at low temperature, such as bananas, melons.
- Your appliance is frost free, which means there is no need to manually defrost your appliance, as this will be carried out automatically.
- Temperature rise during defrosting can comply with ISO requirements. But if you want to prevent an undue rise in the temperature of the frozen food while defrosting the appliance, please wrap the frozen food up in several layers of newspaper.
- Any increase in temperature of frozen food during defrosting can shorten its storage life.



There is protective film on the surface of some refrigerator models, which is used to protect the refrigerator from scratches during transport. To avoid static electricity, please peel off the protective film slowly. If the protective film is not removed for a long time, it may cause color shading of the steel plate.

Saving Energy Tips

- Install the appliance in a cool, dry room with adequate ventilation.
Ensure that it is not exposed to direct sunlight and never put it near a direct source of heat (radiator, for example).
- Never block any vents or grilles on the appliance.
- Allow warm food to cool down before placing it in the appliance.
- Put frozen food in the refrigerator to thaw. You can then use the low temperatures of the frozen products to cool food in the refrigerator.
- Do not keep the door of the appliance open for too long when putting food in or taking food out. The shorter time for which the door is open, the less ice will form in the freezer.
- Clean the rear of the refrigerator regularly. Dust increases energy consumption.
- Do not set temperature colder than necessary.
- Ensure sufficient air exhaust at the refrigerator base and at the back wall of the refrigerator.
Do not cover air vent openings.
- Allow clearance to the right, left, back and top when installing.
This will help reduce power consumption and keep your energy bills lower.

It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland - the authorized Service Person MUST hold a Gas Work Authorisation or Licence for hydrocarbon refrigerants, to carry out Servicing or repairs which involve the removal of covers.

Contents

SETTING UP YOUR REFRIGERATOR.....	7
OPERATING THE YOUR REFRIGERATOR	11
TROUBLESHOOTING	15

Setting up your refrigerator

GETTING READY TO INSTALL THE REFRIGERATOR

Congratulations on your purchase of the Samsung refrigerator.

We hope you enjoy the state-of-art offers.



Selecting the best location for the refrigerator

- A location without direct exposure to sunlight.
- A location with level (or nearly level) flooring.
- A location with enough space for the refrigerator doors to open easily.

- Allow sufficient space to the right, left, back and top for air circulation.

If the refrigerator does not have enough space, the internal cooling system may not work properly.

- Please ensure that appliance can be moved freely in the event of maintenance & service.

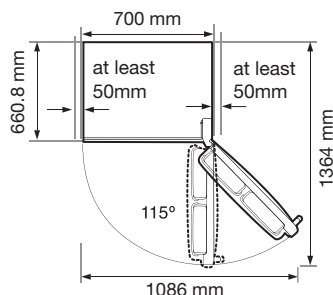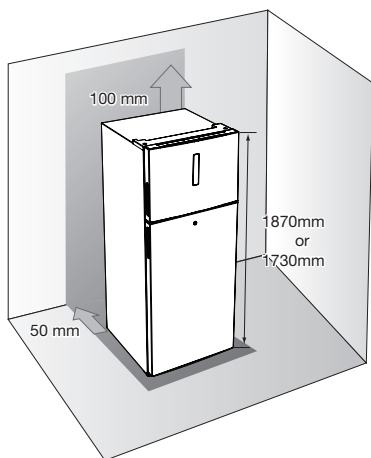

- Height of the product may be different depending on the models.
- Allow clearance to the right, left, back and top when installing.

This will help reduce power consumption and keep your energy bills lower.

- Do not install the Refrigerator where the temperature will go below 50°F (10°C).

LEVELLING THE REFRIGERATOR


If the front of the appliance is slightly higher than the rear, the door can be opened and closed more easily.

Case 1) The appliance tilts down to the left.


- Turn the left adjusting leg in the direction of the arrow until the appliance is level.

Case 2) The appliance tilts down to the right.

- Turn the right adjusting leg in the direction of the arrow until the appliance is level.

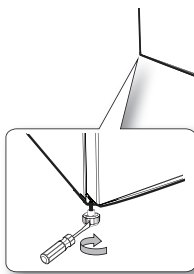


< Case1 >

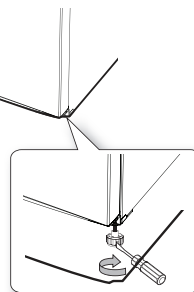

< Case2 >




REVERSING THE DOOR(OPTIONAL)




Before you reverse the refrigerator door, make sure to unplug the refrigerator. Samsung recommends that reversing of the door opening is only completed by Samsung approved Service providers. This will be on a chargeable basis and at the customers expense.

 Any damage caused while attempting to reverse the door opening is not covered under the appliance manufactures warranty. Any repairs requested due to this circumstance will be completed on a chargeable basis at the customers expense.


- 1. Before attempting to reverse the refrigerator doors ensure that the refrigerator is disconnected from the main electricity supply and all food stuffs and the accessories like door guard are emptied from inside the appliance.
- 2. If the customer does not feel confident to follow instruction in the user manual, a Samsung qualified service engineer must be contacted to carry out this change.
- 3. Handle parts carefully to avoid scratching paint.
- 4. Set screws and bolts down by their related parts to avoid using them in the wrong places.
- 5. Provide a non-scratching work surface for doors (ex:blanket)
- 6. During door reversing, refrigerator should not be stained with oil.
- 7. Do not plug in Refrigerator just after door reverse finished process and wait for at least one hour.

Required Tools


Not provided		
		
Phillips Head Driver (+)	Flat Head Driver (-)	12 mm Wrench (for hinge shaft)

Not provided	Additional part	
		
8 mm Socket Wrench (for bolts)	3/16" Allen Wrench (for middle hinge)	CAP-HINGE UPP L (underneath the cap table)


- 1. After removing the screws, disassemble the Cap Table (1) and Cap Hole Top (2) on the cabinet, disassemble the Cover Cap Door (3) and Cap Spacer Door (4).

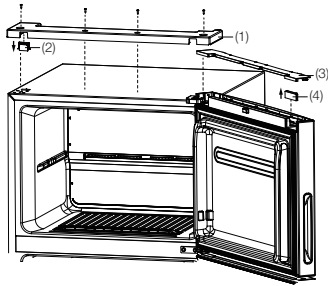


- 2. Disconnect the housing. Disassemble the Cap Hinge Upp-R (5) and the bolts, then remove the Upper Hinge (6).

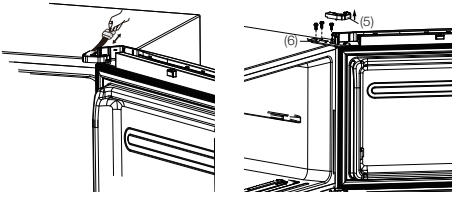


- 3. Remove the Freezer door by lifting it upward. Be careful not to drop and scratch the face of the door.

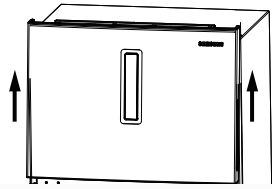


 **CAUTION** The door is heavy, be careful not to injure yourself when removing the door, and be careful not to scratch.

4. Disassemble the bolts and the screw, then remove the Middle Hinge (7).

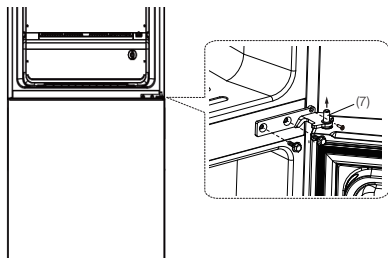


5. Remove the Fridge door by lifting it upward. Be careful not to drop and scratch the face of the door.

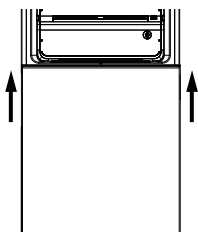


The door is heavy, be careful not to injure yourself when removing the door, and be careful not to scratch.


6. Disassemble the Cap Hole, the screw and the Cap Screw in the left side of CABINET-MID FRONT, and then assemble them to the right side.

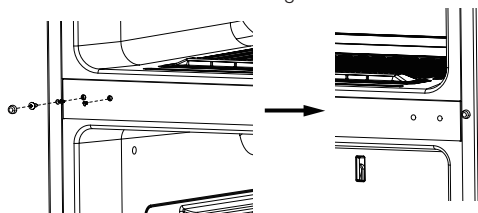

7. Assemble the Middle Hinge (7) to the left side.

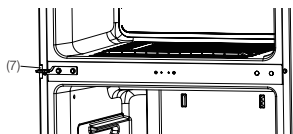


8. Lay the refrigerator, be careful not to scratch. Disassemble the Leg (8) and the bolts, remove the Hinge Low (9).

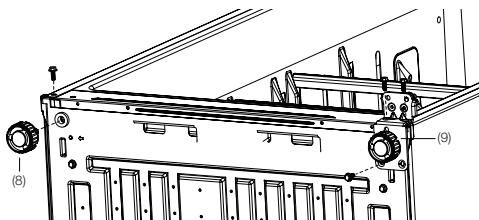

Be careful not to scratch.

9. Remove the screw and Grommet Hinge (10) on the bottom right side of Freezer door. Switch Stopper-FRE (11) and Grommet Hinge (10) from right side to the left.

 Before



After

 


10. Switch Grommet Hinge (12) from top left side of Freezer door to the right.




11. Remove the screws and Grommet Hinge (13) on the bottom right side of Fridge door. Switch Stopper-REF (14), Grommet Hinge (13) and Bracket Stopper (15) from right side to the left.

Before




After

 

12. Switch Grommet Hinge (16) from top left side of Fridge door to the right. And switch Cap-Hinge Hole (17) from right side to the left.

 
Before



After




13. Assemble the Fridge door.

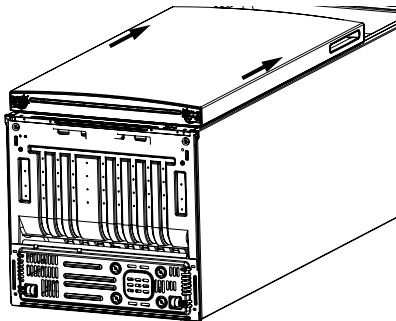


Be careful not to scratch.


14. Switch the position of the Guide Auto Close and Shaft.

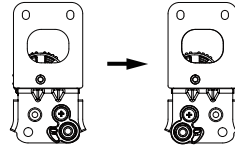

Assemble the Hinge Low (9). And assemble the Leg (8) and the bolt

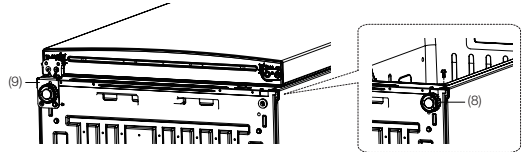


15. Raise the refrigerator, and assemble the Freezer door. Be careful not to scratch.

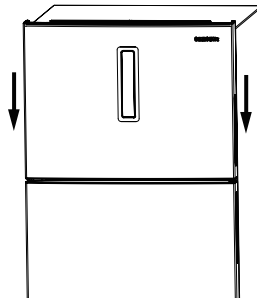


The door is heavy, be careful not to injure yourself when removing the door, and be careful not to scratch.

 16. Separate the Hinge Shaft and then flip the Upper Hinge and reattach the Hinge Shaft.




17. Assemble the Upper Hinge (6) and the Cap Hole Top (2).

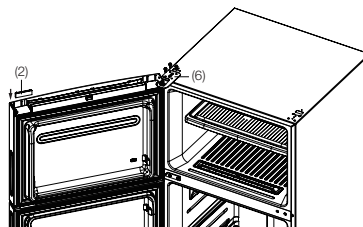


10_Setting up


18. Take out the Cap Hinge Upp-L (18) from the underneath of the Cap Table (1), and put in the Cap Hinge Upp-R (5). Assemble the Cap Spacer Door (4)

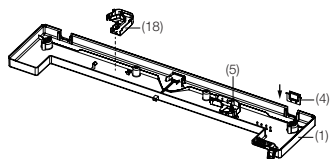


19. Insert the wire into the Cap Hinge Upp-L (18), the wire must be fastened in a suitable place by hook, otherwise the wire could be crushed. Then assemble the Cap Hinge Upp-L.

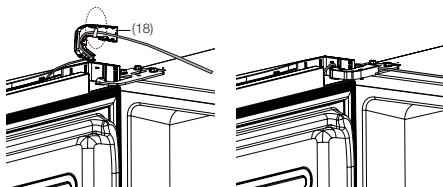

20. Connect the housing. Assemble the Cap Table (1) and the Cover Cap Door (3) after assuring the position of wires, be careful not to crush the wires.

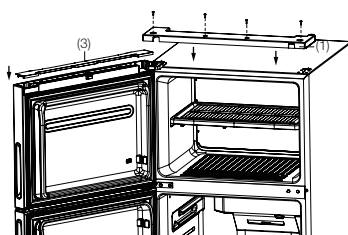


21. Detach the Fridge and Freezer gaskets and attach them after rotating 180° (Make sure the door gaskets are properly arranged. If not, there can be a noise or dew can be formed which affects performance of unit).

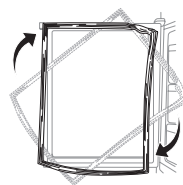

22. Make sure the doors are working properly. And assemble all the accessories.

Operating your refrigerator

USING THE CONTROL PANEL (ELECTRONIC CONTROL TYPE)

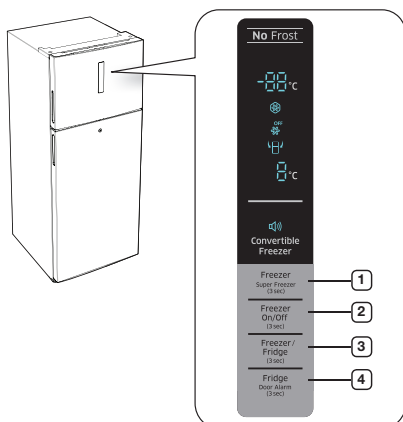

- Each time you press the button, a short beep will sound.

- When not in use the temperature display will turn off, this is normal.

1 Freezer


Press the Freezer button to set the freezer to desired temperature from the range between -14°C and -23 °C. Default set temperature is set on -20°C and each time you press the Freezer button, temperature will change in following order and temperature indicator will display the desired temperature.

→ -19°C - -20°C - -21°C - -22°C - -23°C
-18°C - -17°C - -16°C - -15°C - -14°C ←




Fridge or Freezer temp indicator will blink when temperature in the fridge or freezer compartment goes up dramatically by storing warm food or frequent door opening. (Fridge or Freezer temperature indicator will stop blinking when temperature in the fridge or freezer becomes normal. If temperature indicator does not stop blinking after several hours, please contact your service center.

Press this button for 3 seconds to activate the Super Freeze function. Super Freeze indicator (❄️) will light up and the refrigerator will speed up the time to needed to freeze products in the freezer. This function will be activated for 72 hours and freezer indicator will display -23°C. This function switches off automatically. When the Super Freeze process is completed, the Super Freeze indicator switches off and the freezer switches back to the previous temperature setting. When you use this function, the energy consumption will increase. To deactivate this function, press the Freezer button for 3 seconds.

 If you need to freeze large amount of food stuff, activate Super Freeze function 24 hours before.


2 Freezer On/Off

Press this button for 3 seconds to turn on or off the freezer room. This function will be operated after 10 seconds of pressing this button.

 **CAUTION** When you select Off function on display for temperature of freezer compartment, the real temperature of freezer compartment can be felt as cool. In this case, fan is being operated for prevention of food smell or mold, "not for cooling". So don't put the foods inside of freezer compartment in the case of Off function on display. Deterioration or rottenness can spoil your foods.

3 Freezer -> Fridge

Press this button for 3 seconds to convert the freezer room into the fridge room. This function will be operated after 10 seconds of pressing this button.

 **WARNING** **Danger of explosion** When you cancel this function, glass bottles containing liquids that can freeze should never be stored in the freezer room.

4 Fridge

Press the Fridge button to set the fridge to desired temperature from the range between 1°C and 7°C. Default set temperature is set on 3°C and each time you press the Fridge button, temperature will change in following order and temperature indicator will display the desired temperature.


→ 3°C — 2°C — 1°C — 7°C —
4°C — 5°C — 6°C ←

Press and hold this button for 3 seconds to activate the Alarm function. Alarm indicator (🔔) will light up and the refrigerator will alert you with alarm sound if the refrigerator door is kept open for longer than 2 minutes.

CONTROLLING THE TEMPERATURE (DIAL CONTROL TYPE)

Freezer


SUPER FREEZE : If you need to freeze large amount of food stuff, set the temperature of freezer compartment as the Super Freeze direction at least 24 hours before.

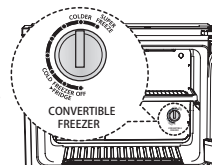


And it should be considered that the energy would be consumed more at this Super Freeze direction. So only 72 hours is recommended for freezing of food stuff with Super Freeze.

COLD : When storing a small quantity of food to be frozen.

FREEZER ->FRIDGE : To convert the freezer room into the fridge room, set the dial at this point.

 **WARNING** **Danger of explosion** When you cancel this function, glass bottles containing liquids that can freeze should never be stored in the freezer room.


OFF : To turn off the freezer room, set the dial at this point.

 **CAUTION** When you select Off direction of rotary switch for temperature of freezer compartment, the real temperature of freezer compartment can be felt as cool. In this case, fan is being operated for prevention of food smell or mold, "not for cooling". So don't put the foods inside of freezer compartment in the case of Off direction of rotary switch. Deterioration or rottenness can spoil your foods.


Fridge

COLDER : When storing large quantities of food to be refrigerated or temperature is not cold enough.

COLD : When the food refrigerated is frozen, or there is a small quantity of food.

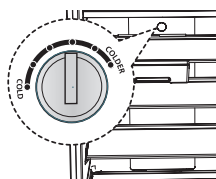

Recommended setting for RT60*

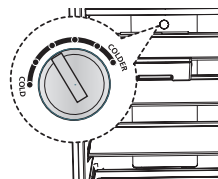


Recommended setting for RT55*

MAKING ICE

TWIST ICE MAKER MODEL

Making ice cubes

Remove the ice cube tray by pulling it towards you. Fill the tray with water up to the maximum water level marked on the rear of the tray.

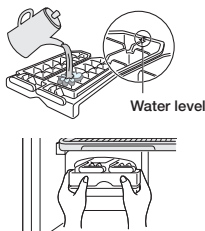

Slide the tray back into the holder, taking care not to spill the water.

Wait until the ice cubes are formed.

Freezing time : It is recommended that you wait for about one hour with the temperature set to Power Freeze for the ice cubes to form.

Removing the ice cubes

Make sure that the ice cube storage bin is in place under the ice cube tray. If not, slide it into place.

Twist one of the levers firmly in the clockwise direction until the tray twists slightly.

Result : The ice cubes fall into the storage bin.

Repeat Step 2 for the other half of the tray, if necessary.

Remove the storage bin by:

- Lifting it slightly
- Pulling it towards you

REMOVABLE ICE TRAY MODEL

Making ice cubes

Remove the ice cube tray by pulling it towards you. Fill the tray with water up to the maximum water level marked on the rear of the tray.



Slide the tray back into the holder, taking care not to spill the water.

Removing the ice cubes

To remove ice cubes, hold the tray at its ends and twist gently.



WARNING

Danger of explosion


Glass bottles containing liquids that can freeze should never be stored in the freezer as the glass will explode when the contents freeze.



To get more space, you can remove the TWIST ICE MAKER, ICE STORAGE BIN and ICE CUBE TRAY.

It does not affect thermal and mechanical characteristics.

A declared storage volume of frozen food storage compartment is calculated with these drawers removed.

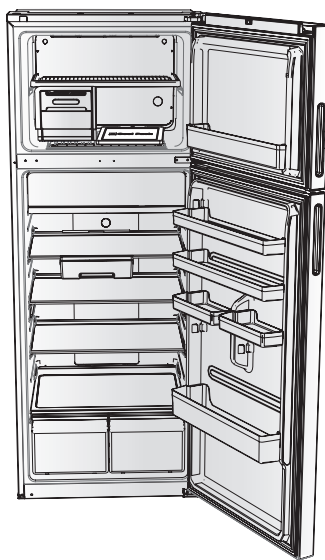


WARNING

• If you plan to go away for a significant time, empty the refrigerator and turn it off. Wipe the excess moisture from the inside of the appliance and leave the doors open. This helps keep odour and mold from developing.


- If the refrigerator is not to be used for a long period of time, pull out the power plug.
- The door guard for freezer is the two star section so the temperature is slightly higher than the other freezer compartments.

REMOVING THE REFRIGERATOR ACCESSORIES

1. Pull out the ice tray first and then lift up the front part of freezer shelf and pull it out forward.

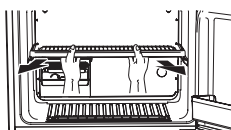


2. Lift up the fridge shelf and pull it forward.

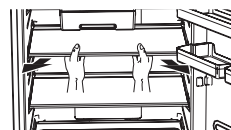

3. Lift up the vegetable bin lid and pull it forward.

Pull out vegetable box while lifting it up pulling forward after it has reached the middle of the slide.

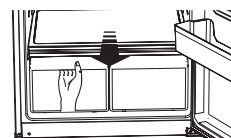

4. Lift up and pull out the door guards.



- Before removing any accessories, make sure that no food is in the way. When possible, remove the food altogether to reduce the risk of accidents.

- To get the best energy efficiency of this product, please leave all selves, drawers and baskets on their original position like as illustration in page (9).

- CAUTION** While assembling, put the freezer shelf, refrigerator shelves and cool pack(option) in the correct position and do not put them upside down. It may cause a personal injury or material damage.



CLEANING THE REFRIGERATOR



WARNING

Do not use Benzene, Thinner or Clorox™ for cleaning.

They may damage the surface of the appliance and can create a risk of fire.



CAUTION

Do not spray the refrigerator with water while it is plugged in, as it may cause an electric shock.

Do not clean the refrigerator with benzene, thinner or car detergent for risk of fire.


REPLACING THE INTERIOR LIGHT



For LED lamp, please contact service engineer to replace it.



We strongly recommend that the spaces between protrusions below freezer shelf should be empty to get the best performance for freezer compartment.

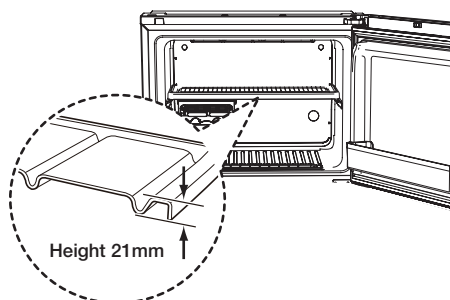


Troubleshooting

PROBLEM	SOLUTION
The appliance is not operating at all or the temperature is too high.	<ul style="list-style-type: none"> • Check if the power plug is correctly connected. • Is the temperature control on the front panel correctly set? • Does sun shine on the appliance or are there any heat sources nearby? • Is the back of the appliance too close to the wall?
The food in the refrigerator is frozen.	<ul style="list-style-type: none"> • Is the temperature control on the front panel set to the coldest temperature? • Is the surrounding temperature too low?
There are unusual noises.	<ul style="list-style-type: none"> • Check if the appliance is installed on a stable and even floor. • Is the back of the appliance too close to the wall? • Have any foreign objects fallen behind or under the appliance? • Is the noise coming from the compressor in the appliance? • A ticking sound occurs when the various accessories contract or expand.
The front corners and sides of the appliance are warm and condensation starts to form.	<ul style="list-style-type: none"> • Heat-proof pipes are installed in the front corners of the appliance to prevent condensation from forming. When the surrounding temperature rises, this may not always be effective. However, this is not abnormal. • In very humid weather, condensation may form on the outer surface of the appliance when the moisture in the air comes into contact with the cool surface of the appliance.
You can hear a liquid bubbling in the appliance.	<ul style="list-style-type: none"> • This is the refrigerant, which cools the inside of the appliance.
There is a bad smell inside the appliance.	<ul style="list-style-type: none"> • Is there any spoiled food inside of the refrigerator? • Make sure that strong smelling food (for example, fish) is wrapped so that it is airtight. • Clean out your refrigerator periodically and throw away any spoiled or suspect food.
There is a layer of frost on the appliances walls.	<ul style="list-style-type: none"> • Are the air outlet vents blocked by food stored inside the refrigerator? • Space the food out as much as possible to improve ventilation. • Is the door fully closed?
Condensation forms on the inside wall of the appliance and around vegetables.	<ul style="list-style-type: none"> • Food with a high water content is stored uncovered with a high humidity level or the door has been left open for a long time. • Store the food with a cover or in sealed containers.

Ambient Room Temperature Limits

This refrigerator is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Class	Symbol	Ambient Temperature range (°C)
Extended Temperate	SN	+10 to +32
Temperate	N	+16 to +32
Subtropical	ST	+16 to +38
Tropical	T	+16 to +43

-  Internal temperatures may be affected by such factors as the location of the refrigerator, ambient temperature and the frequency with which you open the door. Adjust the temperature as required to compensate for these factors.

English



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.


Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

COUNTRY	CALL	Web site
AUSTRALIA	1300 362 603	www.samsung.com/au/support
COLOMBIA	Bogotá 600 12 72 Gratis desde cualquier parte del país 01 8000 112 112 ó desde su celular #SAM(726)	www.samsung.com/co/support
EIRE	0818 717100	www.samsung.com/ie/support
HONG KONG	(852) 3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free	www.samsung.com/in/support
BANGLADESH	09612300300	www.samsung.com/in/support
MALAYSIA	1800-88-9999 603-77137477 (Overseas contact)	www.samsung.com/my/support
NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
PANAMA	800-7267 800-0101	www.samsung.com/latin/support (Spanish) www.samsung.com/latin_en/support (English)
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
SOUTH AFRICA	0860 SAMSUNG (726 7864)	www.samsung.com/support
UK	0330 SAMSUNG (7267864)	www.samsung.com/uk/support
VIETNAM	1800 588 889	www.samsung.com/vn/support

This product is RoHS compliant

-  In an effort to promote recycling this user manual is printed on recycled paper.