

Sunbeam

Ceramic Heater

Digital Thermostat Control

1800W oscillating heater with timer

Instruction Booklet
HE2125

Please read these instructions carefully and
retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Sunbeam's Safety Precautions for your Heater	2
Sunbeam's Total Safety System	3
Features of your Compact Oscillating Ceramic Heater	4
Using your Compact Oscillating Ceramic Heater	6
Using the Oscillation function	8
Resetting the Total Safety System	8
Troubleshooting Guide	9
Care and Cleaning	9

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Sunbeam's Safety Precautions

- This heater becomes hot during use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (90cm) away from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left unattended.
- Always unplug the heater when not in use.
- Do not use outdoors.
- Do not run the cord of the heater under carpeting. Do not cover the cord with throw rugs, runners or other floor coverings. Arrange the cord away from traffic areas where it will not be tripped over.
- Do not locate the heater immediately below a socket outlet.
- Do not use this heater in the immediate surrounds of a bath, shower, laundry area or swimming pool.
- Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause electric shock or fire, or damage to the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, such as beds, where opening may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where petrol, paint or flammable liquids are used or stored.
- To prevent overheating, do not cover the heater.

Important instructions – retain for future use.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Sunbeam's Total Safety System

Safety auto shut off

Your Sunbeam Compact Oscillating Ceramic heater is equipped with a safety system that detects any abnormally high temperatures within the heater and automatically shuts it off to prevent overheating. If the heater overheats an alarm will sound continuously, the LED's will flash and the LCD screen will show 00.

Do not operate the heater with the alarm sounding. Immediately turn the heater off at the power outlet and check that there aren't any objects on or around the heater.

This first stage of the safety system requires the user to manually reset the heater for it to resume operation.

For instructions on how to reset your heater, see page 8.

Thermal back-up device

In addition to this automatic shut-off, your heater contains an over temperature thermal back-up device to provide additional back-up protection. If the heater is in an overheat situation, the back-up device will operate, stopping the power flow to the element and fan.

In the event that the back-up device is activated, the heater will need to be reset. For instructions on how to reset your heater, see page 8.

Features of your HE2125 Oscillating Ceramic Heater

Power ON light

Illuminates to indicate that the heater is connected to the power outlet.

LCD screen

The LCD screen displays the temperature setting.

Mode button

Press the mode button to select the desired operating mode:
LOW HEAT, HIGH HEAT,
AUTO OR FAN


Fan setting


Ideal for circulating cool air in summer, the fan setting operates the fan without heat.

Timer button

Press and hold to activate timer function.

ON/OFF button and thermostat dial

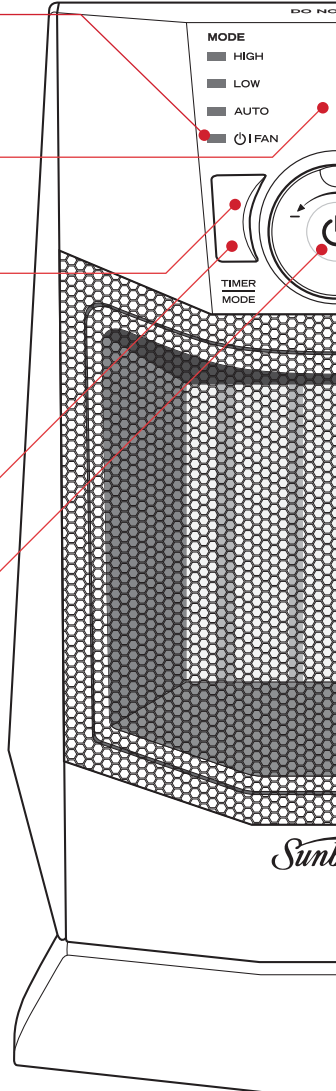

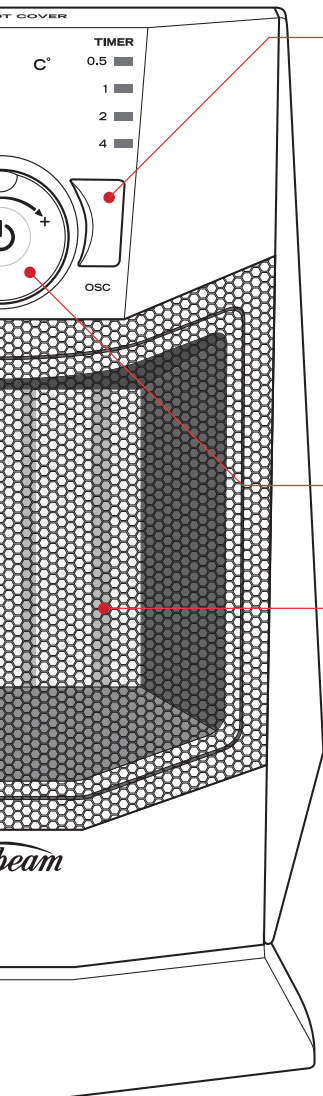

Oscillation function

The heater oscillates 90 degrees to provide greater heat distribution. Simply press the oscillation button (OSC) to activate this function.

Electronic thermostat

The electronic thermostat allows for precise temperature control. Select the auto mode to set the electronic thermostat and turn the thermostat dial to the desired heat setting. Once your desired temperature is reached, the heater will cycle on and off to maintain it.

Thermostat dial

When in auto mode, turn the thermostat dial to select your desired temperature.

Ceramic element

The 1800 watt ceramic element is more efficient than other element types as it converts more electricity into heat.

Ceramic elements are also safer than other element types. They do not glow and operate at lower temperatures than other heaters. They convert more energy into heat, thereby using less power.

Safety auto shut-off

The safety auto shut-off system detects any abnormally high temperature variations within the heater and automatically switches it off to prevent overheating.

Using your Compact Oscillating Ceramic Heater

- 1.Place the heater on a flat level surface and ensure that the air intake and outlet are clear of obstructions.
- 2.Insert the plug into a 230/240V power outlet and turn the power on.
- 3.The power on light will illuminate and the unit will emit a “ beep”.

NOTE: When the heater is switched on at the power outlet it will automatically be in Standby mode.

4.Press the power button (⏻) to activate the heater. Use the Mode button to scroll for your desired setting. See settings below:

High	– Highest heat setting
Low	– Lowest heat setting
AUTO	– For operating the digital thermostat
FAN	– Operates without heat

- 5.To switch your heater off, press the power (⏻) button.

Setting the digital thermostat

The digital thermostat allows you to select your desired temperature between 15°C and 30°C.

NOTE: When the air temperature reaches 2 degrees above the selected temperature the unit will turn off.

- 1.Press the Mode button until the Auto mode is displayed. The LCD will then flash 25 degrees as the default temperature.
- 2.Turn the thermostat dial to select your desired temperature. After 5 seconds the LCD will stop flashing and will display the room temperature.

NOTE: The temperature range is from 15°C to 30°C.

- 3.To help maintain the room temperature for longer, the unit will turn off automatically when the room temperature is 2°C above the set temperature.

NOTE: It is normal for the heater to cycle on and off as it maintains the preset temperature. To prevent the unit from cycling, raise the thermostat setting.

Using your Compact Oscillating Ceramic Heater continued

Timer function

The timer function allows you to pre-set the unit to switch off after the selected time. Choose from half hour increments up to 7.5 hours.

LED Setting	Time Till OFF (hh:mm)
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	00:30
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	01:00
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	01:30
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	02:00
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	02:30
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	03:00
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	03:30
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	04:00

- 1.Press and hold the Timer/Mode button until the timer LED's illuminate.
- 2.Select the desired shut off time by rotating the thermostat dial until you reach the correct time.
- 3.Once the LED stop flashing, the timer is set.

LED Setting	Time Till OFF (hh:mm)
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	04:30
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	05:00
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	05:30
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	06:00
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	06:30
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	07:00
<div><div></div> 0.5</div> <div><div></div> 1</div> <div><div></div> 2</div> <div><div></div> 4</div>	07:30

Using the Oscillation Function

The 90 degree oscillation function can be used in any mode.

1. Press the oscillation button (OSC) on the front panel of the heater. The heater will then begin to oscillate from side to side.

2. To stop the heater from oscillating, simply press the oscillation button (OSC) once again.

Resetting the Total Safety System

Resetting the safety auto shut-off

The safety auto shut-off detects any abnormally high temperatures within the heater and shuts it off to prevent overheating. Should the safety auto shut-off activate and switch off the heater, it will need to be reset.

1. Unplug the heater and wait 10 minutes for the unit to cool down.
2. After 10 minutes, plug the heater in again and operate as usual.

Resetting the thermal backup device

In addition to the safety auto shut-off, your heater also contains a thermal back-up device for additional protection. Should the thermal back-up device activate and switch off the heater it will need to be reset.

To reset the heater, follow steps 1 and 2 on this page.

Troubleshooting Guide

If your heater fails to operate check the following:

- Make sure the electrical outlet or circuit breaker is working.
- Check for obstructions. Never cover the heater. Never attempt to open the heater. If the fault persists please call Sunbeam Customer Service for assistance.
- Check that the thermostat is not set too low. Turn the thermostat dial clockwise to adjust the electronic thermostat until the heater restarts.
- The safety auto shut-off may have activated, so follow the instructions for resetting on page 8.

Care and Cleaning

Ensure that the heater is switched off and disconnected from the power outlet before cleaning.

Carefully wipe the exterior of the heater with a soft damp cloth and dry thoroughly with a dry cloth.

Over time, dust may accumulate on the front grilles. This can be removed by wiping with a damp cloth.

Store the heater in a cool dry place when not in use. Store the heater in its carton if possible.

Notes

Notes

Notes

2 Year Warranty

This Sunbeam product is covered by a 2 year replacement warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Alternatively, you can send a written claim to Sunbeam to:

Australia

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

New Zealand

Level 6, Building 5, Central Park,
660-670 Great South Road,
Greenlane, Auckland

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and send a copy of your original receipt to Sunbeam.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested.

Should your product develop any defect within 2 years of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
 - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;
 - servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
 - use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
 - exposure of the product to abnormally corrosive conditions; or
- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

In Australia

Visit www.sunbeam.com.au

Or call 1300 881 861

In New Zealand

Visit www.sunbeam.co.nz

Or call 0800 786 232



is a registered trademark.

Made in China.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2013.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street

Botany NSW 2019 Australia

Level 6, Building 5, Central Park

660-670 Great South Road

Greenlane, Auckland

New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.