

Operating instructions

AdoraWash V6000

Washing machine

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliances is reserved.

Validity

The model number corresponds to the first alphanumerics on the identification plate. These operating instructions apply to:

Appliance designation	Model number	Type
AdoraWash V6000	11025	AW6T-11025

Variations depending on the model are noted in the text.

Contents

1	Safety warnings	5	5.15	With childproof lock activated.....	23
1.1	Symbols used.....	5	5.16	Drum illumination.....	23
1.2	General safety precautions.....	5	5.17	Opening the appliance door during washing.....	24
1.3	Appliance-specific safety precautions	5	5.18	End of programme	24
1.4	Instructions for use.....	6	5.19	EcoManagement.....	26
2	Using for the first time	8	6	Favourites	26
2.1	Transport lock	8	6.1	Defining favourites.....	26
2.2	Running the first wash cycle without any washing.....	8	6.2	Changing favourites.....	27
3	Appliance description	8	6.3	Deleting favourites.....	27
3.1	Construction	8	6.4	Starting favourites.....	27
3.2	Operating and display elements.....	9	7	V-ZUG-Home	28
3.3	Indicator lights.....	10	8	User settings	28
3.4	Button state.....	10	8.1	Customizing user settings.....	28
4	Programme overview	10	8.2	Button tone	28
4.1	Whites and coloureds programmes	10	8.3	Background image.....	28
4.2	Textile programmes	11	8.4	Brightness.....	29
4.3	Programmes for normally soiled cotton load.....	12	8.5	Language	29
4.4	Extra programmes.....	12	8.7	Spin speed.....	29
4.5	Additional functions.....	13	8.8	Degree of soiling	29
4.6	EcoManagement.....	15	8.9	AquaPlus	29
5	Operating the appliance	16	8.10	Automatic door opener.....	29
5.1	Preparations.....	16	8.11	Delayed start / OptiTime	30
5.2	Loading the washing.....	16	8.12	Hygiene info.....	30
5.3	Adding washing detergent.....	17	8.13	Childproof lock.....	30
5.4	Detergent dosage.....	18	8.14	Drum illumination	30
5.5	Dyeing textiles	18	8.15	EcoManagement.....	30
5.6	Selecting programme	18	8.16	Multi-component detergent.....	30
5.7	Selecting additional functions	20	8.17	Loosening up the washing.....	30
5.8	EcoHybrid.....	20	8.18	Soft water	31
5.9	Delayed start	20	8.19	EcoHybrid.....	31
5.10	OptiTime	21	8.20	V-ZUG-Home.....	31
5.11	Separate rinsing/spinning.....	21	8.21	Factory settings.....	31
5.12	Washing with multi-component detergent.....	22	9	Demo mode	31
5.13	Correcting entry	22	9.1	Switching on	31
5.14	Aborting a programme	22	9.2	Switching off	32

10	Care and maintenance	32
10.1	Cleaning intervals	32
10.2	Cleaning the detergent dispenser drawer	32
10.3	Cleaning the water inlet filter	33
10.4	Emergency draining	33
10.5	Cleaning the foreign body trap	34
10.6	Cleaning the drum illumination	34
10.7	Opening the appliance door in the event of a power failure	35
11	Trouble-shooting	36
11.1	Error messages.....	36
11.2	Other possible problems.....	38
11.3	Unsatisfactory wash results.....	40
12	Spare parts	42
13	Technical data	43
13.1	Note for testing institutes	43
13.2	Consumption values	44
13.3	VAS Vibration Absorbing System	45
13.4	Water and energy economy	45
13.5	EcoStandby.....	45
14	Washing tips	46
14.1	Energy and water economy.....	46
14.2	Avoiding damage	46
15	Disposal	47
16	Index	48
17	Service & Support	51
	Quick instructions	52

1 Safety warnings

1.1 Symbols used



Denotes important safety precautions.

Failure to observe said precautions can result in injury or in damage to the appliance or fittings!



Information and precautions that should be observed.



Information on disposal



Information about the Operating Instructions

- Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time!



- This appliance can be used by children aged 8 and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed on the safe use of the appliance and have understood the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be undertaken by children without supervision.

- If an appliance is not equipped with a mains cable and a plug or other means for disconnecting from the mains with a contact opening on each pole complying with the conditions of overvoltage category III for full isolation, an isolating device must be incorporated into the permanently installed electrical installation in accordance with the installation regulations.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions

- Children under 3 years of age must be kept away from the appliance unless they are constantly supervised.
- The appliance has a maximum dry load capacity of 8 kg.

- The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or fire risk.

1.4 Instructions for use

Before using for the first time

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/ electrician carry out the necessary work.
- If connected to the water mains by detachable hoses, the new hose set supplied with the appliance must be used. Do not reuse old hose sets.
- Ensure ready access to the power socket being used.

Correct use

- The appliance is only suitable for washing home textiles with water and regular automatic washing machine detergent.
- The appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and similar working environments, farm houses, hotels, motels, bed and breakfast establishments and similar residential type establishments, as well as communal laundry rooms in multi-family buildings.
- The appliance is not intended to be used in laundrettes or similar applications and may only be used for the above-mentioned purpose.
- No liability is assumed for any damage caused by improper or incorrect use.

- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its Customer Services or a similarly qualified person. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance.
- If the appliance is not working properly or in case a repair is needed, follow the instructions given in the «Service and repairs» section. Please contact our Customer Services if necessary.
- Use original spare parts only.
- Before closing the appliance door and starting a programme, ensure that there are no foreign objects or pets in the drum.

Note on use

- If the appliance is not functioning properly, disconnect it from the power supply immediately.
- To protect your washing, follow the fabric care symbols and the hints and advice in the «Washing tips» section.
- Textiles that have been cleaned, treated or soaked with flammable chemicals, detergents or solvents such as benzene, alcohol, stain remover, oil, paint, wax, etc. are not to be washed in the appliance. Fire or explosion hazard! Wash materials containing such substances first by hand with water or allow the solvent to evaporate completely.
- Ensure the washing drum has stopped moving before reaching inside. Do not touch the washing drum while it is still in motion – risk of serious injury!
- Disconnect the appliance from the mains before carrying out maintenance work.

Caution: Risk to life!

- Packaging material, e.g. plastic film and polystyrene, can be dangerous for children. Danger of suffocation! Keep packaging material away from children.

- When carrying out maintenance work on the appliance, including replacing light bulbs, cut off the electricity supply to the appliance: remove the screw fuse from the holder or switch the circuit breaker off, or unplug from the mains socket.

How to avoid damaging the appliance

- Close the appliance door carefully.
- When cleaning the appliance make sure no water gets inside it. Use a moderately damp cloth. Do not spray the outside or the inside of the appliance with water. If water gets inside the appliance, it will cause damage.
- Before closing the appliance door and starting a programme, ensure that there are no foreign objects or pets in the washing drum, detergent compartment or around the foreign body trap. Foreign objects such as coins, nails, paper clips, etc. can damage parts of the appliance as well as the washing.
- During longer periods of absence, turn off the water tap before switching off the power by pulling out the mains plug. Never pull the mains plug out by the cable. Please note: The built-in overflow protection is rendered inactive when the power is switched off.
- Textiles with metal reinforcements are not to be washed in the appliance Risk of damage.
- Trainers, diving suits, rucksacks, carpets, etc. are not to be washed in the appliance.

2 Using for the first time



The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/electrician carry out the necessary work.

2.1 Transport lock




Remove the transport lock (hexagon head screws at the back of the appliance) in order to avoid damage to the appliance (see installation instructions).

2.2 Running the first wash cycle without any washing


- ▶ Add a little washing detergent to compartment II of the detergent dispenser drawer (see page 17).
- ▶ Run an empty coloureds 60 °C cycle to remove any residues from the manufacturing process (see page 18).

3 Appliance description


3.1 Construction

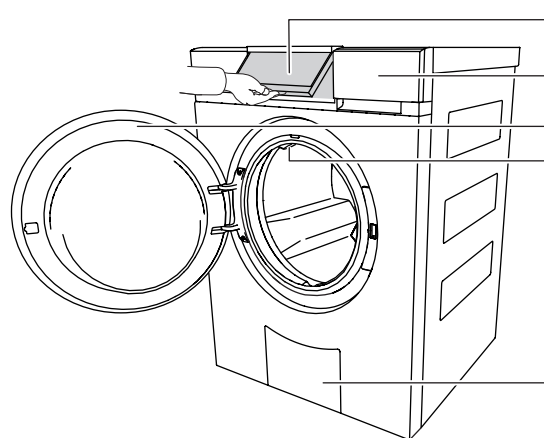

Detergent dispenser drawer (2)

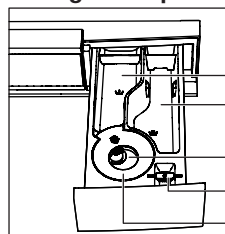


Drain tray (5)

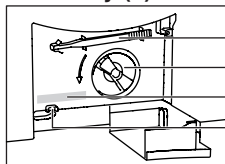

- | | |
|---------------------------------------|--|
| 1 Operating panel (pivoting) | 9 Flap for liquid detergent /
Drain tray opener |
| 2 Detergent dispenser drawer | 10 Siphon for fabric conditioner |
| 3 Appliance door | 11 Emergency door release tool |
| 4 Circulation nozzle | 12 Foreign body trap |
| 5 Drain tray | 13 Identification plate / serial number (SN) |
| 6 Pre-wash detergent, compartment I | 14 Emergency door release |
| 7 Main wash detergent, compartment II | |
| 8 Fabric conditioner, compartment | |

3.2 Operating and display elements

Operating panel

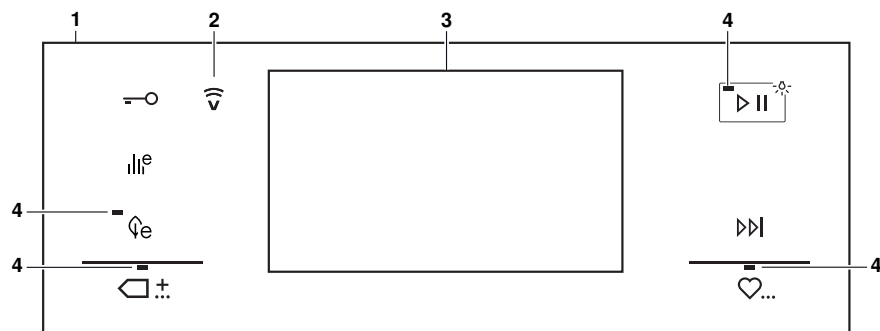


- 1 Operating panel
- 2 V-ZUG-Home display
- 3 TouchDisplay
- 4 Indicator lights

Buttons

- Door opener
- EcoManagement
- EcoHybrid
- Programmes for normally soiled cotton load and extra programmes
- Start/Pause/Drum illumination
- End of programme / Fast forward
- Favourites

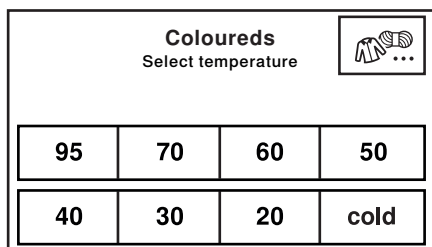


TouchDisplay



Buttons

- Textile programmes
- 95** Whites 95 °C
- 70** Coloureds 70 °C
- 60** Coloureds 60 °C
- 50** Coloureds 50 °C
- 40** Coloureds 40 °C
- 30** Coloureds 30 °C
- 20** Coloureds 20 °C
- cold** Coloureds 10 °C



3.3 Indicator lights

Indicator light	Activity	State
	Indicator light is illuminated.	Function is active.
	Indicator light is flashing.	Function is selectable.
	Indicator light is not illuminated.	Function is not selectable.





 
 



 
 




 
 
 

 

3.4 Button state

Background colour	Symbol colour	State
Blue	White	Function is active.
Black	White	Function is selectable.
Black	Black	Function is not selectable.

4 Programme overview

To select the right programme, please follow the fabric care symbols on the laundry labels, e.g. . Textiles with the  fabric care label may only be washed using the «Hand wash» textile programme.


4.1 Whites and coloureds programmes

Programmes	Fabric care symbols	Load capacity
95 Whites 95 °C: For white cottons/linens e.g. bed and table linen, towels, white or colour-fast underwear.		1–8 kg
70 Coloureds 70 °C: Energy-saving programme for white cottons.		1–8 kg
60 Coloureds 60 °C: For coloured cottons e.g. bright blouses, overalls, shirts, bed linen.	 	1–8 kg
50 Coloureds 50 °C: Energy-saving programme for coloured cottons.	 	1–8 kg
40 Coloureds 40 °C: For coloured cottons and mixed washing e.g. coloured sweatshirts, t-shirts.	  	1–8 kg
30 Coloureds 30 °C: For coloured cottons and mixed washing e.g. t-shirts.	   	1–8 kg
20 Coloureds 20 °C: Energy-saving programme for lightly soiled textiles.	   	1–8 kg
cold Coloureds 10 °C: Refresh programme without heat.	   	1–8 kg

4.2 Textile programmes



Touch the  button for the selection of textile programmes.

Programmes		Load capacity
1/4	Coloureds: Standard programme	1–8 kg
	Woollens: Gentle treatment for woollens and other delicate textiles. Only for woollens with a felt-free finish and labelled as «machine washable».	1–2.5 kg
	Hand wash: Very gentle treatment for textiles labelled with the  fabric care symbol.	1–2 kg
	Shirts: Optimized for minimizing creasing, contains steam anti-crease.	max. 7 items
2/4	Down: Optimized for the particular wetting characteristics of down fabrics. Short spin at the beginning of the programme to get rid of any air in down textiles.	max. 2 kg
	Outdoor garments: For waterproof and breathable clothing. Higher water level during washing and spinning.	1–3 kg
	Silks: For delicate silk articles. Spin speed is reduced to minimize creasing.	1–1.5 kg
	Net curtains: Reduced washing action for very gentle treatment. Higher water level during washing and spinning. The washing remains lying in the water after the final rinse (stop after rinsing).	1–2 kg
	Draining with spinning	1x 
	Draining without spinning	2x 
3/4	Baby garments: Very thorough rinsing for the protection of sensitive baby skin. If 95 °C is selected as the temperature, a pre-wash is included.	1–5 kg
	Denim: Optimized for colour loss (colour run) from denim.	1–4 kg
	FirstWash: Quick wash cycle for new textiles. Add only a very small amount of washing detergent! Not suitable for woollens and hand wash!	1–2 kg
	Underwear: For very delicate textiles labelled with the  fabric care symbol e.g. underwear.	1–3 kg


Programmes	Load capacity
4/4 Black garments: Optimized rinsing through a higher water level and extended rinsing time for dark textiles.	1–4 kg
Black hand wash: Optimized rinsing through a higher water level and extended rinsing time for dark textiles labelled with the  fabric care symbol.	1–2 kg
WetClean: For all fabrics labelled as washable. Most gentle treatment possible through applying a gentle rocking motion and a fine spray of water.	1–1.5 kg












4.3 Programmes for normally soiled cotton load

Touch the  button for the selection of programmes for normally soiled cotton load.

Programmes	Load capacity
 40 °C Coloureds normal: The recommended programme for washing normally soiled cottons at rated load capacity.	1–8 kg
 10 °C Coloureds normal: The programme with the lowest possible temperature setting for washing cottons. It corresponds to the 40 °C Coloureds normal programme without the water being heated. This programme has the same water level as the 40 °C Coloureds normal programme.	1–8 kg

4.4 Extra programmes

Touch the  button for the selection of extra programmes.









Programmes	Fabric care symbols	Load capacity
 Steam anti-crease: Dry washing is partially uncreased and made damp, ready to iron.	  	1–1.5 kg
 Steam anti-crease Plus: Can be selected together with the steam anti-crease programme. Extended steam phase, particularly suitable for linen textiles. The laundry when unloaded is damper than with steam anti-crease	  	1–1.5 kg
 Proofing: For starching or proofing laundry, add the agent to the fabric conditioner compartment.		1–3 kg
 Appliance hygiene: Steam cleaning without laundry.		0 kg
 Spin: Wet washing is spun. No wash cycle is carried out.		1–8 kg















 






4.5 Additional functions

Whenever a programme is selected, the selectable additional functions are displayed.

Additional functions

**Load
capacity**

	EcoHybrid: The appliance is equipped with two heating systems: <ul style="list-style-type: none"> Heat pump heater (approximately 1 kW heat output) with very low energy consumption. Suitable for heating up to 50 °C. Conventional auxiliary heater (approximately 2.8 kW heat output) with normal energy consumption. 	
	Optimal energy efficiency: Initially heated only using the heat pump heater. The conventional heater comes on at around 40–50 °C. The set temperature is also reduced. The extended washing time, however, ensures the washing performance is maintained. The energy consumed to heat the water is around 50–70% lower than with conventional washing machines without a heat pump.	
	Very good energy efficiency: Initially heated only using the heat pump heater. The conventional heater comes on at around 40–50 °C. It takes longer to reach the desired wash temperature. The energy consumed to heat the water is around 40-50% lower than with conventional washing machines without a heat pump.	
	Good energy efficiency: Heating using both heating systems simultaneously. This provides a high heat energy output. The energy consumed to heat the water is around 10-20% lower than with conventional washing machines without a heat pump.	
	Easy care: For washing requiring very gentle treatment. Increased water level, reduced washing action and lower spin speed.	3.5 kg
	Pre-wash: Suitable for heavily soiled washing. Programme duration extended about 15 minutes.	
	Delayed start: For using cheap-rate electricity (setting range of up to 24 hours). The programme starts automatically when the set time is reached.	
	OptiTime: If a programme end time has been selected, OptiTime calculates the most energy-efficient programme that can be carried out in the time remaining to programme end. OptiTime reduces the washing temperature, while the washing performance is maintained. The more time is available for washing, the more the washing temperature can be reduced. If higher wash temperatures with a germ-killing effect are needed, a corresponding programme without the OptiTime function must be selected (see page 30).	

Additional functions	Load capacity
	Degree of soiling: Adjustment to the degree of soiling of the washing.
	Light soiling: For lightly soiled washing.
	Normal soiling: Extended wash time.
	Heavy soiling: Extended wash time, higher water level, an additional rinsing cycle.
	Soaking: The duration can be set between 0.5 and 6 hours.
	Anti-mite: The main wash is extended and intensified. The mites are killed and the allergens are rinsed out thoroughly.
	AquaPlus: There are 5 different settings for rinsing intensity.
	Standard: Normal water level.
	more water: Increased water level during the main wash and rinsing.
	+ 1 rinse: An additional rinsing cycle.
	more water + 1 rinse: Increased water level during the main wash and rinsing, an additional rinsing cycle.
	Skin protection: Increased water level during rinsing, two additional rinsing cycles. Suitable for sensitive skin.
	Spin speed: The spin speed can be changed. Delicates can be spun at a lower spin speed. However, this increases the drying time (greater energy consumption for tumble drying).
	Sprint: Quick programme for lightly soiled washing. 2.5 kg 2 instead of 3 rinsing cycles. The programme time is for the Eco-Hybrid setting  .
20	+  : 26 mins.
30	+  : 27 mins.
40	+  : 28 mins.
60	+  : 39 mins.
Note: Add a small amount of washing detergent. A large washing load or too much washing detergent can significantly extend the programme time. Use liquid detergent only.	
	Steam anti-crease: Reduces creasing significantly. Loosening-up period: 60 minutes. The washing is warm and should be hung up immediately to dry or be tumble dried. The spin speed is limited to 1000 rpm. max. 2 kg
	Separate rinsing / Separate spinning: The programme starts at the desired parts of the programme and the programme sequence is shortened (see page 21).

Additional functions

Load
capacity

Bio wash: The programme sequence is adapted for the use of multi-component detergents (alkaline detergent + bleach) (see page 22).

Soap washing The programme sequence is adapted for the use of multi-component detergents (softener + soap detergent) (see page 22).



Start/Pause/Drum illumination: Touch the button to start or interrupt programmes. Touch the button again to resume the programme after being interrupted. The drum illumination can be turned on and off.

4.6 EcoManagement

Button



Only active if «EcoManagement» is turned on in the user settings (see page 30). EcoManagement provides information on the energy and water consumption of the appliance. The following statistical data can only be retrieved when no programme is running:

- Energy and water consumption of the last programme
- Total energy and water consumption
- Average energy and water consumption of the last 25 programmes


The energy and water consumption of a programme is displayed during programme selection.

At the end of a programme, the energy and water consumption of the programme that has just ended is displayed.


The values can vary according to programme, load, additional functions and user settings.

5 Operating the appliance


5.1 Preparations

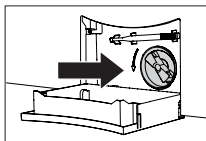


- ▶ Check the foreign body trap is inserted correctly (see page 34).

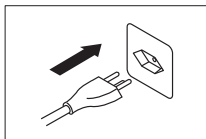

- ▶ Insert the mains plug into a mains socket.

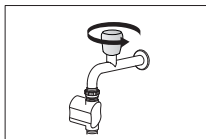

- ▶ Turn on water tap.

 

- ▶ Touch the button to open the appliance door.

5.2 Loading the washing

- ▶ Load up to a maximum of 8 kg dry washing.



full: Normally soiled whites and coloureds



max. $\frac{3}{4}$: Heavily soiled whites and coloureds




max. $\frac{1}{2}$: Easy care cottons, white and coloured synthetics as well as mixed fabrics



max. $\frac{1}{4}$: Delicates, woollens, silks, polyacrylics and net curtains



For wet loads, only half-fill the washing drum. The washing drum should not be loaded with any one single, heavy item.

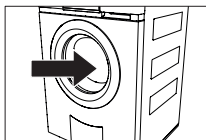

- ▶ Close the appliance door.
– The start screen appears.


Coloureds Select temperature				
95	70	60	50	
40	30	20	cold	



If no programme selection is made within 5 minutes, all the displays go out. Touch anywhere on the TouchDisplay at any time to display the start screen again.

5.3 Adding washing detergent

Liquid detergent

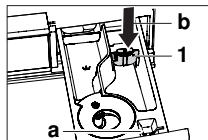


- ▶ Pull the detergent dispenser drawer out as far as it will go.
- ▶ Pull flap 1 upwards and out of position a and insert in position b.




Do not fill liquid detergent past the upper mark. Liquid detergent can only be used for the main wash with programmes without a pre-wash. If washing with a delayed start, add liquid detergent to a dosing aid (e.g. ball) and then place it directly in the washing drum so that no detergent gets onto the washing during the delayed start time.

Powder detergent

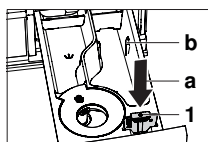

- ▶ Pull the detergent dispenser drawer out as far as it will go.
- ▶ Pull flap 1 upwards and out of position b and insert in position a.

Compartments

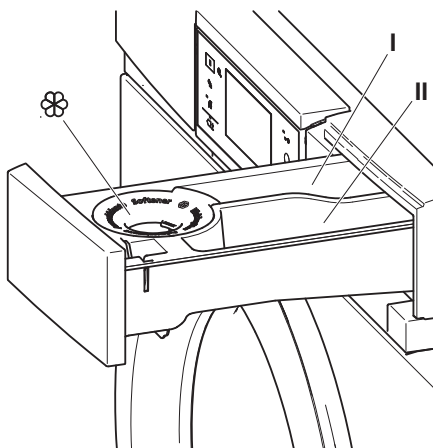

Conventional washing

Pre-wash detergent	Compartment I
Main wash detergent	Compartment II
Fabric conditioner	Compartment

Bio wash

Alkaline detergent	Compartment II
Bleach	Compartment I
Fabric conditioner	Compartment

Soap washing

Water softener	Compartment I
Soap detergent	Compartment II
Fabric conditioner	Compartment



Do not fill fabric conditioner past the upper mark.

5.4 Detergent dosage



Adding too much washing detergent can cause excess foaming. The consequences: poor wash results, damage to the appliance in the worst case.


The correct dosage depends on the degree of soiling, the wash load, the water hardness and the product used. Follow the manufacturer's dosing instructions.

Water hardness

Soft	0 °fH to 15 °fH
Medium	15 °fH to 25 °fH
Hard	over 25 °fH

The local water authorities can provide information on the level of water hardness in your area.

 After adding the washing detergent




- ▶ Push the detergent dispenser drawer back in.
- ▶ Select a programme.

5.5 Dyeing textiles

Textiles can be dyed in the appliance using suitable dyeing agents. Follow the manufacturer's safety instructions and warnings.

60

 - ▶ Select the desired programme (see page 18).
 - The programme starts with brief draining; water runs into the washing drum



- ▶ Open detergent dispenser drawer slightly.
- ▶ Add liquid dye components.
- ▶ Close the detergent dispenser drawer.

5.6 Selecting programme

Main wash programmes

When a programme is selected, all the necessary settings for it are assigned automatically. Additional functions can be selected or deselected by using further buttons in other views.





- ▶ Close the appliance door.
 - The start screen appears.

60

- ▶ Touch the button for the desired programme.
 - The programme selected, the expected duration, the expected programme end time and the selectable additional functions are displayed. The indicator light for the selectable button flashes.




- ▶ Touch the button.
 - The programme selected starts.

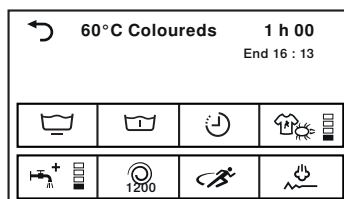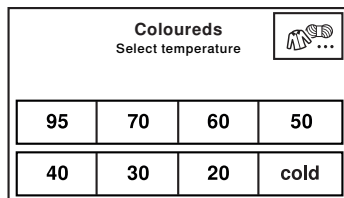

Textile programmes



 - ▶ Touch the button.
 - The selection of textile programmes appears in the TouchDisplay.



- ▶ Touch the button repeatedly until the desired textile programme is displayed.



- ▶ Touch the button for the desired textile programme.



- ▶ Touch the button for the desired temperature.
 - The programme selected and all selectable additional functions are displayed.



- ▶ Touch the button.
 - The programme selected starts.

Textile programmes		1/4
Coloureds	Woolens	
Hand wash	Shirts	

Programmes for normally soiled cotton load



- ▶ Close the appliance door.



- ▶ Touch the button.
 - A selection of programmes for normally soiled cotton load appears in the TouchDisplay.



- ▶ Touch the button for the desired programme for normally soiled cotton load.



- ▶ Touch the button.
 - The programme selected starts.

Extra		◀ ±	⚙
10° Standard	◀	Steam anti-cr.	🔥
40° Standard	◀	Proofing	☔
Spinning	🌀	App. hygiene	🦠



With the programmes for normally soiled cotton load, it is not possible to select the additional functions. Only delayed start is selectable.

Extra programmes



- ▶ Close the appliance door.



- ▶ Touch the button.
 - The selection of extra programmes appears in the TouchDisplay.



- ▶ Touch the button for the desired extra programme.




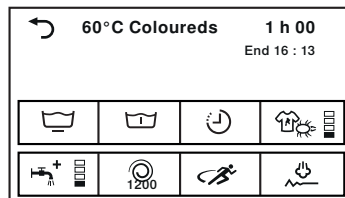
- ▶ Touch the button.
 - The programme selected starts.

Extra		◀ ±	⚙
10° Standard	◀	Steam anti-cr.	🔥
40° Standard	◀	Proofing	☔
Spinning	🌀	App. hygiene	🦠

5.7 Selecting additional functions

60

- ▶ Touch the button for the desired programme.
 - The programme selected and all selectable additional functions are displayed. The indicator light for the selectable  button flashes.



- ▶ For desired additional functions, touch the corresponding buttons.
 - The new programme duration and programme end time are displayed.



- ▶ Touch the button.
 - The programme selected starts.


5.8 EcoHybrid



- ▶ Touch the button while the indicator light is flashing.
 - The «EcoHybrid» menu appears in the TouchDisplay.



- ▶ Touch the button for the desired Eco-Hybrid setting.
 - The new programme duration and time are displayed.

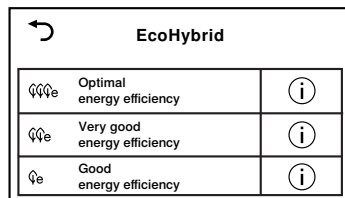

- ▶ Touch the button.
 - The programme selected starts.

5.9 Delayed start

Selecting programme end time

The option «Programme end, OptiTime off» must be enabled in the user settings under «Delayed start / OptiTime» (see page 30).

60

- ▶ Touch the button for the desired programme.



- ▶ Touch the button.
 - The input field for the programme end time appears in the TouchDisplay.

1 8


- ▶ Enter the time the desired programme should end.



- ▶ Touch the button.
 - The programme end time is saved.



- ▶ Touch the button again if any changes have to be made.

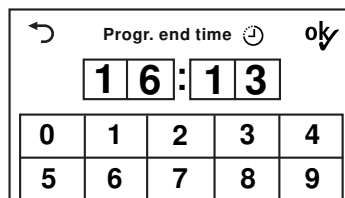



- ▶ Touch the button.
- ▶ The delayed start time starts. The desired programme starts so that it finishes at the programme end time.



Washing can be added at any time during the delayed start time (see page 24).

Selecting programme start time

The option «Programme start» must be enabled in the user settings under «Delayed start / OptiTime». (see page 30)

- ▶ Carry out steps analogous to those described in «Selecting programme end time» (see page 20).

5.10 OptiTime

The option «Programme end, OptiTime on» must be enabled in the user settings under «Delayed start / OptiTime» (see page 30).



 
- ▶ Touch the button for the desired programme.



- ▶ Touch the button.
 - The input field for the programme end time appears in the TouchDisplay.



- ▶ Enter the time the desired programme should end.




- ▶ Touch the button.



- ▶ Touch the button again if any changes have to be made.



- ▶ Touch the button.
- ▶ The delayed start time starts with the additional function «OptiTime». The desired programme starts so that it finishes at the programme end time.

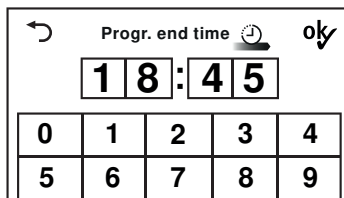

5.11 Separate rinsing/spinning



- ▶ Touch the button for the desired programme.



- ▶ Press the button 1x.
 - Programme starts from «Rinsing».
- ▶ Press the button 2x.
 - Programme starts from «Final rinse / Conditioning».
- ▶ Press the button 3x.
 - Programme starts from «Separate spinning».

5.12 Washing with multi-component detergent

To start Bio or Soap wash, «Multi-component detergent» must be enabled in the user settings (see page 30). Ensure the alkaline detergent or soap detergent are added to the correct compartment (see page 17).

60

- ▶ Touch the button for the desired programme.



- ▶ Touch the button.
 - The selection of washing detergents appears in the TouchDisplay.

Bio wash

- ▶ Touch the desired washing detergent.



- ▶ Touch the button.
 - The programme selected starts.

Select wash detergent			
Standard		with pre-wash	
Soap wash		Bio wash	

5.13 Correcting entry

During programme selection, entries can be corrected as follows:

Clearing entries in the current view



- ▶ Touch the button.
 - Entries will be cancelled. The previous TouchDisplay appears.

Clearing all entries



- ▶ Touch the button repeatedly until the TouchDisplay goes dark.
 - All entries are cleared.

5.14 Aborting a programme



Once a programme has started, only the spin speed can be changed. For any other changes, the programme must be aborted.



- ▶ Touch the button repeatedly until «Draining» is displayed. This part of the programme cannot be skipped and will be carried out in full.

5.15 With childproof lock activated

Selecting programme

How to turn the childproof lock on/off is described in «User settings».



- ▶ Close the appliance door.
 - The input field for the code appears in the TouchDisplay.

7,3,1


- ▶ Touch the digits 7, 3, 1 in sequence.



- ▶ Touch the button.
 - The appliance is unlocked.

60

- ▶ Touch the button for the desired programme.
 - Further steps can be taken without further regard to the childproof lock. If no programme selection is made within the next 20 seconds, the input field for the code appears in the TouchDisplay again.

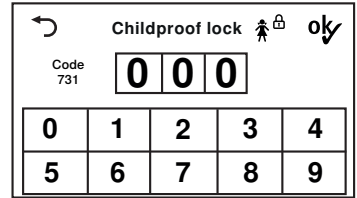

After being unlocked, the appliance can be operated normally. The childproof lock is automatically activated as soon as the programme starts.

Aborting programme / opening appliance door at end of programme



- ▶ Touch the button.
 - The input field for the code appears in the TouchDisplay.

7,3,1


- ▶ Touch the digits 7, 3, 1 in sequence.



- ▶ Touch the button.
 - The appliance is unlocked.



- ▶ Touch the button repeatedly until «Draining» appears in the TouchDisplay.
 - The appliance door opens.

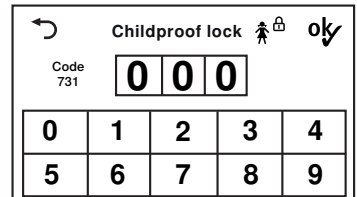

5.16 Drum illumination

The drum illumination automatically switches on whenever the appliance door is opened and switches off when it is closed. If the appliance door is left open, the drum illumination switches off automatically within 2 minutes.




 
- ▶ Touch the button to switch the drum illumination on or off when the appliance door is open.



If the appliance door is opened during or at the end of the standard programme, the drum illumination does not switch on automatically because this is the most energy-efficient programme and the energy requirements are reduced to a minimum.

5.17 Opening the appliance door during washing

The appliance door can be opened when the indicator light for the  button is illuminated.



- ▶ Touch the button.
 - The appliance door opens. Laundry can be added or removed.



- ▶ Close the appliance door.



- ▶ Touch the button.
 - The programme is resumed.



In the event of a power failure, the appliance door can only be opened using the emergency door release (see page 35). The programme sequence is automatically resumed following such a power failure.

 
5.18 End of programme

Unloading the washing before time

Shortly before the end of the programme, the washing is loosened up. This takes about 1–2 minutes.



If steam anti-crease has been selected, the loosening-up period is extended to about 60 minutes to further prevent creasing.



- ▶ Touch the button to unload the washing during the loosening-up phase.

Door opener

The user settings that are enabled determine whether the appliance door opens automatically when the programme ends (see page 29) and whether information on energy and water consumption is displayed or not (see page 30).

- «Automatic door opener On»:

 
Once a programme has finished,

- the appliance door opens automatically.
- the washing can be unloaded.

- «Automatic door opener Off»:

Once a programme has finished,

- «End of programme» is displayed in the TouchDisplay for about 20 minutes.
- information on the energy and water consumption (see page 26) is displayed in the TouchDisplay, provided «EcoManagement» has been turned on (see page 30).



- ▶ Touch the button to open the appliance door and unload the washing at any time.

Stop after rinsing

The washing remains lying in the water after the final rinse. The water must be drained off before the washing can be unloaded.



- ▶ Touch the button 1x.
 - The washing is spun at the spin speed set for the programme.
 - The water is pumped off.

Or:

 


- ▶ Touch the button 2x.
 - The washing is not spun.
 - The water is pumped off.

Hygiene recommendation


Washing almost exclusively with low temperatures will result in the formation of foul smelling coatings in the appliance.

To prevent this, a «Hygiene recommendation» indicates when a wash of at least 60° C or carrying out the «Appliance hygiene» programme is recommended for hygiene reasons.




- ▶ Touch the button.
- ▶ Run the next wash cycle at least at 60 °C.

 
Or:




- ▶ Touch the button.
- ▶ Under standard and extra programmes, select the «Appliance hygiene» programme.

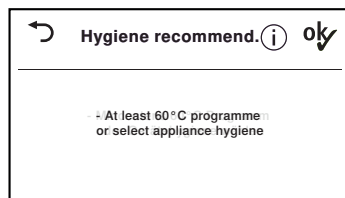

Each time after use

 

 - ▶ Clean the detergent compartments (see page 32).
- ▶ To allow the washing drum and door seal to dry between wash days, open the appliance door and pull the detergent dispenser drawer out as far as it will go.



- ▶ Carefully remove any deposits or foreign objects from out of the door seal.



Incorrect handling can result in damage to the appliance!


The drum illumination is located in the door seal. Care must be taken when cleaning the door seal to avoid damaging the drum illumination.

5.19 EcoManagement

Only active if «EcoManagement» is turned on in the user settings (see page 30).

Displaying estimate during programme selection


The expected energy and water consumption can be displayed during additional function selection.


-  ▶ Touch the desired programme.
- The programme selected with the expected energy and water consumption appears in the TouchDisplay.



Displaying last programme


The energy and water consumption of the last programme can be displayed if no programme is running.


-  ▶ Touch the button.
- The energy and water consumption of the last programme run is displayed.

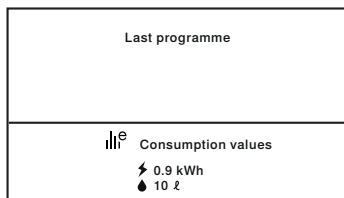


Displaying total and average consumption

 Total and average consumption can be displayed if no programme is running.

-  ▶ Hold the button depressed for 3 seconds.
- Total and average consumption are displayed.


-  ▶ Touch the button to end statistic retrieval.

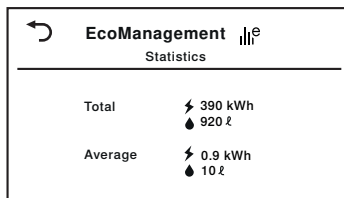


6 Favourites


Simple start to frequently used programmes.

6.1 Defining favourites

-  ▶ Touch the button.
- The appliance door opens.

-  ▶ Touch the button.

-  ▶ Touch one of the favourite buttons.

-  ▶ Select programme and additional functions.



- ▶ Touch the button.

Yes

- ▶ Touch the button to save the favourite programme.

No

- ▶ Touch the button to cancel the action.

6.2 Changing favourites



- ▶ Touch the button.
 - The appliance door opens.



- ▶ Touch the button.



- ▶ Touch the favourite programme to be changed.

Change

- ▶ Touch the button.
- ▶ Make the changes.



- ▶ Touch the button.

Yes

- ▶ Touch the button to save the favourite programme.

No

- ▶ Touch the button to cancel the action.

6.3 Deleting favourites



- ▶ Touch the button.
 - The appliance door opens.



- ▶ Touch the button.



- ▶ Touch the favourite programme to be deleted.

Clear

- ▶ Touch the button.
 - The favourite programme is cleared.

6.4 Starting favourites



- ▶ Close the appliance door.



- ▶ Touch the button.



- ▶ Touch the desired favourite programme.



- ▶ Touch the button.
 - The programme selected starts.

7 V-ZUG-Home

Your appliance is networkable.



You can find further information under www.vzug.com.

8 User settings

 


Providing no programme is running and no error messages are displayed, the user settings can be changed.

8.1 Customizing user settings




- ▶ Close the appliance door.




- ▶ Touch the button.
 - The «Extra» menu appears in the TouchDisplay.



 - ▶ Touch the button.
- ▶ Select and change desired settings and submenus.



 

- ▶ Touch the button to save the selected setting.




 
- ▶ Touch the button to select and change any other settings.



- ▶ Touch the button to exit user settings.

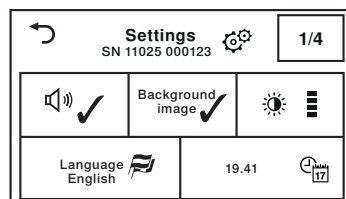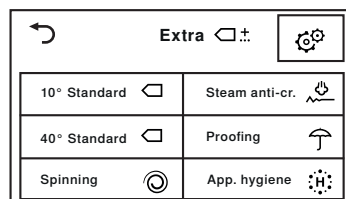

8.2 Button tone

The button tone can be turned on and off. The button tone for the  and  buttons cannot be turned off.

- On (factory setting)
- Off

8.3 Background image

The background image of the TouchDisplay can be turned off. In this case, the background appears black.

- On (factory setting)
- Off

8.4 Brightness

The display can be adjusted to the prevailing light conditions.

- Dark
- Medium bright
- Bright (factory setting)
- Very bright

 
8.5 Language

The language is set during the initial set-up of the appliance. It can be changed.

- German
- ...

8.6 Time

The time must be reset if the power is cut for more than about 5 weeks. The appliance must not be disconnected from the mains supply for at least 30 minutes after making the settings.



- Clock

8.7 Spin speed

An increase in the spin speed is only possible for suitable programmes. A reduction in the spin speed is possible for all programmes.

- 400
- 600
- 800
- 100
- 1200 (factory setting)
- 1400
- 1600

8.8 Degree of soiling

There are 3 settings for degree of soiling.


- Light (factory setting)
- Normal
- Heavy

8.9 AquaPlus

There are 5 settings for rinsing intensity.

- Standard (factory setting)
- More water
- + 1 rinse
- More water + 1 rinse
- Skin protection

8.10 Automatic door opener

When the function is turned on, the appliance door opens automatically when the programme ends. When the function is turned off, the appliance door can be opened by touching the  button.

- On (factory setting)
- Off

8.11 Delayed start / OptiTime

When the «Programme start» function is turned on, the time a programme should start running can be defined.

When the «Programme end» function is turned on, the time a programme should end can be defined. If the «OptiTime» function is also turned on, the «OptiTime» function is automatically added whenever a delayed start is selected.

- Programme start
- Programme end, OptiTime on
- Programme end, OptiTime off (factory setting)

8.12 Hygiene info

When the function is turned on, a wash of at least 60 °C is recommended whenever for hygiene reasons the formation of foul smelling coatings in the appliance is to be prevented.

- On (factory setting)
- Off

8.13 Childproof lock

The childproof lock prevents a programme from being started accidentally. The appliance can only be operated after first entering the code 731.

- On
- Off (factory setting)

8.14 Drum illumination

When this function is activated, the drum illumination automatically switches on whenever the appliance door is opened and switches off whenever it is closed.

- On (factory setting)
- Off

8.15 EcoManagement

When this function is activated, the estimated consumption values appear at the start of the programme and the actual consumption values appear at the end of the programme. The saved consumption values can be deleted under «Statistics».


- On (factory setting)
- Off
- Statistics
- Information

8.16 Multi-component detergent

When the function is turned on, the desired type of washing detergent can be selected under the additional function «Pre-wash».

- On
- Off (factory setting)

8.17 Loosening up the washing

Touch the  button at any time to open the appliance door. The washing can be unloaded.

- 30 seconds (factory setting)
- 10 minutes
- 30 minutes
- 6 hours

8.18 Soft water

When the function is turned on, adjusting for very soft water prevents heavy foaming.

- On
- Off (factory setting)

8.19 EcoHybrid

There are 3 settings for energy efficiency.

- Optimal
- Very good
- Good

8.20 V-ZUG-Home

Your appliance is networkable.



- Operate and display
- Display
- Off (factory setting)



You can find further information under www.vzug.com.

8.21 Factory settings

The factory settings can be restored. The language if changed is not reset to the factory setting.

- : Restore
- : Do not restore



Any favourites that have been saved will also be deleted.

 
9 Demo mode

The appliance can be fully operated in the demo mode, but it will not wash.




The demo mode can only be switched on or off when the appliance door is open.

9.1 Switching on



 
- ▶ Touch the button.
 - The appliance door opens.



- ▶ Simultaneously depress the buttons for 5 seconds until the «Demo mode» menu appears in the TouchDisplay.




 - ▶ Touch the button.
 - The demo mode is selected.




- ▶ Touch the button.
 - The setting is saved.
 - The TouchDisplay goes dark.

 9.2 Switching off



 
- ▶ Touch the button.
 - The appliance door opens.



- ▶ Hold the buttons depressed at the same time.
 - The «Demo mode» menu appears in the TouchDisplay.



 - ▶ Touch the button.
 - The demo mode is not selected.



- ▶ Touch the button.
 - The setting is saved.
 - The TouchDisplay goes dark.

10 Care and maintenance


Using the correct dosage of detergent will automatically clean the inside of the appliance. Immediately wipe away all traces of detergent with a soft cloth to avoid staining.

10.1 Cleaning intervals

Appliance part	Cleaning interval
Detergent dispenser drawer	▪ After each wash
Water inlet filter	▪ When prompted «A9 Check water inlet»
Foreign body trap	▪ 1× per month
Drum illumination	▪ As required


10.2 Cleaning the detergent dispenser drawer

Cleaning the detergent compartments

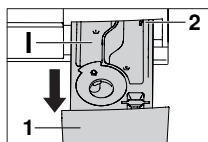

- ▶ Pull the detergent dispenser drawer 1 out as far as it will go.
- ▶ Push the blue release lever 2 to the left and pull the detergent dispenser drawer 1 completely out.
- ▶ Wash out the detergent compartments.
- ▶ Clean the duct under the pre-wash detergent compartment I.
- ▶ Insert the detergent dispenser drawer 1 again correctly.

Cleaning the siphon and suction tube

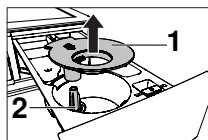


- ▶ Pull siphon 1 in fabric conditioner compartment upwards and out.
- ▶ Clean the siphon 1 and suction tube 2.
- ▶ Insert the siphon 1 again correctly.

10.3 Cleaning the water inlet filter



Test the water inlet for leaks following maintenance work.

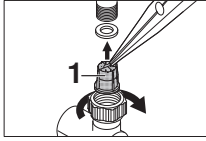


- ▶ To avoid blockages, periodically check and, if necessary, clean the water inlet filter 1.

10.4 Emergency draining




The water in the appliance may be hot. Scalding hazard! Allow to cool down before emergency draining.


In the event of a blocked water outlet or drain pump, a malfunction or a power failure, if there is water still in the appliance it must be drained off as follows:

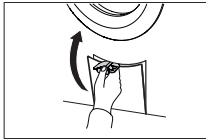


- ▶ Open the drain tray with the flap for liquid detergent.

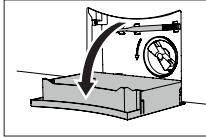


- ▶ Fold the drain tray right down. It also functions as a receptacle for collecting any water that runs out.

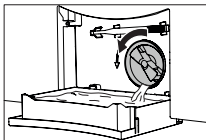

- ▶ Carefully release the foreign body trap somewhat by turning it anti-clockwise and steadily drain off the water.

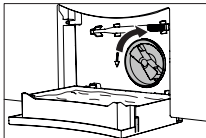

- ▶ Close the foreign body trap by turning it clockwise and remove the drain tray from the front.

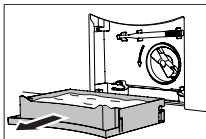

- ▶ Empty the drain tray and then put it back, pushing it in straight as far as it will go.




The drain tray can be removed and a larger receptacle used in its place to draining off the water. The appliance can hold up to 30 litres of water.


10.5 Cleaning the foreign body trap




Clean the foreign body trap at regular intervals as well as after washing, for instance, pet blankets or other wash items that cause a thick build-up of fluff.

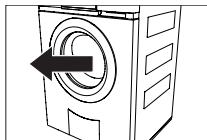


- ▶ Open the appliance door.

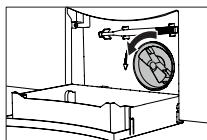

- ▶ Drain off any residual water (see page 33).

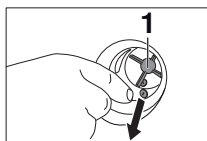


- ▶ Remove any foreign objects (buttons, coins, etc.) from around the impeller **1**.

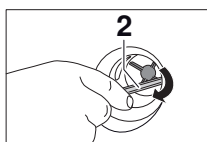


- ▶ Using the emergency door release tool **2**, check that the drain pump impeller can turn.



The impeller **1** may turn stiffly. This is construction related and does not indicate the presence of any foreign object or defect. If the impeller does not turn, please contact our Customer Services.

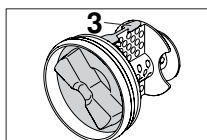

- ▶ Insert the foreign body trap – with the arrow-like cam **3** pointing upwards – as far as it will go.
- ▶ Screw the foreign body trap in clockwise as far as it will go.

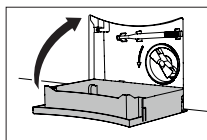

- ▶ Put the drain tray back and close it to.


10.6 Cleaning the drum illumination

- ▶ If necessary, wipe carefully with a soft cloth.


10.7 Opening the appliance door in the event of a power failure




Wait until the washing drum is completely stationary. A washing drum that is still rotating poses a risk of serious injury.

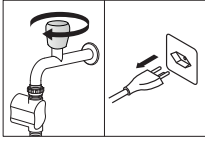


- ▶ Close the water tap and disconnect the appliance from the mains.

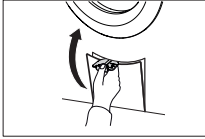


- ▶ Open the drain tray with the flap for liquid detergent.

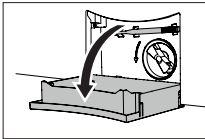

- ▶ Fold the drain tray right down. If necessary, carry out emergency draining.

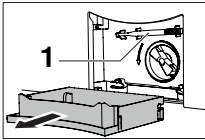


- ▶ Remove drain tray.
- ▶ Remove the emergency door release tool **1** from its bracket.

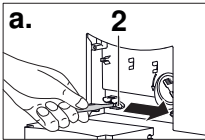

- ▶ Insert emergency door release tool into blue opening cap **2** and turn in direction of arrow.

a. Door opens from right

b. Door opens from left

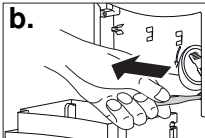

The appliance door springs open.










If the emergency door release tool is missing, a screw driver can be used instead.

11 Trouble-shooting

You may be able to trouble-shoot the following malfunctions yourself. If not, note down the error message in full (message, F and E numbers) and call Customer Services.

11.1 Error messages




Display	Possible cause	Solution
A2 Check water outlet	<ul style="list-style-type: none"> ▪ The foreign body trap is clogged. ▪ The drain pump is blocked. ▪ The drain hose is bent or kinked. ▪ The outlet or drain trap is clogged. 	<ul style="list-style-type: none"> ▶ Check cause (see page 34). ▶ Touch the  button. ▶ Restart the programme.
A3 Clean foreign body trap	<ul style="list-style-type: none"> ▪ The foreign body trap is clogged. ▪ The circulation nozzle is clogged. 	<ul style="list-style-type: none"> ▶ Check cause (see page 34). ▶ Touch the  button. ▶ Restart the programme.
A5 Spin stop: Unbalanced load	<ul style="list-style-type: none"> ▪ Large items are unevenly distributed in the washing drum. ▪ Pillows or similar items in the wash. ▪ Wash items are tangled. 	<ul style="list-style-type: none"> ▶ Wash large and small items together. ▶ Remove the pillows. ▶ Spin the washing again. ▶ Spin the pillows separately. ▶ Separate the wash items. ▶ Fasten duvet covers and pillow cases. ▶ Spin the washing again.
A6 Check foreign body trap	<ul style="list-style-type: none"> ▪ The foreign body trap is missing or is not sitting correctly. 	<ul style="list-style-type: none"> ▶ Check cause (see page 34). ▶ Touch the  button. ▶ Restart the programme.
A9 Check water inlet	<ul style="list-style-type: none"> ▪ The water tap is turned off. ▪ The water inlet filter is clogged. ▪ Water supply is interrupted. ▪ Water pressure is too low. 	<ul style="list-style-type: none"> ▶ Clean water inlet filter or restore water supply (see page 33). ▶ Touch the  button. ▶ Restart the programme.
F6/E77 see instructions SN XXXXX XXXXX	<ul style="list-style-type: none"> ▪ Anti-leak protection was triggered. 	<ul style="list-style-type: none"> ▶ Turn off water tap. ▶ Note down error message in full and appliance's SN. ▶ Touch the  button. ▶ Call Customer Services.

Display	Possible cause	Solution
FXX/EXX see instructions SN XXXXX XXXXXX	<ul style="list-style-type: none"> Various situations can lead to an "F" message. 	<ul style="list-style-type: none"> Touch the  button. Switch the power supply off for about 1 minute. Switch the power supply back on again and select a new programme.
	<ul style="list-style-type: none"> If the error appears again: 	<ul style="list-style-type: none"> Note down error message in full and appliance's SN. Interrupt the water and power supply. If there is laundry in the appliance: carry out emergency draining, use emergency door release and unload laundry. Call Customer Services.
H20	<ul style="list-style-type: none"> The water inlet counter is defective. It is still possible to wash without a problem. The water consumption displayed can deviate from the actual consumption. 	<ul style="list-style-type: none"> Call Customer Services.
U1/E27 see instructions SN XXXXX XXXXXX	<ul style="list-style-type: none"> Faulty electrical connection. Overvoltage. 	<ul style="list-style-type: none"> Touch the  button. Switch the power supply off for about 1 minute. Switch the power supply back on again and select a new programme.
	<ul style="list-style-type: none"> If the error appears again: 	<ul style="list-style-type: none"> Have an electrician check the house installation. Note down error message in full and appliance's SN. Disconnect from the power supply. Call Customer Services.
Foam in main wash: Rinsing extended	<ul style="list-style-type: none"> If there is very heavy foaming, the programme is automatically extended by a rinsing cycle. This improves the wash results, but extends the programme time. 	<ul style="list-style-type: none"> Reduce the amount of washing detergent used next time. Adjust detergent dosage to the water hardness (see page 18).
Defective heat pump. Washing at reduced energy efficiency still possible.	<ul style="list-style-type: none"> Defective heat pump circuit. 	<ul style="list-style-type: none"> Call Customer Services and have heat pump checked. It is still possible to wash with reduced energy efficiency.

Display	Possible cause	Solution
Hygiene recommendation	<ul style="list-style-type: none"> No wash cycle has been carried out at a temperature of at least 60 °C for a longer period of time. 	<ul style="list-style-type: none"> With one of the next wash cycles carry out a wash with at least 60° C. <p>Or:</p> <ul style="list-style-type: none"> Run «Appliance hygiene» programme without laundry (see page 25).
Inlet water very cold: Heating extended	<ul style="list-style-type: none"> Inlet water is very cold. Heating is extended. 	<ul style="list-style-type: none"> No action is necessary.
Too many items: Heating extended	<ul style="list-style-type: none"> The selected programme is intended for a smaller load. Heating and possibly rinsing is extended. 	<ul style="list-style-type: none"> Adjust load to the max. load size (see page 16).
Large unbalanced load: Spin extended	<ul style="list-style-type: none"> The appliance optimizes the distribution of the wash load to compensate an unbalanced load. The final spin is extended. 	<ul style="list-style-type: none"> Wash large and small items together to avoid large unbalanced loads.

  11.2 Other possible problems

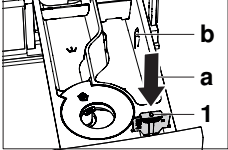

Problem	Possible cause	Solution
The washing has not been spun or has been spun insufficiently.	<ul style="list-style-type: none"> The spin speed is set too low. 	<ul style="list-style-type: none"> Increase the spin speed for the next wash cycle (see page 29).
	<ul style="list-style-type: none"> Too unbalanced a load in the washing drum. 	<ul style="list-style-type: none"> Wash large and small items together.
	<ul style="list-style-type: none"> «Steam anti-crease» was selected and the appliance was not standing level. 	<ul style="list-style-type: none"> Optimize appliance set-up according to installation instructions.
The appliance vibrates heavily when spinning.	<ul style="list-style-type: none"> The transport lock has not been removed. 	<ul style="list-style-type: none"> Remove transport lock.
	<ul style="list-style-type: none"> The feet of the appliance are not properly adjusted. 	<ul style="list-style-type: none"> Set appliance feet so that the appliance stands level.
	<ul style="list-style-type: none"> The load could not be optimally balanced in the washing drum. 	<ul style="list-style-type: none"> Wash large and small items together.

Problem	Possible cause	Solution
At the end of the programme, the appliance door cannot be opened with the  button.	<ul style="list-style-type: none"> ▪ The appliance door is stuck. ▪ An interruption in the power supply. 	<ul style="list-style-type: none"> ▶ Press hard against the lock area of the appliance door (i.e. front edge of appliance door). ▶ Touch the  button again. ▶ Use the emergency door release (see page 35).
Water sounds after programme has finished when washing drum is turned by hand.	<ul style="list-style-type: none"> ▪ The vanes are filled with water to compensate the unbalanced load. 	<ul style="list-style-type: none"> ▶ The water is automatically pumped off. No action is necessary.
Traces of conditioner or water in fabric conditioner compartment.	<ul style="list-style-type: none"> ▪ Siphon in fabric conditioner compartment is missing or not inserted correctly. 	<ul style="list-style-type: none"> ▶ Insert the siphon correctly (see page 32).
	<ul style="list-style-type: none"> ▪ Siphon or suction tube is clogged. 	<ul style="list-style-type: none"> ▶ Clean siphon and suction tube (see page 32).
Traces of powder detergent in detergent compartment.	<ul style="list-style-type: none"> ▪ Damp or lumpy washing detergent. 	<ul style="list-style-type: none"> ▶ Store washing detergent in a dry place.
	<ul style="list-style-type: none"> ▪ Detergent compartment was damp and a delayed start was selected. 	<ul style="list-style-type: none"> ▶ Wipe detergent compartment dry before adding the detergent.
	<ul style="list-style-type: none"> ▪ Water flow pressure is too low. 	<ul style="list-style-type: none"> ▶ Open water tap fully.
	<ul style="list-style-type: none"> ▪ Water inlet is scaled up. 	<ul style="list-style-type: none"> ▶ Check water supply and, if necessary, clean the water inlet filter (see page 33).
	<ul style="list-style-type: none"> ▪ Flap 1 was inserted in position b for liquid detergent. 	<ul style="list-style-type: none"> ▶ Pull flap 1 upwards and out of position b and insert (see page 17) in
		 <p>position a.</p>
Laundry is still dry after programme has finished – no error message.	<ul style="list-style-type: none"> ▪ The demo mode is switched on. 	<ul style="list-style-type: none"> ▶ Switch the demo mode off (see page 32).

Problem	Possible cause	Solution
The consumption values for Eco-Management displayed are too high.	<ul style="list-style-type: none"> ▪ The values can vary according to programme, load, additional functions and user settings. ▪ System-related fluctuations cannot be ruled out. 	<ul style="list-style-type: none"> ► Observe the user settings and additional functions.
The programme takes significantly longer than indicated.	The programme times given serve only as a guide. The duration can be extended by, for example, the following factors:	<ul style="list-style-type: none"> ► Further information can be found in the section on «Consumption values» (see page 44).
	<ul style="list-style-type: none"> ▪ Inlet water is very cold. Heating is extended. 	<ul style="list-style-type: none"> ► No action is necessary.
	<ul style="list-style-type: none"> ▪ Washing detergent dosage is too high. 	<ul style="list-style-type: none"> ► Reduce the amount of washing detergent used next time. ► Adjust detergent dosage to the water hardness (see page 18).
	<ul style="list-style-type: none"> ▪ Too unbalanced a load during the intermediate spin. 	<ul style="list-style-type: none"> ► Follow the trouble-shooting solution for error message A5 (see page 36).
	<ul style="list-style-type: none"> ▪ Flow of inlet water is low. 	<ul style="list-style-type: none"> ► No action is necessary.
	<ul style="list-style-type: none"> ▪ There are deposits or fluff build-ups in the draining system or foreign body trap. 	<ul style="list-style-type: none"> ► Follow the trouble-shooting solution for error message A2 (see page 36).

11.3 Unsatisfactory wash results

Result	Possible cause	Solution
White residue on washing	<ul style="list-style-type: none"> ▪ Despite intensive rinsing, badly soluble compounds in the detergent can be left on the washing. 	<ul style="list-style-type: none"> ► Shake out or brush the wash items. ► Wash the items again with just a little washing detergent. ► Use a liquid detergent that does not contain zeolites. ► Select the «Black garments» textile programme.
Grey residue on washing	<ul style="list-style-type: none"> ▪ Grease and dirt particles left behind. ▪ Residue from detergent, limescale and dirt 	<ul style="list-style-type: none"> ► Increase detergent dosage. ► Use heavy-duty washing detergent. ► Adjust amount of detergent to water hardness and degree of soiling of washing (see page 18).
	<ul style="list-style-type: none"> ▪ Washing drum is overloaded. 	<ul style="list-style-type: none"> ► Put less laundry into the washing drum (see page 16).

Result	Possible cause	Solution
Washing feels hard	<ul style="list-style-type: none"> Poor rinsing effect through very soft water (below 15 °fH). 	<ul style="list-style-type: none"> Select user setting «Soft water» (see page 31).
Unsatisfactory wash result using detergent for coloureds	<ul style="list-style-type: none"> Washing detergent used does not contain bleach. Exceptionally heavily soiled washing. 	<ul style="list-style-type: none"> Use washing detergent containing bleach (see page 17). More intensive programme, e.g. degree of soiling   «heavily soiled».
Unsatisfactory wash result using liquid detergent	<ul style="list-style-type: none"> Liquid detergent does not contain bleach. 	<ul style="list-style-type: none"> Use washing detergent containing bleach (see page 17).
Soap deposits on washing	<ul style="list-style-type: none"> Water hardness is too high. 	<ul style="list-style-type: none"> Soap detergent should only be used if the water hardness is below 25 °fH (see page 18).
Unsatisfactory rinsing performance	<ul style="list-style-type: none"> Too much washing detergent. Very soft water (below 15 °fH) 	<ul style="list-style-type: none"> Adjust washing detergent dosage to water hardness and degree of soiling (see page 18). Select user setting «Soft water» (see page 31).
Fabric stains	<ul style="list-style-type: none"> Rust stains Chemical effect Residues from hair care products, cosmetics and plants can react with the suds to cause a chemical reaction that can result in staining. 	<ul style="list-style-type: none"> Brush out pockets in garments. Wash items with metal parts separately.
Colour run	<ul style="list-style-type: none"> Non-fast colours in the wash. Items in the wash whose colour has run. 	<ul style="list-style-type: none"> Wash white and coloured textiles separately. Follow fabric care labels. Empty garment pockets.

12 Spare parts

Result	Possible cause	Solution
Holes, rips or tears	▪ Items in the wash with zips or hooks open.	<ul style="list-style-type: none"> ▶ Fasten zip fasteners and hooks before washing. ▶ Wash delicates in a laundry bag or pillow case. ▶ Turn pockets inside out. ▶ Empty garment pockets.
	▪ Chemical effect of washing detergent, textile quality	<ul style="list-style-type: none"> ▶ Do not put washing detergent directly onto the laundry.
	▪ Washing drum damaged by foreign objects (e.g. nails, paper clips, etc.)	<ul style="list-style-type: none"> ▶ Inspect washing drum for foreign objects and damage. ▶ Remove foreign objects. ▶ Call Customer Services if the washing drum is damaged.
Fabric wear	▪ Washing drum overloaded	<ul style="list-style-type: none"> ▶ Put less laundry into the washing drum (see page 16).
	▪ Friction between fabrics during washing.	<ul style="list-style-type: none"> ▶ Select additional function «Easy care».
	▪ Pilling	<ul style="list-style-type: none"> ▶ Turn items inside out before washing.

12 Spare parts

 
Please give model designation, model number and type when ordering parts (see page 2).




Drain hose 1.5 m / 4.0 m



Emergency door release tool




Foreign body trap

 


Drain tray



Siphon

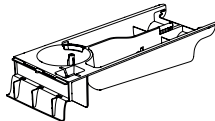

Detergent dispenser drawer

 

Flap for liquid detergent

13 Technical data

Dimensions

Height	85 cm
Width	59.5 cm
Depth	62.5 cm
Weight	89 kg
Pumping height of pump	1.2 m
Load capacity	8 kg dry washing

Plumbing in

Connection to water supply	Cold water G $\frac{3}{4}$ "
Permitted pressure of water supply	0.1–0.6 MPa (1–6 bar)
Max. pumping height of drain pump	1.2 m

Spin speed


400, 600, 800, 1000, 1200, 1400, 1600 rpm

Electrical connection

The electrical connection can be found on the identification plate (see page 51).

13.1 Note for testing institutes

Set to the standard programmes according to AS/NZS 2040.2:2005:

Programme	Load capacity	
40 °C Coloureds normal	8 kg	▶ Touch the  button.
10 °C Coloureds normal	8 kg	▶ Touch the  button.
		▶ Touch the  button.

For test institutes we recommend for the measurement of end mode the door remains open so that it matches normal use without user intervention. Note at the point of end mode the door will automatically pop open.

Data for the 40 °C Coloureds normal programme

Load capacity kg	Programme duration hrs./mins.	Energy star rating	Energy consumption kWh/cycle	Water star rating	Water consumption l/cycle	Residual moisture %
8	3h04	5	0.51	4.5	65	52

13.2 Consumption values

The consumption data and programme times given serve only as a guide. They refer to the maximum load capacity and can vary with, for instance, towelling material, a very cold water feed, the degree of soiling selected or a smaller wash load. The time remaining shown and the programme end time are adjusted accordingly.

Whites and coloureds programmes

Programme	Load kg	Spin speed rpm ¹	Duration hrs./mins. ²	Water l	Energy kWh
Whites 95 °C	1–8	1200	3h02	75	1.6
Coloureds 70 °C	1–8	1200	2h40	65	1.2
Coloureds 60 °C	1–8	1200	2h18	65	1.0
Coloureds 40 °C	1–8	1200	1h50	70	0.5
Coloureds 30 °C	1–8	1200	1h35	70	0.3
Coloureds 20 °C	1–8	1200	1h10	70	0.2
Coloureds 10 °C	1–8	1200	1h00	70	0.2

¹ Factory setting

² The programme time is for the EcoHybrid setting «Very good» .

Extra programmes

Programme	Load kg	Spin speed rpm ¹	Duration hrs./mins.	Water l	Energy kWh
Steam anti-crease	1–1.5	0	0h23	1	0.1
Steam anti-crease Plus	1–1.5	0	0h53	1	0.1
Proofing 20 °C	1–3	800	0h28	12	0.1
Appliance hygiene	0	0	0h38	9	0.7

¹ Factory setting

Textile programmes

Programme	Load kg/items	Spin speed rpm ¹	Duration hrs./mins.	Water l	Energy kWh
Woollens 30 °C	1–2.5	800	0h58	52	0.2
Hand wash 20 °C	1–2	600	0h50	58	0.1
Shirts 40 °C	max. 7 items	1000	1h57	33	0.3
Down 40 °C	1°item, max. 2 kg	800	1h44	40	0.3
Outdoor garments 40 °C	3	1000	1h32	40	0.3
Silks 30 °C	1.5	400	0h57	52	0.2

Programme	Load kg/items	Spin speed rpm ¹	Duration hrs./mins.	Water l	Energy kWh
Net curtains 30 °C	2	Stop after rinsing	1h14	45	0.3
Baby garments 60 °C	5	1200	2h29	120	1.1
Denim 40 °C	4	1200	1h47	55	0.3
FirstWash 20 °C	2	1000	0h15	25	0.1
Underwear 30 °C	3	800	1h25	40	0.2
Black garments 40 °C	4	1200	1h50	85	0.4
Black hand wash 20 °C	1.5	600	1h05	68	0.1
WetClean 20 °C	1.5	400	1h00	60	0.2

¹ Factory setting

13.3 VAS Vibration Absorbing System

As the washing drum starts to spin, if the control system detects that the load is out of balance it will interrupt the spinning action once or more. In this case, the appliance tries to improve the distribution of the wash load in the washing drum.

When spinning, at all spin speeds the load is, where necessary, actively balanced in the washing drum, whereby the hollow vanes are filled with the necessary quantity of water. This ensures optimal care and draining of the washing.

13.4 Water and energy economy

During the first few minutes of a programme running, sensors automatically determine the type and the size of the load being washed.

Water levels are then optimally adjusted to the wash load so that only the strict amount of water needed is used.


13.5 EcoStandby

The appliance is equipped with an automatic energy-saving «EcoStandby» function to avoid consuming energy unnecessarily.

All displays go out within minutes of a programme finishing. Energy consumption is reduced to an absolute minimum. The safety functions, however, remain active.

14 Washing tips

14.1 Energy and water economy

- Where possible fill the drum to the maximum load capacity of the relevant programme.
- Select «Pre-wash» or «Soaking» only for washing that is heavily soiled or stained.
- For lightly soiled washing without staining select the «20 °C» main wash programme or the additional function «Sprint».
- Select EcoHybrid level «optimal»  if the duration of the programme or the germ-killing effect of high temperatures do not play a role.
- Select additional function «OptiTime» if washing using a delayed start or the germ-killing effect of high temperatures do not play a role.

Spin speed

How much energy is consumed by subsequent tumble drying depends on the spin speed set. The higher the spin speed set, the lower the remaining moisture content of the washing at the end of the programme.

rpm	1600	1400	1200	1000	800	600	400
Remaining moisture content (cotton)	~44%	~47%	~52%	~60%	~70%	~90%	~110%

Automatic door opener

Use the appliance with the automatic door opener switched on. When the appliance door opens the appliance immediately enters the lowest possible stand-by power consumption state.

14.2 Avoiding damage

- Follow the fabric care symbols on garment labels.
- The wash temperature selected should agree with the recommended temperature range of the washing detergent to ensure the washing detergent is at its most effective.
- Wash white and coloured textiles separately.
- Empty pockets and turn inside out. Remove any foreign objects (coins, nails, paper clips, etc.).
- Empty and brush out pockets of work overalls worn in the metal industry. Metal shavings can damage the washing and cause rust stains.
- Fasten hook and eye fasteners and zips. These can damage the laundry and the drum.
- Fasten cloth belts, apron ties and duvet and pillow cases to avoid them getting tangled up.
- Wash smaller items (e.g. nylon tights, belts) and items with zips and hooks in a washing net or cushion cover.
- Remove stains before washing using a suitable stain remover.
- Pre-treat heavily soiled areas (collars, cuffs, etc.) with soap, special detergent or paste.
- Textiles, such as dog or horse blankets, that are covered in animal hair should be brushed out before washing.

15 Disposal

15.1 Packaging



Never allow children to play with packaging material due to the danger of injury or suffocation. Store the packaging material in a safe location or dispose of it in an environmentally-friendly way.

15.2 Safety

Render the appliance unusable to prevent accidents caused by improper use (e.g. through children playing):

- ▶ Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician. Then cut the mains cable off flush with the appliance.
- ▶ Remove or disable the lock on the appliance door.

15.3 Disposal



- The «crossed out wheeled bin» symbol requires the separate collection of waste electrical and electronic equipment (WEEE). Such equipment can contain hazardous, environmentally harmful materials.
- These appliances are to be handed over to a designated collection point for the recycling of electrical and electronic equipment and must not be disposed of with unsorted household waste. And in this way, you will be helping to protect resources and the environment.
- For more information, please contact the local authorities.

15.4 Note on heat pump

This appliance is CFC-free. It contains fluorinated greenhouse gas covered by the Kyoto Protocol.

Heat pump	Hermetically closed
Greenhouse gas	R134a
Filling quantity [kg]	0.370
GWP [(kg CO ₂)/(kg greenhouse gas)]	1430
Total GWP [t CO ₂]	0.529

16 Index

A

Aborting	
Programme entry	22
Running programme	22, 23
Additional functions	13
Starting	20
Allergies	
Anti-mite	14
Anti-mite	14
Appliance disposal	47
Appliance hygiene	12
Starting	25
AquaPlus	14
Increasing/Reducing	29
Automatic water and energy economy	45

B

Baby garments	
Textile programmes	11
Background image	28
Black garments	
Textile programmes	12
Black hand wash garments	
Textile programmes	12
Breathable textiles	
Outdoor garments	11
Brightness	29
Button tone	28

C

Childproof lock	
Aborting programme	23
Opening appliance door	23
Starting programme	23
Switching on	30
Clock	29
Coloureds	
Coloureds programmes	10
Textile programmes	11
Coloureds programmes	9, 10
Consumption values	44
Starting	18
Crease guard	
Steam anti-crease	12, 14
Curtains	
Net curtains	11

D

Dark garments	
Textile programmes	12
Dark hand wash	
Textile programmes	12

Degree of soiling	14
Increasing/Reducing	29
Delayed start	13
Starting	20
Switching on	30
Demo mode	31
Denim	
Textile programmes	11
Detergent compartments	17
Cleaning	32
Detergent dispenser drawer	8, 42
Cleaning	32
Removing	32
Disposal	47
Door opener	9
Down	
Textile programmes	11
Drain hose	42
Drain tray	8, 42
Drum illumination	9, 15
Dyeing	18

E

EcoHybrid	9
Increasing/Reducing	31
Starting	20
EcoManagement	9, 15
Display	26
Switching on	30
EcoStandby	45
Emergency door release	8
Emergency door release tool	8, 42
Energy-efficient washing	
Delayed start	13
Extra programmes	9, 12
Consumption values	44
Extraprogramme	
Starting	19

F

Factory settings	31
Fast wash	9
Separate rinsing	14, 21
Separate spinning	14, 21
Sprint	14
Favourites	9
Changing	27
Defining	26
Deleting	27
Starting	27
Flap for liquid detergent	8, 42
Foreign body trap	8, 42
Cleaning	34

G		P	
Gentle washing		Powder detergent	17
Baby garments.....	11	Power failure	35
Easy care	13	Pre-wash	13
Hand wash	11	Problems	36
Silks.....	11	Programme	
Underwear.....	11	Aborting	9, 22
WetClean.....	12	Changing.....	22
Woollens.....	11	Interrupting.....	9, 24
		Starting.....	9, 18
H		Programmes for normally soiled cotton load	
Heat pump	47	9, 12
Hygiene info	30	Starting.....	19
I		Proofing	
Identification plate.....	51	Extra programmes.....	12
L		Q	
Language.....	29	Quick programme.....	14
Leisurewear		R	
Outdoor garments	11	Reducing creasing	
Linen textiles		Steam anti-crease	12, 14
Steam anti-crease Plus.....	12	Reducing foaming	
Whites programme.....	10	Soft water	31
Lingerie		Reducing odours	
Underwear.....	11	Appliance hygiene	12
Liquid detergent	17	Hygiene info.....	30
M		Rinsing intensity	
Malfunctions.....	36	AquaPlus.....	14
Model designation	2	S	
Model number	2	Safety precautions	
Multi-component detergent		General	5
Bio wash.....	15	Saving energy.....	46
Soap washing.....	15	EcoHybrid.....	13
Starting.....	22	EcoManagement.....	15
Switching on	30	OptiTime	13
N		Sensitive skin	
Net curtains		Skin protection	14
Textile programmes	11	Serial number (SN).....	51
New textiles		Service & Support.....	51
FirstWash.....	11	Shirts	
O		Textile programmes	11
Opening appliance door.....	9, 16	Silks	
Automatic	29	Textile programmes	11
During a wash	24	Siphon.....	8, 42
When programme has finished.....	24	Cleaning	32
OptiTime	13	Skin protection	14
Starting.....	21	Switching on	29
Switching on	30	Soaking.....	14
Outdoor garments	11	Spare parts	42
		Spin speed	14
		Increasing/Reducing.....	29
		Sportswear	

Outdoor garments	11
Sprint programme.....	14
Steam anti-crease	
Extra programmes.....	12
Symbols.....	5

T

Technical questions.....	51
Textile programmes.....	11
Consumption values	44
Starting.....	19
T-shirts	
Coloureds.....	10
Type.....	2

U

Underwear	
Textile programmes	11
Using for the first time.....	8

V

Validity.....	2
VAS Vibration Absorbing System	45
V-ZUG-Home.....	9, 28

W

Warranty extensions.....	51
Water hardness	18
Whites programme	9, 10
Consumption values	44
Starting.....	18
Woollen textiles	
Woollens.....	11

17 Service & Support



The «Trouble-shooting» section gives you valuable tips on how to deal with minor malfunctions yourself, saving you the time and trouble of calling out a service technician and any cost that goes along with it.

Information on the V-ZUG warranty can be found at www.vzug.com →Service →Warranty information. Please read this information carefully.

Please register your appliance straightaway online at www.vzug.com →Service →Warranty registration. This will allow you to take advantage of the best possible support in the event of a fault in the appliance during the guarantee period. You will require the serial number (SN) and appliance designation to register your appliance. You will find them on the identification plate of your appliance.

My appliance information:

SN: _____ **Appliance:** _____

Please have this appliance information to hand when contacting V-ZUG. Thank you.

Identification plate

- ▶ Open up drain tray.
 - The identification plate is located on the left-hand side next to the foreign body trap.



The SN can also be retrieved as follows:

- ▶ Hold the ► button depressed until «Settings – SN 11025 000123» appears in the TouchDisplay.

Your repair order



At www.vzug.com →Service →Service number you will find the telephone number of your nearest V-ZUG service centre.

Technical questions, accessories, warranty extensions


V-ZUG is happy to help you with any general administrative or technical queries, to take your orders for accessories and spare parts and to inform you about our progressive service agreements.

Quick instructions

Please first read the safety precautions in the operating instructions.

- ▶ Switch on appliance and turn on water tap.
- ▶ Press the  button. Appliance door opens.
- ▶ Load laundry.
- ▶ Add washing detergent to detergent dispenser drawer.
- ▶ Select programme and any additional functions (if required).
- ▶ Press the  button. Programme starts.

When programme has finished

- ▶ Press the  button and unload the laundry.
- ▶ Clean detergent dispenser drawer.
- ▶ Push appliance door to, but do not close.



1058701-R02

