



ART WORK SPEC			
---------------	--	--	--

Changes Note: 2, 7, 12 / REV.UP			
---------------------------------	--	--	--

Design: Hyunwoo Lim	HQ R&D PIC: Jungran Kim	Product	Vacuum Cleaner
Size: 148mm x 210mm	Material: Wood Free 80g	Model/PJT	VCA-SAE90*
Page: 12	Print Color: Black	Part Code	DJ68-00832D
Date: 2020-09-15	Post Processing : Cut	Rev No	01 → 02

Clean station

User manual

VCA-SAE90*

- Before operating this unit, please read the instructions carefully.
- For indoor use only

SAMSUNG

Contents

PREPARATION

Safety Information 3

INSTALLATION

Installing the clean station 7

Installation guide 7

OPERATION

Using the clean station 8

MAINTENANCE

Maintaining the clean station 10


Dust bag 10

Dustbin 11

Premotor Filter 11

Ultra fine Dust Filter 11

Product specifications

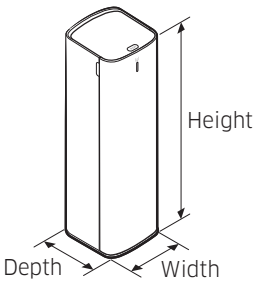


Model	VCA-SAE90A VCA-SAE90B	VCA-SAE901, VCA-SAE902 VCA-SAE903, VCA-SAE904
Power	230-240 V, 50 Hz or 220-230 V, 50 Hz or 230 V, 60 Hz	
Weight	5.6 kg	
Size	W 180 mm x D 185 mm x H 600 mm	
Dust bag	3 units	2 units

NOTE

- The wave pattern on the exterior of the product is a natural appearance due to the use of pearl plastic materials and its pearl distribution.

Accessories


* VCA-SAE90A, VCA-SAE90B

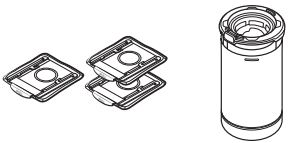

Dust bag:
3 units (Inside
the product:
1 unit)


Dustbin

* VCA-SAE901, VCA-SAE902
VCA-SAE903, VCA-SAE904

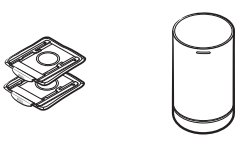

Dust bag:
2 units (Inside
the product:
1 unit)

Dustbin

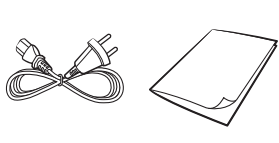

Power cord

User manual

NOTE

- If you want to purchase an additional dust bag, check the model name (VCA-ADB90) and Samsung logo (**SAMSUNG**) first, then contact your nearest Samsung Electronics retailer or Samsung service center.

Safety Information

The following contents are written for users' safety and prevention of property damage. Before using the product, please read this manual thoroughly and use the product correctly.

*For safety reasons, people with physical, sensory difficulties, or mental disorder, lack of experience and knowledge should not use this product without the supervision of their guardians.

Caution/Warning symbols used

WARNING

Indicates that a danger of death or serious injury exists.

CAUTION

Indicates that a risk of personal injury or material damage exists.

Other symbols used

NOTE

Indicates that the following text contains additional important information.

Failure to meet these requirements could cause damage to the internal parts of the vacuum and void your warranty.

General

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should not clean or perform maintenance on the vacuum without adult supervision.

Installation

CAUTION

- The clean station should be placed and used on a stable floor.
 - If the product falls over, an injury or product and floor damage may occur.
- Do not place or use the product on an uneven floor, a carpet, a living room table, or a desk etc.
 - If the product falls over, an injury or product and floor damage may occur.

- Do not place the product at a wall behind which pipes (gas or water etc.) or electrical cables are installed.
- Do not install the product near water, in an area with excessive moisture, or near window, etc.
- Do not install the product in a place where people frequently pass by, near an entrance, or a narrow passage.
 - If people trip over the product, an injury or product damage may occur.

Power related

WARNING

- Do not bend the power cord with excessive force or put heavy objects on the power cord.
 - Otherwise, electric shock or fire may occur.
- If there is dust, water, etc. on a contact point of the power plug pins, wipe them carefully.
 - Otherwise, abnormal operation or electric shock may occur.
- Do not pull the power cord and do not touch the power plug with wet hands.
 - Otherwise, electric shock or fire may occur.

- Do not use a power source with the incorrect voltage. Do not use a multi-plug outlet or power strip for the product. Do not leave the power cord lying on the floor. Attach the cord close to a wall.
 - Otherwise, electric shock or fire may occur.
- Do not use a damaged power plug, power cord, or loose power outlet.
 - Otherwise, electric shock or fire may occur.
- If the power cord is damaged, have a Samsung authorized service center's qualified repairman replace the power cord with a new power cord.
 - Otherwise, electric shock or fire may occur.
- Except for an authorized repairman, do not disassemble or modify the clean station.
- When using the product in a veranda, make sure the power cord and the power plug do not touch water.

Operation

WARNING

- Static electricity may occur depending on the humidity, temperature, or floor material, etc. of your operating environment. If it happens repeatedly, contact a Samsung service center.
- Do not cause a short circuit by touching the power terminal with chop sticks, metal screw drivers, etc.
 - Otherwise, product malfunction or electric shock may occur.
- Make sure that any liquid such as water or juice does not touch inside or outside the product.
 - Otherwise, electric shock or fire may occur.
- The clean station is manufactured for Samsung Jet wireless vacuum cleaner only, so do not use the clean station for other purposes.
- Do not use the product near heating appliances such as heaters, or in areas containing combustible sprays, or flammable materials.
 - Otherwise, fire or product deformation may occur.

- If there is a gas leak, or a combustible spray is used such as a dust remover, do not touch the power outlet and open the window for ventilation.
 - Otherwise, an explosion or fire may occur.
- If the product makes a strange sound or emits a smell or smoke, turn off the product immediately, and then contact a Samsung service center.
 - Otherwise, electric shock or fire may occur.

CAUTION

- Do not allow children or a pet to ride on or play with the product.
 - If the product falls over, an injury or product and floor damage may occur.
- When moving the product, you should grip it with both hands.

NOTE

- When the dust bag of the clean station is filled with dust, the product may stop temporarily due to the overheating prevention device of the motor. Replace the dust bag and operate the product again.
- As a new product, it may have a slight odor for the first 3 months after purchase.

Maintenance

WARNING


- When cleaning the exterior of the product, unplug the product first and then wipe it with a dry towel. Do not spray water directly onto the product or wipe it with volatile materials such as benzene, thinner, or alcohol.
 - Otherwise, product damage such as plastic breakage, deformation, discoloration, printing deterioration, etc. may occur.

CAUTION


- Do not push the clean station in case it falls over.
 - Personal injury, floor and product damage may occur.
- When the clean station emits bad odor, replace the dust bag or clean the filters.
- When you pull the power cord out of the groove at the bottom of the clean station, do not pull it hard. Turn the cord gently on its side so that it can come out without interruption.
 - Otherwise, the power cord may get damaged and could cause an electric shock or fire.

Installing the clean station

Installation guide

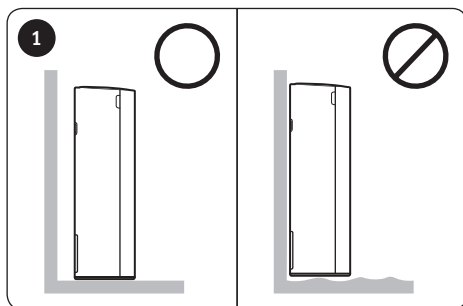

As the outlet is at the rear of the product, do not put the product close against a wall, allow 10 cm space between the wall and the product, and place the product on a stable floor.

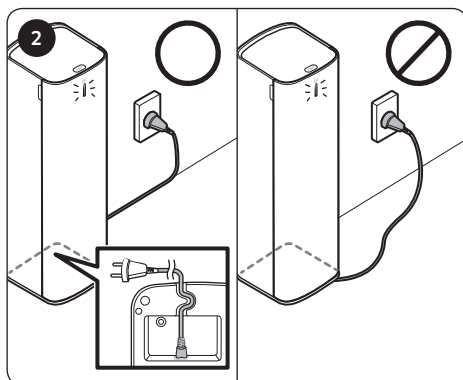


Put the power cord into the groove at the bottom of the clean station, arrange the cord neatly along the wall and plug the product in.

- When the cord is placed on the floor carelessly, the power cord may be damaged or a person can trip over the cord.
- When the clean station is plugged in, the product status indicator turns to 'blue' and then goes off.



* Please refer to the QR code for detailed information on the use of product and cleaning methods.

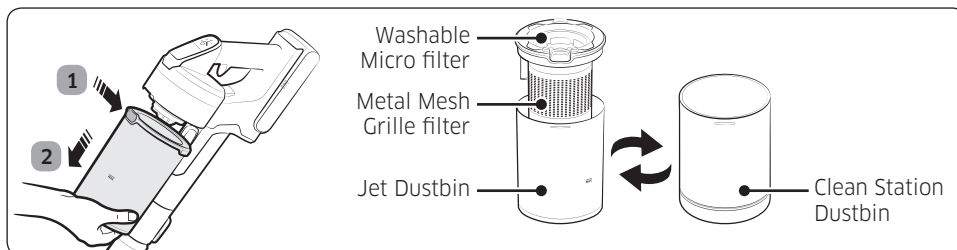


* VCA-SAE901, VCA-SAE902, VCA-SAE903, VCA-SAE904 includes only the transparent Dustbin.


* Need to detach the Metal Mesh Grille filter and Washable Micro filter from the Jet Dustbin and then attach them to the Clean Station Dustbin.

Using the clean station

The clean station is compatible with the provided dustbin only.

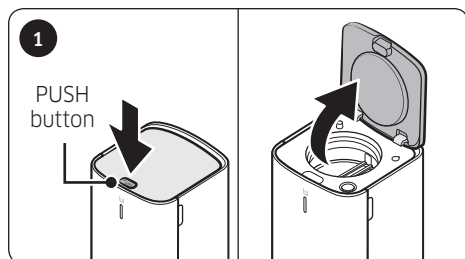


Press the [**PUSH**] button on the upper cover of the clean station.

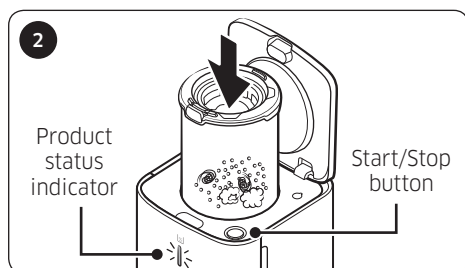


Insert the dustbin into the clean station. Dust is ejected automatically.

- When the clean station is in operation, the product status indicator turns to 'blue'.
- Press the [Start/Stop] button to stop operation.

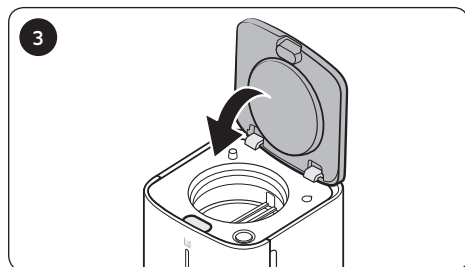


When the clean station's operation stops completely, pull the dustbin out and close the clean station by pressing the upper cover firmly.

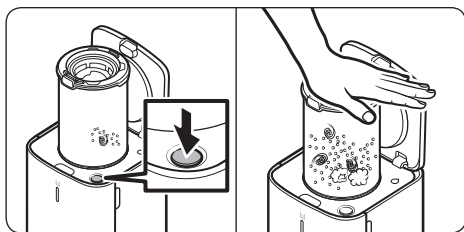

NOTE

- When dust still remains inside the dustbin even after using the clean station, press the [Start/Stop] button to operate the clean station.
 - Press the button again to stop operation.
- If the dustbin is filled with dust and will not eject it properly, use a hand to push down the top of the washable micro filter, and then operate the clean station.
- When there are foreign object residues, remove them by referring to 'Maintaining the clean station' section of the manual.

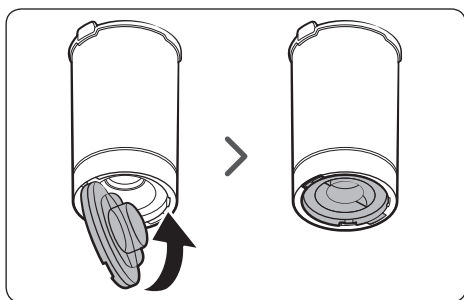


CAUTION

- After using the clean station, you should close the dustbin by pressing the bottom cover firmly until you hear it 'click'.


Maintaining the clean station

Dust bag


Time to replace a dust bag

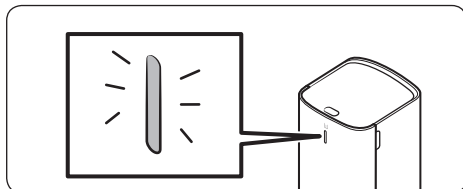


※ When the product status indicator turns to 'red', you should replace the dust bag.

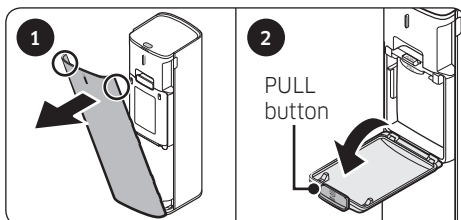


- 1 Grip both sides of the front cover and pull the cover towards you.
- 2 Open the cover by pulling the **[PULL]** button.

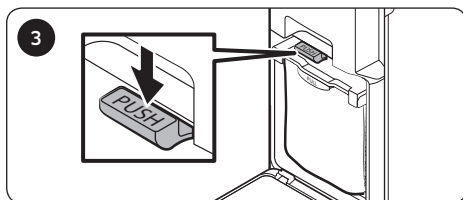

Press the **'PUSH'** lever.

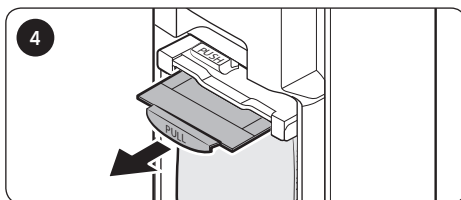


Pull the **'PULL'** lever out in a diagonal direction and remove the dust bag.

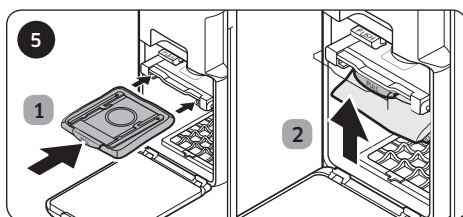

Insert a new dust bag towards the back and push the **'PUSH'** lever upward firmly until you hear it 'click'.

※ Be cautious not to assemble incorrectly when inserting the dust bag.

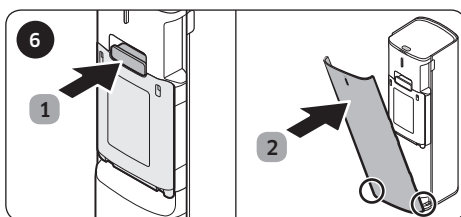

After replacing the dust bag, assemble the clean station in reverse order.


NOTE

- If the dust bag emits a bad odor even though it is not filled with dust, replace the dust bag.
- When you operate the clean station after replacing the dust bag, the status indicator changes from red to blue.




Dustbin

After emptying the dustbin, clean it with water and dry completely before use.

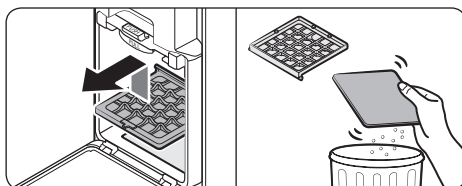

Premotor Filter

- Lift up the Premotor Filter inside the product and pull it out. Then, detach the nonwoven fabric from the filter.
- Remove the dust on the nonwoven fabric by shaking it and reassemble the Premotor Filter.

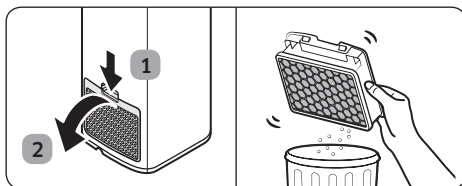

Ultra fine Dust Filter

- Do not clean the Ultra fine Dust Filter with water. Shake the filter.
- To maintain the best performance of the Ultra fine Dust Filter, replace the filter once a year.

SAMSUNG

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Country / Location	Customer Care Center	Web Site
AUSTRALIA	1300 362 603 (Other) 1300 425 299 (HHP)	www.samsung.com/au/support
HONG KONG	3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
MALAYSIA	1800-22-8899 (HHP) 1800-88-9999 (OTH) +603-7713 7420 (Overseas contact)	www.samsung.com/my/support
SINGAPORE	1800 7267864 / 1800-SAMSUNG (Other) 1800 4252997 / 1800-GALAXYS (HHP)	www.samsung.com/sg/support
SOUTH AFRICA	0860 SAMSUNG (726 7864)	www.samsung.com/za/support
PHILIPPINES	1-800-10-726-7864 [PLDT Toll Free] 1-800-8-726-7864 [Globe Landline and Mobile] 02-8-422-2111 [Standard Landline]	www.samsung.com/ph/support
INDIA	1800 40 SAMSUNG (1800 40 7267864) (Toll-Free) 1800 5 SAMSUNG (1800 5 726864) (Toll-Free)	www.samsung.com/in/support

This product is RoHS compliant



DJ68-00832D-02