

Warranty and Installation Guide

Slimline Fixed Low Profile Flat Panel Wall Mount

with LockEase

Thank you for purchasing this Crest TV Wall Mount.

Crest prides itself on supplying quality audio visual accessories to consumers and businesses throughout Australia. If you follow this guide carefully, we are confident this product will help maximise the enjoyment you obtain from your audio visual equipment for many years.

Please keep this guide for future reference.

TECHNICAL SUPPORT

If you have any questions regarding the warranty, installation or use of this product, please contact our Technical Support Centre on 1800 812 261.

INSTALLATION INSTRUCTIONS

IMPORTANT

1. Installation of this TV mount will be easier if two people are involved.
2. Some images in this guide may vary slightly from the actual components supplied.
3. Ensure this Installation Guide is completely read and understood before attempting installation.
4. Mount **MUST NOT** be installed solely in plasterboard, fibre cement and similar surfaces.
5. Mount **MUST** be installed in sound supporting structures such as those made of timber, steel or masonry using appropriate fasteners.
6. The supporting structure must be capable of sustaining the combined weight of the TV mount and the display otherwise the structure must be reinforced.
7. The fasteners supplied in this hardware pack allow for fixing into timber and masonry only. If installing into a supporting structure made of steel, appropriate fasteners must be used and sourced from an appropriate supplier.
8. Use appropriate tools and safety equipment and ensure adequate ventilation during installation.
9. If uncertain about any aspect of installation, contact Crest or an installation professional.

TV COMPATIBILITY SPECIFICATIONS

Note the TV Compatibility Specification of this mount.

CAFP1F This model will suit most **slimline** flat panel TV sizes from **32 to 63 inches (81 to 160cm)** as long as they weigh **50kg maximum** and possess a maximum mounting hole pattern of **410 x 615mm (h x w)**

TOOLS REQUIRED

Drywall (Timber Frame) Installation

 
















- Stud finder
- Spirit level
- Pencil
- Drill
- Phillips head screwdriver
- 5mm high speed drill bit
- Adjustable spanner

In addition, for Masonry Installation

- Drill with hammer function
- 10mm masonry drill bit
- Hammer

165 South Pine Rd
PO Box 5658
Brendale
Qld 4500

WALL MOUNT FASTENERS DIAGRAM

CODE	IMAGE	DESCRIPTION	SIZE	QUANTITY	CODE	IMAGE	DESCRIPTION	SIZE	QUANTITY
A		Coach Screw	M8 x 50mm	6	I		Bolt	M8 x 16mm	4
B		Masonry Anchor	10 x 50mm	6	J		Bolt	M4 x 30mm	4
C		Plastic Spacer	8mmø	4	K		Bolt	M5 x 30mm	4
D		Round Washer	8mmø	10	L		Bolt	M6 x 30mm	4
E		Round Washer	5mmø	4	M		Bolt	M8 x 30mm	4
F		Bolt	M4 x 16mm	4	N		Lock Washer	4mmø	4
G		Bolt	M5 x 16mm	4	O		Lock Washer	5mmø	4
H		Bolt	M6 x 16mm	4	P		Lock Washer	6mmø	4
					Q		Lock Washer	8mmø	4

WARRANTY

This Crest TV Wall Mount carries a limited warranty of five (5) years from the date of purchase.

Crest, by this warranty, will at its discretion repair or replace the product or its components if found to be defective in workmanship or materials.

Where a warranty claim is made, Crest may require the customer at their expense to return the product and or its components to Crest or a Crest representative for inspection.

This limited warranty covers supply of the replacement product (which may vary from the one originally purchased) only and does not extend to, nor covers costs associated with, demounting, removal, disposal or return of the original product, or installation of the replacement product.

This limited warranty does not cover damage or loss resulting from intentional or unintentional misuse, tampering with, neglect or incorrect installation or use of this product or where the product has been used for purposes other than that for which it is designed or for supporting displays beyond the product's capability as stated on the product's original packaging and in this guide.

Failure to strictly comply with this installation guide may result in forfeiture of the warranty by the purchaser, user or owner.

Any warranty claim must be accompanied by proof of purchase showing date and location of purchase.



Warranty and Installation Guide Slimline Fixed Low Profile Flat Panel Wall Mount with LockEase

STEP 1 – ATTACH WALL PLATE TO WALL

A. Installing in Drywall (Timber frame)

1. Locate centre of timber studs using stud finder.
2. Mark a minimum of four fixing holes (one at top and bottom at either end of wall plate) over stud centres using wall plate as guide. Ensure plate is level.
3. Predrill holes to a depth of 40mm using high speed drill bit.
4. Attach wall plate using coach screws (A) through round washers (D). Do not over tighten. See Figure 1.

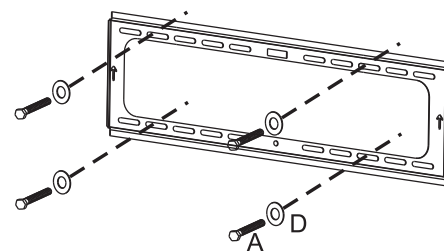


Figure 1 – Attach wall plate to wall.

B. Installing in Masonry

1. Mark a minimum of four (preferably six) fixing holes using wall plate as guide. Ensure plate is level.
2. Predrill holes to a depth of 55mm using 10mm masonry bit. Clean out holes.
3. Fully insert masonry anchors (B). Tap in with hammer if required. See Figure 2.
4. Attach wall plate by inserting coach screws (A) through round washers (D) into each masonry anchor (B) and tighten. Do not over tighten. See Figure 3.

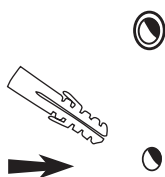


Figure 2 – Insert masonry anchors.

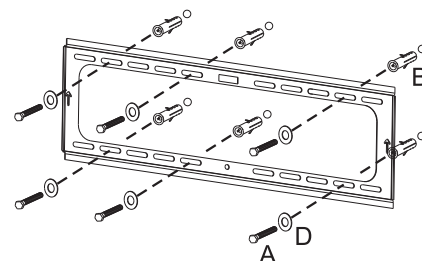


Figure 3 – Attach wall plate to wall.

STEP 2 – ATTACH ARMS TO TV

1. Use correct bolt size (F, G, H or I) with corresponding lock washers (N, O, P or Q) through round washers (D or E) to attach arms to rear of TV. Use longer bolts (J, K, L or M) and plastic spacers (C), if rear of TV is curved or recessed. To avoid damaging TV, do not over tighten bolts. See Figure 4.

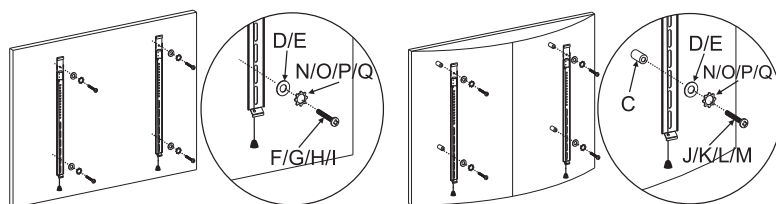


Figure 4 – Attach Arms to Rear of TV.

STEP 3 – MOUNT TV ON WALL PLATE

1. With help of another person, carefully lift TV and hook arms over wall plate. See Figure 5.
2. Pull down on LockEase tabs, gently press on TV then release LockEase tabs to lock arms to wall plate. See Figure 6.
3. Hide LockEase tabs behind TV.

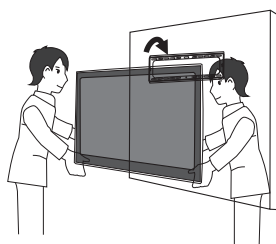


Figure 5 - Carefully hook arms and TV over wall plate.

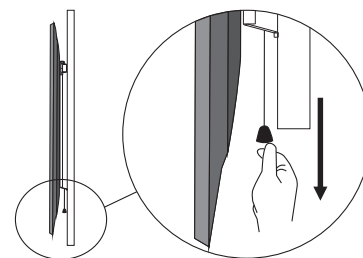


Figure 6 – Engage LockEase on each arm.

REMOVING TV FROM WALL

1. Unfold LockEase tabs and pull down on each to unlock arms. Whilst pulling down on tabs swing bottom of TV away from wall slightly. See Figure 7.
2. With help of another person, lift and remove TV.

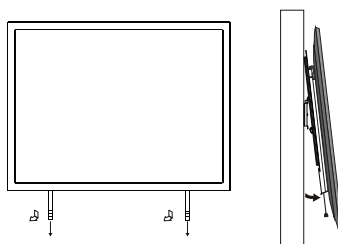


Figure 7 - Removing TV from wall.