 


Dimplex®

2.4KW CERAMIC HEATER WITH MANUAL CONTROLS

DHCER24M

User Manual

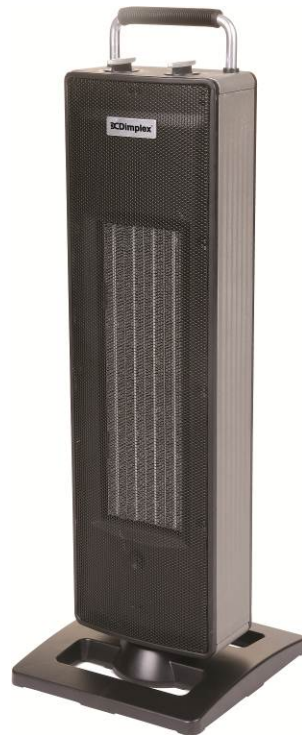

Please read the instructions carefully before using the product and keep this user manual for future reference.


1. PRODUCT FEATURES

- 2.4kW heat output
- Choice of heat settings
- Double overheat protection
- Tip over safety protection
- Oscillating function
- Manual controls
- 12 month warranty

2. SAFETY WARNINGS


- Please operate the heater on a dry even surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- Disconnect the heater from mains when not in use or cleaning.
- Do not operate the appliance with a damaged cord or plug. If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- It is not recommended to use an extension cord or power board on this appliance.
- Do not immerse cord, plug or any part of the appliance in water or any other liquid.
- Do not place the heater on or near any other source of heat.
- **WARNING: do not cover the heater. This may cause the unit to overheat.**
- A fire may occur if the heater is covered with or touches flammable material, including curtains, drapes, bedding etc. When in operation KEEP THE HEATER AWAY FROM SUCH MATERIALS.
- Do not use the heater in the immediate surroundings of bathtubs, showers, washing stands or swimming pools.
- Do not use the heater outdoors.
- When the heater is turned on for the first time, it may release a slight, harmless odor. This odor is a normal occurrence caused by the initial heating of the internal heating elements and should not occur again.
- Do not operate the heater in areas where flammable liquids are stored.
- Do not operate the heater in close proximity to curtains or other combustible materials. Keep any combustible materials at least 1.0m away from the heater.

3. ASSEMBLY INSTRUCTION

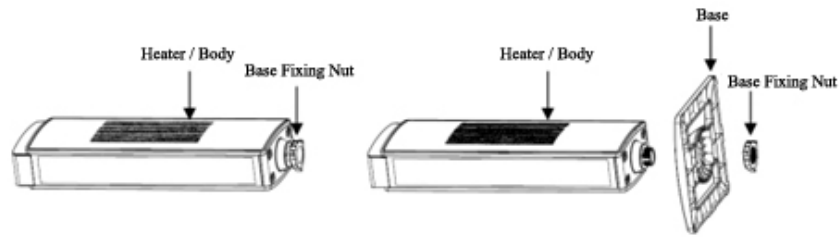

- Open the packaging, take the unit out and unscrew the base fixing nut.
- Insert the base into the bottom of the unit and screw on the base fixing nut.
- Turn the unit upright and place it on a flat or even surface before use.


4. PARTS DESCRIPTION

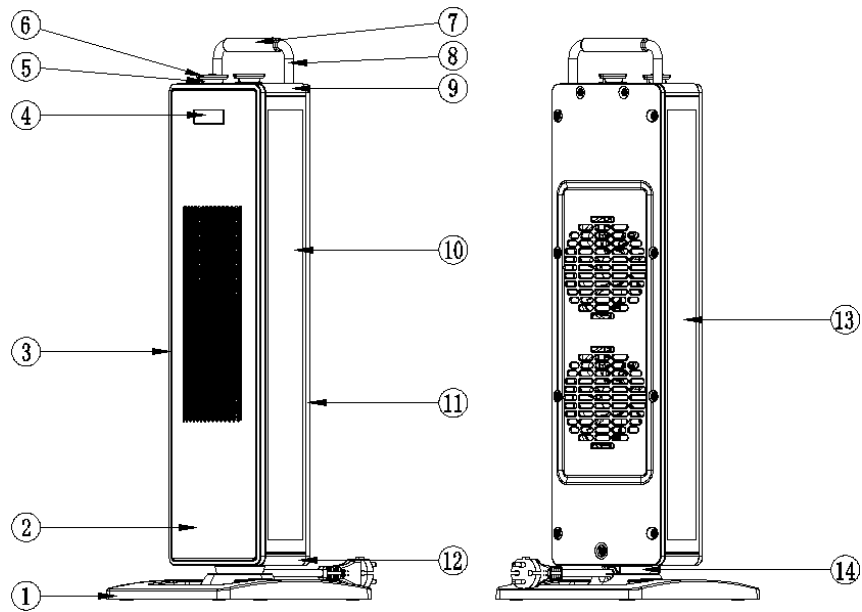

- | | | | |
|-----|--------------|-----|----------------|
| 1. | Base | 2. | Front Cover |
| 3. | Mesh Cover | 4. | Logo Nameplate |
| 5. | Control Knob | 6. | Knob Bezel |
| 7. | Handle Cover | 8. | Handle |
| 9. | Head Cover | 10. | Right Cover |
| 11. | Back Cover | 12. | Bottom Cover |
| 13. | Left Cover | 14. | Swing Base |

5. OPERATING INSTRUCTIONS

First, connect the power cord to the correct power supply (220-240V~/50Hz/ 10 amps).

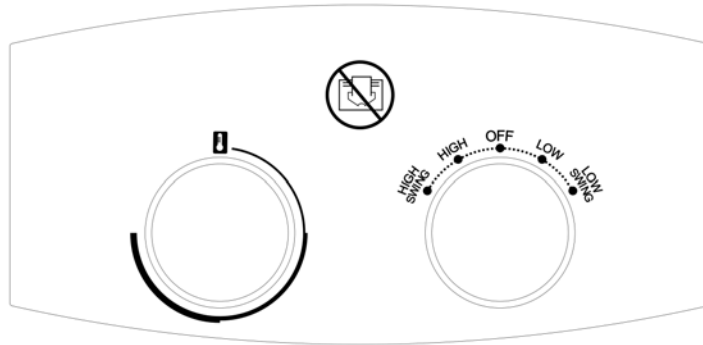

Power Setting Knob

- Rotate the knob to the “Off” position to turn off the unit.
- Rotate the knob to “Low” to turn the unit on at low heat.
- Rotate the knob to “Low Swing” to turn the unit on at low heat with oscillation.
- Rotate the knob to “High” to turn the unit on at high heat.
- Rotate the knob to “High Swing” to turn the unit on at high heat with oscillation.

Temperature Adjustment Knob

- Rotate the knob clockwise to set your desired temperature.
- When the unit reaches the set temperature, the unit will power off and the indicator light will also be switched off.
- If the temperature drops, the device will turn on automatically and the indicator light will be switched back on.


6. CLEANING AND MAINTENANCE

Make sure the power switch is turned off and the plug is disconnected from the socket before cleaning or maintenance. Otherwise, it may cause an electric shock.

Cleaning the unit's surface:

Clean the surface with a damp cloth (or add some detergent). Do not use corrosive detergent or solvent to clean, such as Petrol/ Turpentine etc. Do not wash the unit directly with water.

7. SPECIFICATION

Model No.	DHCER24M
Product name	2.4kW Ceramic Heater w/Manual Controls
Voltage/Frequency	220-240V~/50Hz
Power	1400/2400W
Speed	≥1.5 m/s
Noise	≤50dB (1m)
Tip over protection angle	45±5°
Product size	633h x 221w x 209d (mm)
N.W.	3.25kg
G.W.	...kg
	 5336



DISPOSAL: Do not dispose this product as unsorted municipal waste.
Collection of such waste is required to be disposed of separately.

Glen Dimplex Australia Pty Ltd
Unit 1, 21 Lionel Road
Mount Waverley VIC 3149
Phone: 1300 556 816
Fax: 1800 058 900
Email: sales@glendimplex.com.au

Glen Dimplex Australasia Ltd
38 Harris Road
East Tamaki, Auckland
Phone: 09 274 8265
Fax: 09 274 8472
Email: sales@glendimplex.co.nz