


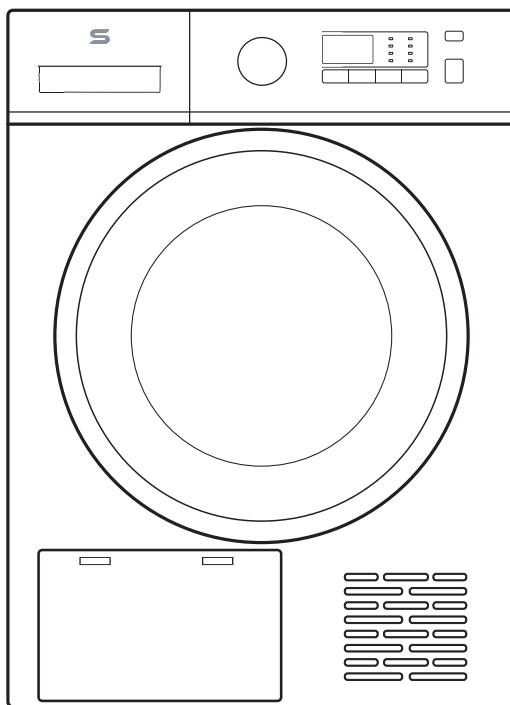

**8KG**  
**HEAT PUMP**  
**TUMBLE DRYER**

SC-800AU8HP



**INSTRUCTION**  
**MANUAL**

Please read this manual carefully before using, and keep it for future reference.



# CONTENTS

General Safety Instructions	4
Product Overview	8
Getting Started	11
Instructions	12
Operation	13
Maintenance	15
Troubleshooting	17
Specifications	19
Customer Helpline	20

# GENERAL SAFETY INSTRUCTIONS

## IMPORTANT INFORMATION

Read this manual thoroughly before you start using the Clothes Dryers.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

Pay close attention to messages that follow this safety alert symbol or the words **DANGER**, **WARNING** or **CAUTION**. These words will be used to alert you of potential hazards that and injure you and others. Following these instruction will tell you how to reduce the chance of injury and the possible dangers if instructions aren't followed.

### ELECTRICAL SAFETY

- **Voltage:** Plug the appliance to a 220-240V, 50Hz, properly earthed power outlet, it must be in good working order.
- **Power connection:** Do not use an adaptor or an extension cord.  
Plug the power plug directly into a separate power point that cannot be accidentally turned off, and that is easily accessible so you can switch it off if needed.
- **Power cord:** Do not kink or damage the power supply cord. Make sure it is behind the appliance so no one can step on or place anything on the power supply cord or against it. A damaged power plug may overheat and cause a fire.
- **Damaged cord:** Do not use a cord that shows cracks or damage. Any damage to the cord may cause a short circuit, fire and/or electric shock.  
Contact our support centre on [info@ayonz.com](mailto:info@ayonz.com) for advice
- **Disconnection:** Never pull the power cord to unplug appliance. Grip the plug and pull straight out from the power point. After turning the device off, wait at least 2 minutes before turning the appliance back on again.
- **Electrical work:** If the installation of this appliance requires any electrical work, make sure it is carried out by an electrician.

### WARNING

Make sure your home is fitted with a residual current device (Safety Switch).

# GENERAL SAFETY INSTRUCTIONS (cont.)

To reduce risk of fire, electric shock or injury, always follow these basic precautions and accident prevention measures when using this appliance, including the below:

## **INSTALLATION**

- The product is heavy, be careful when moving it. To avoid back or other injury, have 2 people lift or mechanical aid when installing.
- When unboxing, thoroughly inspect the appliance carefully for any damage. If there is any damage, do not install the appliance. Contact our support centre on [info@ayonz.com](mailto:info@ayonz.com) for advice.
- While installing the appliance make sure that the power cord is not bent or flattened.
- Install appliance on a flat level and stable ground.
- Do not install appliance in a tight fitted cabinet.
- Do not install appliance near other heat sources such as radiators, heaters or direct sunlight.
- If not wall mounted, be sure that the appliance is not placed on any soft materials such as plastics or foams.

## **WARNING**

Make sure that transport packaging is removed from the rear of the dryer. Do not overload the dryer with too many clothes.

# GENERAL SAFETY INSTRUCTIONS (Cont.)

## USAGE CONDITIONS AND RESTRICTIONS

- Supervision over children is to ensure that they do not play with the appliance. Never allow them to use, play with or crawl inside the appliance. Cleaning and maintenance must not be done by children.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are being supervised or been given instructions on how to use of the appliance in a safe way and understand the hazards with using this appliance incorrectly.
- Do not block any ventilation openings. Ensure that vents are not covered by anything.
- Do not use this product for anything other than its intended purpose, and only use it as described in this manual. Do not attempt to alter or modify this appliance.
- Only load items that are suitable for the clothes dryer.
- Do not place any open source flames on the dryer such as candles, etc..
- The door/window will be hot after a long cycle, be sure not to touch the window and to keep children away from the appliance.
- Never stop the clothes dryer before the cycle finishes, the last stage of the cycle is a drying mode without heat to ensure items are left at a temperature that will not damage them.
- The only part that can be changed is the filter, other than this nothing else in the dryer contains user serviceable parts. Do not open, disassemble or try to repair the appliance yourself. Only have this appliance serviced by a qualified technician.
- Incorrect use can result in property damage, injury or death. We assume no liability for misuse of the appliance or noncompliance with these instructions.

## WARNING

Never try to repair, modify or replace any part of the appliance, unless this manual says you can do so. All other servicing is to be done by a qualified technician, or contact our support centre on [info@ayonz.com](mailto:info@ayonz.com) for advice.

## IMPORTANT

Before using the washing machine, you must remove the 4 transport bolts from the rear of the machine.

If you do not remove these transport bolts before first time use, you will damage the unit and also void warranty. You must remove these transport bolts before first time use.

# GENERAL SAFETY INSTRUCTIONS (Cont.)

## CAUTION

**ITEMS BELOW ARE NOT SUITABLE FOR DRYING. IT CAN CAUSE FIRE IN THE APPLIANCE OR EXTENSIVE DAMAGE. DO NOT PLACE FOLLOWING IN THE APPLIANCE**

- Items containing rubber or foam like rubber or any other similar textured materials.
- Items that are spotted or soaked with cooking oil or any other flammable items. These other items include kerosene, stain removers, dry-cleaning solvents, alcohol, petrol, turpentine, waxes, hair care products, wax removers.
- Washing the items vigorously beforehand in hot water with extra detergent will reduce, but not completely eliminate the hazard.
- Undergarments that contain metal reinforcements (such as underwire bras). Plastic articles such shower caps and waterproof bibs.
- Rubber-backed articles, clothes with foam rubber pads, pillows, galoshes and rubber coated tennis shoes.
- Fabric softeners or similar products unless recommended by product manufacturer for use in a clothes dryer.
- **WARNING:** Never stop a dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

## CAUTION

- Do not use the tumble dryer if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the dryer.
- Do not allow lint to accumulate around the tumble dryer. Clean the Lint Trap and Filter after every use.
- Enough ventilation has to be provided to avoid the backflow of gases into the room from appliances burning other fuels including open fires.
- Remove all objects from pockets such as lighters and matches.


If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate the hazard.



**WARNING: Risk of fire**


This symbol alerts you to take care as oil-affected items can ignite, especially when exposed to heat, such as in a clothes dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation causes heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so it will create a fire hazard.

# PRODUCT OVERVIEW

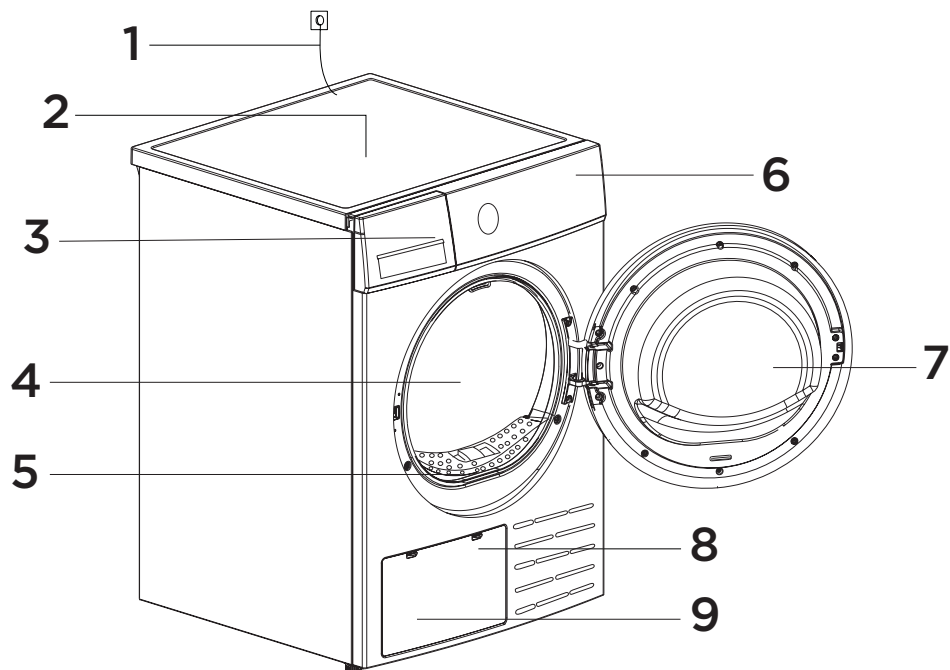


- |               |                |                      |
|---------------|----------------|----------------------|
| 1. Power cord | 2. Top board   | 3. Water container   |
| 4. Drum       | 5. Door filter | 6. Control panel     |
| 7. Door       | 8. Air inlet   | 9. Maintenance cover |

## Accessories

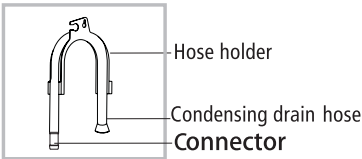

### Installation:

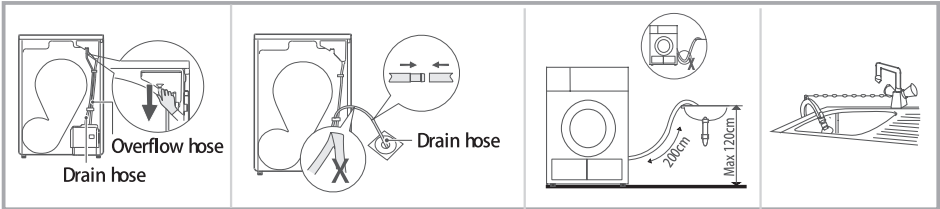


- |                               |                                                                                                   |                                                             |
|-------------------------------|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| Pull out the upper drain hose | Put the external drain hose into the floor drain (be careful not to bend the external drain hose) | Put the hose holder in the washing basin or any other sink. |
|-------------------------------|---------------------------------------------------------------------------------------------------|-------------------------------------------------------------|



# PRODUCT OVERVIEW (Cont.)

## CONTROL PANEL

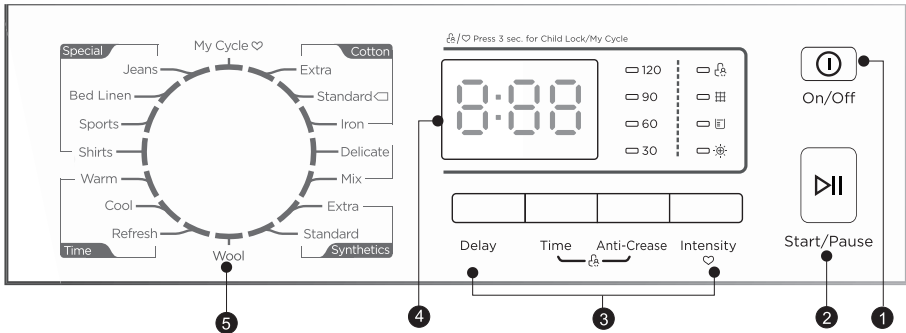

**1. On/Off Button:** Product is switched on or off.







**2. Start/Pause:** Press the button to start or pause the drying cycle.

**3. Option:** These buttons are used for setting additional functions.

- **Delay:** This function is used for delaying the start of the drying programme up to 24 hours. When the delayed programme starts, the time starts to countdown on the display.
  1. Load your laundry and make sure the machine door is closed.
  2. Press the **【On/Off】** button, then use the programme selector knob to select the desired programme.
  3. You can additionally select the **【Anti-Crease】** functions according to your need.
  4. Press the **【Delay】** button.
  5. Repeatedly press the **【Delay】** button to select the desired delay time.
  6. After the **【Start/Pause】** button is pressed, the Dryer is at the running condition. The drying procedure will be automatically performed when the delay time is over.
  7. If you press the **【Start/Pause】** button again, the delay function will be paused.
  8. If you want to cancel the “Delay” function, please press the **【On/Off】** button.
- **Time:** When the **【Time】** programme is selected, the **【Time】** button can be used to adjust the drying time in 10 min. steps.
- **Anti-Crease:** At the end of the drying cycle, the anti-crease time is 30 minutes (default) or 120 minutes (selected). This function prevents the laundry from creases. The laundry can be removed during the anti-crease phase. Except **【Cool】**, **【Wool】** and **【Refresh】**, all the other programmes have this function.
- **Intensity:** You can adjust the dryness level of the laundry by pressing the **【Intensity】** button.
  1. The intensity function can be activated only before the programme starts.
  2. Press the **【Intensity】** button repeatedly to adjust the drying grade.
  3. Except the **【Cotton Iron】**, **【Delicate】**, **【Wool】**, **【Warm】**, **【Cool】**, **【Refresh】** programme, all the other programmes can be adjusted with the **【Intensity】** function.

# PRODUCT OVERVIEW (Cont.)

4. **Display:** The display shows the setting, estimated program time remaining and status messages of your dryer.
- **My Cycle:**Used to define and save your favourite programme, which is used frequently.
    - 1.Select the desired programme and other drying functions.
    - 2.Press and hold the **【Intensity】** for 3 seconds until the beep sounds and the desired programme has been saved.
    3. Turn the programme selector to the **【My Cycle】** position, then you can start your favourite programme. If you want to change the **【My Cycle】** settings, repeat the steps (1) and (2).

	Child lock
	Remaining Time indicator/Error message
	Clean filters (warning)
	Empty water container (warning)
	Intensity
	My Cycle

5. **Programmes:** Different drying cycles can be selected according to the users need and the type of laundry to be dried.

**Child Lock Function:**

- 1.This machine incorporates a special child safety lock, which can prevent children from carelessly pressing buttons or making the faulty operation.
- 2.When the drying cycle is running, press the **【Anti-Crease】** and **【Time】** button for 3 seconds to start child lock function.
- 3.When child lock function is set, the display will show Child lock icon and all button are deactivated, except **【On/Off】** button.
- 4.To deactivate the child lock function, the **【Anti-Crease】** and **【Time】** button shall be pressed at the same time for 3 seconds.


**NOTE:** Make sure to clean the filter, cabinet and inner tube after every cycle.

# GETTING STARTED

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

## INSTALLATION

- This clothes dryer can be installed on the floor (as supplied).
- This appliance can not be installed behind a lockable door, sliding or a door with a hinge on the opposite of the clothes dryer. In all ways that full opening of clothes dryer door is strictly not allowed.
- Make sure that all electrical connections are made by qualified technicians and all instructions in this manual are observed.
- Place the dryer in a dry, well ventilated area, away heat and direct sunlight.
- Exhaust air must not be discharged into the flue which is used for exhausting fumes from appliances burning gas or other fuels.
- Make sure to allow 10cm of spacing behind the dryer to the wall.

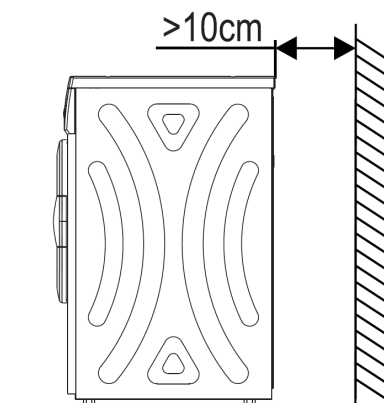

## LEVELING THE APPLIANCE

- Make sure to position the dryer is on a level and stable ground. If the floor is uneven you can adjust the feet by twisting it as if to screw in the feet to the product, either clockwise or counter-clockwise to adjust the feet up or down until appliance is completely level.

**NOTE:** The Dryer will not work correctly unless it is positioned perfectly level.

- Do not install the dryer in a place that can easily be reached by rain
- Do not place the back of the dryer near curtains.
- Do not place the dryer near gas or flammable areas.













# INSTRUCTIONS

## CAUTION!

Make sure you read all safety precaution in this manual that cause a hazard if placed in the clothes dryer.

## LOADING THE DRYER

- Before loading the dryer, check that none of the clothes you are inserting into the dryer have any symbols anywhere on them. These symbols indicate that there are not suitable for clothes drying.

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

- Make sure none of the items you are putting into the dryer have no combustible materials or foreign objects (such as coins, hair pins or lighters). Be sure to empty pockets of everything before putting into the dryer.
- Clean the filter before each use and make sure its properly back in place.
- To avoid items getting tangled in the dryer which can reduce drying performance, please insert items into the dryer one at a time.
- Turn items with cippers inside out and fasten buckles, as this will help to reduce impact noise with items hitting the drum while spinning.
- Make sure to check items for stains before inserting into the dryer, as drying can permanently set stains.
- As you dry large blankets or sheets from time to time open the dryer door take out the blanket or sheet and give it a shake then place back into the dryer. This will help larger items with drying process.

**WARNING:** Do not overload the dryer, maximum amount of items that can be dried in one load is 8kg.

- Make sure only items that have been washed and are still we are placed in the dryer, no items that are dry are to be placed in.
- Be sure when closing the dryer door that not items are jammed in the door.
- Do not add items to the dryer while it is operating.

# OPERATION

## PROGRAMMES

### • Programme Selector

1. When the LED display screen brightens up, rotate the programme knob to select the desired programme.

2. Select the **【Delay】**, **【Time】**, **【Intensity】**, **【Anti-Crease】** functions for additional options.

3. Press the **【Start/Pause】** button.

4. Press the **【On/Off】** button after the programme has completed.

### • Programme Start

1. The drum will rotate after the programme starts.

2. The remaining programme time will be displayed.

### • Programme End

1. The drum will stop rotating after the programme ends. The display will show “End” and related LED will illuminate. The dryer will start **【Anti-Crease】** function if user doesn't remove the load.

Please press **【On/Off】** button after unloading the tumble dryer to cut off power and pull out the plug.

2. Deal with the problems according to “Trouble Shooting” section, if there is an unexpected stop during the drying procedure or the dryer shows an Error Code .

# OPERATION (Cont.)

DRYING PROGRAMMES TABLE

Programme		Max Load	Application/Properties	Delay	Time
Cotton	Extra	8.0kg	For single or multi-layer cotton laundry to be dried completely for direct storage.	Y	N
	Standard				
	Iron		For single layer cotton laundry to remain damp for ironing.		
Delicate		1.0kg	For delicate laundry that is suitable for drying or laundry adviced to be hand washed at low temperature.	Y	Y
Mix		3.5kg	For mixed fabrics from cotton and synthetics.	Y	N
Synthetics	Extra	3.5kg	For thick or multi-layer synthetic fabrics to be dried completely .	Y	N
	Standard		To dry thin synthetic textiles, which are not ironed, such as easy care shirts, baby cloths or socks.		
Wool		1.0kg	To refresh you wool items and make them more fresh and fluffy.	Y	N
Special	Jeans	4.0kg	To dry jeans or leisure clothes that are spun at high speed in the washing machine.	Y	N
	Bed Linen	4.0kg	To dry bed linen, bed sheets or other large items.		
	Sports	3.0kg	To dry sportswear and thin fabrics from polyester, which are not ironed.		
	Shirts	1.0kg	For easy care laundry, such as shirts and blouses equipped with anti-crease functionality to minimize the ironing effort. Place clothes loosely in the dryer. Once dried, remove quickly and hang it on a clothes hanger.		
My Cycle		—	Define and save your favourite programme.	Y	—
Time	Warm	—	To dry individual items or complete the drying process of multi-layer fabrics with different drying behavior, such as jackets, pillows or voluminous items. Min 10 min. to max. 150 min.(in 10 min.steps)	Y	Y
	Cool	—	To air items without heating. Min. 10 min to max. 30 min.(in 10 min. steps)		
	Refresh	1.0kg	To refresh clothes kept at closed environment for a long time or to remove odors. Min. 20 min to max. 220 min.(in 10 min. steps)		

**Note for Test Institutes:•**



“Cotton Extra” Test programme in accordance with Regulation AS/NZS 2442.2 for energy labelling,measured in accordance with AS/NZS 2442.1 and suitable for drying normal cotton load at rated load capacity.

# MAINTENANCE

## CLEANING AND CARE

### EMPTY THE WATER CONTAINER

1. Pull out and hold the water container with two hands.
2. Tilt the water container, pour out the condensate water into basin.
3. Install the water container.

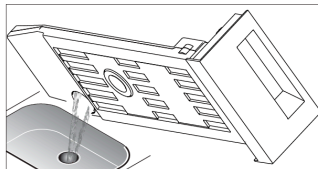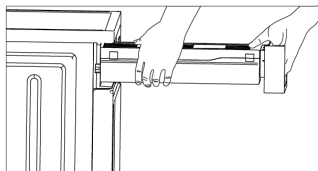

### WARNING:

Empty the water container after each use, the programme will be paused and the water box will light if the water container is full during the drying process. After the container is emptied, the dryer can be restarted by pressing the “start/pause” button.

- Do not consume the condensate water.
- Do not use the dryer without the water container.

### CLEAN THE FILTERS


This dryer has a primary door lint filter. Make sure you clean the door filter after each cycle.

#### • NOTE:

To ensure the double-layer filter can be closed smoothly, the arrows at both ends need to be aligned, and the middle slot and the rib need to be aligned.

### CLEAN THE DOOR FILTER

1. Open the door.
2. Take out the door filter.
3. Open the filter and remove the fluff on the filter, You can clean it in running water.
4. Dry the door filter thoroughly before installing it back.

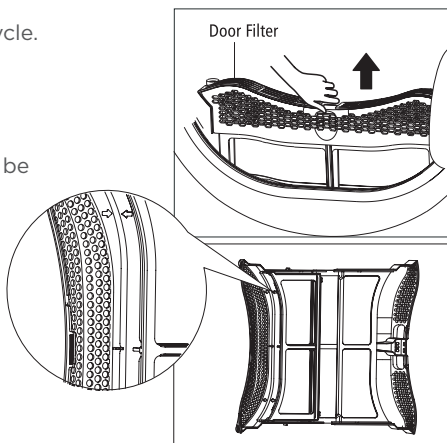

#### • NOTE:

Take notice of the correct orientation before to insert the door filter.


# MAINTENANCE (Cont.)

## CLEAN THE HEAT EXCHANGER

### WARNING:

Do not touch the heat exchanger with your hand, which may cause an injury!

- As necessary, approx. once every 3 months, remove the fluff from the heat exchanger using a vacuum cleaner with a dusting brush attached.
- Clean the heat exchanger without applying any pressure. Otherwise the heat exchanger could be damaged. The dryer will not dry if the cooling fins are damaged or bent.

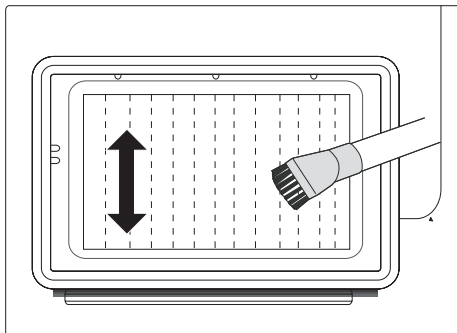


## CLEAN TUMBLE DRYER

### WARNING:

- Disconnect the power before cleaning!
- Clean the dryer with a wet cloth which is only damped by clean water.
- Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts.
- Please wear gloves when cleaning.

1. Prepare a wet cloth damped by clean water.
2. Clean the door, especially the inside window.
3. Clean the sealing around the door opening.
4. Clean the humidity sensor inside the drum.
5. Take out all the filters, clean the sealing and air flow openings.
6. Before starting the dryer, dry all parts with a soft cloth.

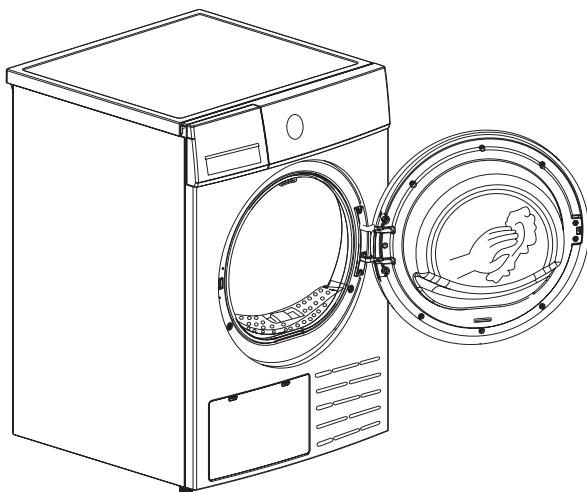



# TROUBLE SHOOTING

Many malfunctions and faults that might occur in daily operation can be easily remedied. Time and money will be saved because a service call won't be needed. The following guide may help you to find the reason for a malfunction and correct it.

Display	Reason	Solutions
"E32"	Humidity sensor error	Please contact your local service center if the problem occurs.
"E33"	Temperature sensor error	
"E82"	PCB communication error	

**Warning!**

- Only authorised technicians can carry out repairs.
- If the LED displays other prompt and the dryer does not work, please call the service.




**Note!**

Before you call the service, please check if you have dealt with the problems yourself consulting the user instructions.

# TROUBLESHOOTING (Cont.)

## TROUBLESHOOTING GUIDE

Use the below list to identify if your clothes dryer is having any issues and to identify and solve any problems. If you cannot solve the problem, contact our call centre on [info@ayonz.com](mailto:info@ayonz.com).

Problem	Solution
• Display is not on	<ul style="list-style-type: none"><li>• Check if the power supply works.</li><li>• Check if the mains plug is inserted.</li><li>• Check the selected programme .</li><li>• Press the <b>【On/Off】</b> button.</li></ul>
• "  " is lighting	<ul style="list-style-type: none"><li>• Check the water container. If it's full, please pour out the condensate water and restart the dryer.</li><li>• If the container is not full, please restart the dryer directly.</li><li>• If the "  " icon is still lighting after you have finished the first two steps, please call the service.</li></ul>
• "  " is lighting	<ul style="list-style-type: none"><li>• Clean the lint filter.</li></ul>
• Dryer does not start	<ul style="list-style-type: none"><li>• Connect the tumble dryer to the mains.</li><li>• Turn on the tumble dryer.</li><li>• Check the the door is closed.</li><li>• Check the programme is set.</li><li>• Press the <b>【Start/Pause】</b> button.</li></ul>
• Degree of dryness was not reached or drying time too long	<ul style="list-style-type: none"><li>• Clean lint filter and heat exchanger.</li><li>• Empty the water container.</li><li>• Check the drain hose.</li><li>• Check installation place is appropriate.</li><li>• Keep the air inlet clean.</li><li>• Use higher drying intensity level programme or time programme.</li></ul>
• There are humming noises	<ul style="list-style-type: none"><li>• The compressor is operating. These noises are quite normal and do not indicate a fault.</li></ul>
• The dryer switches off at the end of the programme	<ul style="list-style-type: none"><li>• The dryer switches off automatically for energy saving. This is not an error but a normal function.</li></ul>

### Warning!

If you cannot deal with the problems by yourself and need help:

- Press the **【On/Off】** button.
- Pull out the mains plug and call the service.

# SPECIFICATIONS

Power Supply	220-240V ~ 50Hz
Rated Power	800W
Grade of Waterproof	IPX4
Drying Capacity	8 kg
Weights	Net: 41 kg
	Gross: 45 kg
Dimensions	595 (w) x 600 (d) x 845 (h) mm

**NOTE:**

- The rated capacity is maximum capacity, make sure that the dry clothes which are loaded in to the appliance do not exceed the rated capacity each time.
- Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
- There is a risk of damage if the condensate water is allowed to freeze in the pump, hoses and / or condensate water container.

- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent-this will reduce. But not eliminate, the hazard.



**CUSTOMER HELPLINE:**

info@ayonz.com  
02 8279 8606

**DISTRIBUTED BY:**

Ayonz Pty Ltd