

10 Installation instructions


E402B, E442B, E522B

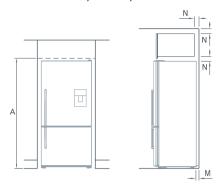


Flush with refrigerator chassis – full door rotation

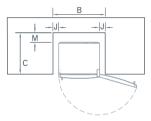


Flush with refrigerator door – 90° door rotation

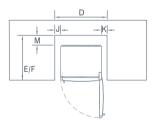


Flush with refrigerator door - full door rotation

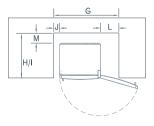


RF610A/RF540A/RF201A

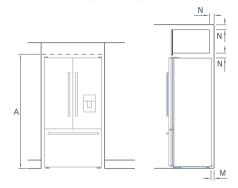

 
Flush with refrigerator chassis – full door rotation



 Flush with refrigerator door – 90° door rotation



 Flush with refrigerator door - full door rotation



3. Ventilation and installation

- To ensure adequate ventilation for your refrigerator see recommended cabinetry dimensions
- The appliance is intended to be placed against a wall with a free distance not exceeding 75 mm.

Cabinetry dimensions (mm) (including minimum air clearances)		E402B	E442B	E522B	RF610A RF540A RF201A
Α	inside height	1745	1745	1745	1810
	Flush with refrigerator chassis – full door rotation				
В	inside width	675	720	830	940
C	inside depth	620	620	620	620
	Flush with refrigerator door – 90° door rotation				
D	inside width	680	725	835	950
Е	inside depth flush to curved door	_	675	675	_
F	inside depth flush to flat door	690	690	690	690
	Flush with refrigerator door – full door rotation				
G	inside width	795	840	950	1180
Н	inside depth flush to curved door	675	675	675	_
I	inside depth flush to flat door	690	690	690	690
	Minimum clearances				
J	side clearance	20	20	20	20
K	side clearance – hinge side flush with door – 90° rotation	25	25	25	25
L	side clearance – hinge side flush with door – full rotation	140	140	140	140
M	rear clearance (incl. evaporator tray)	30	30	30	30
N	vent	50	50	50	50