

GERANICA

80L ELECTRIC OVEN

GE080CP



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Product Overview	8
Installation	10
Getting Started	16
Cleaning and Maintenance	21
FAQs	24
Specifications	25
Customer Helpline	Last Page

GENERAL SAFETY

IMPORTANT INFORMATION

Read this manual thoroughly before you start using the Electric Oven.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

Pay close attention to messages that follow this safety alert symbol or the words **DANGER, WARNING** or **CAUTION**. These words will be used to alert you of potential hazards that and injure you and others. Following these instruction will tell you how to reduce the chance of injury and the possible dangers if instructions aren't followed.



WARNING

This symbol indicates when there is a serious risk of injury if you do not pay attention to the warnings.



CAUTION

This symbol indicates when to be careful to avoid a serious risk of injury to oneself or damage to property.

GENERAL SAFETY INSTRUCTIONS (Cont.)

WARNING!

THE INSTALLATION OF THIS PRODUCT CAN ONLY EVER BE INSTALLED BY A LICENCED ELECTRICIAN. DO NOT IN ANY WAY TRY TO INSTALL THIS PRODUCT YOURSELF.

To reduce risk of fire, electric shock or injury, always follow these basic precautions and accident prevention measures when using this appliance, including the below:

NOTE: This appliance should be installed by an authorised electrician else warranty will be void.

IMPORTANT INSTALLATION ADVICE

- Were you are installing the oven, make sure that furniture and housing are able to withstand high temperatures from the use of the oven.
- Vinyl and laminate kitchen furniture are prone to heat damage or being discoloured from the heat. We assume no liability from any damaged cause by this appliance being installed in close proximity to the materials or furniture that cannot handle the heat.
- Make sure the room has plenty of ventilation as heat, steam and moisture will be produced from the oven while in use. If the oven will be used for long periods of time, extra ventilation is needed.
- Make sure that no cables come into contact with were the oven can get hot.
- Do not install oven next to soft furnishings or curtains.
- If power cord is damaged, it must be replaced immediately from the manufacturer or a qualified electrician/technician to avoid hazard.

GENERAL SAFETY INSTRUCTIONS (Cont.)

USAGE CONDITIONS AND RESTRICTIONS

- Supervision over children is to ensure that they do not play with the appliance. Never allow them to use, play with or crawl inside the appliance. Cleaning and maintenance must not be done by children.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are being supervised or been given instructions on how to use of the appliance in a safe way and understand the hazards with using this appliance incorrectly.
- Never leave the oven unattended while in use, oils and fats may catch fire while cooking.
- Only for indoor domestic use only. It is not to be used for industrial or commercial use.
- Do not use this product for anything other than its intended purpose, and only use it as described in this manual. Do not attempt to alter or modify this appliance.
- In use, the door window may become hot. Make sure not to touch it or that no children or pets come into contact with the door window.
- Damage or malfunction caused from foreign objects is not covered by your warranty to the appliance.
- This oven is not to be used by an external timer or a complete separate control system.
- Make sure you turn off the oven before you commence cleaning.
- Do not use the oven for heating an area or drying clothes.
- Make sure you do not use the oven if any part has been damaged or does not work correctly. It must only be repaired by a qualified technician. An incorrect repair could expose you to risk of electric shock, fire or injury. If you continue to use the product in such a condition it could cause a fire or electrocution.
- Incorrect use can result in property damage, injury or death. We assume no liability for misuse of the appliance or noncompliance with these instructions.

GENERAL SAFETY INSTRUCTIONS (Cont.)

OVEN SAFETY

- Oven door must stay closed when using the grill function
- While cooking, don't place pans or cookware on the base of your oven. Make sure to always place items on shelves provided.
- Make sure when removing anything from the oven, always use an oven mitt.
- Do not use aluminium anywhere within the oven or to cover the grill pan or wrap heated items under the grill. Aluminium foil is highly reflective and can cause damage to the grill element.
- Do not lift or move appliance by the oven door or handle, this may cause damage to the appliance or injure the person attempting to lift appliance.
- Clean the oven on a regular basis so oils and fats do not build up, as this can cause a fire risk. Do not use harsh cleaners or metal scrapers to clean door glass. Do not steam clean anything that's part of the oven, when cleaning oven make sure no part of it is immersed in water or other liquid.
- **CAUTION:** Do not touch hot surfaces, The heating element and other parts inside the oven become extremely hot. Make sure you take care when handling food and to always use oven mitts. Keep children well away from the oven.
- When opening the oven door, make sure to avoid contact with hot parts of the oven and steam.
- There is a danger of fire when you leave items inside the oven for too long, especially if an item is left for the next time use.

PRODUCT OVERVIEW

 
Oven



- 1 Control panel
- 2 Oven rack
- 3 Baking tray
- 4 Door hinge


- 5 Oven light
- 6 Shelf supports (side racks)
- 7 Fan guard
- 8 Triple glazed removable door

ACCESSORIES

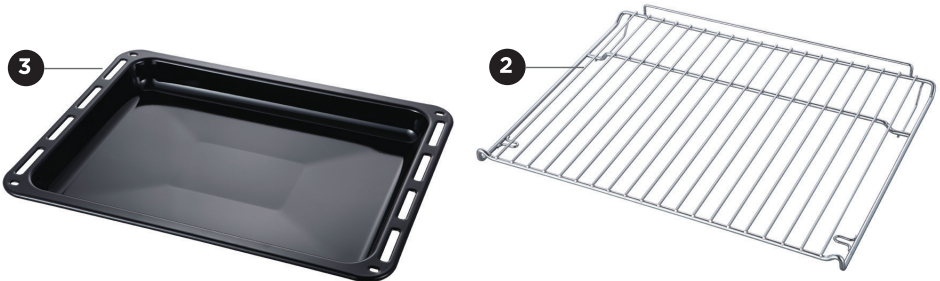

PRODUCT OVERVIEW (Cont.)

 CONTROL PANEL

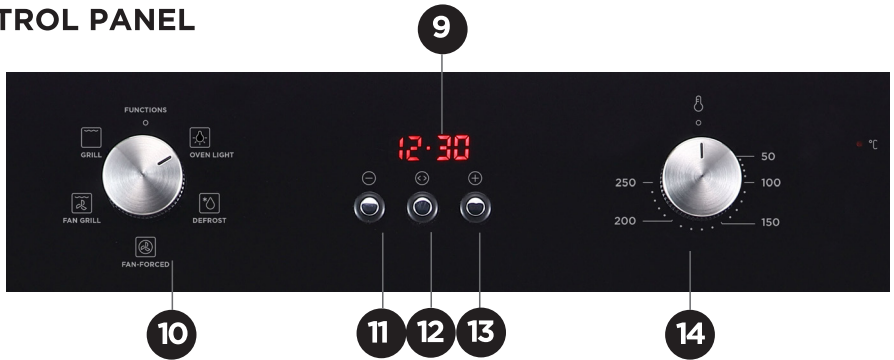

- | | | | |
|----|------------------|----|---------------------|
| 9 | Display screen | 12 | TIMER / OK button |
| 10 | FUNCTION control | 13 | INCREASE button |
| 11 | DECREASE button | 14 | TEMPERATURE control |

FUNCTION SELECTOR

There are 4 options when deciding what to use:

GRILL

This function is used for grilling, use the full width baking tray as this can easily be positioned at the right level away from the grill depending on what food you are grilling.



OVEN LIGHT

This mode turns on a separate light. Useful when cleaning out the oven.

DEFROST

Defrost function allowing frozen foods to be defrosted.

FAN GRILL

Excellent combination for cooking spit roasted chicken or a variety of roasts.

FANNED FORCED

Even heat distribution inside the oven, cooking multiple items of food on different levels at the same time.

INSTALLATION

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

UNPACKING

- When unpacking the appliance, be sure to keep all the packaging materials until you have made sure your new appliance is undamaged and in good working order.
- Be sure to remove all packaging materials around the oven and inside the oven.
- **CAUTION:** Plastic wrapping can be a suffocation hazard for babies and young children. Make sure all packaging materials are out of reach for children and that they are disposed of correctly.

TRANSPORTATION

- **CAUTION: VERY HEAVY!** Be sure to team lift the appliance with someone or mechanical aid is required when moving the appliance. Keep the appliance upright as possible when moving the appliance.

WARNING!

THE INSTALLATION OF THIS PRODUCT CAN ONLY EVER BE INSTALLED BY A LICENCED ELECTRICIAN IN ACCORDANCE WITH RULES AND REGULATIONS AND FOLLOWING INSTRUCTIONS IN THIS MANUAL.

Make sure you do not try to install the oven yourself, doing will expose you to danger and void the warranty. Incorrect installation, adjustment, alteration or service can cause injury or damage. We do not assume responsibility for injury or damage to a person or persons or property as a result of incorrect use or installation.

- Risk of electric shock, short circuit or fire by damage of the mains lead. The mains lead must not be clamped, bent, trapped or come into contact with hot parts of the appliance. If the mains lead is damaged, it must be replaced by a qualified electrician.
- The mains supply must correspond to the data specified on the rating plate of the appliance. The appliance mains cable must correspond to the specifications and the power consumption.
- The appliance must not be installed behind a decorative door in order to avoid overheating.

INSTALLATION (Cont.)

 
 
IMPORTANT INSTALLER ADVICE

- Before connecting oven, make sure supply voltage corresponds with your mains supply voltage.

WARNING! This appliance must be earthed.

INSTALLATION

- 1 Slide the oven through the cabinet aperture, align and secure.
- 2 Fix your oven with the 2 screws and washers as indicated in the figure to the right.

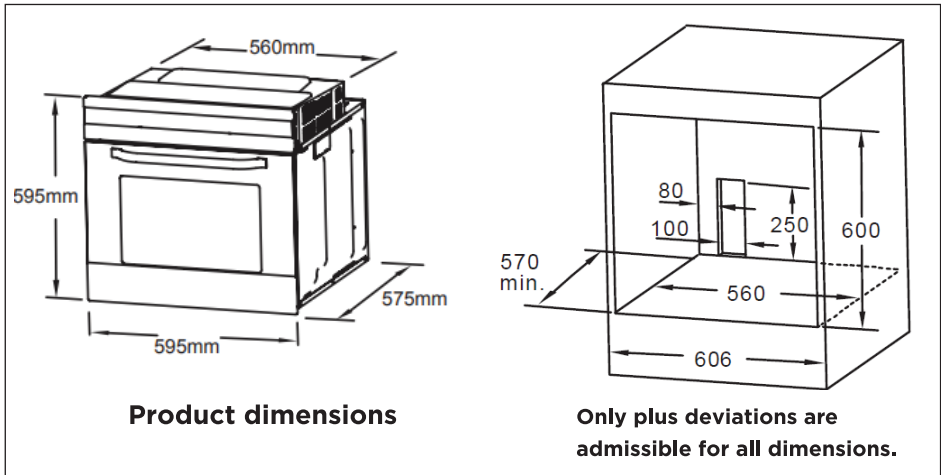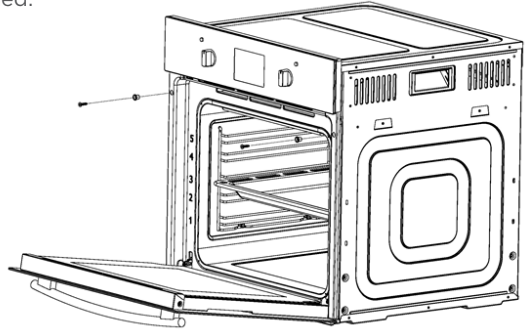

Product dimensions

- Height:** 595mm
Width: 595mm
Depth: 575mm

Aperture dimensions

- Height:** 600mm
Width: 606mm
Depth: 570mm (min.)

- Kitchen cabinets must be set level and fixed. If installed in a floor cabinet, a minimum 5mm gap is required between the appliance and the front panel of the surrounding cabinet. If installed in a medium high cabinet, no such gap is required.
- The minimum installed/situated height from floor to the bottom of the oven shall be 80mm.

INSTALLATION (Cont.)

ELECTRICAL CONNECTION

- Before connecting oven, make sure supply voltage corresponds with your mains supply voltage.

WARNING! This appliance must be earthed.

- This appliance comes pre-terminated with supply cord and plug. Below connection information is for reference only.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- Allow disconnection of the appliance after installation, by accessible plug or a switch in the fixed wiring.

WARNING! All electrical work must be carried out by a licensed electrician. No alterations or wilful changes in the electricity supply should be carried out.

- This oven is manufactured to work with single-phase alternating current (220-240V~ 50/60Hz).
- If the power cord is damaged, it must only be replaced by an authorised technician.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

IMPORTANT!

- Do not use the oven door or handle to lift or move the oven, use the slots located at both sides.
- Carry the appliance with at least one other person.
- Once the oven has been fully installed, all electrical parts must be completely insulated. This is a legal safety requirement. All guards must be firmly fixed into place so that it is impossible to remove them without using special tools.

INSTRUCTIONS

SWITCHING OFF/ON

- To switch on the oven you need to set the required oven function and cooking temperature (or manual) mode.
- To switch off the oven, set both FUNCTION and TEMPERATURE control knobs to the [o] position for OFF.

FUNCTION AND TEMPERATURE



Selecting an oven function






- Use the **FUNCTION control** knob to select your required oven function **(Please refer to the table opposite for a description of the functions.)** The appliance will utilise different elements within the oven cavity depending on the oven function selected.

Setting a temperature

- Use the TEMPERATURE control knob to set the required temperature for cooking or baking in the oven, **turning the knob in clockwise direction.** The temperature can be regulated within a range of 50–250°C.
- Unless your recipe states otherwise, always wait until the oven is hot before placing food inside the oven chamber. The oven has reached the set temperature when the thermostat light goes out for the first time.
- When the oven is not in use, make sure the TEMPERATURE knob is in the **OFF [o] position.**

IMPORTANT: For the oven to start cooking, you have to set the function and temperature as well as the timer – or set the timer to Manual cooking mode.


INSTRUCTIONS (cont.)

SYMBOL	FUNCTION
	<p>OVEN LIGHT</p> <p>This function provides a separate light control to illuminate the oven cavity without opening the door.</p>
	<p>DEFROSTING (fan only)</p> <p>On this setting the fan runs without heat to thaw frozen foods rapidly and delicately. It is particularly suitable for defrosting fruit and cakes. When using this setting for defrosting easily spoil foods, cook them straight after defrosting, or refrigerate.</p>
	<p>FAN-FORCED (fan + centre heating element)</p> <p>On this setting the centre heating element produces the heat and the fan distributes it evenly throughout the oven cavity. This results in a fast and economical cooking process, where food can be cooked simultaneously on different shelves, preventing the transmission of smells and tastes from one dish onto another.</p> <p>NOTE: This setting is the most suitable for roasting.</p>
	<p>GRILL (top heating element only)</p> <p>This setting utilises the top element, which directs heat downwards onto the food. This function is suitable for grilling meat, minced meat patties, bacon, sausages and some vegetables. Use the top shelf for smaller items and a lower shelf for larger ones.</p> <p>IMPORTANT: Keep the oven door closed during grilling.</p>
	<p>FAN GRILL (fan + top heating element)</p> <p>On this setting the top element is in use together with the fan, which helps provide a quick circulation of heat, resulting in evenly brown and crisp food. This function is suitable where quick browning is required and sealing in juices, such as when cooking chicken pieces or smaller roasts.</p> <p>IMPORTANT: Keep the oven door closed during grilling.</p>

GETTING STARTED (Cont.)

SET THE TIMER

 Your new electric oven has a digital timer with an easy to read LED display.

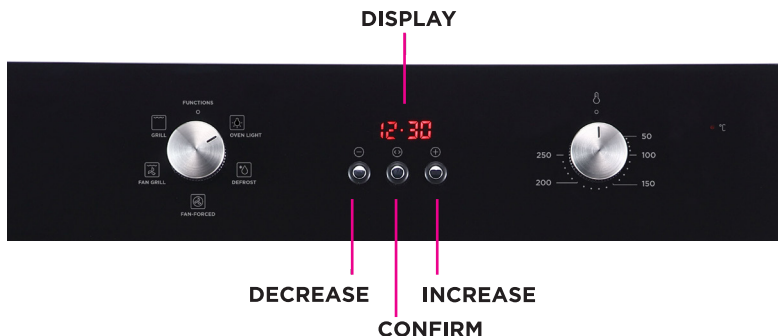

SETTING THE CLOCK

When your new oven is connected to the mains supply for the first time, the display shows **12.30** while 12 is blinking.*

Before you start using the oven, you should set the clock. Please note that this oven is equipped with a 24 hour clock, which means, for example, that 2pm will be displayed as 14.00.

- While 12 is blinking on the display, press the + or - button to set up the hour, then press (→) to confirm.
- Press the + or - button to set up the minutes, then press (→) to finish clock setting.
- The time of day has now been set and the timer is in standby mode.



* **NOTE:** If the numbers on the display are not blinking, or if you want to adjust the clock during normal use, press the + and - buttons at the same time and hold for three seconds. Then adjust the time as described above.

Timer functions




When the timer is in standby mode, you can set the oven to manual cooking mode, or to various automatic timer functions (minute minder, duration, end cooking, delayed cooking).

- **To select a timer function:** press the (→) button, repeatedly, then use the + or - button to set the desired point or period of time.
- **To set the time:** press the + or - button briefly for minute to minute progression, or press and hold to move quickly through the digits.

GETTING STARTED (Cont.)

- To cancel a setting and enter manual cooking mode:
Press the  button and hold it for more than 3 seconds.
- To cancel the setting and return the time to standby mode:
Press the  and + buttons at the same time and hold for 3 seconds.
- If there is no operation for five minutes during the timer setting, it will return to manual cooking mode.







MANUAL COOKING MODE

- Place the food to be cooked in the oven, close the door and set the cooking function and oven temperature.
- Press and hold the  button for more than three seconds to enter **MANUAL** cooking mode. The display shows the clock time and the cooking  icon.
- To start the oven, set the oven function and temperature.
- When you finished cooking, turn the **FUNCTION** and **TEMPERATURE** controls to the (o) position for OFF.
- The oven is now in MANUAL cooking mode. To return the timer to standby mode, press the  and the + buttons at the same time and hold for 3 seconds.

NOTE: To ensure the oven is not left on accidentally in MANUAL cooking mode, when no button has been pressed for 5 hours, the time will flash once per second to warn you the oven will enter standby mode. After a total of 10 hours the timer will enter standby mode.

SETTING THE MINUTE MINDER







You can set a period of time using the minute minder function and an alarm will sound when that period of time has elapsed. You can set the minute minder at any time, regardless of whether you are using the oven to cook.

- Press and hold the  button for more than three seconds until  is shown.
- Press the  button again, briefly to enter the **MINUTE MINDER** mode. The display shows the clock at the current time and the minute minder  icon.
- Use the + and - buttons to set the desired time period, then press the  button to confirm. An alarm will sound when the countdown time has ended. Press any button briefly to silence the Alarm.
- This function will NOT switch off the oven. To switch off the oven you must turn the **FUNCTION** and Temperature control to (o) positions for OFF.
- Press the  and + buttons at the same time and hold for 3 seconds to return the timer to STANDBY mode.

GETTING STARTED (Cont.)







SET COOKING DURATION (dur)

This function allows you to set a countdown time (max. 10 hours) after which the oven turns off automatically.

- Place the food to be cooked in the oven, close the door and set the cooking function and oven temperature.
- Press and hold the  button for more than three seconds until  is shown.
- Briefly press the  button again, twice, to enter Duration mode. The display shows the duration [dur] and cooking  icons.
- Use the [+] and [-] buttons to set the desired cooking period, then press  to confirm. The oven will start operating and the display shows the clock at the current time, the cooking  icon and [A].
- When the cooking time has elapsed, the oven will stop heating, the symbol [A] will start blinking on the display and an alarm will sound. Press any button briefly to silence the alarm.
- Turn the **FUNCTION** and **TEMPERATURE** controls to the OFF [o] positions.

SETTING THE END COOKING TIME [END]




 







This function is similar to the cooking duration function. However, instead of setting the period of time that you wish the oven to switch off after, you select the point of time (the time of day) at which you want the oven to switch off.

- Place the food to be cooked in the oven, close the door and set the cooking function and oven temperature.
- Press and hold the  button for more than three seconds until  is shown.
- Briefly press the  button, repeatedly, until [End] is displayed on the screen, together with the cooking  icon.
- Use the [+] and [-] buttons to set the desired end cooking time (time of day), then press  to confirm. The oven will start operating and the display shows the clock at the current time, the cooking  icon and [A].
- When the end of the cooking time has been reached, the oven will stop heating, the symbol [A] will start blinking on the display and an alarm will sound. Press any button briefly to silence the alarm.
- Turn the **FUNCTION** and **TEMPERATURE** controls to the (o) positions for OFF.

GETTING STARTED (Cont.)

SETTING FULLY AUTOMATIC DELAYED COOKING

The delayed cooking function is a convenient feature you can use when you are at home and want to set the oven to come on at a time in the future and switch off after a set cooking duration. It only works after you have set the cooking duration function.

- Place the food to be cooked in the oven, close the door and set the cooking function and oven temperature.
- Press and hold the  button for more than three seconds until  is shown.
- First, briefly press the  button again, twice, to enter Duration mode. The display shows the duration [dur] and cooking  icons. Use the [+] and [-] buttons to set the desired cooking period, then press  to confirm. The display shows [A] and the cooking  icon.
- Second, keep pressing the  button until [End] is displayed on the screen. Use the [+] and [-] buttons to set the desired end cooking time, then press  to confirm. The display shows the clock at the current time and the symbol and [A]. The cooking  icon will disappear until the time when the oven starts operating.
- The oven will start operating at the time calculated by deducting the cooking period from the set finishing time, and will stop at the set finishing time. The symbol [A] will begin to flash and an alarm will sound. Press any button briefly to silence the alarm.
- Turn the FUNCTION and TEMPERATURE controls to the OFF [o] positions.
- Press the  and [+] buttons simultaneously and hold for three seconds to return the timer to standby mode.
- NOTE: Once delayed cooking has been set, times cannot be changed. To change a setting, you have to cancel the program first and then reset it.
- To cancel a setting, press and hold the  button for more than three seconds.

WARNING!

- For your personal safety and to avoid any potential fire risk, do NOT use the delayed cooking function and then leave the oven unattended.
- For food safety reasons, do NOT leave easily spoilt foods in the oven for too long when using the delayed cooking function.
- When baking, we recommend you do NOT use the delayed cooking function as the cake mixture may dry out and the raising agents may lose their effectiveness.

 
GETTING STARTED

BEFORE FIRST TIME USE

- The best way is to make sure you are familiar with everything about the oven first before using this. Pay attention to everything in this manual in particular the safety instructions and cautions.
- After the appliance is installed be sure to properly clean the oven before first use with a soft dampened cloth to remove any dust from transport.
- Remove and wash all the oven racks and baking/drip tray with warm water a little washing up liquid, dry and return it to the oven. Make sure to leave the oven door open for it to completely dry.

INSERTING ACCESSORIES

You can insert the accessories into the oven at 5 different level. Always insert them as far as they go so that the accessories do not touch the door panel when door is being closed.

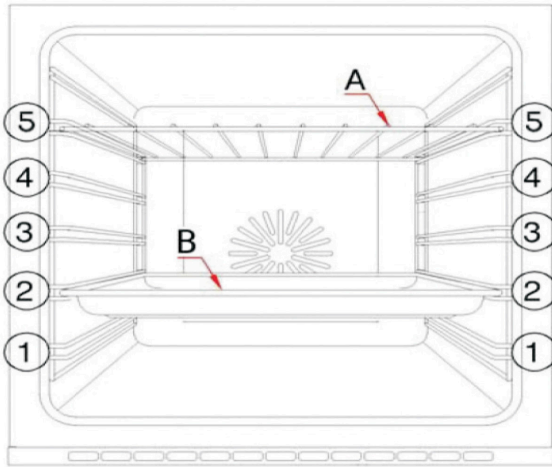

SHELF POSITIONS

Your oven will come supplied with the following:

- (A) Oven Shelf
- (B) Baking Tray.

- The numbers 1 - 5, indicate the different shelf positions that you can utilise within the oven.

- The sides of the cavity are moulded to provide positions for the shelves or enamelled baking tray to rest on. Ensure that you select a shelf position at the same height on both sides of the cavity. The oven shelf has safety stops to prevent accidental withdraw. After engaging the oven shelf in the side racks, as you push the oven shelf into the oven, lift the front of the shelf slightly to bypass the stops and allow the oven shelf to slide fully into the racks.
- To remove the oven shelf, gently pull the oven shelf outwards. When the shelf stops, lift the front slightly to bypass the safety stops and then completely withdraw the oven shelf from the oven.
- When installed correctly, the shelf and tray should be horizontal and not on an angle.

CLEANING & MAINTENANCE

CLEANING THE OVEN

- After each use, make sure to clean the oven thoroughly. This will prevent residual food stuffs becoming baked on the oven chamber surfaces, which will make the residues more difficult to remove.
- Remove the oven rack and baking/drip tray from the oven before cleaning. Clean the oven cavity only with warm, soapy water, using either a sponge or soft cloth, then dry with a dry cloth. Do not use any abrasive cleaners, harsh detergents and hard or metal brushes on any oven surface.
- Any stains that may appear on the bottom of the oven are probably due to spilled food or food splashes, which will have occurred during the cooking process. These spills and splashes could possibly be a result of the food being cooked at an excessively high temperature, or being placed in cookware that is too small. To avoid such stains, make sure to select a cooking temperature and function that is appropriate for the food you are cooking. Also make sure to place the food in an adequately sized dish and to use the drip tray where appropriate.
- Clean the oven exterior with a wrung out soft cloth or sponge, dampened with warm soapy water. Do not use any abrasive cleaners. Never leave acidic substances (lemon juice, vinegar) on stainless steel parts.
- If the glass oven door is splattered with fat or other food residues, remove them with a cloth dampened in warm, soapy water. Then use a dry, lintfree cloth to remove any streaks. Do not use harsh or abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering. You may remove the door for thorough cleaning, if required; please refer to the next pages for instructions.
- If you use any form of oven cleaner on your appliance, you must check with the manufacturer of the cleaner that it is suitable for use on your appliance. Any damage caused to the appliance by a cleaning product will not be covered under your warranty. We recommend using an appropriate stainless steel cleaner and polish regularly on the stainless steel surfaces.

CAUTION!

- Before cleaning any part of the oven, make sure all oven controls are switched off and the oven has cooled down sufficiently.
- Never use a steam cleaner to clean any part of the oven.

 
 
CLEANING & MAINTENANCE (cont.)

REMOVING THE OVEN DOOR FOR CLEANING

Removing the oven door and the glass panel inside the door enables full access to the entire oven cavity for easier cleaning and maintenance.

- Before you start, place some soft, padded material on the floor or benchtop.

- Open the oven door completely and have a look at the door hinges (1). The hinges (A) have two movable latches (B) on them. If you raise both these latches, the hinges are released from the oven housing.
- Close the door to an angle approximately 15°.
- With both hands, grip the sides of the door at the centre and then incline it slightly towards the oven cavity and then pull the door gently away from the oven cavity (2).

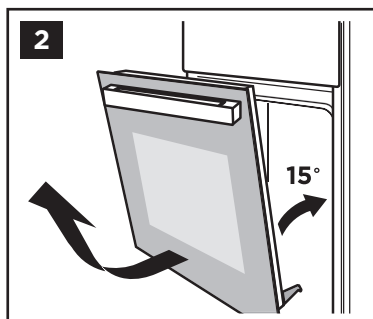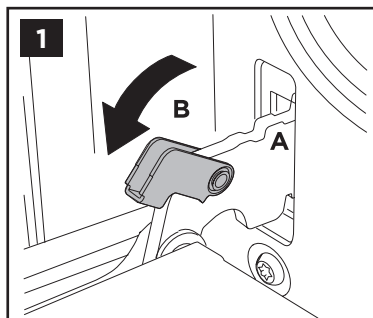

IMPORTANT: Make sure that the door is supported at all times and that you place it on some padded material while cleaning it.

- Place the door flat on the prepared soft material for cleaning.
- Clean the oven glass door only with a damp cloth and a small amount of mild detergent. Make sure the cloth is clean and does not contain residues of other cleaning products.
- If you want to remove the inner glass panel for cleaning while you have taken the door off the oven, please refer to the next page for instructions.
- To refit the door, carefully slide the hinges back into their slots and open the door fully. **IMPORTANT:** The movable latches (B) must be closed back into their original positions before closing the door.

CAUTION!

- The latches must be closed back into their original positions before closing the door.
- Take care not to dislodge the hinge locking system when removing the door, as the hinge mechanism has a strong spring.
- Do not immerse the door in water at any time.

CLEANING & MAINTENANCE (cont.)

 
REPLACING THE OVEN LIGHT BULB

IMPORTANT!

To avoid the possibility of electric shock, make sure the oven is switched off and unplugged from the power supply before removing or replacing the oven light bulb.

When the lamp in the oven fails and needs replacement, proceed as follows.
(Bulb replacement is not covered by warranty.)

- Unscrew and remove the glass lamp cover by turning it anticlockwise (3). Wash the lamp cover and wipe it dry.
- Unplug the light bulb and carefully remove it from the socket. Replace the bulb with a new high-temperature bulb of the same size and wattage (G9, T300°C halogen, 230V, 25W). Do not use any other type of bulb.
- Screw the bulb back in, making sure it is properly inserted into the ceramic socket.
- Screw the glass lamp cover back into place.

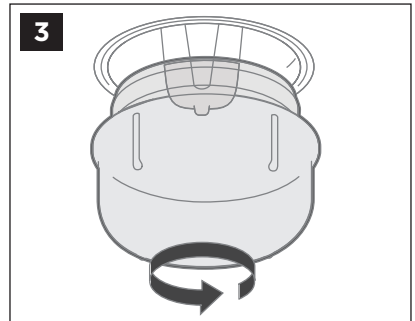

FAQS

If experiencing issues with your oven and isn't operating correctly please check the following pages for solutions to the problems. If none of the solutions offered help solve the problem with your appliance then please contact our call centre at info@ayonz.com

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

Problem	Solution
Oven isn't turning on	<ul style="list-style-type: none">• Check to see if the oven is in "Manual Operation"• Check that a cooking function and temperature has been selected.
No power to the oven and grill	<ul style="list-style-type: none">• Check the appliance has been connected properly to an electrical mains supply.• Check household fuse box.
The grill function works but the main oven doesn't	<ul style="list-style-type: none">• Check that you have selected correct cooking function.
The grill and top oven element is not working, or cuts out for long periods of time during use.	<ul style="list-style-type: none">• Allow oven to cool for 2 hours. once cool check whether appliance is working properly.
Food not cooking properly	<ul style="list-style-type: none">• Make sure that you have selected correct cooking temperature and cooking function.
Food not cooking evenly	<ul style="list-style-type: none">• Make sure oven has been installed correctly and is level• Make sure dishes are placed correctly on oven racks.
Oven light not working	<ul style="list-style-type: none">• Make sure light bulb is not loose, if so tighten it.• If the bulb isn't working still, replace it with same size and wattage.
Condensation in the oven	<ul style="list-style-type: none">• If your dish has high water content then you will get steam and condensation from this dish.• Carefully wipe oven door after use.• Don't leave food in oven after finished cooking and the oven has been switched off.
Fan keeps running when oven is switched off	<ul style="list-style-type: none">• A cooling fan is fitted inside the appliance to help stabilise the oven's internal temperature and external surface temperature.

SPECIFICATIONS

Oven cavity capacity (gross)	80L
Product dimensions	595 (w) x 575 (d) 595 (h) mm
Aperture dimensions	560 (w) x 570 (d) x 600 (h) (min) mm
Weight	32kg
Oven door	Triple glazed, removable
Oven light bulb	G9, 230V, 25W, 300°C
Oven functions	4 + oven light
Oven temperature range	50-250°C
Timer	24 hour, digital
Rated voltage / frequency	220-240V ~ 50/60Hz
Total rated power	2100W

This product has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.6.

GER ANICA

CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd