

DCACM20

Air Circulator w/Manual Controls



INSTRUCTION MANUAL

PLEASE READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USING THE UNIT.

WARNINGS AND PRECAUTIONS	1
STRUCTURE	3
OPERATION	4
CLEANING AND MAINTENANCE	6
TECHNICAL REFERENCE DATA	7
WARRANTY	7

Warnings

- Never place the unit near gas appliances, flames or flammable liquids.
- Never hit or shake the unit. Doing so may cause damage.
- Never cover or obstruct the air inlet or outlet. Doing so may cause overheating.
- Never spray water on or place the unit near water. Doing so may cause electric shock.
- Never connect other appliances to the same power outlet.
- Never connect or disconnect the power plug with wet hands. Doing so may cause electric shock.
- Never insert fingers or objects through the guards when the unit is operating.
- Never use an extension cord.
- Always have a professional technician, manufacturer or service agent replace a damaged power cord.

Precautions


- This appliance is for indoor use only.
- Do not use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- Do not place the unit in a damp place or where humidity is high (such as a bathroom).
- Do not leave the unit operating while unattended.
- Do not place the unit in direct sunlight to avoid surface discolouration.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from electric appliances such as televisions and radios.
- Avoid scratching and damaging the surface. Do not use chemical solvents (i.e. Benzene, alcohol) to clean the surface.
- Place the unit on a stable surface when operating.
- Unplug the unit before cleaning, servicing or maintenance.
- Electrical connections must be in accordance with National or
- Local Codes.
- The rear of the unit must be at least 50cm away from the wall.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


STRUCTURE



1. Base
2. Dial
3. Setting panel
4. Brand badge
5. Front grille
6. Pivot point – oscillation
7. Rear housing
8. Fan body
9. Power cord

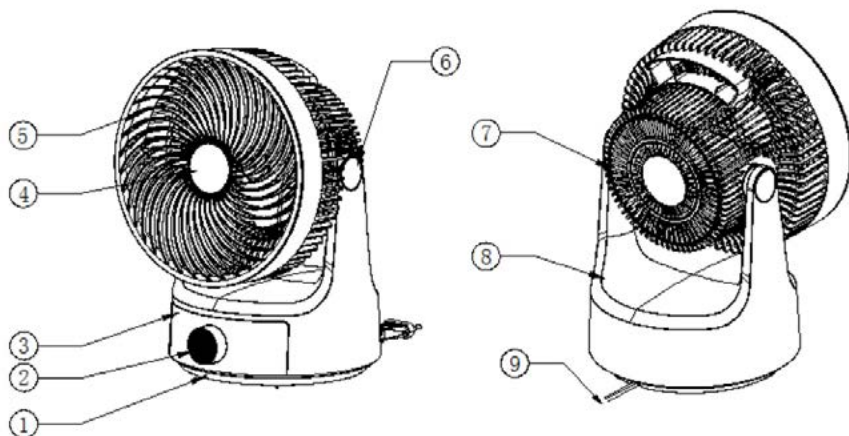

DISPLAY / CONTROL PANEL

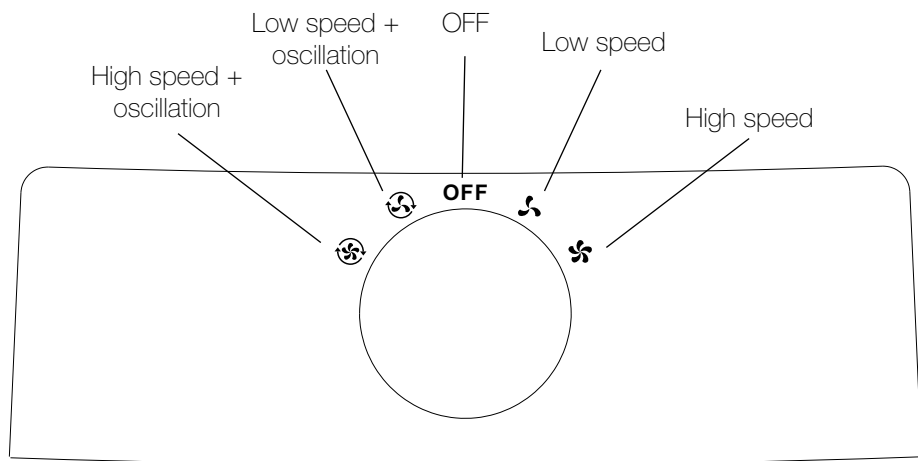

OFF

When the dial is aligned to the 'OFF' marker, the unit will be/turn off. Turn the dial left or right of this marker, and the unit will turn on.

LOW SPEED

Turn the dial one click right from the OFF position to operate in Low Speed.

LOW SPEED + OSCILLATION

When operating in low speed, turn the dial right once more to start oscillation.

HIGH Speed

Turn the dial one click left from the OFF position to operate in High Speed.

HIGH SPEED + OSCILLATION

When operating in high speed, turn the dial left once more to start oscillation.

90° VERTICAL OSCILLATION

Tilt the fan head to achieve up to 90° angled oscillation. Ensure the fan is OFF when adjusting the fan head position.

OPERATION

1. Remove the unit from its packaging
2. Plug the unit into a power outlet.
3. Turn the dial to either Low or High Speed to turn the unit on.
4. Turn the dial either far left or far right to bring oscillation.
5. To switch the unit off at any time, turn the dial to the "Off" position.

CLEANING

Over time, dust can accumulate on the rear grille cover and fan blades, which can affect the fans performance. It is recommended to clean the fan at least once a month.

1. Turn the unit OFF and disconnect the appliance from the power supply.
2. Remove any dust build up with a soft brush.
3. Wipe the surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.

IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.



- Do not dispose of electrical appliances as unsorted municipal waste.
- Use separate collection facilities.
- Contact your local government for information regarding the collection systems available.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.

MAINTENANCE

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

MODEL NO.	DCACM20
Rated Power	45W
Voltage/Frequency	220-240V/50Hz
Net Weight	1.9kg
Dimensions Body (HxWxDmm)	320 x 225 x 215
Dimensions Packaging (HxWxDmm)	330 x 240 x 240
RCM	5336

WARRANTY

The warranty period is 12 months from the date of purchase. For service advice, please contact the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

Glen Dimplex Australia Pty Ltd
1340 Ferntree Gully Road,
Scoresby 3179, Victoria
Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd
38 Harris Road, East Tamaki,
Auckland 2013
New Zealand
Ph: 0800 666 2824