

Pioneer DJ

Analog Synthesizer

TORAIZ AS-1

TAS-1

<http://pioneerdj.com/support/>

The Pioneer DJ site shown above offers FAQs, information on software, and various other types of information and services to allow you to use your product in greater comfort.

Operating Instructions (Quick Start Guide)

Thank you for buying this Pioneer DJ product. Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference. In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However the method of connecting and operating the unit is the same.

IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION:

TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

D3-4-2-1-1b_A1_En

IMPORTANT



Ce symbole de l'éclair, placé dans un triangle équilatéral, a pour but d'attirer l'attention de l'utilisateur sur la présence, à l'intérieur du coffret de l'appareil, de "tensions dangereuses" non isolées d'une grandeur suffisante pour représenter un risque d'électrocution pour les êtres humains.

ATTENTION

**DANGER D'ELECTROCUTION
NE PAS OUVRIR**

ATTENTION :

POUR ÉVITER TOUT RISQUE D'ÉLECTROCUTION, NE PAS ENLEVER LE COUVERCLE (NI LE PANNEAU ARRIÈRE). AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR NE SE TROUVE À L'INTÉRIEUR. CONFIER TOUT ENTRETIEN À UN PERSONNEL QUALIFIÉ UNIQUEMENT.



Ce point d'exclamation, placé dans un triangle équilatéral, a pour but d'attirer l'attention de l'utilisateur sur la présence, dans les documents qui accompagnent l'appareil, d'explications importantes du point de vue de l'exploitation ou de l'entretien.

D3-4-2-1-1b_A1_Fr

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



D3-7-13-69_En

WARNING

This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

D3-4-2-1-3_A1_En

WARNING

To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment.


D3-4-2-1-7a_A1_En

VENTILATION CAUTION

When installing this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 5 cm at rear, and 3 cm at each side).

D3-4-2-1-7d*_A1_En

CAUTION

The  switch on this unit will not completely shut off all power from the AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for example, when on vacation).

D3-4-2-2-2a*_A1_En

Operating Environment

Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked)

Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light).

D3-4-2-1-7c*_A2_En

CAUTION

This product is evaluated in moderate and tropical climate condition.

When using this product, confirm the safety information shown on the bottom of the unit.

D3-4-2-2-4_B1_En

CAUTION

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors for connections.

D8-10-3a_A1_En

The graphical symbol  placed on the product means alternating current.

The graphical symbol  placed on the product means direct current.

The graphical symbol  placed on the product means Class II equipment.

AVERTISSEMENT

Cet appareil n'est pas étanche. Pour éviter les risques d'incendie et de décharge électrique, ne placez près de lui un récipient rempli d'eau, tel qu'un vase ou un pot de fleurs, et ne l'exposez pas à des gouttes d'eau, des éclaboussures, de la pluie ou de l'humidité.

D3-4-2-1-3_A1_Fr

AVERTISSEMENT

Pour éviter les risques d'incendie, ne placez aucune flamme nue (telle qu'une bougie allumée) sur l'appareil.


D3-4-2-1-7a_A1_Fr

PRÉCAUTION DE VENTILATION

Lors de l'installation de l'appareil, veillez à laisser un espace suffisant autour de ses parois de manière à améliorer la dissipation de chaleur (au moins 5 cm à l'arrière et 5 cm de chaque côté).

D3-4-2-1-7d*_A1_Fr

ATTENTION

L'interrupteur  de cet appareil ne coupe pas complètement celui-ci de sa prise secteur. Comme le cordon d'alimentation fait office de dispositif de déconnexion du secteur, il devra être débranché au niveau de la prise secteur pour que l'appareil soit complètement hors tension. Par conséquent, veillez à installer l'appareil de telle manière que son cordon d'alimentation puisse être facilement débranché de la prise secteur en cas d'accident. Pour éviter tout risque d'incendie, le cordon d'alimentation sera débranché au niveau de la prise secteur si vous prévoyez une période prolongée de non utilisation (par exemple avant un départ en vacances).

D3-4-2-2-2a*_A1_Fr

Milieu de fonctionnement

Température et humidité du milieu de fonctionnement : De +5 °C à +35 °C (de +41 °F à +95 °F) ; Humidité relative inférieure à 85 % (orifices de ventilation non obstrués)

N'installez pas l'appareil dans un endroit mal ventilé ou un lieu soumis à une forte humidité ou en plein soleil (ou à une forte lumière artificielle).

D3-4-2-1-7c*_A1_Fr

ATTENTION

Ce produit a été testé dans des conditions de climats tempéré et tropical.

D3-8-2-1-7a_A1_Fr

Lorsque vous utilisez ce produit, vérifiez les informations concernant la sécurité sous l'appareil.


D3-4-2-2-4_B1_Fr

Cordon d'alimentation fourni

Le cordon d'alimentation fourni est conçu spécialement pour une tension de 120 V. Ne l'utilisez pas avec une tension autre que 120 V.

Cela pourrait provoquer un incendie ou un choc électrique.

Le symbole graphique  indiqué sur le produit représente le courant alternatif.

Le symbole graphique  indiqué sur le produit représente le courant continu.

Le symbole graphique  indiqué sur le produit représente un équipement de Classe II.

D3-8-2-4_A1_Fr

The Safety of Your Ears is in Your Hands

Get the most out of your equipment by playing it at a safe level – a level that lets the sound come through clearly without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time, your hearing “comfort level” adapts to higher volumes of sound, so what sounds “normal” can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

ESTABLISH A SAFE LEVEL:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.
- Once you have established a comfortable sound level, set the dial and leave it there.

BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:

- Do not turn up the volume so high that you can't hear what's around you.
- Use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use headphones while operating a motorized vehicle; the use of headphones may create a traffic hazard and is illegal in many areas.

S001a_A1_En

IMPORTANT NOTICE

THE MODEL NUMBER AND SERIAL NUMBER OF THIS EQUIPMENT ARE ON THE REAR OR BOTTOM. RECORD THESE NUMBERS ON PAGE 15 FOR FUTURE REFERENCE.

D36-AP9-3*_A1_En

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest service center or your dealer for a replacement.

S002*_A1_En

[Supplied power cord]

The supplied power cord is designed specifically for 120 V. Do not use it with a voltage other than 120 V. Doing so may cause a fire or electric shock.

WARNING

Store small parts out of the reach of children and infants. If accidentally swallowed, contact a doctor immediately.

D41-6-4_A1_En

Information to User

Alterations or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

D8-10-2_A1_En

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

D8-10-1-2_A1_En

FEDERAL COMMUNICATIONS COMMISSION DECLARATION OF CONFORMITY

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product Name: Analog Synthesizer

Model Number: TAS-1

Responsible Party Name: PIONEER ELECTRONICS (USA) INC.
SERVICE SUPPORT DIVISION

Address: 1925 E. DOMINGUEZ ST. LONG BEACH, CA 90810-1003, U.S.A.

Phone: 1-800-421-1404

URL: <http://www.pioneerelectronics.com>

D8-10-4*_C1_En



Contents

How to read this manual

Thank you for buying this Pioneer DJ product.
Be sure to read this manual and the Operating Instructions available on the Pioneer DJ site. Both documents include important information that you should understand before using this product.
In particular, be sure to read "IMPORTANT SAFETY INSTRUCTIONS."
Furthermore, be sure to keep this manual together with "Warranty" on page 15.

- In this manual, the names of buttons, controls and terminals indicated on the product, and program options appearing on the unit display, etc., are indicated within square brackets ([]). (e.g. [GLOBAL] button, [PHONES] terminal, [OSCILLATOR 1])
- Please note that the screens and specifications of the software described in this manual as well as the external appearance and specifications of the hardware are currently under development and may differ from the final specifications.
- Please note that depending on the operating system version, web browser settings, etc., operation may differ from the procedures described in this manual.

This manual provides brief descriptions regarding the names of the parts of the unit, the connections between the unit and peripherals, and basic operations.

For more detailed instructions on using the unit, see the Operating Instructions for this unit.

- To learn how to obtain the Operating Instructions for this unit, see *Viewing the Operating Instructions* on page 7.

01 Before starting

Features	7
What's in the box	7
Viewing the Operating Instructions	7

02 Part names

Control panel	8
Rear Panel	9

03 Connections

Connecting input and output terminals	10
---	----

04 Operation

Choosing and playing a program	11
Editing a program	11
Saving an edited program	11
Initializing a program to create a sound from scratch	12

05 Additional information

Troubleshooting	13
Changing the settings	13
About trademarks and registered trademarks	13
Specifications	13


A message from Dave Smith

After a great experience working with Pioneer DJ on their awesome TORAIZ SP-16, we decided to continue the partnership with a second product:

TORAIZ AS-1 Analog Monosynth 0

Based on the Prophet-6 voice, it's old-school synthesis that fits nicely in a modern DJ rig, and it's an ideal stand-alone synth for quick access to classic analog sounds.

Have fun with the synth 0

Dave Smith


Before starting

Features

The TORAIZ AS-1 is a fully programmable monophonic analog synthesizer that features discrete analog filters based on the acclaimed Prophet-6 polyphonic synthesizer designed by Dave Smith Instruments LLC. Its built-in 64-step sequencer and extensive library of preset sounds make it an inspiring and expressive musical tool. And its easy-to-use control panel packs a tremendous amount of sound-creation power and versatility into a compact, robust metal chassis that is equally suited to studio or stage.

What's in the box

- AC adaptor
- Power cord
- Operating Instructions (This Quick Start Guide)

Viewing the Operating Instructions

Various instructions are sometimes provided as files in the PDF-format.
Adobe® Reader® must be installed in order to view PDF-format files.

1 Launch a web browser on your computer and access the Pioneer DJ site below.

<http://www.pioneerdj.com/>

2 Click [Support].

 
3 Click [FIND TUTORIALS & MANUALS].

4 Click [TORAIZ AS-1] in the [PRODUCTION] category.

5 Click on the desired language from the list.


Part names

Control panel

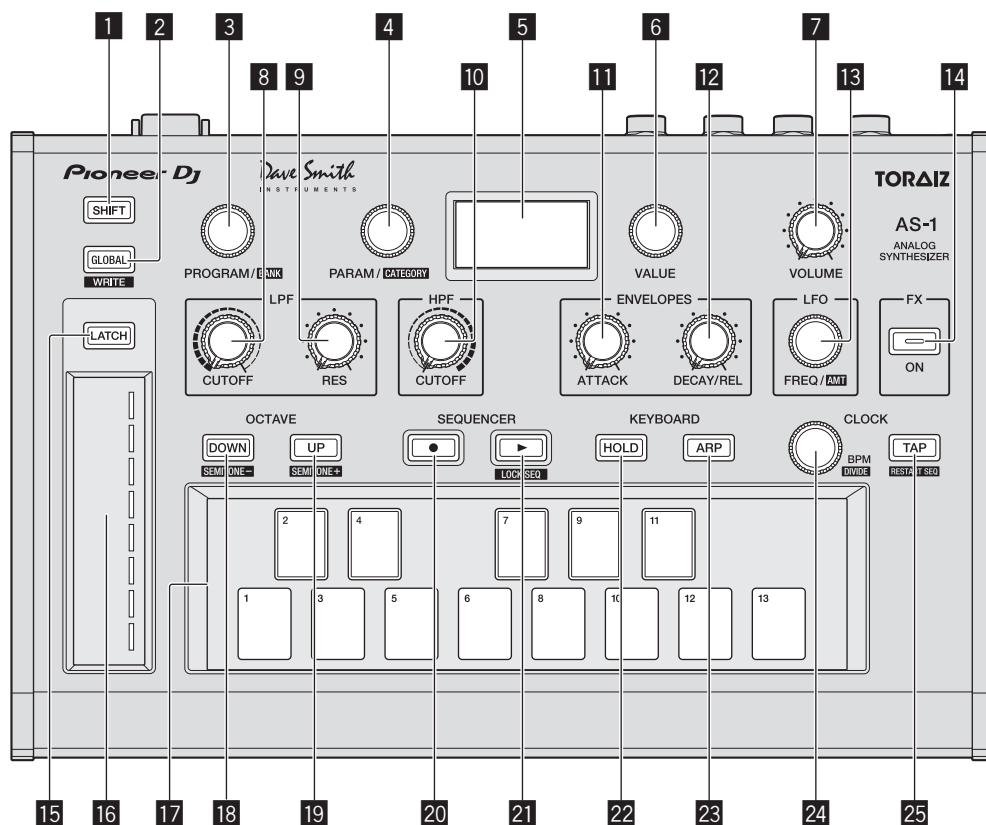

- | | |
|-----------------------------------|-----------------------------|
| 1 SHIFT button | 14 FX ON/OFF button |
| 2 GLOBAL button | 15 LATCH button |
| 3 PROGRAM/BANK control | 16 Slider |
| 4 PARAM/CATEGORY control | 17 Keyboard |
| 5 Display | 18 OCTAVE DOWN button |
| 6 VALUE control | 19 OCTAVE UP button |
| 7 VOLUME control | 20 SEQUENCER record button |
| 8 LPF CUTOFF control | 21 SEQUENCER play button |
| 9 LPF RESONANCE control | 22 HOLD button |
| 10 HPF CUTOFF control | 23 ARP button |
| 11 ENVELOPE ATTACK control | 24 CLOCK BPM/DIVIDE control |
| 12 ENVELOPE DECAY/RELEASE control | 25 CLOCK TAP button |
| 13 LFO FREQ/AMOUNT control | |

 Rear Panel

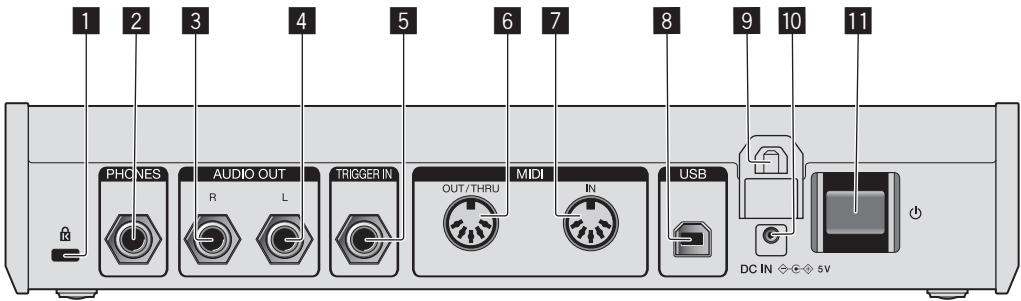

- 1

Kensington lock slot
- 2

PHONES output
- 3

AUDIO OUT R
- 4

AUDIO OUT L
- 5

TRIGGER IN
- 6

MIDI OUT/THRU
- 7

MIDI IN
- 8

USB-B terminal
- 9

Cable hook
- 10

DC IN terminal
- 11

 
⏻ button

This switch is between off and on for this product.

Connections

- Be sure to turn off the power and unplug the power cord from the power outlet whenever making or changing connections.
- Connect the power cord after all the connections between devices have been completed.
- Be sure to use the included power cord and AC adaptor.
- Refer to the operating instructions for components to be connected.
- Connect this unit and your computer directly using a USB cable.
 - Use a USB cable which conforms to USB 2.0.
 - USB hubs cannot be used.

Connecting inputs and outputs

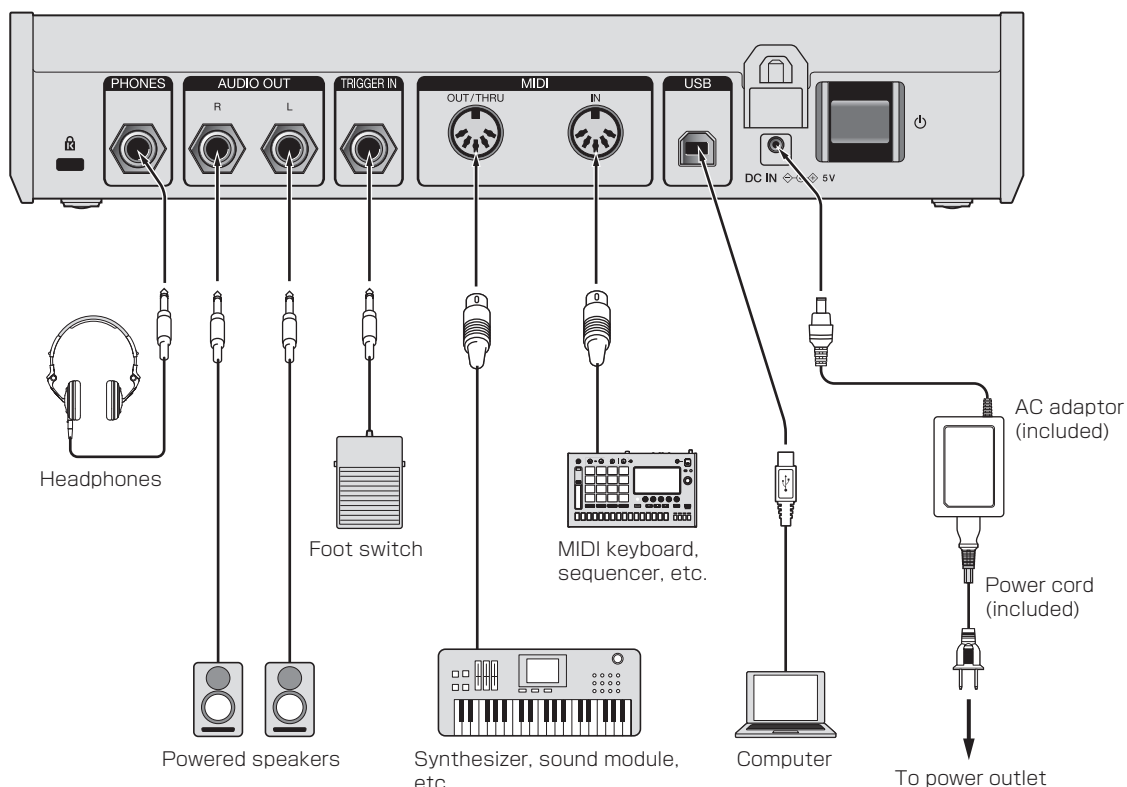


How to use the cable hook



Hook the connection cable of the AC power adaptor to avoid accidentally disconnecting it from the unit.

- If the connection cable of the AC power adaptor is unplugged while you are playing the synthesizer, the sound will stop abruptly.

 1 Fit the connection cable of the AC adaptor into the cable hook.

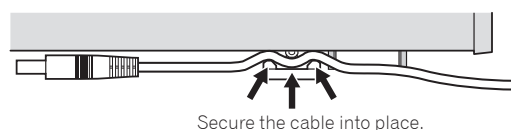

  2 Connect the plug of the connection cable to the [DC IN] terminal. If the cable on the left side of the cable hook is too long, tighten it moderately.

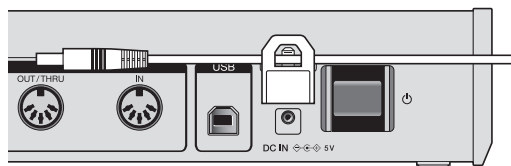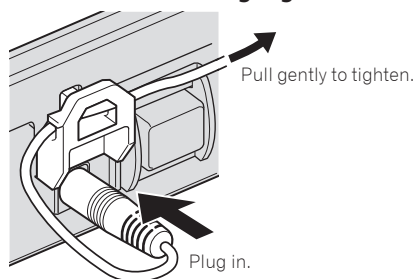

Operation

Choosing and playing a program

The TORAIZ AS-1 has ten banks ([F1]-[F5] and [U1]-[U5]) each of which stores 99 programs. To recall the desired program, select a bank and a program number in that order.

- The programs in the banks [F1]-[F5] are read only and the programs in the banks [U1]-[U5] are rewritable. Though you can edit any program in any bank, you can only save a program to a user bank [U1]-[U5].
("F" represents "Factory bank" and "U" represents "User bank.")
- When you purchase this product, the programs in the banks [U1]-[U5] are identical with the programs in the banks [F1]-[F5].

1 Press the [⏻] button on the rear panel to turn on the unit.

 
The main screen appears in the display.

2 Turn on the external devices connected to the [AUDIO OUT] (e.g. powered speakers, power amplifier, audio mixer, etc.).

3 Press and hold the [SHIFT] button and turn the [PROGRAM/BANK] control to select a bank number.

The bank number in the display changes when you turn the control.

- If you press and hold the [SHIFT] button, it turns On only while you are pressing the button. To turn it off, simply release the button.

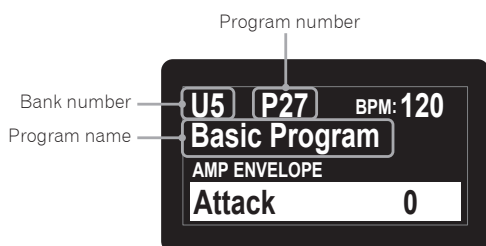

4 Turn off the [SHIFT] button and turn the [PROGRAM/BANK] control to select the desired program.

The program number and program name in the display change when you turn the control.

5 Play the keyboard.

The synthesizer plays the corresponding sound.

- If the [HOLD] button is On (lit), the sound plays continuously. Each press of the [HOLD] button turns it On or Off in turn.
- If the [ARP] button is On (lit), any held notes are arpeggiated. Each press of the [ARP] button turns it On or Off in turn.

Editing a program

There are two ways to edit a program.

- Use the controls and buttons of the top panel to directly adjust the main parameters (as shown in step 2 below).
- Choose the desired parameter shown in the display and adjust the detailed parameters (as shown in steps 3 to 5 below).

For details of the controls, buttons and parameters, please refer to the Operating Instructions.

1 Choose a program you wish to edit.

Follow steps 3 and 4 in "Choosing and playing a program."

 
2 Operate the [LPF CUTOFF], [LPF RES], [HPF CUTOFF], [ENVELOPE ATTACK], [ENVELOPE DECAY/REL], [LFO FREQ/AMT] controls and/or [FX] button.

The sound changes as you adjust the parameter.

3 Press and hold the [SHIFT] button and turn the [PARAM/CATEGORY] control to choose the desired category.

The category name in the display changes when you turn the control.

- See step 3 in "Choosing and playing a program" for how to turn on/off the [SHIFT] button.

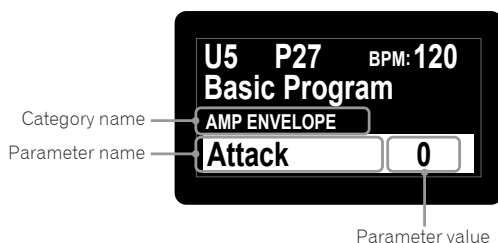

4 Turn off the [SHIFT] button and turn the [PARAM/CATEGORY] control to choose the desired parameter name.

The parameter name in the display changes when you turn the control.

- See step 3 in "Choosing and playing a program" for how to turn on/off the [SHIFT] button.

5 Turn the [VALUE] control to adjust the parameter value.

 
The sound changes as you adjust the parameter value shown in the display.

Saving an edited program

1 Press and hold the [SHIFT] button and press the [GLOBAL/WRITE] button.

The following screen appears in the display and the [GLOBAL/WRITE] button flashes. (The [SHIFT] button turns off automatically.)

- See step 3 in "Choosing and playing a program" for how to turn on/off the [SHIFT] button.

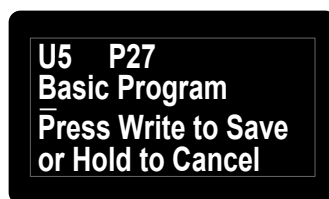

2 Press the [GLOBAL/WRITE] button again.

The currently selected program is overwritten by the edited program.

- Do not turn off the unit while the program is saved in order to protect the internal data.
- To cancel saving, press the [HOLD] button instead of the [GLOBAL/WRITE] button. The display returns to the main screen without saving the edited program.

Initializing a program to create a sound from scratch

When you wish to create a sound from scratch, you can let a simple basic program consisting of a single oscillator assist you. To perform this, select a program and initialize it prior to your sound creation.

1 Select a program you wish to initialize.

- Follow steps 3 and 4 in "Choosing and playing a program."


2 Turn off the [SHIFT] button, and press the [GLOBAL/WRITE] button.

The [GLOBAL SETTING] screen appears in the display and the [GLOBAL/WRITE] button lights up.

- See step 3 in "Choosing and playing a program" for how to turn on/off the [SHIFT] button.

3 Turn the [PARAM/CATEGORY] control until the [Basic Program] screen appears in the display.

When the [Basic Program] is selected, the [LATCH] button flashes.



22. Basic Program
Press Latch to
Load Basic Patch

4 Press the [LATCH] button.

The currently selected program is initialized and the display returns to the main screen.

- To create a sound, follow steps 2 to 5 in "Editing a program." For details such as parameter settings, please refer to the Operating Instructions.
- To cancel initializing, press the [GLOBAL/WRITE] button again instead of the [LATCH] button. The display returns to the main screen without initializing the program.

Additional information

Troubleshooting

- If there seems to be a problem with this product, check the items in the "Troubleshooting" section in the Operating Instructions of this unit, or access the Pioneer DJ site and check [FAQ] for the [TORAIZ AS-1].
<http://pioneerdj.com/support/>
Also, check the connected devices. If the problem cannot be resolved, ask your nearest Pioneer authorized service center or your dealer to carry out repair work.
- This unit may not operate properly due to static electricity or other external influences. In such cases, normal operation may be restored by unplugging the power cord then plugging it back in.

Changing the settings

- For details on how to change the settings of this unit, see "Changing the settings" in the Operating Instructions.

Precautions regarding our repair services

- When we repair your unit, we may need to reset the unit to factory default depending on the unit conditions. Since we do not back up your settings prior to repair, we recommend that you back up your original settings like your edited programs as System Exclusive files via MIDI interface using the software which can handle MIDI System Exclusive Messages such as DAW software and MIDI utility software, etc.

About trademarks and registered trademarks

- "Pioneer DJ" is a trademark of PIONEER CORPORATION, and is used under license.
- Dave Smith Instruments and Prophet are registered trademarks of Dave Smith Instruments LLC.

Specifications

AC adapter

Power	AC 100 V to 240 V, 50 Hz/60 Hz
Rated current	0.4 A
Rated output	DC 5 V, 2 A
Power consumption (standby)	0.075 W

General - Main Unit

Power consumption	DC 5 V, 1500 mA
Main unit weight	1.4 kg (3.1 lbs.)
Max. dimensions	267.4 mm (width) x 68.6 mm (height) x 177.7 mm (depth) (10.5 in. (width) x 2.7 in. (height) x 7.0 in. (depth))
Tolerable operating temperature	+5 °C to +35 °C (+41 °F to +95 °F)
Tolerable operating humidity	5 % to 85 % (no condensation)

Input/Output terminals

AUDIO OUT R output terminal	
1/4" TS jack	1 set
AUDIO OUT L output terminal	
1/4" TS jack	1 set
PHONES output terminal	
1/4" stereo phone jack	1 set
MIDI OUT/THRU output terminal	
5P DIN	1 set
MIDI IN input terminal	
5P DIN	1 set
TRIGGER IN input terminal	
1/4" TS jack	1 set
USB terminal	
B type	1 set
• The specifications and design of this product are subject to change without notice.	
• © 2017 Pioneer DJ Corporation. All rights reserved.	



Pioneer DJ Americas, Inc.
LIMITED WARRANTY
WARRANTY VALID ONLY IN THE U.S.A. AND CANADA

WARRANTY

Pioneer DJ Americas, Inc. (PDJA) warrants that products distributed by PDJA in the U.S.A. and Canada that fail to function properly under normal use due to a manufacturing defect when installed and operated according to the owner's manual enclosed with the unit will be repaired or replaced with a unit of comparable value, at the option of PDJA, without charge to you for parts or actual repair work. Parts supplied under this warranty may be new or rebuilt at the option of PDJA.

THIS LIMITED WARRANTY APPLIES TO THE ORIGINAL OR ANY SUBSEQUENT OWNER OF THIS PIONEER DJ PRODUCT DURING THE WARRANTY PERIOD PROVIDED THE PRODUCT WAS PURCHASED FROM AN AUTHORIZED PIONEER DJ DISTRIBUTOR/DEALER IN THE U.S.A. OR CANADA. YOU WILL BE REQUIRED TO PROVIDE A SALES RECEIPT OR OTHER VALID PROOF OF PURCHASE SHOWING THE DATE OF ORIGINAL PURCHASE OR, IF RENTED, YOUR RENTAL CONTRACT SHOWING THE PLACE AND DATE OF FIRST RENTAL. IN THE EVENT SERVICE IS REQUIRED, THE PRODUCT MUST BE DELIVERED WITHIN THE WARRANTY PERIOD, TRANSPORTATION PREPAID, ONLY FROM WITHIN THE U.S.A. AS EXPLAINED IN THIS DOCUMENT. YOU WILL BE RESPONSIBLE FOR REMOVAL AND INSTALLATION OF THE PRODUCT. PDJA WILL PAY TO RETURN THE REPAIRED OR REPLACEMENT PRODUCT TO YOU WITHIN THE U.S.A.

PRODUCT WARRANTY PERIOD

	Parts	Labor
DJ Audio and Video	1 Year	1 Year

The warranty period for retail customers who rent the product commences upon the date product is first put into use (a) during the rental period or (b) retail sale, whichever occurs first.

WHAT IS NOT COVERED

IF THIS PRODUCT WAS PURCHASED FROM AN UNAUTHORIZED DISTRIBUTOR, THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND THIS PRODUCT IS SOLD STRICTLY "AS IS" AND "WITH ALL FAULTS". PIONEER DJ SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL AND/OR INCIDENTAL DAMAGES.

THIS WARRANTY DOES NOT APPLY IF THE PRODUCT HAS BEEN SUBJECTED TO POWER IN EXCESS OF ITS PUBLISHED POWER RATING.

THIS WARRANTY DOES NOT COVER THE CABINET OR ANY APPEARANCE ITEM, USER ATTACHED ANTENNA, ANY DAMAGE TO RECORDS OR RECORDING TAPES OR DISCS, ANY DAMAGE TO THE PRODUCT RESULTING FROM ALTERATIONS, MODIFICATIONS NOT AUTHORIZED IN WRITING BY PIONEER DJ, ACCIDENT, MISUSE OR ABUSE, DAMAGE DUE TO LIGHTNING OR TO POWER SURGES, SUBSEQUENT DAMAGE FROM LEAKING, DAMAGE FROM INOPERATIVE BATTERIES, OR THE USE OF BATTERIES NOT CONFORMING TO THOSE SPECIFIED IN THE OWNER'S MANUAL.

THIS WARRANTY DOES NOT COVER THE COST OF PARTS OR LABOR WHICH WOULD BE OTHERWISE PROVIDED WITHOUT CHARGE UNDER THIS WARRANTY OBTAINED FROM ANY SOURCE OTHER THAN A PIONEER DJ AUTHORIZED SERVICE COMPANY OR OTHER DESIGNATED LOCATION. THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR LABOR OR FROM IMPROPER MAINTENANCE.

ALTERED, DEFACED, OR REMOVED SERIAL NUMBERS VOID THIS ENTIRE WARRANTY

NO OTHER WARRANTIES

PIONEER DJ LIMITS ITS OBLIGATIONS UNDER ANY IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TO A PERIOD NOT TO EXCEED THE WARRANTY PERIOD. NO WARRANTIES SHALL APPLY AFTER THE WARRANTY PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES DO NOT ALLOW THE EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

TO OBTAIN SERVICE

PDJA has appointed a number of Authorized Service Companies throughout the U.S.A. and Canada should your product require service. To receive warranty service you need to present your sales receipt or, if rented, your rental contract showing place and date of original owner's transaction. If shipping the unit you will need to package it carefully and send it, transportation prepaid by a traceable, insured method, to an Authorized Service Company. Package the product using adequate padding material to prevent damage in transit. The original container is ideal for this purpose. Include your name, address and telephone number where you can be reached during business hours.

On all complaints and concerns in the U.S.A. and Canada call Customer Support at 1-800-872-4159.

For hook-up and operation of your unit or to locate an
Authorized Service Company, please call or write:
CUSTOMER SUPPORT
PIONEER ELECTRONICS (USA) INC.
P.O. BOX 1720
LONG BEACH, CALIFORNIA 90801
1-800-872-4159
<http://www.pioneerelectronics.com>

DISPUTE RESOLUTION

Following our response to any initial request to Customer Support, should a dispute arise between you and Pioneer DJ, Pioneer DJ makes available its Complaint Resolution Program to resolve the dispute. The Complaint Resolution Program is available to you without charge. You are required to use the Complaint Resolution Program before you exercise any rights under, or seek any remedies, created by Title I of the Magnuson-Moss Warranty-Federal Trade Commission Improvement Act, 15 U.S.C. 2301 *et seq.*

To use the Complaint Resolution Program call 1-800-872-4159 and explain to the customer service representative the problem you are experiencing, steps you have taken to have the product repaired during the warranty period and the name of the authorized Distributor/Dealer from whom the Pioneer DJ product was purchased. After the complaint has been explained to the representative, a resolution number will be issued. Within 40 days of receiving your complaint, Pioneer DJ will investigate the dispute and will either: (1) respond to your complaint in writing informing you what action Pioneer DJ will take, and in what time period, to resolve the dispute; or (2) respond to your complaint in writing informing you why it will not take any action.

RECORD THE PLACE AND DATE OF PURCHASE FOR FUTURE REFERENCE

Model No. _____ Serial No. _____ Purchase Date _____

Purchased From _____

KEEP THIS INFORMATION AND YOUR SALES RECEIPT IN A SAFE PLACE

UCP0515

To register your product, find the nearest authorized service location, and to purchase replacement parts, operating instructions, or accessories, please go to one of following URLs:

Pour enregistrer votre produit, trouver le service après-vente agréé le plus proche, et pour acheter des pièces de rechange, des modes d'emploi ou des accessoires, reportez-vous aux URL suivantes:

In the USA/Aux Etats-Unis or In Canada/Aux Canada

<http://www.pioneerelectronics.com>

5018_C1_EnFr_PSV

© 2017 Pioneer DJ Corporation.
All rights reserved.

Pioneer DJ Corporation

6F, Yokohama i-Mark Place, 4-4-5 Minatomirai, Nishi-ku, Yokohama, Kanagawa 220-0012 JAPAN

Pioneer DJ 株式会社

〒220-0012 神奈川県横浜市西区みなとみらい4丁目4番5号 横浜アイマークプレイス6階

Корпорация Пайонир Диджей

6F, Йокогама i-Mark Place, 4-4-5 Минатомирай, Ниси-ку, Йокогама, Канагава 220-0012 ЯПОНИЯ

Pioneer DJ Europe Limited

Anteros Building, Odyssey Business Park, West End Road, South Ruislip, Middlesex, HA4 6QQ, U.K. TEL: +44-203-7617-220

Pioneer DJ Americas, Inc.

2050 W. 190th Street, Suite 109, Torrance, CA 90504, U.S.A. TEL: +1 (424) 488-0480

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

2 Jalan Kilang Barat, #07-01, Singapore 159346 TEL: +65-6378-7888

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202, Australia, TEL: +61-3-9586-6300

PIONEER ELECTRONICS (THAILAND) CO., LTD.

17th Fl., KPN Tower, 719 Rama 9 Road, Bangkapi, Huaykwang, Bangkok 10310
TEL: +66-2-717-0777

PIONEER TECHNOLOGY (MALAYSIA) SDN. BHD

16th Floor, Menara Uni. Asia 1008 Jalan Sultan Ismail 50250 Kuala Lumpur
TEL: +60-3-2697-2920

先鋒股份有限公司

台灣台北市內湖區瑞光路 407 號 8 樓 TEL: +886-(0)2-2657-3588

先鋒電子（香港）有限公司

香港九龍長沙灣道 909 號 5 樓 TEL: +852-2848-6488

PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.

Blvd.Manuel Avila Camacho 138 10 piso Col.Lomas de Chapultepec,
Mexico, D.F. 11000 TEL: +52-55-9178-4270

PIONEER INDIA ELECTRONICS PRIVATE LTD.

216, Second Floor, Time Tower, M.G. Road, Sector 28, Gurgaon 122001,
Haryana, India TEL: +91-124-463-6100

PDJ_001_all

Printed in Malaysia/Imprimé en Malaisie

<DRH1420-A>

