SONY

# Home Theatre System

Operating Instructions

HT-XT1

#### WARNING

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc.

Do not expose the appliance to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.

Indoor use only.

#### **Recommended cables**

Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals.

This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection cable shorter than 3 meters.

# Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives.

This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.



Hereby, Sony Corp., declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For details, please access the following URL: http://www.compliance.sony.de/



# Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of

electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



#### Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

# **Table of contents**

#### **Useful functions**

Using the Control for HDMI function	5
Using "BRAVIA" Sync features	
Controlling the system using a smartphone or tablet dev	∕ice
(SongPal)	7
Adjusting the settings	9
Miscellaneous	
Precautions	11
BLUETOOTH wireless technology	14
Troubleshooting	15
Parts and controls	18
Specifications	20

Refer to the supplied Startup Guide for setup and basic operations.

#### Useful functions

# Using the Control for HDMI function

By using the Control for HDMI function, and connecting equipment that is compatible with the Control for HDMI function via a High Speed HDMI cable, operation is simplified with the features below. The Control for HDMI function is enabled by setting "CTRL (Control for HDMI)" to "ON" (page 10). The default setting is "ON."

#### **System Power Off**

When you turn off the TV, the system and the connected equipment will turn off automatically.

#### **System Audio Control**

If you turn on the system while you are watching the TV, the TV sound will be output from the speakers of the system automatically. The volume of the system will be adjusted when you adjust the volume using the TV's remote control.

If the TV sound was output from the speakers of the system the last time you watched the TV, the system will be turned on automatically when you turn on the TV again.

#### **Audio Return Channel (ARC)**

If the TV is compatible with the Audio Return Channel (ARC) technology, a High Speed HDMI cable connection will also allow sending digital audio signals from the TV to the system. You do not need to make a separate audio connection for listening to TV sound from the system.

The ARC function is enabled by setting "ARC (Audio return channel)" to "ON" (page 10). The default setting is "ON."

#### **One-Touch Play**

When you activate the equipment (Blu-ray Disc™ player, "PlayStation®4," etc.) connected to the system with a High Speed HDMI cable, the connected TV is turned on automatically and the input signal of the system is switched to the appropriate HDMI input.

#### Notes

- The above features may not operate with certain equipment.
- Depending on the settings of the connected equipment, the Control for HDMI function may not work correctly. Refer to the operating instructions of the equipment.

## Using "BRAVIA" Sync features

The original Sony functions listed below can also be used with products that are compatible with "BRAVIA" Sync.

#### **Power save**

If a "BRAVIA" Sync-compatible TV is connected to the system, the power consumption will be reduced in standby mode by stopping HDMI signal transmission when the TV is turned off with the pass-through function\* of the system set to "AUTO" (page 10). The default setting is "AUTO."

If any TV other than "BRAVIA" is connected, set the item to "ON" (page 10).

\* The pass-through function for HDMI signals is used to output the signals from the HDMI OUT jack of this system even if it is in standby mode.

#### **Notes on HDMI connections**


- Use a High Speed HDMI cable. If you use a Standard HDMI cable, 1080p, Deep Color, 3D, and 4K images may not be displayed properly.
- Use an HDMI-authorized cable.
   Use a Sony High Speed HDMI cable with the Cable Type Logo.
- We do not recommend using an HDMI-DVI conversion cable.
- Check the setup of the connected equipment if an image is poor or the sound does not come out of the equipment connected via the HDMI cable.
- Audio signals (sampling frequency, bit length, etc.) transmitted from an HDMI jack may be suppressed by the connected equipment.
- Sound may be interrupted when the sampling frequency or the number of channels of audio output signals from the playback equipment is switched.

- If the connected equipment is not compatible with copyrightprotection technology (HDCP), the image and/or the sound from the HDMI OUT jack of this system may be distorted or may not be output. In such a case, check the specifications of the connected equipment.
- When "TV" is selected as the input source of the system, video signals via one of the HDMI IN 1/2/3 jacks selected last time are output from the HDMI OUT jack.
- This system supports Deep Color, "x.v.Colour," 3D, and 4K transmission.
- To enjoy 3D images, connect a 3D-compatible TV and video equipment (Blu-ray Disc player, "PlayStation<sub>®</sub>4," etc.) to the system using High Speed HDMI cables, put on 3D glasses, and then play back a 3D-compatible Blu-ray Disc, etc.
- To enjoy 4K images, the TV and players that are connected to the system must be compatible with 4K images.

# Controlling the system using a smartphone or tablet device (SongPal)

"SongPal" is the application to operate the system with your smartphone or tablet, etc.

"SongPal" is available from either Google Play™ or App Store. This function is enabled by setting "BT PWR (BLUETOOTH power)" to "ON" (page 10). The default setting is "ON."

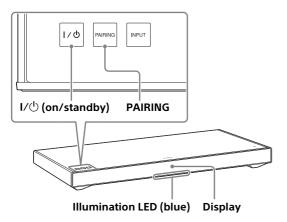

#### When using an Android™ device

- Touch the I/७ (on/standby) touch key of the system.


  The display of the system lights after the system turns on.
- 2 Search for "SongPal" with the Android device and download that application.
- 3 Run "SongPal" then follow the on-screen instructions.
- 4 After the BLUETOOTH connection display appears on the Android device, touch the PAIRING touch key of this system.

  The illumination LED (blue) of the system flashes quickly during BLUETOOTH pairing.
- 5 Select "SONY:HT-XT1" from the BLUETOOTH device list of the Android device.
  - When the connection has been established, the illumination LED (blue) of the system lights.
- 6 Operate the system with the display of the connected Android device.

# One-Touch connection using the Android device with the NFC function built-in (NFC)

- Perform steps 1 to 3 of "When using an Android device."
- After the BLUETOOTH connection display appears on the Android device, touch the Android device with the N mark of the system.

When the connection has been established, the illumination LED (blue) of the system lights.

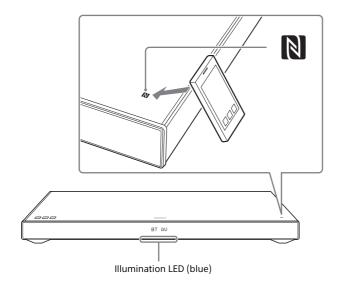

Operate the system with the display of the Android device.

#### When using an iPhone/iPod touch

- **Touch the I**/⊕ (on/standby) touch key of the system. The display of the system lights after the system turns on.
- **Touch the PAIRING touch key of this system.**The illumination LED (blue) of the system flashes quickly during BLUETOOTH pairing.
- 3 Set the iPhone/iPod touch to pairing mode and select "SONY:HT-XT1" from the BLUETOOTH device list on the iPhone/iPod touch.


When the connection has been established, the illumination LED (blue) of the system lights.


- 4 Search for "SongPal" with the connected iPhone/iPod touch and download that application.
- 5 Run "SongPal" then operate the system with the display of the iPhone/iPod touch.


## Adjusting the settings

You can set the following items with the MENU button on the remote control. Your settings are retained even if you disconnect the AC power cord (mains lead).

- 1 Press the MENU button on the remote control to display the amplifier menu window on the display of the system.
- 2 Press the ↑ ↓ (select) button repeatedly to select the desired setting, then press the ENTER button.
- **3** To close the amplifier menu window, press the MENU button again.

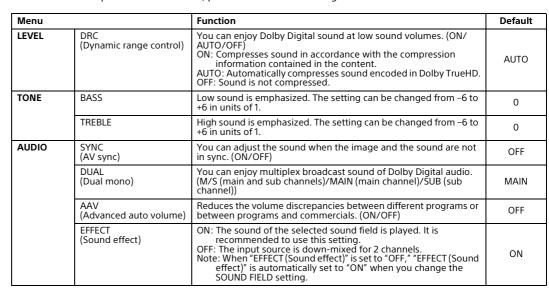

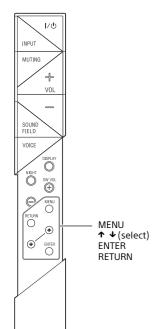

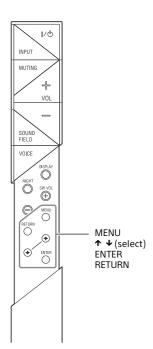

Menu		Function	Default
HDMI	CTRL (Control for HDMI)	To switch the Control for HDMI function on or off. (ON/OFF) Refer to "Using the Control for HDMI function" (page 5) for details.	ON
	P. THRU (Pass through)	To set the power saving mode of the pass-through function for HDMI signals. (AUTO/ON) AUTO: Outputs signals from the HDMI OUT jack of the system in standby mode according to the status of the TV. This setting saves power in standby mode compared with the "ON" setting. ON: Always outputs signals from the HDMI OUT jack in standby mode. If any TV other than "BRAVIA" is connected, use the system with the "ON" setting. Note: This item appears only when "CTRL (Control for HDMI)" is set to "ON."	AUTO
	ARC (Audio return channel)	To listen to digital sound from a TV compatible with the Audio Return Channel (ARC) technology that is connected using a High Speed HDMl cable. (ON/OFF)  Note: This item appears only when "CTRL (Control for HDMI)" is set to "ON."	ON
BT.STBY (BLUETOOTH st	BT PWR (BLUETOOTH power)	To switch the BLUETOOTH function of this system on and off. (ON/OFF) Note: If you change the setting to "OFF," the BLUETOOTH function and the NFC function become disabled.	ON
	BT.STBY (BLUETOOTH standby)	When the system has pairing information, the system is in the BLUETOOTH standby mode even when it is turned off. (ON/OFF)	ON
	(Advanced audio	To set whether or not the system will use AAC via BLUETOOTH. (ON/OFF)  Note: If you change the setting when the system is connected with a BLUETOOTH device, the system will be disconnected from the device.	ON
SYSTEM	A. STBY (Auto standby)	To switch the AUTO POWER OFF function on or off. (ON/OFF) The system turns off automatically when no operation has been made within a certain period (about 20 minutes) and the system is not receiving an input signal.	ON
	VER (Version)	To display the current firmware version.	=
	SYS.RST (System cold reset)	To reset menus and settings (sound fields, etc.) of the system to the initial status when it does not work properly.  Refer to "Troubleshooting" (page 17) for details.	-

#### Miscellaneous

#### **Precautions**

#### On safety

- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not climb on the system, as you may fall down and injure yourself, or system damage may result.
- Do not place anything other than a TV on the system.

#### On power sources

- Before operating the system, check that the operating voltage is identical to your local power supply. The operating voltage is indicated on the nameplate at the rear of the system.
- If you are not going to use the system for a long time, be sure to disconnect the system from the wall outlet (mains). To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the wall outlet (mains) only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- AC power cord (mains lead) must be changed only at a qualified service shop.

#### On heat buildup

Although the system heats up during operation, this is not a malfunction. If you continuously use this system at high volume, the system temperature at the back and bottom rises considerably. To avoid burning yourself, do not touch the system.

#### On placement

- •Leave the front of the system open.
- Do not place the system on top of a device that radiates heat.
- Place the system in a location with adequate ventilation to prevent heat buildup and prolong the life of the system.
- Do not place the system near heat sources or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not place anything at the rear of the system that might block the ventilation holes and cause malfunctions.
- If the system is being used in combination with a TV, VCR, or tape deck, noise may result and picture quality may suffer. In such a case, place the system away from the TV, VCR, or tape deck.
- •Use caution when placing the system on a surface that has been specially treated (with wax, oil, polish, etc.), as staining or discoloration of the surface may result.
- Take care to avoid any possible injury from the corners of the system.
- Install the system so as not to harm the speaker on the bottom of this system.
- The speakers of this system are not of magnetically shielded type.
   Do not place magnetic cards or a CRT-type TV set on top of the system or near it.

#### Notes on the glass

- Do not set something hot on the top such as a heated pan or pot. The glass top may be broken, cause injury, or be a cause of damage to this system.
- Do not impart a strong impact to the glass top. The glass top of this system is made of hardened glass; however, there is no guarantee it cannot be shattered. Heed the following so as not to break the glass:
- Do not impart a strong impact to the glass top by hitting it or by dropping something pointed.
- Do not scratch the glass with something pointed or poke it.
- Do not hit the side of the glass when installing in a storage rack.
- If the glass is broken, do not touch it with bare hands. It may cause cuts.
- Do not place anything on this system that weighs over 30 kg. Such an item can damage the glass top or this system.
- A tempered glass is stouter than ordinary glass but will shatter if broken.

- A tempered glass can shatter spontaneously in extremely rare instances.
- The glass used in this system has been carefully selected: however, there is no guarantee it cannot be shattered.
- Be careful to keep the system level, when installing or moving it. Tilting it may result in damaging the system, or injury due to falling of the glass top.

#### On operation

Before connecting other equipment, be sure to turn off and unplug the system.

#### On cleaning

Clean the system with a soft, dry cloth. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine.

If you have any question or problem concerning your system, please consult your nearest Sony dealer.

#### Copyrights

This system incorporates Dolby\* Digital and the DTS\*\* Digital Surround System.

- Manufactured under license from Dolby Laboratories. Dolby, and the double-D symbol are trademarks of Dolby Laboratories.
- \*\* Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

The BLUETOOTH\* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license.

This system incorporates High-Definition Multimedia Interface (HDMI™) technology.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

"BRAVIA" logo is a trademark of Sony Corporation.

"DSEE" is a trademark of Sony Corporation.

"x.v.Colour" and "x.v.Colour" logo are trademarks of Sony Corporation.

"PlayStation" is a registered trademark of Sony Computer Entertainment Inc.

The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

Android and Google Play are trademarks of Google Inc.

"ClearAudio+" is a trademark of Sony Corporation.

Apple, the Apple logo, iPhone, iPod, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.



"Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

#### Made for iPod/iPhone models

The compatible iPod/iPhone models are as follows. Update your iPod/iPhone with the latest software before using with the system.

BLUETOOTH technology works with:

- iPhone
- iPhone 5s/iPhone 5c/iPhone 5/iPhone 4s/iPhone 4/iPhone 3GS
- iPod touch
- iPod touch (5th generation)/iPod touch (4th generation)

Other trademarks and trade names are those of their respective owners.

## **BLUETOOTH** wireless technology

#### Supported BLUETOOTH version and profiles

Profile refers to a standard set of functions for various BLUETOOTH product features. Refer to "Specifications" (page 20) for the BLUETOOTH version and profiles supported by this system.

#### Notes

- To use the BLUETOOTH function, the BLUETOOTH device to be connected must support the same profile as this system. Even if the device supports the same profile, the functions may differ because of the specifications of the BLUETOOTH device.
- Audio playback on this system may be delayed from that on the BLUETOOTH device because of the characteristics of the BLUETOOTH wireless technology.

#### Effective communication range

BLUETOOTH devices should be used within approximately 10 meters (unobstructed distance) of each other. The effective communication range may become shorter under the following conditions;

- When a person, metal object, wall or other obstruction is between devices with a BLUETOOTH connection
- Locations where a wireless LAN is installed
- Around microwave ovens that are in use
- Locations where other electromagnetic waves are generated

#### **Effects of other devices**

BLUETOOTH devices and wireless LAN (IEEE 802.11b/g) equipment use the same frequency band (2.4 GHz). When using your BLUETOOTH device near a device with wireless LAN capability, electromagnetic interference may occur.

This could result in lower data-transfer rates, noise, or inability to connect. If this happens, try the following remedies:

 Connect this system and BLUETOOTH mobile phone or BLUETOOTH device when you are at least 10 meters away from the wireless LAN equipment.  Turn off the power to the wireless LAN equipment when using your BLUETOOTH device within 10 meters.

#### Effects on other devices

The radio waves broadcast by this system may interfere with the operation of some medical devices. Since this interference may result in malfunction, always turn off the power to this system, BLUETOOTH mobile phone and BLUETOOTH device in the following locations:

- In hospitals, on trains or airplanes, at gas stations, and any place where flammable gasses may be present
- Near automatic doors or fire alarms

#### Notes

- This system supports security functions that comply with the BLUETOOTH specification as a means of ensuring security during communication using BLUETOOTH technology. However, this security may be insufficient, depending on the settings and other factors. So always be careful when performing communication using BLUETOOTH technology.
- Sony shall not be held liable in any way for damages or other loss resulting from information leaks during communication using BLUETOOTH technology.
- BLUETOOTH communication is not necessarily guaranteed with all BLUETOOTH devices that have the same profile as this system.
- BLUETOOTH devices connected with this system must comply with the BLUETOOTH specification prescribed by the Bluetooth SIG, Inc., and must be certified to comply. However, even when a device complies with the BLUETOOTH specification, there may be cases where the characteristics or specifications of the BLUETOOTH device make it impossible to connect or may result in different control methods, display, or operation.
- Noise may occur or the audio may cut off, depending on the BLUETOOTH device connected with this system, the communications environment, or surrounding conditions.

## **Troubleshooting**

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

#### **POWER**

The system does not power up.

→ Check that the AC power cord (mains lead) is connected securely.

The system is turned off automatically.

→ The "A. STBY" function is working. Set "A. STBY (Auto standby)" to "OFF" (page 10).

#### SOUND

No TV sound is output from the system.

- → Repeatedly press the INPUT button on the remote control to display "TV" in the display (refer to "Listening to the audio of the TV" in the supplied Startup Guide).
- → Check the connection of the HDMI cable, optical digital cable, or audio cable that is connected to the system and the TV (refer to "Connection" in the supplied Startup Guide).
- → Check the sound output of the TV. Refer to the operating instructions of the TV for the TV settings.
- → Increase the volume on the TV or cancel muting.
- → When a TV compatible with the Audio Return Channel (ARC) technology is connected with an HDMI cable, make sure the cable is connected to the HDMI input (ARC) terminal of the TV (refer to "Connection" in the supplied Startup Guide).
- → If the TV is not compatible with the Audio Return Channel (ARC) technology, connect the optical digital cable in addition to the HDMI cable in order to output sound (refer to "Connection" in the supplied Startup Guide).

The sound is output from both the system and the TV.

→ Turn off the sound of the system or the TV.

#### The TV sound from this system lags behind the image.

→ Set "SYNC (AV sync)" to "OFF" if it is set to "ON" (page 9).

No sound or only a very low-level sound of the equipment connected to this system is heard from this system.

- → Press the VOL + button on the remote control and check the volume level (refer to "Parts and controls" (page 19)).
- → Press the MUTING or VOL + button on the remote control to cancel the muting function (refer to "Parts and controls" (page 19)).
- → Make sure the input source is selected correctly. You should try other input sources by pressing the INPUT button on the remote control several times (refer to "Listening to the sound" in the supplied Startup Guide).
- → Check that all the cables and cords of the system and the connected equipment are firmly inserted.

#### Bass sound is not heard or its volume is low.

→ Press the SW VOL + button on the remote control to increase the subwoofer volume (refer to "Parts and controls" (page 19)).

#### The surround effect cannot be obtained.

- → Depending on the input signal and the sound field setting, surround sound processing may not work effectively. The surround effect may be subtle, depending on the program or disc.
- → To play multi channel audio, check the digital audio output setting on the device connected to the system. For details, refer to the operating instructions supplied with the connected equipment.

#### **BLUETOOTH**

#### BLUETOOTH connection cannot be completed.

→ Make sure that the illumination LED (blue) is lit (refer to "Listening to the sound from BLUETOOTH devices" in the supplied Startup Guide).

System status	illumination LED status
During BLUETOOTH pairing	Flashes quickly in blue
The system is attempting to connect with a BLUETOOTH device	Flashes in blue
The system has established connection with a BLUETOOTH device	Lit in blue
The system is in BLUETOOTH standby mode (when the system is off)	Unlit

- → Make sure the BLUETOOTH device to be connected is turned on and the BLUETOOTH function is enabled.
- → Bring this system and the BLUETOOTH device closer together.
- → Pair this system and the BLUETOOTH device again. You may need to cancel the pairing with this system using your BLUETOOTH device first.

#### Pairing cannot be achieved.

- → Bring this system and the BLUETOOTH device closer together (refer to "Listening to the sound from BLUETOOTH devices" in the supplied Startup Guide).
- → Make sure this system is not receiving interference from a wireless LAN equipment, other 2.4 GHz wireless devices, or a microwave oven. If a device that generates electromagnetic radiation is nearby, move the device away from this system.

#### No sound is output from the connected BLUETOOTH device.

- → Make sure that the illumination LED (blue) is lit (refer to "Listening to the sound from BLUETOOTH devices" in the supplied Startup Guide).
- → Bring this system and the BLUETOOTH device closer together.
- → If a device that generates electromagnetic radiation, such as a wireless LAN equipment, other BLUETOOTH devices, or a microwave oven is nearby, move the device away from this system.
- → Remove any obstacle between this system and the BLUETOOTH device or move this system away from the obstacle.
- → Reposition the connected BLUETOOTH device.
- → Try changing the wireless frequency of the Wi-Fi router, computer, etc. to the 5 GHz band.
- → Increase the volume on the connected BLUETOOTH device.

#### The sound is not in sync with the image.

→ When you are watching movies, you may hear the sound with a slight delay from the image.

#### **REMOTE CONTROL**

The remote control does not function.

- → Point the remote control at the remote control sensor on the system (refer to "Parts and controls" (page 18)).
- → Remove any obstacles in the path between the remote control and the system.
- → Replace both batteries in the remote control with new ones, if they are weak.
- → Make sure you are pressing the correct button on the remote control.

#### **OTHERS**

The Control for HDMI function does not work properly.

- → Check the HDMI connection (refer to "Connection" in the supplied Startup Guide).
- → Set up the Control for HDMI function on the TV. Refer to the operating instructions supplied with the TV for TV setting.
- → Make sure that any equipment connected is compatible with "BRAVIA" Sync.
- → Check the Control for HDMI settings on the connected equipment. Refer to the operating instructions supplied with the connected equipment.
- → If you connect/disconnect the AC power cord (mains lead), wait more than 15 seconds before operating the system.
- → If you connect the audio output of video equipment with the system, using a cable other than an HDMI cable, no sound may be output because of "BRAVIA" Sync. In such a case, set "CTRL (Control for HDMI)" to "OFF" (page 10) or connect the cable from the audio output jack of the video equipment directly to the TV.

#### "PRTECT (protect)" appears on the display of the system.

→ Touch the I/ () (on/standby) touch key on the main unit to turn off the system. After the indication disappears, disconnect the AC power cord (mains lead) then check that nothing is blocking the ventilation holes of the system.

#### RESET


If the system still does not operate properly, reset the system as follows:

- 1 Press the I/⊕ (on/standby) button on the remote control to turn the system on.
- **2** Press the MENU button on the remote control.
- 3 Press the ↑ ↓ (select) button repeatedly until "SYSTEM" appears, then press the ENTER button.
- Press the ↑ ↓ (select) button repeatedly until "SYS.RST" appears, then press the ENTER button (page 10).

- Press the ENTER button after displaying "START."
- "RESET" appears on the display, and the settings of the menu and sound fields, etc. return to their initial statuses.
- **b** Disconnect the AC power cord (mains lead).

#### Parts and controls

#### Main unit

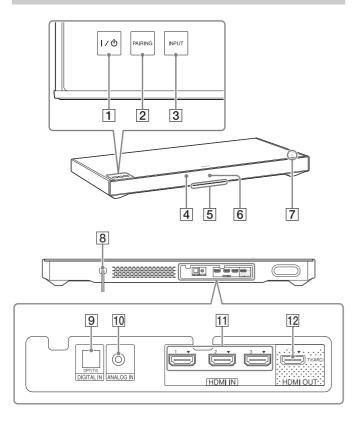

#### Front/Top

 
- 1 I/🖰 (on/standby) touch key
- 2 PAIRING touch key
- 3 INPUT touch key
- 4 Remote control sensor
- 5 Illumination LED
  - White: When the display brightness is set to "Off," the illumination LED turns off.
  - Blue: BLUETOOTH mode (page 16)
- 6 Display
- 7 N mark

To use an NFC function, touch your NFC device to the mark.

#### Back

- 8 AC power cord (mains lead)
- 9 DIGITAL IN (OPT (TV)) jack
- 10 ANALOG IN jack
- 11 HDMI IN 1/2/3 jacks
- 12 HDMI OUT (TV (ARC)) jack
- Touch a touch key lightly with a fingertip. If you touch two or more keys simultaneously or touch with a thumb, appropriate operation may not be obtained.

#### Remote control



- 1 I/ $\bigcirc$  (on/standby) button
- 2 INPUT button
- 3 MUTING button
- 4 VOL (volume) +/- button
- 5 SOUND FIELD button\*
- 6 VOICE button\*
- 7 DISPLAY button

The display brightness can be switched.

Bright → Dark → Off

- When the display brightness is set to "Off," the display is turned off after the display shows operation status for several seconds.
- When the setting is changed to "Bright" from "Off," the display shows the audio stream information.
- 8 NIGHT (night mode) button\*
- 9 SW VOL (subwoofer volume) +/- buttons Adjusts the volume of the bass sound.
- MENU/↑ (select)/ENTER/RETURN buttons
  Select the desired setting by pressing the ↑ (select) button then register it by pressing the ENTER button.
- \* Refer to "Enjoying the sound effects" in the supplied Startup Guide.

## **Specifications**

#### **Amplifier section**

POWER OUTPUT (rated)
Front L + Front R: 20 W + 20 W
(at 3 ohms, 1 kHz, 1% THD)
POWER OUTPUT (reference)

Front L/Front R speaker: 35 Watts (per channel at 3 ohms, 1 kHz) Subwoofer: 100 Watts (at 4 ohms, 100 Hz)

Inputs

HDMI IN 1/2/3\* ANALOG IN DIGITAL IN (OPT (TV))

\* These 3 jacks are identical. Using any of them makes no difference.

Output

HDMI OUT (TV (ARC))

#### BLUETOOTH section

Communication system
BLUETOOTH Specification version 3.0

Output

BLUETOOTH Specification Power Class 2

Maximum communication range Line of sight approx. 10 m<sup>1)</sup>

Maximum number of devices to be registered 9 devices

Frequency band

2.4 GHz band (2.4000 GHz - 2.4835 GHz)

Modulation method

FHSS (Freg Hopping Spread Spectrum)

Compatible BLUETOOTH profiles2)

A2DP (Advanced Audio Distribution Profile) AVRCP 1.3 (Audio Video Remote Control Profile)

Supported Codecs<sup>3)</sup>

SBC<sup>4)</sup>, AAC<sup>5)</sup>

Transmission range (A2DP)

20 Hz - 20,000 Hz (Sampling frequency 44.1 kHz)

- The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, cordless phone, reception sensitivity, operating system, software application, etc.
- 2) BLUETOOTH standard profiles indicate the purpose of BLUETOOTH communication between devices.
- 3) Codec: Audio signal compression and conversion format
- 4) Subband Codec
- 5) Advanced Audio Coding

#### Front L/Front R speaker section

Speaker system

Full range speaker system, Acoustic suspension

Speaker

35 mm × 80 mm cone type

Rated impedance

3 ohms

#### Subwoofer section

Speaker system

Subwoofer system

Bass reflex

Speaker

100 mm cone type ×2

Rated impedance

4 ohms

#### General

Power requirements 220 V - 240 V AC, 50 Hz/60 Hz

Power consumption

On: 34 W

Standby mode (Control for HDMI is set to on): 0.5 W or less Standby mode (Control for HDMI is set to off): 0.3 W or less

BLUETOOTH Standby mode: 0.5 W or less

Dimensions (approx.) (w/h/d) 720 mm × 72 mm × 310 mm

Mass (approx.)

8 kg

#### Digital audio input formats supported by the system

Dolby Digital DTS-HD Master Audio\*

Dolby Digital Plus\* DTS-HD High Resolution Audio\*

Dolby TrueHD\* DTS-HD Low Bit Rate\*
DTS Linear PCM 2ch 48 kHz or less

DTS 96/24 Linear PCM Maximum 7.1ch 192 kHz or less\*

# Video formats supported by the system Input/Output (HDMI Repeater block)

			3D	
File	2D	Frame packing	Side-by- Side (Half)	Over-Under (Top-and- Bottom)
4096 × 2160p @ 59.94/60 Hz*1	0	-	-	_
4096 × 2160p @ 50 Hz*1	0	-	-	-
4096 × 2160p @ 23.98/24 Hz*2	0	-	-	-
3840 × 2160p @ 59.94/60 Hz*1	0	-	-	-
3840 × 2160p @ 50 Hz*1	0	-	-	-
3840 × 2160p @ 29.97/30 Hz*2	0	-	-	-
3840 × 2160p @ 25 Hz*2	0	-	-	_
3840 × 2160p @ 23.98/24 Hz*2	0	-	-	-
1920 × 1080p @ 59.94/60 Hz	0	_	0	0
1920 × 1080p @ 50 Hz	0	-	0	0
1920 × 1080p @ 29.97/30 Hz	0	0	0	0
1920 × 1080p @ 25 Hz	0	0	0	0
1920 × 1080p @ 23.98/24 Hz	0	0	0	0
1920 × 1080i @ 59.94/60 Hz	0	0	0	0
1920 × 1080i @ 50 Hz	0	0	0	0
1280 × 720p @ 59.94/60 Hz	0	0	0	0
1280 × 720p @ 50 Hz	0	0	0	0
1280 × 720p @ 29.97/30 Hz	0	0	0	0
1280 × 720p @ 23.98/24 Hz	0	0	0	0
720 × 480p @ 59.94/60 Hz	0	-	-	_
720 × 576p @ 50 Hz	0	-	-	-
640 × 480p @ 59.94/60 Hz	0	-	-	-

<sup>\*1</sup> YCbCr 4:2:0/Supported 8-bit only

Design and specifications are subject to change without notice.

<sup>\*</sup> It is possible to input these formats only with HDMI connection.

<sup>\*2</sup> Supported 8-bit only



http://www.sony.net/

\* 4 4 8 7 1 9 6 2 2 \* (

4-487-196-**22**(1)