

# St George

## Rangehood Operation And Care Leaflet



### Model No's

- 6529200 90cm wall canopy rangehood
- 6529400 rectangular canopy rangehood
- 6539200 glass wall canopy rangehood
- 6549200 island canopy rangehood

## Safety Precautions

- Never leave frying pans unattended during use as overheated fat and oil may catch fire.
- Before carrying out any kind of maintenance or cleaning, disconnect the hood from the mains supply.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- There shall be adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels. (this does not apply to rangehoods constructed to only discharge the air back into the room)
- The appliance is fitted with removable filters. Ensure the filters are removed and thoroughly cleaned at least once every two months in accordance with these instructions.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Do not flambé under the rangehood.
- Local regulations concerning the discharge of air must be fulfilled.
- When using a gas cooktop never leave the burners uncovered while the hood is in use. Switch off the gas before removing the pan. This not only saves energy but avoids a potentially dangerous concentration of heat.
- Always ensure the rangehood is kept at the correct fan speed to prevent flames licking around the bottom of the pan.

# Basic Operation

*Your rangehood has single button control for easy operation. Some models in this range operate by remote control, others have buttons on the front of the rangehood.*

## To Turn On The Light

Turn the light on using the button marked with a light symbol.



## To Operate The Extraction Fan

Select one of three speeds from the numbered buttons.

0. Off Setting. On some models, this button is combined with the low speed button, and is marked 01
1. Low speed, low noise. Use for simmering.
2. Medium setting. Use for normal cooking.
3. High speed, higher noise. Used for frying, or cooking food with strong odours, or when several hotplates are used simultaneously.
4. Some models have a higher speed setting for the most demanding requirements.



## To Operate The Timer

Press the timer button to have the rangehood automatically switch itself off after 10 minutes.



# Basic Maintenance

## Cleaning The Outer Surfaces

Use a damp cloth and mild liquid household cleaner.

Do not use abrasive cleaners or scourers as these will damage the surface. Commercial stainless steel cleaning products are available for more difficult staining.

## Cleaning The Metal Filters

The metal filters in this rangehood are dishwasher safe. You should clean the metal filters at least every two months for normal usage. More frequent cleaning may be necessary for higher levels of usage.

 
**BEFORE YOU START: UNPLUG THE APPLIANCE.**

There are two styles of inlet filter on these models. Both are removed by pulling the lever on the edge of the filters and lifting them out of the slots which hold them.


Wash the filters in a dishwasher, or by hand using household dishwashing liquid.

Allow filters to dry thoroughly before replacing them.

When replacing, ensure the filters are put back in their correct position, as shown below.

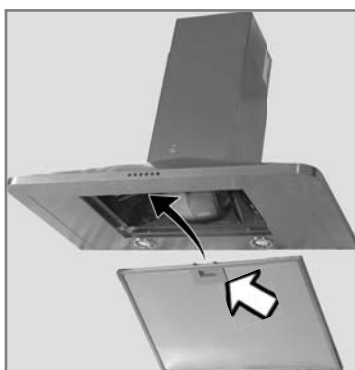

 For models with a single horizontal filter: Ensure the lever is facing outwards, and the

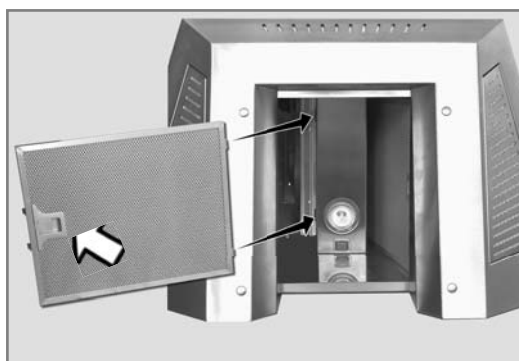


For models with two angled filters: The two tabs fit into slots close to the centre panel of the rangehood. Correct operation requires these filters to be fitted correctly.

Some models have side outlet filters. These also need to be removed and cleaned.


Remove by pressing the filter inwards, and allowing them to spring outwards.

 Replace by pushing back into place.

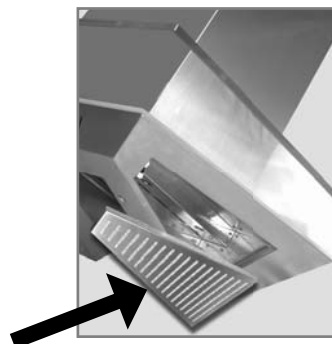

## Replacing The Battery

 Slide out the battery compartment cover and replace the old battery with an identical 12 Volt replacement. Ensure the cover is properly replaced.

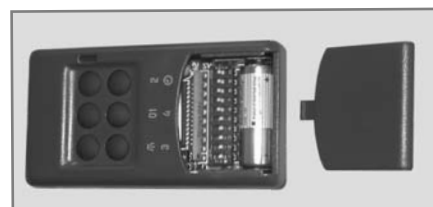

# Occasional Maintenance

## Changing The Light Bulb

*BEFORE YOU START: UNPLUG THE APPLIANCE.*

*There are a number of different models in this range, each requiring a slightly different method of accessing the light bulb. In each case, however, the old bulb must be replaced with an identical 40W bulb.*

Some models require that you prise the bulb outwards with a soft sharp object such as a tooth pick. Do not use metal objects as these may cause chipping of the bulb glass.

Replace the bulb by ensuring the two pins locate into the sockets in the rangehood.



Other models have a smooth metal ring holding a glass disk, which covers the bulb. Using a soft sharp object such as a tooth pick, remove the metal ring.

Replace the bulb by ensuring the two pins locate into the sockets in the rangehood.

Replace the glass disk and metal ring by ensuring the three lugs on the ring sit properly into the sockets.



Some models have the light bulb held into place by a curved, toothed wire. You will need to find the small gap in the wire, and pull one end of the wire to remove it.

The globe can now be accessed and replaced.



## Replacing The Carbon Filters

This section applies only if your rangehood has been installed to recirculate vapours back into the room.

St George has available optional charcoal filters to further clean cooking oils and odours from the exhaust. These filters need to be replaced approximately every 2 months for normal usage. Contact your retailer or St George Appliances directly for replacement filters. Directions on how to replace the filters are contained in the filter packaging.

These filters cannot be washed. Once they are spent, they must be replaced. Failure to do so can create a fire hazard in extreme cases.