

LENOXX

DVD PLAYER

MODEL: DVD3460



LENOXX

Lenoxx Electronics Aust.Pty Ltd
Importers and Wholesalers of Electronics and toys
6 Oban court, Laverton North. Victoria. 3026
ABN: 97 844 321 851
PH:03 9267 2100
FAX:03 9267 2199
For service call:1300 666 848
Email:lenoxx@lenoxx.com.au
www.lenoxx.com.au

Important safety instructions please read carefully and keep for future reference

	To reduce the risk of fire or electric shock, do not expose this product to water, rain or moisture. To prevent the risk of electric shock, do not remove the cover or back of this product. In case of product failure, only qualified personnel can repair. There are no user-serviceable parts inside.
	Use of controls, adjustments, or performance of procedures other than those specified herein may result in dangerous radiation exposure. This product is rated as LASER CLASS 1 PRODUCT. CAUTION: Laser radiation when open - never stare into the laser beam.

CAUTION !

Dangerous tension inside the product ! Do not open. Risk of electric shock ! No parts can be repaired by the end-user. Only qualified personnel can repair and maintain this product.

If the electric cord is damaged, it must be replaced by the manufacturer or qualified after-sales personnel in order to avoid any danger.

The product must be installed in accordance with local laws.

Damaged batteries must be properly disposed. In order to protect the environment, please dispose the batteries properly, in accordance with local laws (information is available at your reseller).

Where to install the product

- Place the product on a straight, rigid and stable place. Do not place the product on a carpet.
- Do not place the product on top of another that may cause overheating (for example, a receiver or amplifier).
- Do not place anything underneath the product (for example, CDs or magazines).

 
Proper ventilation

- Place the product in a sufficiently aerated place to avoid overheating.Allow at least 10cm spacing at the back and top of the product, and 5cm spacing on both sides to prevent overheating.
- Do not place items such as newspapers, tablecloth, curtains, in front of the ventilating openings.

- Do not expose the product to high temperatures, moisture, water and dust.**
- The apparatus shall not be exposed to dripping or splashing. No object filled with liquids, such as vases, shall be placed on the apparatus.
 - Do not place other items close to this product that may damage it (for example, objects containing water or lightened candles).
 - No naked flame sources, such as lighted candles, should be placed on the apparatus.

Electric supply

- Please unplug the product in case of prolonged non-use.
- This product is intended to be used under temperate climate and should not be used under tropical climate.
- If the supply cable is damaged, it must be replaced by the manufacturer or qualified after-sales personnel to avoid any danger.
- This product must be connected to an electrical supply 120V ~ 60Hz.
- The mains plug is used as the disconnect device, so the disconnect device shall remain readily operable

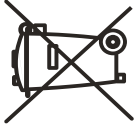


- The presence of dangerous substances in the electrical and electronic equipments can have potential consequences on the environment and human health in the cycle of reprocessing this product.
- Therefore, at the end of its lifetime, this product shall not be disposed with other non-recycled waste.
- As the end user, your role is of prime importance in the cycles of re-using, recycling, and other forms of valorization of this electrical and electronic equipment. Local authorities and resellers have set special procedures for the purpose of collecting and recycling this product.
- You have the obligation to use the selective waste collection systems put in place by your local authorities.

Contents


1. Front Panel and Rear Panel Illustration	4
2. Remote Control	5
3. Connections	7
4. Function Operation	8
5. Connecting a USB device	12
6. System Setup	13
7. Troubleshooting	17
8. Technical Specification	18

1. FRONT PANEL AND REAR PANEL ILLUSTRATION

 
Front panel

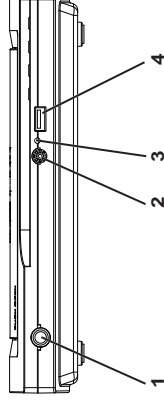

 1. MIC JACK
2. REMOTE RECEIVER WINDOW
3. POWER LED
4. USB JACK
5. PUSH OPEN / CLOSE
6. STANDBY BUTTON
7. PREV BUTTON
8. NEXT BUTTON
9. PLAY/PAUSE BUTTON

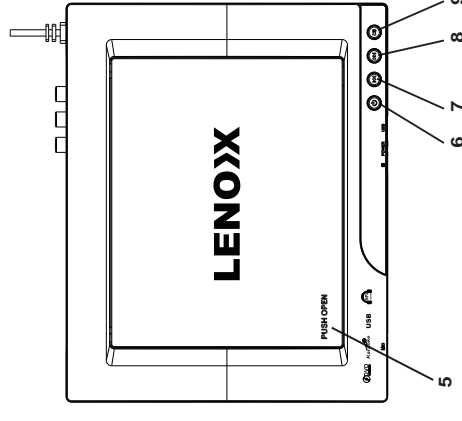


Panel posterior

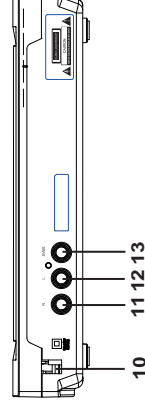 

10. POWER INPUT
11. R OUTPUT
12. L OUTPUT
13. CVBS OUTPUT

 2. REMOTE CONTROL

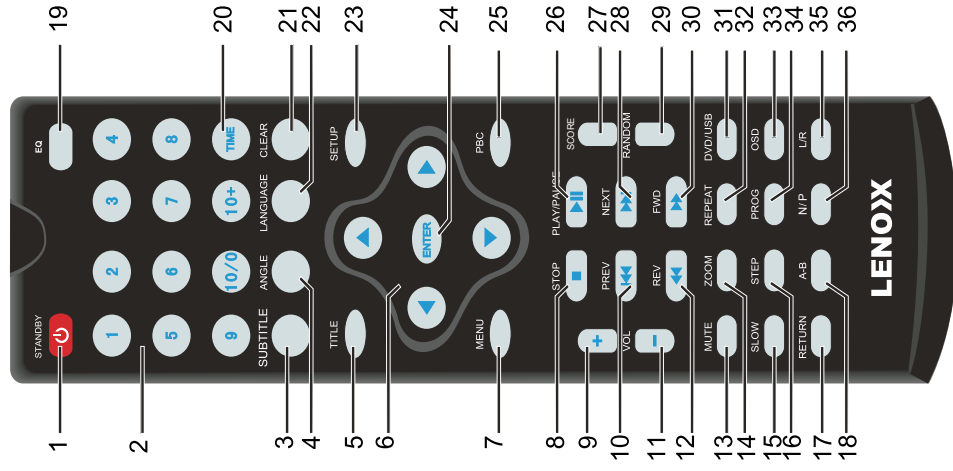

Unless stated otherwise

Unless stated otherwise, the remote control can operate all the features of the DVD Player, always point the remote control directly at the remote sensor on the front of the DVD Player, not the TV.

- | | |
|------------------|----------------|
| 1. STANDBY | 19. EQ |
| 2. NUMBER KEY | 20. TIME |
| 3. SUBTITLE | 21. CLEAR |
| 4. ANGLE | 22. LANGUAGE |
| 5. TITLE | 23. SETUP |
| 6. DIRECTION KEY | 24. ENTER |
| 7. MENU | 25. PBC |
| 8. STOP | 26. PLAY/PAUSE |
| 9. VOL + | 27. SCORE |
| 10. PREV | 28. NEXT |
| 11. VOL - | 29. RANDOM |
| 12. REV | 30. FWD |
| 13. MUTE | 31. DVD/USB |
| 14. ZOOM | 32. REPEAT |
| 15. SLOW | 33. OSD |
| 16. STEP | 34. PROG |
| 17. RETURN | 35. L/R |
| 18. A-B | 36. N/P |

 
3. CONNECTIONS

- Turn off the power before connection.
- Turn on the power after finishing connection
Wires must be firmly connected: especially the plug shall be fully inserted.

3.1 Connection to Television

There are several possible configurations, depending on your television:

Connecting to a TV With Audio/Video cable

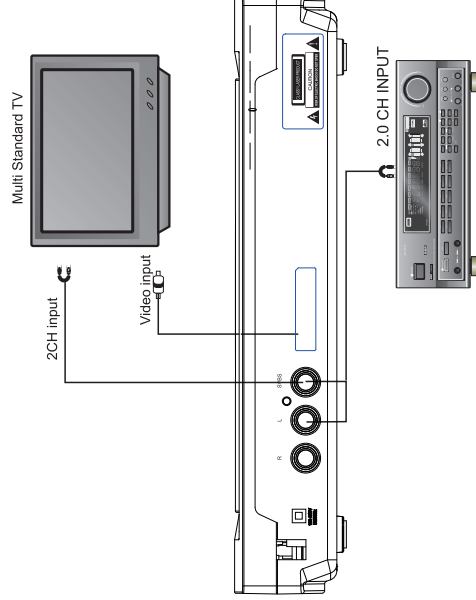

3.2 Setting of TV system

If you find the image like non-fully zoomed picture, brim picture coved or black& white picture etc, please select NTSC or PAL by systems setting or press N/P button to switch the TV system on the remote control. This DVD disc is capable of supporting different scales picture, as result, non-full zoomed picture could appear or picture be partially covered on users TV set

GB-7

4. FUNCTION OPERATION

4.1 Function Buttons On the Front Panel

These buttons function is the same as the corresponding buttons on the remote control. For the detail information, please see the following texts.

4.2 Function Buttons On the Remote Control

0-10+ keys

These keys are used to input the time, as well as title, chapter and track numbers. When a numeric item is displayed on the screen, press the 0-10+ keys to select the desired entry, and press **ENTER** to confirm.

When a CD or VCD is playing (with PBC off), press the 0-10+ keys to select a track directly, then press **ENTER** to confirm.

NEXT

During DVD, CD or VCD playback, press **NEXT** to play the next chapter, title or track.

PREV

During DVD, CD or VCD playback, press **PREV** to play the previous chapter, title or track.

STOP

Press the button once and the player will be in memory stopstate. Continuously press this button twice and the player will be in complete stop state.

L/R

Press this button to change audio output mode:left, right ,stereo or mixed soundtrack.

Language

Press this button to select the soundtrack languages(DVD/VCD).

Return

In PBC-on mode press this button to go back to the main menu (VCD/DVD).

DVD/USB

In stop mode, press the key from the remote control to switch the input source between Disc and USB.

GB-8

SETUP

Press the button to enter the system setting menu. press the button again to exit the menu.

MENU

 
During DVD playback, press **MENU** to display the disc menu of the current title.

PBC

During VCD playback, Press **PBC** to select the mode of PBC On or PBC Off.

PROG

For CD/MP3 program

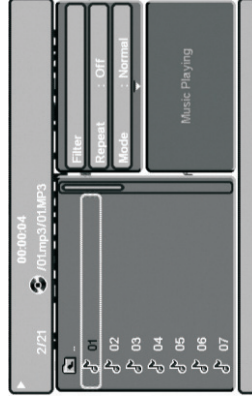

1. Put in a MP3/CD format disc.

2. There is edit mode, on the right side of the list, Press Enter to choose Edit mode, first, then press Enter, to choose the song which need to program playing in the list, please move the cursor to the add to program, at the right side, then press Enter, to confirm it, it's ok. Please move the cursor to the program list to choose program playing.

Note: a song is being played while programming, press STOP button to stop current playing before you choose program playing.

3. To clear the program, it must be in the stop status and after chosen the song which need to clear, then move the cursor to the Clear to program, then press Enter to confirm it, it's ok.

Note: Ensure you have chosen Edit Mode before clearing program.

4. There are 3 Repeat modes and 3 Mode states at the right side. Repeat Single is to repeat single track. Repeat Folder is to repeat tracks in the whole folder. Repeat Off is to cancel repeat. Mode normal is to play normally. Shuffle on is to play randomly. Music intro is to play the prelude only.

Notes: To play randomly, preset repeat state as repeat: off at the right side, mode state as shuffle on, Press NEXT from the remote control to play without sequence.

For DVD Program

Press this button and the screen will display info window, press digits button to input the program number what you want, when finished, move the cursor to select the START logo at this time the unit will start program playback and the screen will display PROGRAM logo.

OPEN/CLOSE

To open the disc tray, press **PUSH OPEN**; To close the disc tray, press **PUSH OPEN** again.

MUTE

Press **MUTE** to turn off the audio, press **MUTE** again to resume normal sound.

ANGLE

During athletic match, concert or theatrical program, press ANGLE key continually on remote controller to select various angle to view the same image (This operation works only for the disc with multi angle encoded).

RAN

During VCD and DVD playback, press this button to play randomly

OSD

Press **OSD** button.

To show the time and status information.

A-B

During playback, press A-B to select point A, press it again to select point B. The player will repeat the section from A to B automatically. Press **A-B** a third time to cancel A-B repeat and clear points A and B.

Note: During CD/VCD playback, points A and B must be within the same track. During DVD playback, points A and B can be selected from different chapters.

CLEAR

Press **CLEAR** to delete numbers you have entered. Press once to delete one digit, press and hold to delete all digits.

REPEAT

Each press of the **REPEAT** button will change the repeat mode.

During VCD, CD playback, there are three modes: repeat Single, repeat All and Off.

During DVD, playback, there are three modes: Repeat Chapter, Repeat Title and Off.

TIME

To Select your desired time, chapter of the disc to play.

REV

During DVD, CD or VCD playback, press **REV** to scan in reverse. The player will review the disc at different times speed. Press **PLAY** to resume normal playback.

FWD

During DVD, CD or VCD playback, press **FWD** to scan forward.

The player will cue the disc at different speed. Press **PLAY** to resume normal playback.

ENTER

Press the button to confirm your choice on screen.

Direction key(UP/DOWN/RIGHT/LEFT)

Press the keys to move the highlighted bar or cursor on any menu to your selection.

Play/Pause

In play state, press the button for the first time and the player will be in pause state. To resume normal playback press the button again, in pause state or stop state, press the button, the player will be in playing state.

SLOW

During DVD, VCD playback, press **SLOW** for slow motion playback.

Once you press SLOW, the disc will play at different speed. Press **PLAY** to resume normal playback.

STEP

Press the key, you can play the disc step by step, in this way, you can catch any picture on the disc (not for mp3, CD). Press Play button to play normally.

N/P

Please press stop key, then Press the button on the remote control and choose or **NTSC PAL Auto** for the TV system.

*Notes: It must be in stop status when choosing **NTSC PAL Auto** TV system.*

ZOOM

As you press the button you view the different **ZOOM** magnifications of the picture.

Note: This function may differ for different types of discs

SUBTITLE

Press the button to display different captions(*Requires support from disc*)

TITLE

Press the button to enter the appointed title. (*Requires disc support*)

VOLUME +/-

Press **+** to increase volume and press **-** to decrease volume.

VIDEO

Press **VIDEO** key, you can select different video output mode(CVBS, YUV)

Remark:

CVBS: Composite Video. Set the video output to interlacing component output.

YUV: Set the video output to YUV output.

Notes: It must be in stop status when selecting CVBS or YUV video output.

5. Connecting a USB device

- 1) Power-on the unit.
- 2) Make sure no disc was played inside the tray.
- 3) Insert a USB key inside the connector.
- 4) Press the USB key from the remote control to start.

Remark: Depending on the capacity of the device, the reading can take more than 1 minute before launching the video.

The unit cannot read my USB device.

- Once you have plugged your device to the unit, you may need to switch on the USB device before it can operate.
- This unit does not support a direct USB connection with a computer. You need to use a USB device, a MP3 player .
- Check that the files system of your USB device is formatted into the FAT or FAT 32 format. USB device formatted into NTFS are not compatible with this unit. Caution: if you attempt to modify your file system, formatting your device will erase all data. Please refer to your USB devices instruction manual first.
- Warning: Connect your USB device directly to the USB port of the device. Using an extension cable is not recommended and may cause interference and failure of data transfer.

6. SYSTEM SETUP

DVD menu setup

Press the **SETUP** button on the remote control, the SETUP MENU (main) will be displayed. After accessing the setup menu, press the direction buttons for up and down movement to select an item desired, then press the **ENTER** button to confirm. Press **LEFT** direction button return to the menu of upper level. To exit the setup, press the **SETUP** button again. In the SETUP MENU, you may choose any of the following options as you like.

6.1 LANGUAGE SETUP

Select **Language** in the setup menu, and display the **Language** submenu:



6.1.1 OSD Language

Use this item to select the language of the setup menu and screen display.

6.1.2 Subtitle

This option provides the preset subtitle language.

Follow the operating instructions stated in "DVD MENU SETUP" in combination with the desired option.

6.1.3 MPEG4 Subtitle

MPEG4 Subtitle setting is used for choosing the language domain, (only for MPEG4). After select one language domain (alphabet), when playback a MPEG4 with external subtitle, the subtitle display will use this language alphabet. If you find the displaying subtitle correctly, please ensure the external subtitle language and select the correct language.

6.1.4 Audio

Follow the operating instructions stated in "DVD MENU SETUP" in combination with the desired option. This option provides the built-in disc dubbing language options.

6. 1. 5 DVD Menu

This option provides the film's menu language options.

Follow the operating instructions stated in "DVD MENU SETUP" in combination with the desired option.

6. 2 VIDEO SETUP

Select **Video** in the setup menu, and display the **Video** submenu:



6. 2. 1 Aspect Ratio

4:3 : Choosing this setting if your DVD player is connected to a normal ratio TV. You can fill the movie to the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen.

16:9 : Choose this setting if your DVD player is connected to a wide screen TV. If you choose this setting and you don't have a wide screen TV, the images on the screen may appear distorted due to vertical compression.

Note:

The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose. If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen. You must adjust the screen setting depending on the type of the television you have.

6. 2. 2 View Mode

With this option you can select the different video vision mode on the screen.

6. 2. 3 TV System

This product supports output of various system, including **NTSC**, **PAL**, **AUTO**. If your TV set has only **NTSC** or **PAL** system, the screen will blink and become colorless when a wrong system is selected. In this case, press the **N/P** button on the Remote Control to switch the **TV TYPE**.

Note: For more information of output format, refer to the instructions of your TV set.

6 . 4 RATING SETUP

Select <Rating> in the setup menu, and display the **Rating** submenu:

Note: Not all DVDs support ratings.



6 . 4 . 1 Parental Control

Selecting a Rating allows the user to set the parental control feature of the player.

Select Parental Control, and press ENTER to change the different mode.

Note: Unlock the password before setting Parental Control

6 . 4 . 2 Set Password

Use the 0-9 keys to input four digits (password), then press ENTER to confirm.

Note: If you forget your password, please use the universal password 8888 to unlock.

6 . 5 Misc SETUP

Select **Misc** in the setup menu, and display the submenu:



6 . 5 . 1 Use Default Settings

Reset setup data to factory default and re-load disc

6 . 5 . 2 Screen Saver:

On:Screen Saver function will be opened.

Off:Screen function will be closed.

7. Troubleshooting

Please consult the following section when you encounter problems using this DVD player the player ceases to function properly after some wrong settings, you may restore the factory defaults as described in Section 8.5.1 on the previous page. In all cases, for your safety, never attempt to open the unit by yourself given the presence of dangerous voltage inside. Only the technicians of the after-sale service are authorized to open and repair it.

NO PICTURE AND NO SOUND

- Press the Standby button to turn on the player.
- Check the power outlet and make sure that the plug is firmly inserted.
- Ensure the power cord is not damaged.

THERE IS SOUND BUT NO PICTURE

- Make sure you have connected the audio cable to the audio input (instead of an audio output) on your television.
- Check if the sound is cut or reduced to minimum.

THERE IS PICTURE BUT NO SOUND

- You should set the video mode on your television to be YUV or AV-IN (Audio/Video Input).

DISTORTED OR BLACK AND WHITE PICTURE

- Choose the video mode (NTSC or PAL) by pressing the N/P button on the remote control. You can change the default value of this setting in the players video menu.

CHOPPING SOUND OR IMAGE DURING PLAYBACK

- Check if the disc is not scratched or damaged. Try another disc.
- Make sure the YUV and the Audio/Video cables are connected firmly and correctly.

DISPLAY OF MESSAGE NO DISC OR READ DISC

- Make sure you insert the disc on the correct side.
- Check if the disc is not scratched or damaged. Try another disc.
- Make sure that the disc format is supported by this player.
- The message may also appear in case of overheating. In this case, turn the unit off for approximately an hour. Also leave sufficient ventilation space around the unit, as described at the beginning of this manual.

REMOTE CONTROL PROBLEM

- Check battery status. If necessary, replace by two new AAA batteries.
- Make sure batteries are inserted by following the +/- polarity signs.
- Remove all the objects between the front of the DVD player and remote control.

MALFUNCTION

- Turn off the player then turn it on again. If necessary, disconnect it from the wall outlet.

THE DISC IS STUCK IN THE DISC TRAY

- Turn off the player. Then turn it on and immediately press the OPEN/CLOSE button on the remote control.

8. Technical specifications

Signal system	NTSC/PAL/AUTO
Frequency Response	20HZ-20KHZ (at 1KHz 0 dB)
Signal-toNoisy Ratio(Audio)	≥90 dB (at 1KHz 0 dB)
Audio Distortion + Noise	≤-60dB (at 1KHz0dB)
Audio Output (Analogaudio)	2.0 ⁺⁰ -1.0Vrms
Video Output	Composite: 1.0±0.2Vp-p Load impedance: 75Ω, imbalance, negative polarity
Power Supply	100 – 240V~ 50/60Hz
Supported Disc	DVD/ VCD/CD/MP3/MPEG4

REFERENCE:

To protect your DVD player, the interval between two consecutive Power button operations must be above 30 seconds.

No using for a period of time, please pull out the plug from the electronic outlet.

The player should be operated only on condition that the type of power supply corresponds to the marking label. Otherwise, it doesnot work or even be damaged.

The player may not be compatible with some encrypted discs.

If the player stops playback by accident, please power it on again.