

Kambook - Australia

Building 2, Port Air Industrial Estate
1A Hale Street
Botany NSW 2019
Australia
Customer Service Line 1300 139 798
Customer Service Fax 1800 621 337
www.kambook.com.au

Kambook - New Zealand

Private Bag 94411
Botany, Manukau
Auckland 2163
New Zealand
Customer Service Line/
Spare Parts 0800 273 845
Customer Service Fax 0800 288 513
www.kambook.co.nz

KAMBROOK

THE SMARTER CHOICE



INSTRUCTION BOOKLET

KKE760CLR

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Kettle	p6
Using your Kambrook Kettle	p7
Care, Cleaning and Storage	p9

Kambrook Recommends Safety First

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Kettle

- Carefully read all instructions before operating the Kambrook Kettle for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the kettle for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this kettle.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the kettle on a sink drain board.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this instruction book.
- The kettle must be used only with the power base supplied.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.
- Use caution when pouring water from the kettle, as boiling water and steam will scald.
- Do not pour the water too quickly.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or reached the selected temperature, before removing the kettle from the power base. If the kettle is removed from the power base during the boiling cycle the kettle will automatically switch off.
- Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle.
- The filter could become damaged with time, please check regularly and replace if found damaged.
- Ensure the kettle has cooled down before attempting to clean the filter and appliance
- Always fill the kettle with water between the minimum (MIN) and maximum (MAX) marks indicated on the glass kettle. Too little water will result in the kettle switching 'OFF'. Filling above the maximum mark (MAX) may result in boiling water splashing from the kettle.
- The lid should always be locked firmly in place in the closed position before and during use.
- Do not open the lid during operation as this may result in boiling water splashing from the kettle. Pour all the hot water from the kettle before opening the lid to refill
- When using the kettle, avoid spillage of water on the kettle base and connector as this may cause damage to the kettle.

- Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move the kettle while the kettle is switched on.
- Care should be taken when handling the kettle during use, ensuring that the kettle body and parts are not touched as these may still be hot due to residual heat after boiling. Always ensure to use the kettle handle when removing the kettle or pouring water after kettle has boiled.
- To prevent damage to the kettle do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.
- Do not place a load on the top of the glass kettle or knock the glass on a hard surface or drop the kettle. The glass may break. Always take care cleaning or filling the kettle.
- Keep the kettle clean. Follow the cleaning instructions provided in this instruction book in Care, Cleaning and Storage on page 9.

Important safeguards for all electrical appliances

- Fully unwind the power cord before use.
- Connect only to 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to inspect the appliance regularly. Do not use the appliance if the power supply cord, plug, connector or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

Your Kambrook Kettle

1. Wide hinged lid pops open for easy filling and cleaning. Lid locks into place when pressed closed for safety
2. One touch pop-up lid button
3. Power On/Off boil switch with automatic cut off
4. Illuminated power 'ON' indicator light during boiling cycle
5. 1.5 litre German glass carafe made by SCHOTT

6. Cool touch handle
7. Power base

Not Shown

- Cord wrap under the kettle base
- Fine stainless steel mesh scale filter to prevent scale from entering your beverage
- Safety boil dry protection ensures that kettle automatically switches off if the kettle boils empty



**BPA
FREE**
MATERIALS*

*Laboratory tests show water not containing BPA that is boiled in this kettle will be BPA free to a resolution of 1 part per million.

Using Your Kambrook Kettle

Before First Use

Remove any packaging material and promotional labels before using your kettle for the first time. It is recommended before using the kettle for the first time to fill the kettle to the maximum (MAX) level with cold tap water, bring to the boil and then discard the water.

Your kettle will only operate when positioned on the power base with the power On/Off switch in the 'ON' position. The kettle will automatically switch off once the water has boiled.

Operating Your Kettle

1. To fill the kettle with water, remove the kettle from the power base and press the one touch pop-up lid button located on the handle which will allow the lid to lift upwards.
2. Fill with the desired amount of water. Do not operate the kettle without water. Always fill the kettle between the 'MIN' and 'MAX' marks indicated on the glass. Too little water will result in the kettle overheating and switching off.
3. Push down on the lid to close, ensuring that the lid is locked firmly into place before placing the kettle on the power base.
4. Place the kettle firmly onto the power base and plug the power cord into a 230V or 240V power outlet and switch on.
5. Press the power On/Off switch to the 'ON' position. The power 'ON' light will illuminate blue, indicating the kettle is heating the water.
6. The kettle will automatically switch 'OFF' once the water has boiled and the light will extinguish.



WARNING: Do not release the lid while the water is boiling. Ensure the lid is closed whilst boiling.

7. Lift the kettle from the power base and pour the water. It is important to hold the kettle level, especially when filled to the 'MAX' mark.
8. To re-boil it may be necessary to wait for a few seconds to allow the control to reset.
9. The kettle should be stored on its power base when not in use. The power outlet should be switched off and the power cord unplugged from the power outlet.



WARNING: Never operate the kettle dry. Too little water will result in the kettle switching 'OFF'. Do not overfill the kettle above the 'MAX' mark indicated on the glass. This may result in the boiling water splashing from the kettle.



WARNING: This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

Using Your Kambrook Kettle Continued...



WARNING: Do not remove the kettle from the power base during operation. Ensure the kettle has switched to the 'OFF' position after the water has boiled before removing the kettle from the power base.



WARNING: This kettle is designed for the boiling of quality drinking water only. Never use it to heat or boil any other liquids or foodstuffs. The lid should always be firmly in place and locked closed before use.

Safety Boil Dry Protection

The kettle is fitted with a safety device which protects against overheating should the appliance be operated with insufficient water. If this occurs the kettle will stop heating and automatically switch 'OFF'. Should this occur, switch off at the power outlet and unplug. Allow kettle to cool before refilling. Remove the kettle from the power base and add water. Return the kettle to the power base and switch the power On/Off button to 'ON'. The safety device will automatically reset.

Care, Cleaning and Storage

Always switch the kettle off at the power outlet and then unplug the kettle from the power outlet before cleaning.

Cleaning the Kettle Exterior

The outside surface of the kettle may be wiped over with a soft damp cloth and polished with a soft clean dry cloth.



WARNING: Do not use chemical, steel wool, or abrasive cleaners to clean the inside or outside of the kettle.



WARNING: To prevent damage to the kettle, do not use alkaline cleaning agents when cleaning; use a soft cloth and mild detergents.



WARNING: Never immerse the kettle base, switch area, power base of power supply cord in water or allow moisture to come in contact with these parts.

Cleaning the Removable Filter

Your kettle features a removable stainless steel mesh filter to filter out scale deposits for cleaner water. The filter is situated inside the kettle over the spout and behind the plastic guard. To remove for cleaning, push the rounded tab on the end of the filter until it slides sideways away from the plastic guard. Replace by sliding back into position. The filter can be washed in warm soapy water and rinsed (see Fig. 1).



WARNING: The filter could become damaged with time; please check regularly and replace if found damaged.

Care, Cleaning and Storage Continued...



WARNING: Ensure the kettle and water has cooled down before attempting to clean the filter and appliance.



WARNING: Do not place a load on the top of the glass kettle or knock the glass on a hard surface or drop the kettle. The glass may break. Always take care cleaning or filling the kettle.

Mineral Deposits and Discolouration

Due to the large surface area of the concealed element (interior base), discolouration due to mineral deposits from tap water may appear more obvious by leaving a brown stain on the base. THIS IS NOT RUST. To remove the discolouration, follow the instructions below 'Removing Mineral Deposits'.

Removing Mineral Deposits

Mineral deposits in tap water may cause the kettle interior to discolour over time. This may be removed by using a proprietary kettle descaler which is available from most leading supermarkets, department stores and hardware stores.

Alternatively:

1. Fill the kettle until $\frac{3}{4}$ full with 1 part vinegar (or a few slices of lemon) and 2 parts water, bring to the boil and allow to stand overnight.
2. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use.

Storage

Ensure the kettle is switched off, cleaned and dried before storing. Ensure that the lid is closed and locked firmly into place. Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.