


Range hood

Levante

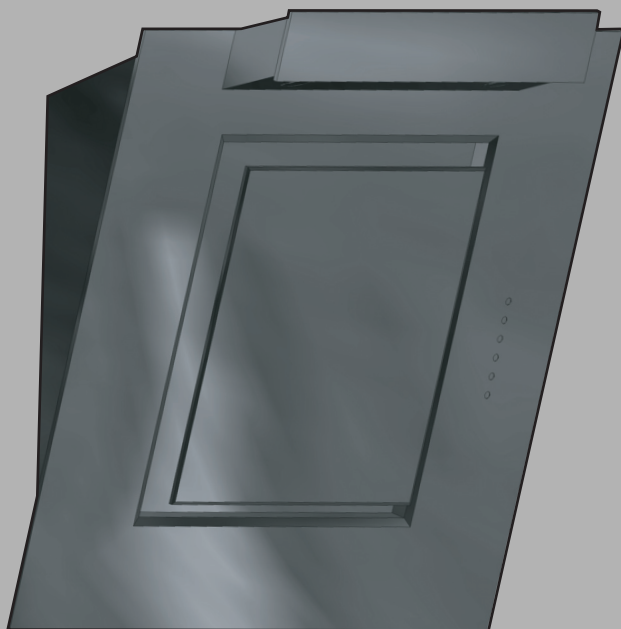

Operating instructions

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Symbols used



Denotes important safety precautions. Failure to observe said precautions can result in injury or damage to the appliance or fittings!

- Indicates step-by-step instructions.
- Describes how the appliance reacts to the steps taken.
- Indicates a list.



Denotes useful tips for the user.

Validity

The model number corresponds to the first 3 digits on the identification plate. These operating instructions apply to the model:

Type	Model-no.	Size system
DW-L9	990	90

Variations depending on the model are noted in the text.

Contents

1	Safety precautions	4
1.1	Before using for the first time	4
1.2	Correct use	5
1.3	Children in the home	5
1.4	Note on use	6
2	Appliance description	8
2.1	Extraction model	8
2.2	Recirculation model	8
2.3	Features	9
2.4	Construction	9
2.5	Operating and display elements	10
3	Use	11
3.1	Intensive level	11
3.2	Illumination	12
4	Care and maintenance	13
4.1	Cleaning the housing	13
4.2	Metal grease filter	14
4.3	Cleaning and replacing the metal grease filter and the long-life activated charcoal filter	16
4.4	Replacing halogen spotlights	19
5	Trouble-shooting	20
5.1	What to do if ...	20
6	Accessories and spare parts	21
7	Technical data	22
8	Disposal	23
9	Notes	24
10	Index	26
11	Repair service	27

1 Safety precautions



The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is however essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

In accordance with the requirements of IEC 60335-1:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or unless they have been given instruction concerning the use of the appliance by a person responsible for their safety.

1.1 Before using for the first time

- The appliance must be installed and connected up to the electricity supply according to the separate installation instructions. The necessary work should be carried out by a qualified fitter or electrician.
- Dispose of the packaging material in accordance with local regulations.

1.2 Correct use

- The appliance is designed for use in the home for extracting cooking fumes and smells from above the cooking surface.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, should only be carried out by the manufacturer, its Customer Services or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the 'Repair service' section. Please contact our Customer Services if necessary.
- Use original spare parts only.
- Retain these operating instructions for future reference. If you sell or pass the appliance on to a third party, please ensure these operating instructions, together with the installation instructions, accompany the appliance. In this way, the new owner can inform themselves about how to use the appliance correctly and read the pertinent safety precautions.

1.3 Children in the home

- Packaging material e.g. plastic and polystyrene can be dangerous for children. Danger of suffocation! Please keep packaging material away from children.
- The appliance is designed for use by adults who are familiar with these operating instructions. Children are often unable to recognise the danger of electrical appliances. Ensure proper supervision and do not allow children to play with the appliance – there is a danger that children could hurt themselves.

1.4 Note on use

- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not operating properly, disconnect it from the electricity supply immediately.
- If the mains cable of the appliance is damaged, it must be replaced by Customer Services in order to avoid hazard.
- Caution: Accessible parts may become hot when used with cooking appliances.
- Do not flambé food underneath the hood as the grease filters if laden with grease could catch fire.
- If frying on the cooking surface, do not leave the frying appliance unattended. The cooking oil in the frying appliance could overheat and catch fire. Constantly monitor the temperature of the cooking oil, keeping it below the temperature at which it can catch fire. Change the cooking oil regularly – dirty oil catches fire more easily than clean oil.
- Clean the filters regularly. Failure to do so can increase the fire hazard due to the build-up of grease in the grease filter.
- Do not operate the individual cooking zones of the cooking surface without a pan on them or with an empty pan on them so as to avoid damaging the appliance or the kitchen fittings through a build-up of heat. Avoid open fires with oil, gas, wood and coal fired cookers.
- Ensure there is adequate ventilation when the extraction fan is on so as to avoid creating a disturbing underpressure in the kitchen and to achieve optimal air extraction.
- Avoid a cross-current of air, which could blow the cooking vapours over the cooking area.

- If other appliances – fuelled by gas or other fuels – are being used at the same time, ensure that there is a sufficient supply of fresh air. This does not apply to air recirculation appliances.
- If other firing systems are being used at the same time (e.g. wood, gas, oil or coal-fired heating appliances), safe operation is only possible providing a room negative pressure of 4 Pa (0.04 mbar) is not exceeded at the location of the appliance. Risk of toxic fumes! An adequate flow of fresh air must be guaranteed e.g. via non-closable openings in doors or windows and in combination with an air-intake/exhaust-air wall box or by other technical means.
- When carrying out maintenance work on the appliance, including replacing the light bulb, cut off the electricity supply to the appliance (remove the screw fuse from the holder or switch the circuit breaker off, or disconnect from the mains supply).
- When cleaning the appliance make sure no water gets inside the appliance. Use a moderately damp cloth. Do not spray the inside or outside of the appliance with water. Do not use a steam cleaner. If water gets inside the appliance, it can cause damage.

2 Appliance description

The appliance is designed to extract cooking fumes and smells from the cooking area.

This particular model can be used to extract or recirculate air.

2.1 Extraction model

A fan extracts cooking fumes and smells from above the cooking surface. The metal grease filters clean the extracted air, which is passed through a connecting pipe fitted with an integrated non-return valve and through the air duct to the outside.



When the appliance is in use, ensure there is a sufficient supply of fresh air to replace the air that is being extracted.

2.2 Recirculation model

After being filtered through the metal grease filter, the cooking fumes and smells above the cooking area are passed through an activated charcoal filter. The filtered air is then circulated back into the room through the top openings.



If activated charcoal filters are not supplied with the appliance, these should be ordered and installed before using the appliance.


2.3 Features

- 1 extraction fan
- Illumination
- 1 metal grease filter
- 1 Longlife activated charcoal filter (not included in scope of delivery)

The extraction fan has 4 power levels.

- 1 = low, 2 = medium, 3 = high extraction rates and intensive level.
- Power levels 1–3 are suitable for continuous operation.
- The intensive level is used for short bursts of intensive extraction of cooking fumes and smells, e.g. when searing meat. The intensive level runs for a maximum of 5 minutes at a time.

2.4 Construction

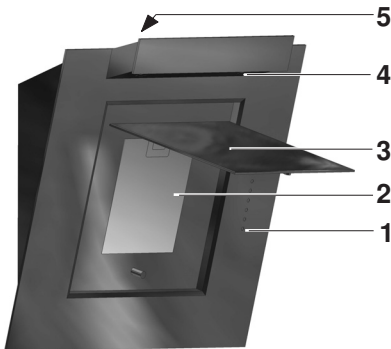

- 1 Operating elements
- 2 Metal grease filter for extraction model or,
Metal grease filter combined with long-life carbon filter for air recirculation model
- 3 Glass panel, fold-away
- 4 Illumination
- 5 Air recirculation with recirculation model

2.5 Operating and display elements



Illumination ON/OFF



Intensive level



Power level 3



Power level 2



Power level 1/saturation indicator for filters



Switch OFF



Flashing: Cleaning the metal grease filter (Extraction model)
 Cleaning the metal grease filter and long-life activated charcoal filter (Recirculation model)



Depending on the model and features, the specification of the appliance may differ from the standard specification described herein.

3 Use

Switching the appliance on

- Pressing the    or  button switches the appliance on at power level 1, 2, 3 or Intensive.
 - The corresponding button illuminates to indicate which power level is being used.



We recommend switching the appliance on at power level 1 some 5 minutes before cooking. Use a low power level for normal cooking smells and a higher power level for very strong cooking fumes and smells.

3.1 Intensive level

The intensive level can be selected irrespective of whether the appliance is switched on or off.

- Press the  button to switch the intensive level on for 5 minutes.
 - The  button lights up.
 - If another power level had been running beforehand, then the appliance will automatically revert to this power level after the 5 minutes has elapsed.
 - If the appliance had not been switched on beforehand, then the appliance will automatically switch off after the 5 minutes has elapsed.
- Press the   or  button to stop the intensive level before the 5 minutes has elapsed.

Switching the appliance off

- Press the  button to switch off the extraction functions.



After you have finished cooking, allow the appliance to run for another 15 minutes so that the cooking smells can be extracted.

3.2 Illumination

- Press the  button to switch the illumination on.
- Repeatedly press the  button to switch the illumination off.



The illumination can be used independently of the extractor fan.

Saturation indicator for metal grease filter and activated charcoal filter

The  button flashes after 40 operating hours. The saturation level is reached the metal grease filter and the activated charcoal filter must be cleaned.

4 Care and maintenance

4.1 Cleaning the housing



Take care that no water gets into the housing of the appliance! If water gets into the housing, it can cause damage.

Do not use abrasive cleaners, scouring pads, steel wool, etc. as they can damage the surface

Unscrew the screw locking device or switch the circuit breaker off.

Cleaning the outside/inside

- Press the ○ button for 3 seconds.
 - The electronics are switched off, the LED goes out.
- Clean the outside using a slightly damp cloth – and detergent if necessary – and wipe dry.

Grease and condensate water can build up on the inside next to the grease filters.

- Clean using a slightly damp cloth – and detergent if necessary – and wipe dry.
- After cleaning, press the ○ button for 3 seconds.
 - The electronics are switched on and the LED lights up again.

4.2 Metal grease filter


The filter can be cleaned.

Removing

- Swing up the glass panel **1**.
- Press down the grip **2**, swing the metal grease filter **3** forwards and lift it out of the bracket **4**.



Be careful not to damage the filter.

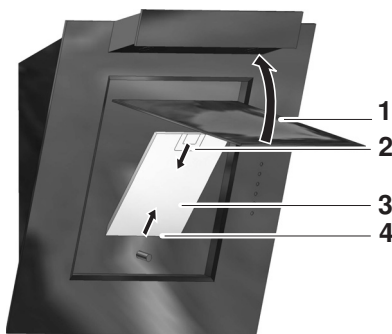

Cleaning

The grease filter must be cleaned at least once a month with normal use or whenever the ■ button flashes. If properly cared for, the grease filter should provide unlimited years of service.

- Clean the grease filter in the dishwasher.
- Select an «intensive» resp. «heavy» wash programme with a warm pre-wash.




Cleaning may cause the grease filter to become discoloured. This will not affect the functioning of the filter in any way.

If you do not have a dishwasher:

- Clean the grease filter in the sink with hot water and detergent.
- Then soak the grease filter in hot water in the sink for about 2 hours and finally clean with a washing-up brush and rinse well with clean water.

Replacing

- Insert the grease filter **3** down into the bracket **4**
- Press down the grip **2** and the allow the metal grease filter **3** to click into position in the bracket.
- Push down the glass panel **1**.
- Press down the  button for at least 3 seconds.
 - The flashing  button goes out.

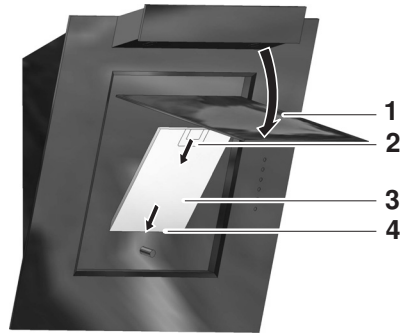

4.3 Cleaning and replacing the metal grease filter and the long-life activated charcoal filter

Long-life activated charcoal filters are only used in the recirculation mode.



The long-life activated charcoal filter needs to be replaced after about 3 years as its ability to absorb odours declines. The spent long-life activated charcoal filter can be disposed of in the household waste.

Unlike the standard activated charcoal filter, the long-life activated charcoal filter can be cleaned and reactivated. The long-life activated charcoal filter should be changed ever month with normal use or whenever the button ■ flashes.

The filter can be cleaned in a dishwasher at 65 °C (select an «intensive» resp. «heavy soil» wash programme). Wash the filter separately so that it does not become clogged with food particles.


If it is not possible to wash the filter in a dishwasher, soak the filter in 60 °C water and detergent for one hour. Then rinse well.

To reactivate the activated charcoal, dry the filter without the frame in the oven.


- Select top and bottom heat or hot air and set the temperature to 100 °C. Place the filter on a wire shelf and allow to dry for 60 minutes.

Removing

- Swing up the glass panel **1**.
- Press down the grip **2**, swivel the grease filter **3** forwards and lift it out of the bracket **4**.

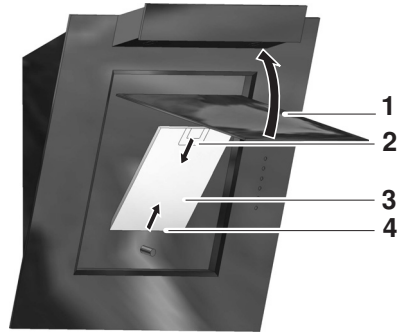

- On the support grid **5**, press in all the fasteners **6** and remove the support grid **5** with long-life activated charcoal filter **7** from the grease filter **3**.

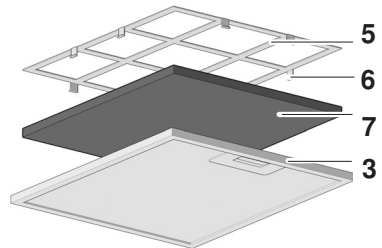


Cleaning

- Clean the grease filter **3** (see section on «Cleaning» in «Metal grease filter»).
- Clean the long-life activated charcoal filter **7** and reactivate (see «Cleaning and replacing the metal grease filter and the long-life activated charcoal filter»).


Be careful not to damage the filter in the process. If necessary, replace the used long-life activated charcoal filter with a new one.

Replacing

- Place the long-life activated charcoal filter **7** on the grease filter **3**.
- On the support grid **5**, engage all the fasteners **6** into place in the frame of the grease filter.

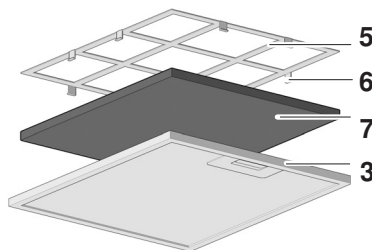

- Insert the grease filter **3** down into the bracket **4**.
- Press down the grip **2** and allow the grease filter **3** to click into position in the bracket.
- Push down the glass panel **1**.
- Screw in the fuse or switch the circuit breaker on.
- Press down the  button for at least 3 seconds.
 - An acoustic signal sounds.
 - The indicator light  goes out.

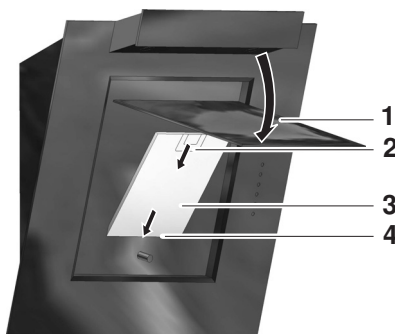


4.4 Replacing halogen spotlights



Unscrew the screw locking device or switch the circuit breaker off.

Halogen spotlights get hot during operation! Allow them to cool down first.

- Carefully prise the halogen spotlight out of the appliance from underneath using a fine screwdriver and a cloth (for protection).
- Disconnect the 2-pin plug of the halogen spotlight. Do not pull on the cable!
- Remove the fitting from the halogen spotlight.
- Replace the defective halogen spotlight with another of the same type (max. 20 Watt)
- Re-attach the fitting to the halogen spotlight.
- Connect the 2-pin plug to the halogen spotlight.
- Insert the complete halogen spotlight into the appliance.
- Screw the screw locking device back on and switch on the circuit breaker.

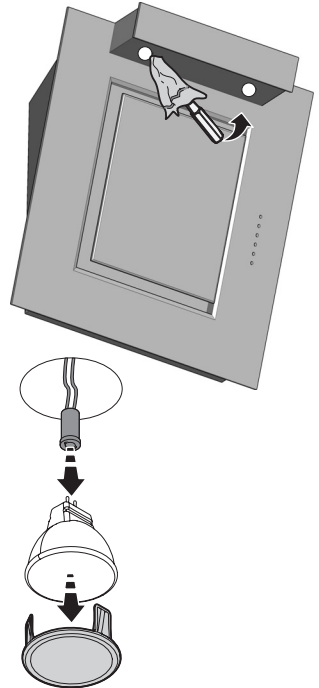

5 Troubleshooting

5.1 What to do if ...

... the illumination is not working

Possible cause	Solution
• Fuse or circuit breaker for electrical installations in the home is faulty.	➤ Replace the fuse. ➤ Reset the circuit breaker.
• Interruption in the power supply.	➤ Check the power supply.
• The halogen spot is defective.	➤ Replace the halogen spot.


... the appliance is not extracting the cooking fumes and smells satisfactorily

Possible cause	Solutions
• The grease filter is dirty.	➤ Clean the grease filter.
• The activated charcoal filter (in recirculation models) is spent.	➤ Clean or change the long-life activated charcoal filter.


6 Accessories and spare parts

Please give model number and exact description when ordering parts.


Halogen spot

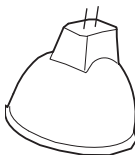

Metal grease filter for extraction model and recirculation model

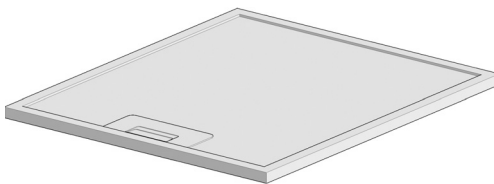

Support grid with long-life activated charcoal filter for recirculation model

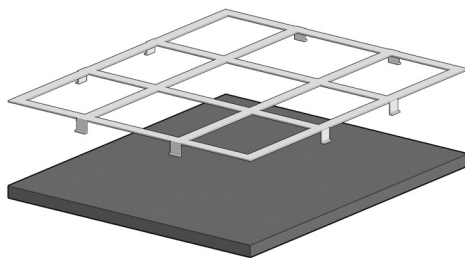

The halogen light is also available from specialist retailers.

7 Technical data

Electrical connection

- See identification plate.
 - Remove the grease filter.
 - The identification plate is located on the inside of the appliance.

8 Disposal

Packaging

- All packaging materials (cardboard, plastic film (PE) and polystyrene (EPS)) are marked and should, if possible, be collected for recycling and disposed of in an environmentally friendly way.

Disconnection

- Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician!

Safety

- Disable the appliance to prevent accidents caused by improper use, especially through children playing.
- Pull the plug out of the mains socket or have the appliance disconnected from the mains by a qualified electrician. Then cut off the mains cable.

Disposal

- The old appliance should not be discarded as worthless rubbish. If disposed of correctly, the raw materials can be recovered for recycling.



- The  symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

9 **Notes**

10 Index

- A**
 - Accessories 21
 - Activated charcoal filter 8
 - Saturation indicator 12
 - Appliance
 - Switching off 11
 - Switching on 11
- C**
 - Care 13
 - Children in the home 5
 - Cleaning 13
 - Long-life activated charcoal filter 16
 - Construction 9
- D**
 - Disconnection 23
 - Display elements 10
 - Disposal 23
- E**
 - Electrical connection 22
 - Extraction model 8
- F**
 - Faults 20
 - Features 9
 - Filters
 - Saturation indicator 10
- G**
 - Glass panel 9
 - Grease filter
 - Removing 14
 - Replacing 15
- H**
 - Halogen spotlights
 - Replacing 19
- I**
 - Identification plate 22
 - Illumination 9, 12
 - Intensive level 11
- L**
 - Long-life activated charcoal filter
 - Cleaning 17
 - Cleaning and replacing 16
 - Removing 17
 - Replacing 18
- M**
 - Maintenance 13
 - Metal grease filter 9, 14
 - Cleaning 14
 - Saturation indicator 12
 - Model-no. 2
- O**
 - Operating elements 9, 10
- P**
 - Packaging 23
- Q**
 - Quick instructions 28
- R**
 - Recirculation model 8
 - Repair service 27
- S**
 - Safety 23
 - Safety precautions
 - Before using for the first time 4
 - Children in the home 5
 - Correct use 5
 - Note on use 6
 - Saturation indicator 10
 - Activated charcoal filter 12
 - Metal grease filter 12
 - Spare parts 21
 - Symbols 2
- T**
 - Technical data 22
 - Type 2
- U**
 - Using for the first time 4
- V**
 - Validity 2

11 Repair service



The TROUBLE-SHOOTING section will help you to carry out small repairs yourself, saving you the time and trouble of calling out a service technician and the cost that goes along with it.

Whether you contact us about a malfunction or an order, please always state the serial number (FN) and the model type of your appliance. Enter these details below and also on the service sticker which comes with the appliance. Stick it in a conspicuous place or in your telephone or address book.

FN

Appliance

You will also find the same details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance.

- Remove metal grease filter.
 - The identification plate is located on the inside of the appliance.

Quick instructions

Please first read the safety precautions in the operating instructions!



Illumination ON/OFF



Intensive level



Power level 3



Power level 2



Power level 1/saturation indicator for filters



Switch OFF



Flashing: Cleaning the metal grease filter and the Long-life activated charcoal filter

V-ZUG Ltd

Industriestrasse 66, CH-6301 Zug

vzug@vzug.ch, www.vzug.com



J990.352-0