



Thinking of you
Electrolux



MODEL ESTM6200/6300/6400

TURBOPRO

Inspired by Chefs, designed for homes

Instruction book

 
Before using the appliance for the first time, please read the safety advice

Safety advice

Read the following instructions carefully before using the appliance for the first time. Save these instructions.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not allow children to use the appliance without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance may only be connected to a power supply whose voltage and frequency comply with the specifications on the rating plate!
- Never use or pick up the appliance if – the supply cord is damaged, – the housing is damaged.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid hazard.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- The blades and inserts are very sharp and could cause injury. Never touch the blades or inserts with your hand or any tools while the appliance is plugged in.
- Caution must be taken when handling the sharp blades and inserts, emptying the bowl or mixing jug, and during cleaning.
- Switch off the appliance and disconnect from the power supply before changing the accessories or approaching parts that move when in use.
- The appliance cannot be used for chopping ice or blending hard and dry substance, such as nut, candy; except with designated accessories provided with the appliance. Otherwise the blade could become blunt.
- Do not immerse the appliance in water or any other liquid.
- When processing heavy loads, do not use the appliance continuously for more than 60 seconds. Allow to cool down before restarting.
- Do not use this appliance to stir paint. Danger, this could result in an explosion!
- Never operate chopper accessory without lid.
- This appliance is intended for normal household use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.
- Do not process hot or boiling liquids- allow liquids to cool before processing

Components

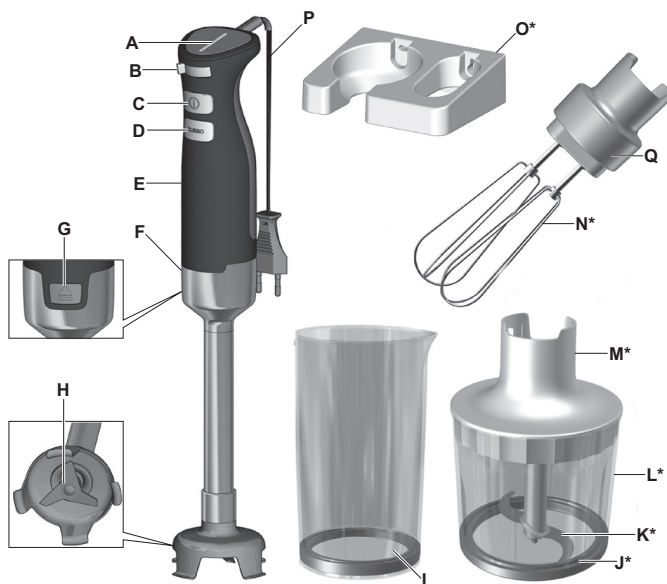

A. LED light speed indicator

B. Speed selector

C. Power button

D. Turbo button

E. Handheld part

F. Metal mixing foot

G. Release button

H. Blades

I. Mixing jug

J. Mini chopper and mixing jug
anti-slip device*

K. Mini chopper bowl blades*

L. Mini chopper bowl*

M. Mini chopper bowl lid *

N. Professional double whisk*

O. Wall mounting with cord storage and
screws*

P. Power cord

 
Q. Plastic holder for whisks*

* specifications vary by model

Assembly and operation




- 1. Before first use**, be sure to clean the mixing foot and all the attachments, and then let dry. Before inserting or removing the mixing foot, remove the plug from the power outlet.

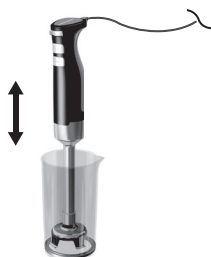

- 4. Using the mixing foot.** Plug into the power outlet to begin use. Insert the stick mixer deep into the mixing jug, begin mixing by starting at lowest speed. Make sure the mixing jug is no more than 2/3 full. If you do not use the mixing jug, do not immerse the mixing foot more than 2/3 of its length. Move the stick mixer lightly up and down to ensure best processing of content. Release switch to stop.



 
- 7. Insert the handheld part**, into the chopper lid and lock into position. Plug into the power outlet, select the speed and press the power button to start. Release to stop. Remove the handheld part by pressing the 'release' button.

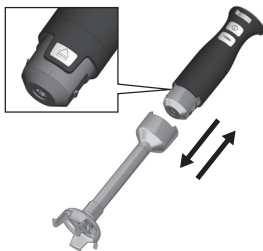

- 2. Connect the handheld part** to the mixing foot and lock into position. To detach, press the 'release' button and pull off the foot.



 
- 5. Using the mini chopper*.** Place the chopper bowl on a clean, level surface. Put the mini chopper blade into place.

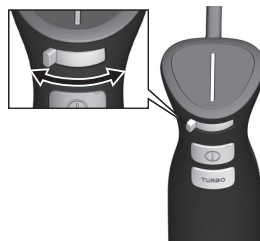


- 3. Select the speed** by moving the sliding speed selector. Press power button to start mixing. Press Turbo button for the highest speed. LED light will indicate the mixing speed. The appliance can be used continuously for 60 seconds. Afterwards, allow to cool for 1 minute.



 - 6. Place food into the chopper bowl*.** The maximum amount of food that can be chopped cannot exceed 250 g. Close the lid.

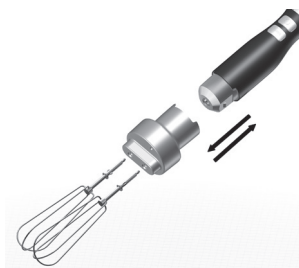

 - 8. Working with the professional double whisk*.** To assemble the whisk with the handheld part, connect them and lock into place. To disassemble press the 'release' button and pull the whisks off.

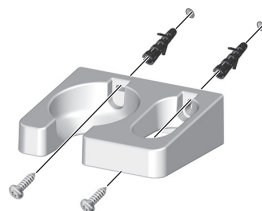

- 9. Storage – to fasten the wall mounting device**, drill two holes into the wall, insert two plastic plugs and secure the device with two screws.

Cleaning



1. Before cleaning, always unplug the appliance. Disassemble the handheld part. Wipe with a damp cloth and dry thoroughly. **Never immerse in water due to risk of electric shock.**



2. Mini chopper bowl, mini chopper blades, mixing jug and whisks detached from the plastic holder can be washed in the dishwasher. The whisks can be detached by pulling them gently out from the holder. To clean the holder wipe with a damp cloth and dry.

The mini chopper bowl blades, bowl and lid should be washed in the top rack of the dishwasher and allowed to dry thoroughly prior to storage. Alternatively they may be hand washed in hot soapy water, rinsed and dried thoroughly after each use. The mini chopper bowl blades should be placed in an upright position with the blades facing downwards to allow it to drain effectively.

Exercise caution when handling the chopper bowl blades as the blades are sharp.

Particular care should be taken when preparing food for infants, the elderly and infirm. Always ensure that the chopper bowl blades and shaft are thoroughly sterilized just before you use them. This may be done by soaking in boiling water for one minute, using a sterilizing solution, or an electric sterilizer. Do not sterilize in the microwave.



3. It is not recommended to wash the mixing foot in the dishwasher. If washed in the dishwasher, dry the mixing foot in an upright position (with the blades up) so that any trapped water can run out.

The blades and inserts are very sharp and could cause injury.

Caution must be taken when handling the sharp blades and inserts, emptying the bowl or mixing jug, and during cleaning.

Troubleshooting

Problem	Possible cause	Solution
The mini chopper* does not work.	The chopper lid is not correctly fastened.	Make sure the lid and the chopper bowl are properly assembled.
The mixing foot/whisk* does not work.	The mixing foot/whisk* is not correctly assembled.	Make sure to lock mixing foot/whisk* into position.
The appliance is switching off.	The appliance has been used continuously for more than 60 sec.	The appliance can be used continuously for 60 sec max. Afterwards, allow to cool for 1 min.

* depending on model

Blending quantities and processing times

Accessory Metal mixing foot and Beaker				
Recipe	Ingredients	Quantity	Time	Speed
Pineapple-apricots Smoothie	Pineapple in slices	250 g	60 sec max	Turbo
	Dried Apricots	40 g		
	Yoghurt	300 g		
Raspberries Smoothie	Frozen raspberries	250 g	60 sec max	Turbo
	Banana	½ pcs		
	Water	100 g		
	Caster sugar	1 Tbs		
	Yoghurt	300 g		

Chopping quantities and processing times

Accessory Mini Chopper*								
Ingredients	Quantity	Quality	Time	Quality	Time	Quality	Time	Speed
Carrots	100-200 g	Coarse	--	Medium	5-10 sec	Fine	10-20 sec	Turbo
Onions	100-200 g		3-5 sec				10-20 sec	Turbo
Almonds	100-200 g		3-5 sec		7-10 sec		10-20 sec	Turbo
Meat	100-200 g		--				5 sec	Turbo
Ice	100-200 g		--		5 Pulses ON for 3 sec, OFF for 2sec		10 Pulses ON for 3 sec, OFF for 2 sec	Turbo

Whisking/Whipping quantities and processing times

Accessory Professional double whisk*			
Ingredients	Quantity	Time	Speed
Cream	500 g	60 sec max	Turbo
Egg whites	4 units	60 sec max	Turbo
Note: it is possible to use the professional double whisks for whipping cream in the mixing jug, as long as the temperature of the cream is between 4 and 8 Degree Celcius. For whisking eggs, please use a 1.5 Litre bowl.			


Disposal

Disposal

Packaging materials

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose the packaging materials in the appropriate container at the community waste disposal facilities.

Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health,

which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Thinking of you
Electrolux

WARRANTY

FOR SALES IN AUSTRALIA & NEW ZEALAND
SMALL DOMESTIC APPLIANCES

This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. In this warranty
 - (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL.
 - (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010.
 - (c) 'Appliance' means any Electrolux product purchased by you accompanied by this document.
 - (d) 'ASC' means Electrolux Authorised Service Centre'.
 - (e) 'Electrolux' means Electrolux Pty Ltd of 57- 63 Fairchild Street, Heatherton, VIC 3202 ABN 21 000 015 136 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand.
 - (f) 'major failure' as referred to in Clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period.
 - (g) 'Warranty Period' means:
 - (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia and New Zealand for 12 months following the date of original purchase of the Appliance;
 - (ii) where the Appliance and accessories are used for commercial purposes (including being used to directly assist a business or where the Appliance is used in a multi-family communal or share type environment), the Appliance will then be warranted against manufacturing defects in Australia for 3 months and in New Zealand for 3 months, following the date of original purchase of the Appliance.
 - (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. During the Warranty Period Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.
4. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of:
 - (a) travel of an authorised representative;
 - (b) transportation and delivery of the Appliance to and from Electrolux or its ASC,

In all instances, unless the Appliance is transported by Electrolux or an Electrolux authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
 - (a) the Appliance is damaged by:
 - (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) power surges, electrical storm damage or incorrect power supply
 - (v) incomplete or improper installation
 - (vi) incorrect, improper or inappropriate operation
 - (vii) insect or vermin infestation
 - (viii) failure to comply with any additional instructions supplied with the Appliance;
 - (b) the Appliance is modified without authority from Electrolux in writing;
 - (c) the Appliance's serial number or warranty seal has been removed or defaced;
 - (d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC.
8. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.
9. To the extent permitted by law, Electrolux excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Electrolux in Australia, the Appliances come with a guarantee by Electrolux that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.
11. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act.
13. To enquire about claiming under this warranty, please follow these steps:
 - (a) carefully check the operating instructions, user manual and the terms of this warranty;
 - (b) have the model and serial number of the Appliance available;
 - (c) have the proof of purchase (eg an invoice) available;
 - (d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice: Before calling for service, please ensure that the steps listed in point 13 above have been followed.

FOR ALL SERVICE, SUPPORT AND WARRANTY ENQUIRIES

AUSTRALIA

Please call 1300 365 305

Call charges apply

www.electrolux.com



Thinking of you
Electrolux

ELECTROLUX SMALL APPLIANCES

NEW ZEALAND

Please call 0508 730 730

Free call (NZ only)

www.electrolux.com



Thinking of you
Electrolux



Electrolux Small Appliances

Electrolux Pty Ltd ABN 51 004 762 341
163 O'Riordan Street, Mascot, NSW 2020, Australia
Customer Service - Ph: 1300 365 305
www.electrolux.com

Electrolux Small Appliances

A division of Electrolux (NZ) Limited
3 - 5 Niall Burgess Road, Mt. Wellington, Auckland, New Zealand
Ph: (09) 9573 2220 Customer Service - Ph: 0508 730 730
www.electrolux.com

*Due to the Electrolux policy of continual product development; specifications, colours and details of our products and those mentioned in this manual are subject to change without notice.