

omega
altise

AP40WA 40cm Pedestal Fan



Instruction Manual

Important Safety Instructions

1. Read all instructions.
2. Disconnect the power plug before dismantling, assembling or before cleaning.
3. Avoid touching mobile parts of the fan.
4. Make sure the fan is on a dry and even surface.
5. Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, especially while running.
6. The appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
7. Young children or infirm persons should be supervised to ensure that they do not play with the appliance.
8. Do not use the appliance for any other purpose than its intended use.
9. The fan must not be used if the guards are not fastened according to instructions.
10. When the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
11. Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.

Read all instructions before using this unit. Keep them for future reference.

Specifications


Model	AP40WA
Rated Voltage	220-240V / 50Hz
Watts	40W
Dimensions (cm)	42.5 x 12.5 x 53.5cm
Controls	Push Button

Settings	3 speed
Fan blade size	40cm
Tilt action	Tilting fan head
Oscillation	Oscillating fan head
Warranty	2 year replacement

Assembly Instructions


Your pedestal fan has been boxed unassembled to minimise packaging waste. Each part is designed to fit together and be disassembled easily for cleaning or storage.

Assemble the base to the support pole using the fasteners provided.

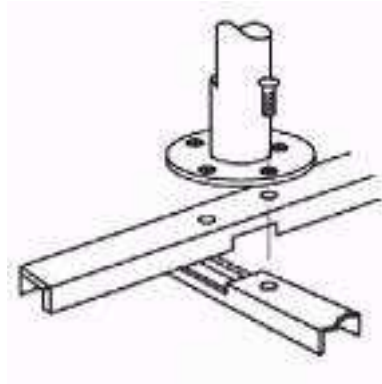

Loosen the height adjustment ring and extend the support pole to your desired height.

Put the base cover over the cross base.

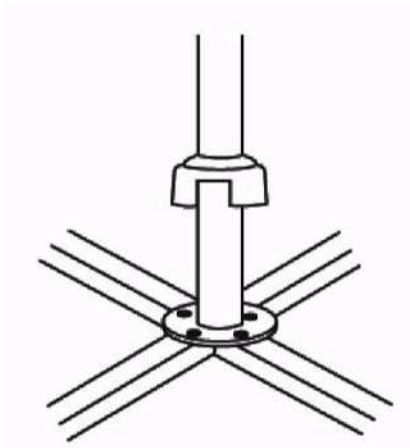


Retighten the height adjustment ring to prevent slipping, then place the fan assembly onto the pole and tighten the pole screw manually.

To assemble the safety grille and blade assembly, remove the spinner (by turning it clockwise), then the locking nut (by turning it anticlockwise) from the motor spindle.

Place the back safety grille into position. Ensure the safety grille fits onto the locating lugs (Fig.1). If this is done correctly, the safety grille's carry handle will be at the top.

ASSEMBLY OF YOUR PEDESTAL FAN FOR ROUND BASE

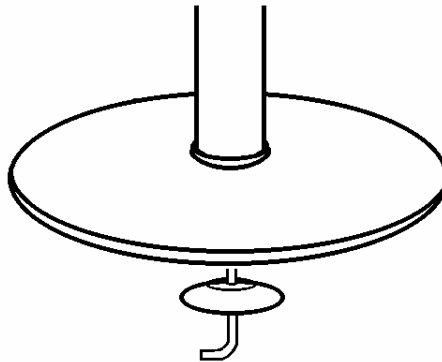

Loosen the height adjustment ring and extend the support pole.

Initially the support pole will be held tightly in place. If necessary, use a pair of pliers to grasp the support pole and pull it into position.

To assemble the safety grille and blade assembly, remove the spinner (by turning it clockwise), then the locking nut (by turning it anticlockwise) from the motor spindle.

Operating Instructions

Remove the cable tie and unravel the cordset before operation.

The fan and motor assembly are attached to a 3-position ratchet. Tilt up or down until the assembly clicks into the desired position.

Press speed button to adjust between low-medium-high settings.

Press button 1 for a low speed
2 for a medium speed and
3 for a high speed

Press 0 to switch the Pedestal Fan off.

Care and Maintenance

1. Always disconnect the cord from the electrical outlet when cleaning your fan.
2. Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. Wipe the exterior surfaces of the fan occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the fan.
4. Avoid the use of gasoline, benzine, thinner etc as they may result in damage to the fan.
5. Store the fan in a clean dry place when not in use.



CAUTION! Do not immerse the fan in water or allow water to drip into the interior of the fan housing as this could create a fire or electric shock hazard.



WARNING! Do not attempt to open or repair the fan yourself. Doing so could void the warranty and cause damage or personal injury.

Omega Altise products are distributed in Australia by Hagemeyer Appliances,
(A Division of Hagemeyer Brands Australia Pty Ltd)

ABN 28 001 375 686

Locked Bag 4013, Kingsgrove NSW 2208

Phone: 1300 739 033

Fax: 1800 838 899

Email: customerservice@meaappliances.com.au

Web: hagemeyerappliances.com.au