

COOKING APPLIANCES

*Compact
Cookers*

**Operating
Instructions**

CONTENTS	PAGE
SAFETY FIRST	2
ELECTRICAL REQUIREMENTS	3
LOCATION OF CONTROLS	3
INSTALLATION INSTRUCTIONS	4
BEFORE FIRST USE	4
OPERATING YOUR COMPACT COOKER	5
HOTPLATES OPERATION	5
OVEN OPERATION	7
GRILL OPERATION	7
CLEANING AND CARE	8
PROBLEM SOLVING	8
DO'S AND DON'TS	9
GUARANTEE DETAILS	10

Congratulations on your choice of a Euromaid quality multi-function Compact Cooker which has been designed to give you service for many years.

WARNING!

IMPORTANT:

DO NOT connect the Compact Cooker to the electricity supply until all packing and transit protectors have been removed.

Declines to accept any liability should the instructions not be followed.

This Compact Cooker must only be used for its intended purpose i.e. the cooking of items.

The mains lead must not come in contact with any part of the appliance during and after operation.

To obtain the best possible performance and trouble free operation from your appliance it is very important to carefully read these instructions.

Failure to observe these instructions may invalidate your right to free service during the warranty period.

We suggest you keep these instructions in a safe place for easy reference.

IMPORTANT TIPS FOR YOUR SAFETY

 
- (1) During operation of this appliance the door and outer surfaces will get hot. Take care not to touch surfaces during use.
- (2) Ensure the appliance is positioned in a location where it cannot be reached by children.
- (3) Always use oven gloves when removing the grill rack, baking tray and dishes from inside the oven when in use.
- (4) Always switch off the appliance and unplug from the mains socket when the appliance is not in use, before cleaning, or in the unlikely event of a product failure becoming apparent.
- (5) Close supervision while cooking with this appliance is recommended at all times however special care should be taken when cooking oily, and fatty foods as overheating of such food can cause them to catch fire.

ELECTRICAL REQUIREMENTS

Before you insert the plug into the wall socket make sure that the voltage and the frequency shown on the rating plate at the rear of the appliance corresponds to your electricity supply.

We recommend that this appliance is connected to the mains supply via a switched suitable and fused socket in a readily accessible position.

LOCATION OF CONTROLS

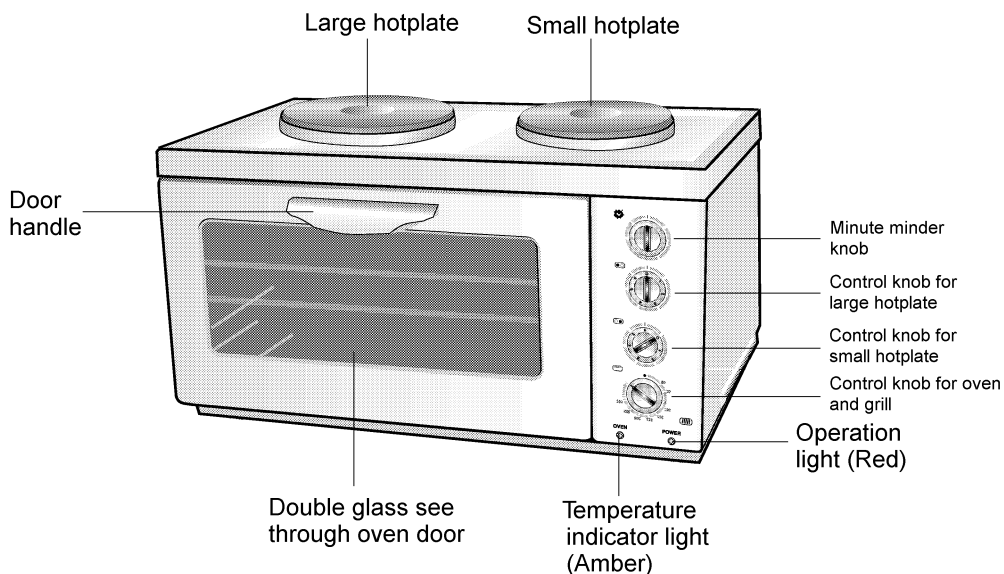

INSTALLATION INSTRUCTIONS

- 1- Ensure that this appliance is positioned on a heat resistant surface near to an electric socket of the correct rating.
- 2- If you want to install the cooker in a recess between units, then a minimum of 1"(25 mm) must be left around the sides and back of your Compact Cooker to allow adequate ventilation and enable the Compact Cooker to be pulled out for cleaning.
- 3- Ensure that no flammable materials are adjacent to the appliance as the sides of the appliance become hot during operation.

PREPARATION OF YOUR COMPACT COOKER BEFORE FIRST USE

 
1. Hotplates

Adjust the hotplates to mid position (3) and leave on for approximately 8 minutes in order to burn off the protective coating on the hotplates. Do not place any pans or other cooking utensils on the hotplates during this process. Fumes will be emitted during the above operation but this is quite normal.

2. Oven

In order to burn off the protective coating, remove grill rack and baking tray and turn the oven control knob to 200 °C and run the oven for approximately 15 minutes, again fumes will be emitted as the protective coating is burnt off but this is quite normal.

3. Grill

To burn off the protective coating on the grill, set the control to the grill position. To operate the grill, turn the oven/grill knob in a clockwise direction until the grey pointer line on the knob clicks into position in line with the grill symbol  which is located to the top left handside of the knob. Operate for approximately 15 minutes with the oven door open, again fumes will be emitted but this is quite normal.

IMPORTANT!

You must ensure that the above operations 1,2 and 3 are conducted in a well ventilated area.

When burning off the protective coating, the oven door must always be left open.

OPERATING YOUR COMPACT COOKER

This appliance is designed to operate from a 10 AMP socket and for safety reasons, the large hotplate will not operate whilst the grill or oven is being used.

 
The following are examples of possible operating combinations:

- Small hotplate (Only)
- Large hotplate (Only)
- Both hotplates.
- Grill (Only).
- Oven (Only).
- Small hotplate and oven.

IMPORTANT NOTE: "LARGE HOT PLATE, WHICH IS ON THE LEFT HAND SIDE, WILL NOT OPERATE FOR SAFETY REASONS, WHEN BOTH THE SMALL HOT PLATE AND THE OVEN (OR GRILL) ARE SWITCHED ON SIMULTANEOUSLY."

The Compact Cooker has 2 shelf positions

(See diagram). A Baking tray and integrated grill rack is supplied for use with the cooker.

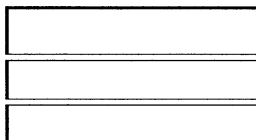

Shelf Level 1

Shelf Level 2

Select the correct shelf position before pre-heating the oven for cooking as follows:

Level 1 : Baking tray and integrated grill rack for grilling and browning of toppings etc.

Level 2 : Baking tray only for baking, roasting and stewing.

HOTPLATES OPERATION

Temperature controls for hotplates are situated on the panel beside the oven door.

Each hotplate has adjustable settings from 1 to 6 and are operated by turning in an anticlockwise or clockwise direction.

We recommend the following setting for hotplate knob adjustment:-

Positions	1	2-3	4-5-6
Applications	Warming	Simmering	Cooking Boiling Frying

- Always use flat bottomed pans to ensure perfect contact with the hotplate surface.
- Ensure that the bottom of any saucepan used is clean and dry before use.
- Size of pans should ideally be the size of the hotplate or slightly larger. If you use pans with a smaller diameter then energy is lost. Try and avoid any spillages onto the hotplates as this may cause damage.

We recommend that you use the following size of pans:-

for small hotplate : 6" (150 mm)

for large hotplate : 7" (180 mm)

ALWAYS SWITCH OFF THE HOTPLATES AFTER USE.

MINUTE MINDER

There is a minute minder which just shows the time, but is not programmable.

OVEN OPERATION

The oven is thermostatically controlled.

Temperature adjustment of the oven is operated by turning the oven/grill knob in a clockwise direction.

Temperature settings may be made from 50 °C to 250 °C.

When the oven/grill knob is turned clockwise both red and amber lights will illuminate. The red light will glow to indicate the oven is on. The light will go out when the control knob is moved to the off position.

The amber light positioned next to the red light is a temperature indicator. The light will continue to illuminate until the preset temperature set using the temperature control knob is reached.

Once the temperature has been reached the amber light will go off and then cycle on and off during use to maintain the pre-set temperature.

We recommend you to reduce cooking times compared to full size cookers by about 1/5 and then ensure the food is cooked properly (eg: piping hot)

 
GRILL OPERATION


IMPORTANT!

When using the grill, the oven door must always be left open. (As shown in the diagram below).

CAUTION:

Accessible parts may become hot when the grill is in use.
Children should be kept away

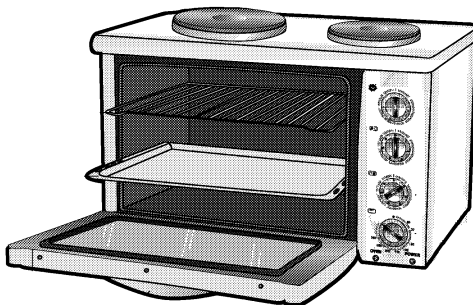

"To operate the grill, turn the oven/grill knob in a clockwise direction until the grey pointer line on the knob clicks into position in line with the grill symbol  which is located to the top left handside of the knob. To click the knob to the grilling position, turn the knob firmly beyond the '250' mark".

When the oven/grill knob is set to  both red and amber lights will illuminate. The red light will continue to glow while the grill is in operation. The light will go out once the control knob is turned to the off position.

Once the internally pre-set temperature is reached the amber light will go off and then cycle on and off during use to maintain the internally pre-set temperature. When the power to the grill element is cut off the amber light will go off.

TO TURN THE GRILL OFF, ROTATE THE KNOB IN AN ANTI CLOCKWISE DIRECTION TO "0" POSITION.

IMPORTANT!

A built-in safety feature of the appliance means that the grill will cycle on and off during operation and this is indicated by the amber light. This operation does not affect the grilling operation as radiant heat is maintained at all times while the grill is in the on position.

CLEANING AND CARE

Before cleaning always switch your Compact Cooker off at the socket outlet and pull out the plug.

Warning

- * Make sure that the oven, grill and hotplates are cool before you start cleaning.
- * As the hotplates are of a solid type, a residual heat will remain after you switch off the Compact Cooker so take care not to touch hot surfaces.
- * Do not immerse your Compact Cooker in water.

Use a damp cloth to clean the interior and exterior. Never use any sharp instruments, abrasive household cleaner, or detergents for cleaning. For hard stains use suitable washing liquid.

After cleaning, warm the hotplates for a few minutes to dry any residual moisture off. Ensure that the door seal is dry after cleaning. We recommend that grill elements be wiped with a damp cloth to remove any fat splashes. This will prevent fumes for any fat being burnt off when the Compact Cooker is next used. Again before cleaning ensure the grill elements are cool.

NOTE: Even though grease and other foodstuff may leave marks on hobs when baked on, they will not affect the performance of the appliance under normal conditions.

PROBLEM SOLVING

If the appliance does not operate when switched on, check;

- The plug is inserted properly in the socket and that the power supply is on. (To check the power supply to the socket, plug in another appliance).
- The fuse has blown/circuit breaker has tripped/main distribution switch has been turned off.
- The temperature control has been set correctly.

If the appliance is still not operating at all after above checks contact the service agent in your area (refer warranty details.)

IMPORTANT NOTE: "large hot plate, which is on the left hand side, will not operate for safety reasons, when both the small hot plate and the oven (or grill) are switched on simultaneously."

DO'S AND DON'TS

- DO : Clean your Compact Cooker regularly, ideally after each use.
- DO : Leave the oven door open when grilling.
- DO : Use flat bottomed saucepans to ensure good contact with the hotplates. This ensures energy efficient operation.
- DO : Make sure that overheating does not occur by supervising at all times.
- DO : Ensure that the Compact Cooker is positioned away from the reach of children.
- DO : Leave a gap of 1 1/2"(40 mm) both sides of the sheet to ensure best results when using baking sheet.
- DO : Use oven gloves to insert or remove grill rack and baking tray
- DON'T : Use saucepans that have diameters less than that of the hotplates. If you use saucepans which have smaller diameters than hotplates, then energy will be wasted and also boiled over foodstuff may damage the hotplate.
- DON'T : Use wire grill rack outside the oven.
- DON'T : Leave your Compact Cooker unattended.
- DON'T : Let the mains cable touch any part of your Compact Cooker.
- DON'T : Put anything on the oven door.
- DON'T : Turn oven/grill knob in the wrong direction. You might damage the appliance.
- DON'T : Use cleaning material that may scratch the appliance.
- DON'T : Leave the oven dirty after each roasting; this will avoid the extra cleaning which will be required if the fat splashes are left to bake on.
- DON'T : Put food to be cooked on the oven floor. Always use a baking tray.
- DON'T : Touch the door or external surfaces of your Compact Cooker during operation as they may be hot.
- DON'T : Cook with 2 baking trays in the oven at the same time as it will affect the cooking performance of your Compact Cooker.

ELECTRICAL DISTRIBUTORS AUSTRALIA PTY LTD

ABN 11 051 297 557

SUITE 16 NO./7 NARABANG WAY BELROSE NSW 2085

PH:02 99861699 FAX: 02 99861196 EMAIL:EDAAUST@bigpond.com

EUROMAID COOKER & HOT PLATE WARRANTY **IN ADDITIONS TO RIGHTS BY LAW**

Electrical Distributors Australia Pty Ltd guarantees to the original purchaser during the first one or Two Years of ownership (subject to model and type as listed below) that any part with defective material be replaced free of charge, provided that all service work is carried out by Electrical Distributors Australia Pty Ltd or the nearest appointed service agent.

Models Subject to 12 months Warranty:

ADO640, BT180, BT220, MC1110T, SC11531, SCNG7531, SCLPG7531, MDA200

Any new models released not stated above are also 12 months warranty.

Models Subject to 24 months Warranty:

1505T1, A0975SS, A0985SS, A0980SS.

Where the appliance is installed outside the normal service area of Electrical Distributors Australia Pty Ltd or it's Appointed Service Agent the purchaser will pay the travel cost charges to take the appliance to the service centre.

Portable Appliances:

For Bench top or portable appliances the purchaser must arrange their own transport to our nearest authorised Service Centre, these portable items do not offer in Home Service.

Built In Appliances:

Access must be granted within normal working hours and our Service Agents must have easy access to these built in appliances and charges will be the responsibility of the purchaser where the service technician can not obtain easy access to remove the appliance for inspection prior to repair.

This Warranty is not transferable and excludes any repair or replacement caused by Power Surges faulty installation abuse, Pest Damages, misuse, acts of God or accident.

The above Warranty is for Domestic application only is limited to THREE (3) Months in Commercial Applications.

AUTHORISED SERVICE AGENTS:

NSW

ALL GENERAL WHITEGOODS
4/11 HALLSTROM PLACE
WETHERILL PARK 2164 NSW
PH: 02 97561511
FAX: 0297561091

GOLD COAST

ROSHAD APPLIANCE SERVICE
1/13 LEDA DRIVE
BURLEIGH QLD 4220
PH: 0755357044
FAX:0755357407

VIC

ADVANTAGE APPLIANCES
54/170 FORSTER ROAD
MT WAVERLY VIC 3149
PH:03 95588044
FAX:0395442102

TASMANIA

BALDOCKS
222 LIVERPOOL STREET
HOBART TASMANIA 7000
PH: 03 622345995
FAX:03 62348134

WESTERN AUST.

METROPOLITAN APPLIANCES
15 SHIELDS CRESCENT
MY AREE WA 6154
PH: 089 3301724
FAX: 0893171296

SOUTH AUST.

PRESTIEGE APPLIANCE REPAIRS
CENTRE SHOP 4/394 HENLEY
BEACH ROAD LOCKLEYS SOUTH
AUSTRALIA
PH: 08 83522022
FAX: 08 83522044

QUEENSLAND

ENDEAVOUR REFRIGERATION
167 ROBERTS ROAD
FORTITUDE VALLEY OLD 4006
PH: 07 38522477
FAX: 07 38532467

FOR SERVICE OUTSIDE THE ABOVE AREAS PLEASE CONTACT HEADSYDNEY OFFICE PH:02 99861699

