 


R-890N(S)/(W)

QUICK START GUIDE

WARNING:

Before starting, read carefully all the warnings given in the full operation manual for the safe use of your oven.

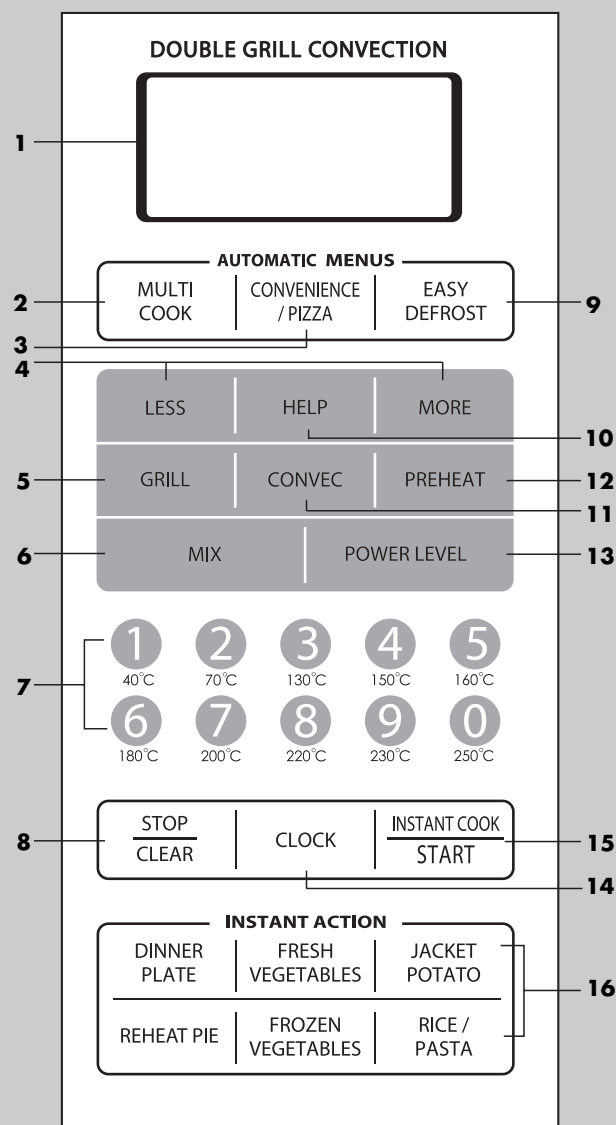


- | | |
|-------------------------------|---------------------------|
| 1 DIGITAL DISPLAY | 9 EASY DEFROST pad |
| 2 MULTI COOK pad | 10 HELP pad |
| 3 CONVENIENCE/PIZZA pad | 11 CONVEC pad |
| 4 MORE, LESS pads | 12 PREHEAT pad |
| 5 GRILL pad | 13 POWER LEVEL pad |
| 6 MIX pad | 14 CLOCK pad |
| 7 NUMBER AND TEMPERATURE pads | 15 INSTANT COOK/START pad |
| 8 STOP/CLEAR pad | 16 INSTANT ACTION pads |

SHARP

TINS-A761WRRZ-J81

1 INSTALLATION

 1. Remove all packaging and accessories from the oven, including the feature sticker fixed to the outside of the door and the wrapping shown in the diagram. **DO NOT REMOVE THE WAVEGUIDE COVER**, this can be found on the right hand side wall inside your microwave. Please see page 4 in the operation manual.

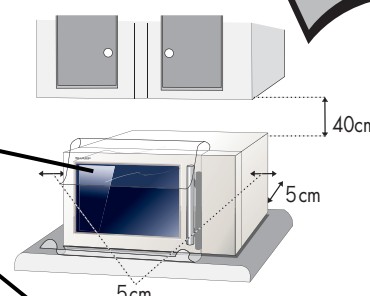


2. Ensure there is free space at least 40cm on the top and 5cm on both sides and at the rear of the oven.

3. Ensure the turntable parts are assembled as shown in the diagram opposite.

Other Accessories

The racks are for Grill, Mix, Convection and recommended automatic operations.

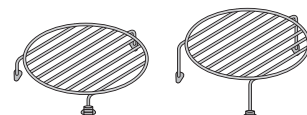


MICROWAVING

To cook for 2 minutes 30 seconds at 70% power level.


1. Enter the cooking time by pressing the numbers in sequence.



2. Select the power by pressing the **POWER LEVEL** pad twice.

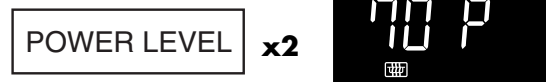

3. Press the **INSTANT COOK/START** pad once to start cooking.

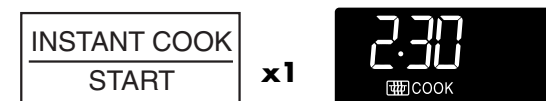

4. The display will count down through cooking time.

NOTE FOR REHEATING READY MEALS:

Place the ready meal in a heat-resistant flan dish on the low rack.

GETTING STARTED

Plug in the oven and switch on the power. Nothing will be shown in the display at this time.

Open the door, the display will flash the message shown opposite (1).

Close the door. The display will show (2).

The oven is now ready for use.

If you want to set the clock, press the **CLOCK** pad once and follow the instructions in Step 3 below.



IMPORTANT

The oven has an Energy Save mode, for details refer to page 8 of your Operation Manual.

- The oven will default to Energy Save Mode after 3 minutes if not used. Whilst in Energy Save Mode the display is blank and the oven cannot be used.
- To remove Energy Save Mode, open and then close the door, ".0" will be displayed and the oven is ready for use.
- To remove Energy Save Mode permanently, set the clock.

If you require any advice or assistance regarding your Sharp product, please visit our Website or call Sharp Customer Care.

Website:

Australia: www.sharp.net.au
New Zealand: www.sharp.net.nz

Sharp Customer Care:

1 300 135 022 (Australia)
09 573 0111 (New Zealand)

SETTING THE CLOCK

 
Your oven is fitted with a 12 hour clock.

To set the time of day, ensure the door is closed and follow the guidelines given below:

1. Press the **CLOCK** pad once.



2. Enter the time of day by pressing the numbers in sequence. (EX: 11:34 am or pm)



3. Press the **CLOCK** pad again to start the clock.



4

3