

Operating Instructions

Washing Machine

Dear Customer,

Thank you for choosing this quality product from ASKO.

We hope it will meet your expectations and fulfil your needs for many years to come. Scandinavian design combines clean lines, everyday functionality and high quality. These are key characteristics of all our products and the reason they are greatly appreciated throughout the world.

To get the most from your new machine, we recommend that you read the operating instructions before using the machine. The operating instructions also include information on how you can help protect the environment.

ASKO W6888
ALLERGY



Contents

Before using your machine for the first time	4	Washing	12
Asthma and Allergy labelling	4	Sort your laundry.	12
Transport protection	5	Turn on the main power switch	12
Packing material	5	Open the washer door and load the washing	12
Washer door	5	Add detergent and fabric softener, as required	12
Language selection	5	Select the program	13
Checking water hardness	5	Select options	16
Safety instructions	6	Close the washer door and press the Start/Stop button	18
General	6	Once the program has finished	19
Installation	6	Settings	20
Overflow guard function	6	You can change the following settings:	20
Transport/Winter storage	6	Child-safe	20
Recycling	6	Door opening	20
Child safety	7	Language	20
Keep an eye on children!	7	Temperature	20
Child safety catch	7	Extra rinses	20
Description of the washing machine	8	Care and cleaning	21
Detergent compartment	8	Cleaning the trap and the drainage pump	21
Advice and tips before washing	9	Cleaning the detergent compartment	21
Sorting your laundry	9	Cleaning the outside of the machine	21
Clothing	9	Cleaning the inside of the machine to avoid unpleasant smells	21
Laundry labels	9	Rinse holes under the agitator	22
Laundry label symbols	9	If you have hard water	22
Coloured cotton	9	Troubleshooting	23
Unbleached linen	9	The washer door will not open	23
Wool	10	The machine will not start	23
Rayon fibres and synthetic fibres	10	After power failure	23
Save time and energy	10	Wet washing still in the machine	23
High water level	10	Error messages	24
Economy and efficiency	10		
Detergents	10		
Dyeing fabrics	10		

Contents

Technical information	25
Information for test institute	25
Technical data	27
Transport protection	28
Installation	29
Positioning the washing machine	29
Adjusting the feet	29
Connection to water supply	29
Drainage connection	29
Electrical installation	30
Door hanging	31
Follow these instructions:	32
Service	33
Before contacting the service division	33
Quick guide	36

Before using your machine for the first time

Asthma and Allergy labelling

The washing machine you have purchased is recommended by the Swedish Asthma and Allergy Association (Astma- och Allergiförbundet), which means that we offer allergy sufferers unique possibilities. In order to optimise the results, you must participate actively in its use. Below we offer some simple advice that will become a natural part of your use of our product, providing good opportunities for minimising the potential effects of handling washing.

- Choose a detergent recommended by the Swedish Asthma and Allergy Association. Also remember to use different detergents for different types of washing. You can read more about detergents in the "Advice and tips before washing" and "Washing" chapters.
- In order to minimise the amount of excess detergent left in clean washing, you must use the right dose. To do this, you need to know the water hardness in your area. We recommend that you find out the local water hardness and make a note of it in the detergent recommendations in chapter "Advice and tips before washing", so that you can always easily check how much detergent to use. You can read more about water hardness later in this chapter.
- In order to wash at the right temperature and to use the right detergent, it is important that you correctly sort your washing. You can read more about this in the "Advice and tips before washing" chapter.
- This machine has two wash programs specially adapted to the recommendations of the Swedish Asthma and Allergy Association – Allergy Cotton and Allergy Synthetic. These programs differ from the other programs in terms of recommended load, water consumption, and energy consumption. You can read more about this in chapter "Washing".
- To further improve rinse performance, you can select the Super Rinse option. This option increases the number of rinses; however, the number of rinses varies depending on the

program selected. For more information, see the chapter entitled "Select options".

- It is important to clean the detergent compartment regularly. How often depends on how much detergent and which type of detergent you use. You can read more about cleaning the detergent compartment in chapter "Care and cleaning".
- In order to keep the machine in good condition, and to prevent a build-up of excess detergent and other residue in the machine, it is important to clean the machine regularly. This washing machine has a unique program for cleaning the inside of the machine. We recommend running the Cleaning program when the machine is new and then once a month or as often as you feel necessary. You can read more about the Cleaning program in chapter "Washing".



Before using your machine for the first time

Transport protection

Remove any transport protection devices before installing the machine. See the "Transport protection" chapter.

Packing material

Sort waste materials in accordance with local guidelines.

Washer door

- The washer door will not open until the machine is connected to the electricity supply.
- To open the door manually, see "The washer door will not open" in the "Troubleshooting" chapter.
- The machine cannot be started when the door is open.
- To open the washer door while a program is running, see "Close the door and press the Start/Stop button" in the "Washing" chapter.

Language selection

You will be prompted to select the display language when you have connected your machine and start it for the first time. Do as follows:

1. Turn the program selector to choose from: US English, AU English, Svenska, Dansk, Norsk, Suomi, Français, Deutsch, Italiano, Espanol, Русский, Nederlands, EU English.
2. Press Start/Stop once to save the setting.

Checking water hardness

The quantity of detergent needed depends, amongst other things, on how hard the water is. See the detergent pack for details. Phone your local water company to check the water hardness in your area.

NOTE!

Each machine is tested before leaving the factory. A small amount of water may remain in the drain pump, though this does not affect quality or damage the machine.

See Quick guide on the last page

Safety instructions



General

- Read the operating instructions and keep them in a safe place.
- Installation should be carried out by qualified ASKO technicians.
- The machine should only be used for washing items as described in these instructions. It is not intended for dry cleaning.
- Use only detergent intended for machine washing!
- Remove any transport protection devices before using the machine. See the "Transport protection" chapter.
- Repairs and maintenance must be carried out by a qualified professional.
- Damaged mains cables must only be replaced by a qualified electrician.
- The machine is not designed to be used by persons (even children) that are physically or mentally handicapped or lack experience and knowledge. Such persons must receive instruction in how to use the machine or be supervised by a person responsible for their safety.
- Children must be watched to ensure they do not play with the machine.
- In the enclosed plastic bag you will find a tool for opening the washer door in emergencies.

Installation

See the "Installation" chapter.

Overflow guard function

If the machine's water level rises above the normal level, the overflow guard function begins to pump water out and shuts off the water intake. If the water level has not dropped within 60 seconds, the program is terminated.

Transport/Winter storage

If the machine is to be transported or stored in unheated premises where the temperature can fall below freezing, do as follows:

- Empty the filter and the drainage pump. See the "Care and cleaning" chapter.
- Shut off the water to the washing machine, loosen the supply hose to the intake valve and let the water run out from the valve and hose.
- After emptying the pump, a small amount of water may remain in the machine. This does not affect quality or damage the machine.

Recycling

This machine is manufactured and labelled for recycling. In order to prevent injuries, the machine must be made unusable once the decision has been taken to dispose of it. Contact your local authority for information about where and how your machine can be recycled correctly.

Child safety

Keep an eye on children!

- Always close the door and start the programme immediately once you have added detergent.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Store detergent and fabric softener out of the reach of children!

CAUTION!

If this appliance is supplied from a cord extensions set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.


Child safety catch

1. Turn off the machine using the main power switch.
2. Press and hold the Door opening button and switch on the machine with the main power switch. Then press the Door opening button 5 times within 10 seconds.
3. Select the "Child-safe" setting by turning the program selector.
4. Press the Door opening button once.
5. Turn the program selector and choose "Child-safe On" or "Child-safe Off".
6. Press the Door opening button once to save the setting.
7. Press Start/Stop to return to the program menu.

You can temporarily deactivate Child-safe start by pressing the Super Rinse button and the minus button under Delayed Start at the same time. Child-safe start will be deactivated for 3 minutes.



Description of the washing machine

1. Main power switch
2. Detergent compartment
3. Program panel
4. Serial number plate (on inside of washer door)
5. Drainage pump cover
6. Drainage pump (behind cover)
7. Washer door

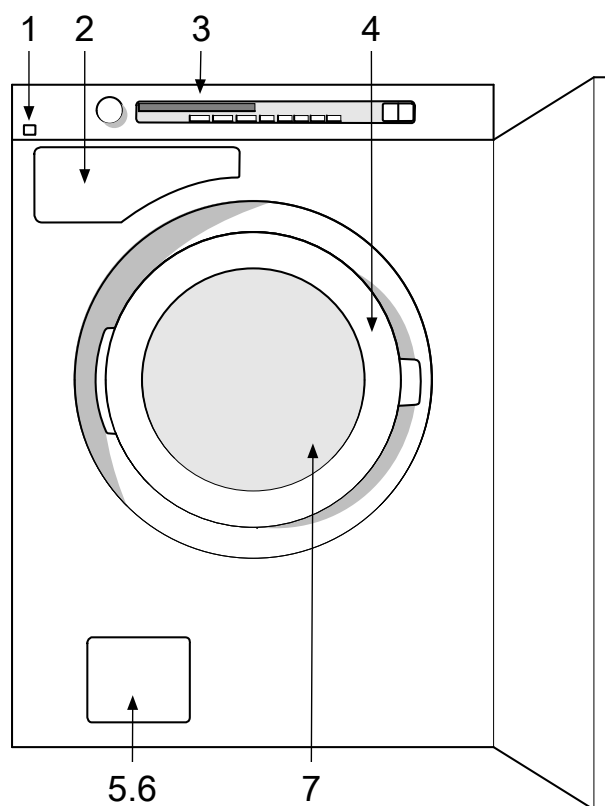

Detergent compartment

1. Pre-wash
2. Main wash
3. Main wash liquid detergent.
4. Fabric softener

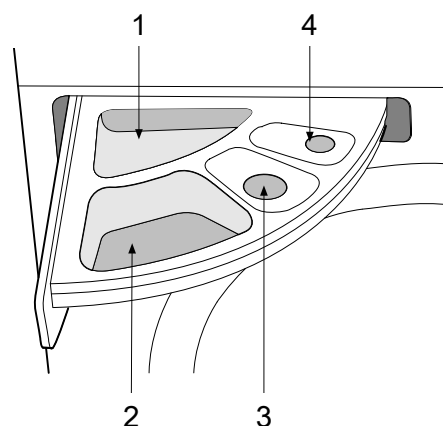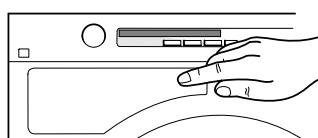

Advice and tips before washing

Here are some tips that may help you before washing.


Sorting your laundry

Sort items according to:

- how soiled they are
- colour
- material

Clothing

1. Do up zips and close Velcro straps so that they don't harm fabrics.
2. New coloured items may contain excess dye and should therefore be washed separately the first few times.
3. Turn delicate items inside out. This reduces the risk of burling and fading.
4. Empty pockets and wash them inside out if possible.

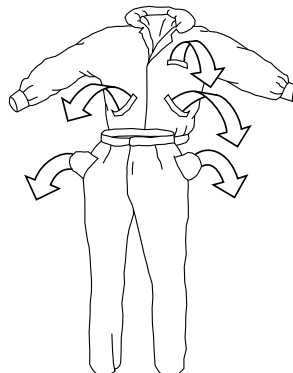

Laundry labels

Look at the item's laundry label. The table below shows suitable wash programs for different materials and wash loads. Using modern washing machines and detergents, for example compact detergents, you can usually wash at lower temperatures. It is a good idea to use trial and error to find out what produces the best results.

Laundry label symbols

Examples of washing instructions and recommended programs. Always follow the washing instructions for each garment.

Laundry labels	Material	Program
	Cotton, linen, white and light-coloured items.	Everyday wash 60 °C to 95 °C
	Cotton, linen, cotton/polyester. Light and dark-coloured garments.	Quick 60 °C or Allergy Cotton 60 °C.
	Acrylic, viscose, modal, acetate, polyester, polyamide and elastane. Light and dark-coloured garments.	Easy Care 40 °C or Allergy Synthetic 40 °C.
 or 	Wool, silk and other very delicate garments	Wool/hand wash 30 °C to 40 °C

Coloured cotton

Coloured cotton items with the washing instruction 60 °C should be washed at 60 °C for the first time in order to remove any excess dye. If you do not do so, there is a risk that the colour will run. Use detergent without bleach in order to preserve the colour of the fabric.

Unbleached linen

Unbleached linen fabrics should be washed at 60 °C, using detergent containing no bleach or optical whiteners. Heavily-soiled linen can occasionally be washed at higher temperatures, but not too often because the heat can destroy the linen's shine and strength.

Advice and tips before washing

Wool

These fabrics are labelled either machine wash or hand wash. The Wool/hand wash program is at least as gentle as washing by hand.

Wool is especially sensitive to processes such as washing.

If you do not wish to spin dry, you can squeeze out the water using terry towels. In this case select No spin.

To find out how to choose this setting, see the "Washing" chapter. However, most garments can withstand a short spin. Choose a short spin by selecting a spin speed of 800 rpm or less.

Rayon fibres and synthetic fibres

Materials made of rayon fibres, such as viscose, and some synthetic fibres are very delicate and require much space so as not to crease. Only half fill the drum when washing and choose a spin speed of 800 rpm or lower.

NOTE!

Viscose and acetates are fragile when wet.

Save time and energy

Use the Everyday wash program to save time and energy. This program has a shorter main wash than Normal, but is often sufficient for lightly soiled washing.

High water level

If you want more water for the main wash and rinses, you can use the High water level option. This is automatically selected in the Wool/Hand program.

Economy and efficiency

You can save energy by not using higher temperature programs than necessary.

- Select Quick if you just need to freshen up shirts or exercise clothes, for example. This will save both water and energy.
- If you select a fast spin speed, this reduces energy consumption when drying in a tumble dryer or drying cabinet.
- Always wash with a full load when using the Heavy, Everyday wash and Normal programs.
- Avoid pre-washing. Modern machines and detergents clean effectively without pre-washing. Pre-washing is only necessary for heavily soiled washing.

Detergents

Eco-labelled detergents are less harmful to the environment.

Detergent overdosing does not give better washing results; it merely causes a greater impact on the environment; can also hinder the wash performance.

Try to use less detergent, and increase only if you are not satisfied with the results.

Dyeing fabrics

If you want to dye fabrics in the machine, select the Everyday wash program with the Super Rinse option. Select temperature according to the dye manufacturer's recommendations.

Choose a low spin speed if the fabric to be dyed is a blended material such as polyester/cotton.

NOTE!

Add the dye directly to the washing drum – not to the detergent compartment. After dyeing, you should run the machine empty using the same program. Use the normal amount of detergent.

Advice and tips before washing

NOTE!

Due to environmental concerns, we discourage the use of strong chemicals.

When using agents for bleaching or stain removal, there is a risk of rust (corrosion) and discolouration of the machine.

Washing

1 Sort your laundry.

See the "Advice and tips before washing" chapter.

Place underwired bras in a laundry net.

Empty pockets. Coins, nails and the like can cause damage to the machine and fabrics. See the "Advice and Tips" section before washing.

2 Turn on the main power switch

3 Open the washer door and load the washing

If the washer door is closed, press the Door opening button (key symbol). The door opens once all water has drained from the machine. Load the washing. The wash program chart shows how much washing can be washed with each program.

4 Add detergent and fabric softener, as required

The detergent packaging will have recommendations for how much detergent you should use. The machine holds 7 kg of washing. If you only have a small amount of laundry in the machine, you can reduce the amount of detergent used.

For the allergy programs Allergy Cotton and Allergy Synthetic, the Swedish Asthma and Allergy Association recommends using an unscented detergent and fabric softener.

Powder detergent

Pour the powder into the compartment for the main wash, and pre-wash as well if desired.

Liquid detergent

When using liquid detergent, follow the detergent manufacturer's recommendations. We recommend always using a wash ball with very thick liquid detergent.

Wash ball or net

If you use a wash ball or net, place it directly in the drum and select a program without pre-wash.

NOTE!

Detergent overdosing does not give better washing results; it merely causes a greater impact on the environment; can also hinder the wash performance.

Try using less detergent, and increase only if you are not satisfied with the results.

Fabric softener

Pour the fabric softener into the compartment with the  symbol. Follow the recommendations on the fabric softener packaging.


NOTE!

Do not fill above the compartment's maximum fill level. Otherwise fabric softener will run in too early, and will impair washing results.

Washing

5 Select the program

You select a program by turning the program selector. The selected program is shown in the display. Now use the option buttons to select any options. See chapter "Select options".

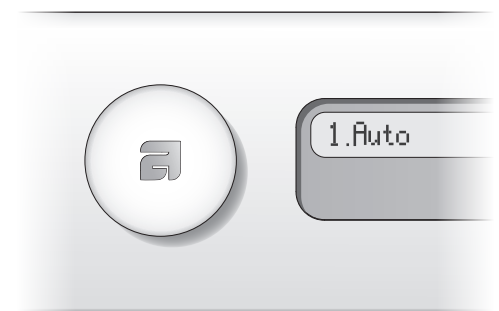

1. Auto

This program automatically adjusts the length of the main wash and the number of rinses to the amount and type of laundry loaded in the machine.

2. Time program

This program adjusts itself to the specified time frame or finish time. When using this program, it is however important to select a temperature and time suited to how soiled the laundry is. The spin speed can be selected freely.

Specify the desired program time by pressing + or - on the Time button. The symbol for the program lights beside the selected time. You can choose a program time between 30 minutes and 3 hours. If you choose a 30-minute program time the maximum wash temperature will be 30 °C

3. Heavy

Program for heavily soiled laundry, with dirt that needs to be fully dissolved before the main wash. A pre-wash is used to do this. The machine adapts the program time and water consumption to the load size.

4. Normal

Program for normal to heavily soiled laundry, whites and colours. You can select the temperature freely, so follow the washing instructions for each garment. 60 °C is a good temperature for heavily soiled cotton garments, as well as for garments worn next to the skin. Select 40 °C if the laundry is less soiled. The spin speed can be selected freely. The machine adapts the program time and water consumption to the load size.

5. Everyday wash

A standard program for lightly to moderately soiled laundry. The temperature can be selected freely, so follow the washing instructions for each garment. Garments worn next to the skin ought to be washed at 60 °C. Very lightly soiled laundry often comes clean already at 40 °C. The spin speed can be selected freely.

6. Quick

Fast program for laundry that just needs freshening up. The program can be run at any temperature, so follow the washing instructions for each garment. The lower the selected temperature, the shorter the program time. Garments worn next to the skin ought to be washed at 60 °C. The spin speed can be selected freely.

7. Easy Care

Program for synthetic, mixed fibre and easy care cotton. The program has a high water level and as such is also suitable for cushions, quilted jackets and the like. Read the washing instructions carefully and remember, for example, that fabric softener must not be used with the membranes found in some outer garments. A washing temperature up to 60 °C and a spin speed up to 1200 rpm can be selected.

Washing

8. Synthetics

Program for delicate garments made of synthetic fibre, mixed fibre, rayon and easy care cotton. The maximum temperature is 60 °C, but follow the washing instructions for each garment. Many synthetics will come clean at 40 °C. Garments worn next to the skin ought to be washed at 60 °C. The maximum spin speed is 800 rpm.

9. Wool/hand wash

A gentle laundry program for wool, silk and garments that should be washed by hand. The highest temperature is 30 °C. This program has a short spin. The maximum spin speed is 800 rpm.

10. Rinse

This program performs one cold rinse cycle + spin. Suitable for laundry that just needs to be dampened and for cleaning cloths and mops.

11. Spin

Used to just spin the wash.

12. Drain

Used when you only want to drain the water from the machine.

13. Allergy Cotton

A program for normal to heavily soiled cotton and blended materials, whites and colours. The temperature can be selected freely between 40 °C and 90 °C. The maximum spin speed is 1600 rpm. In order to benefit from the unique advantages of this program – which is based on the criteria of the Swedish Asthma and Allergy Association – we recommend that you avoid overloading the machine. The program is optimised for 4.6 kg of laundry, which provides good conditions for a good rinse result.

14. Allergy Synthetic

This program is for synthetic fabrics and delicate garments and fabrics, whites and colours. The temperature can be selected freely between 40 °C and 60 °C. The maximum spin speed is 1200 rpm. In order to benefit from the unique advantages of this program – which is based on the criteria of the Swedish Asthma and Allergy Association – we recommend that you avoid overloading the machine. The program is optimised for 2.3 kg of laundry, which provides good conditions for a good rinse result. This program also works very well for freshening up lightly soiled cotton garments, in which case you should select 60 °C.

15. Cleaning

This machine is equipped with a program for automatic cleaning. This program features a higher water level and maintains a temperature of at least 72 °C for more than five minutes during the cleaning phase. The machine is then thoroughly rinsed several times. We recommend running this program when the machine is new and then once a month or as often as you feel necessary.

NOTE!

When running the Cleaning program, the drum and detergent compartment must be empty. Lift the insert out of the detergent compartment and clean the detergent compartment before starting the machine.



The Allergy Cotton, Allergy Synthetic and Cleaning programs have been developed together with the Swedish Asthma and Allergy Association (Astma- och Allergiförbundet).

Washing

Program chart

Program	Pre-wash	Temp. °C	Number of Rinses	Spin Speed rpm	Max. load (kg)	Water consumption (approx. liter)	Energy consumption (approx. kWh)	Program time (approx. hrs and min.)
1. Auto								
2. Time program								
3. Heavy	X	95	5	1800	7	85	2.2	2:45
	X	60	5	1800	7	75	1.2	2:40
4. Normal		60	2	1800	7	60	1.13	3:21
		40	2	1800	7	60	0.47	3:06
5. Everyday wash		60	3	1800	7	60	1.1	1:40
6. Quick		40	2	1800	3.5	25	0.4	0:45
7. Easy Care		40	2	1200	3.5	50	0.5	1:20
8. Synthetics		40	3	800	2.5	30	0.4	1:20
9. Wool/hand wash		30	3	800	2.5	70	0.5	0:50
10. Rinse			1	1800	3.5	15	0.1	0:20
11. Spin				1800	3.5		0.1	0:15
12. Drain								0:01
13. Allergy Cotton		60	5	1800	4.6	75	1.1	2:25
14. Allergy Synthetic		40	5	1200	2.3	70	0.7	1:50
15. Cleaning		90						

Consumption data may vary from the given values depending on variations in water pressure, water hardness, water inlet temperature, room temperature, fluctuations in the electricity, type and volume of the laundry and any extra options.

Washing



6 Select options

You can select options to adjust the wash program to suit your own specific requirements. The available options depend on the selected program. If the option is available for the selected program, the symbols lights up when you press the button.

The machine will remember the options you select for each program (with one exception – Delayed Start). You can still change the selected options the next time you select the program in question.



Temperature

- Select the temperature by pressing the -/+ buttons until the desired temperature is displayed.
- You can select temperatures between Cold (-) and 90 °C. If you select Cold, the washing temperature will be the same as that of the water entering the machine. For Wool/hand wash you cannot choose a temperature higher than 40 °C. For Allergy Synthetic, Time program and Easy Care, the maximum temperature is 60 °C.



Spin

- Select the spin speed by pressing the -/+ buttons until the desired spin speed is displayed.
- You can select speeds between 400 and 1800

rpm, 0 (no spin) or No D(no drain). The maximum spin speed varies according to the program selected. The speed is shown in the display.

- 0 (no spin), means that the program does not include a spin cycle and ends by draining.
- No D, No drain means that the program does not include a spin cycle and ends with the water from the final rinse still in the machine. The washing will remain covered by the water from the final rinse, stopping it from getting creased. If you have selected "No drain", once the program has ended you must select the Spin or Drain program to drain the water from the machine before you open the washer door.

Washing

Delayed start

When you select Delayed Start, the machine will start 1–24 hours after you press the Start/Stop button. This option cannot be used with Time program.

- Select Delayed Start by pressing the + button under the time display. Delayed Start is shown for three seconds.
- By pressing the + and - buttons under the time display you can delay the start in whole hours up to a maximum of 24 hours. The symbol for Delayed Start lights up beside the number of hours.
- Press Start/Stop, and the machine counts down 1 hour at a time and starts after the selected delay.

If you change your mind and want to cancel Delayed Start, you must press and hold Start/Stop for three seconds.

NOTE!

Remember to press the Start/Stop button to start the program.

NOTE!

Make sure the detergent compartment is completely dry before you add detergent, otherwise there is a risk that the detergent will clump before the machine starts.

Super rinse

Use the Super Rinse option if you want to increase the number of rinses. The maximum number of rinses is seven, and the number of rinses varies depending on the selected program.

Recommended for persons with extremely sensitive skin and/or in areas with very soft water.

- Select Super Rinse by pressing the button under the symbol.
- The symbol above the button lights when this option is activated.

High water level

Use High water level if a garment's laundry label shows this symbol. High water level means that additional water is used during the main wash and rinse cycles.

- Select High water level by pressing the button under the symbol.
- The symbol above the button lights when this option is activated.

NOTE!

The machine takes in the additional water for the high water level about 15 minutes after the main wash has started.

Anti crease

Anti crease means that the drum will rotate for three seconds per minute for two hours once the wash program has finished. This feature prevents the garments from lying in the same position and getting creased if you are unable to remove them immediately.

- Select Anti crease by pressing the button under the symbol.
- The symbol above the button lights when this option is activated.

Super wash

Super wash can be selected to better dissolve difficult stains and heavy soiling on clothing. This option adds a cold pre-wash and the wash time in cold water is extended by approximately six minutes. The main wash time is also extended.

- Select Super wash by pressing the button under the symbol.
- The symbol above the button lights when this option is activated.

Washing

Pre-soak

If the washing is stained with blood, for example, we recommend a presoak. The washing will soak in cold water for two hours before the wash program starts.

- Select Presoak by pressing the button under the symbol.
- The symbol above the button lights when this option is activated.

7 Close the washer door and press the Start/Stop button



Time remaining

The time remaining is shown in hours and minutes. Once a program is selected, the estimated program time is displayed. This may differ from time to time depending on the temperature of the water entering the machine and the size of the load. If the program time is longer than the previous wash with the same program, "0:01" will be displayed until the program finishes. This is normal! The next time you use the program under similar conditions, the estimated program time will be more accurate.

To add or remove washing after the program starts

If you want to add or remove items after the program has started, you can stop the program by pressing and holding the Door opening button (key symbol) for three seconds. When you restart the machine, add any extra detergent needed and close the washer door. The machine continues automatically from the point where the program was interrupted.

Stopping or changing a program

You can stop a program by pressing the Start/Stop button for three seconds. "Stop" appears in the display. To restart the machine, select a new program, add any extra detergent needed and press the Start/Stop button.

NOTE!

Do not open the detergent compartment while the machine is running.

Washing

8 Once the program has finished

The text "Done" is shown on the display for 2 minutes. The machine then turns off.

The washer door opens automatically once the program has finished. If you want to deactivate the automatic door opening function, see the "Selecting settings" section.

- Remove the load.

If you have small children or pets at home, close the washer door once you have removed the laundry.

Settings

You can change the following settings:

- Child-safe
- Door opening
- Language
- Temperature
- Extra rinses

How to choose the settings:

1. Turn off the machine using the main power switch.
2. Press and hold the Door opening button and then press the main power switch. Then press the Door opening button 5 times within 10 seconds.
3. Select the setting you want to change by turning the program selector.
4. Press the Door opening button once to select the setting.
5. Change and save the setting as described below.
6. Press Start/Stop to go to the program menu.

Child-safe

You can activate the Child-safe start option to prevent children from starting the machine.

1. Turn the program selector and choose "Child-safe On" or "Child-safe Off".
2. Press the Door opening button once to save the setting.

You can temporarily deactivate Child-safe start by pressing the Super Rinse button and the minus button under Delayed Start at the same time. Child-safe start will be deactivated for three minutes.

Door opening

The washer door opens automatically once the program has finished. You can deactivate this function if you would rather use the the Door opening button to open the door.

1. Turn the program selector and select "Door opening off" or "Door opening on".
2. Press the Door opening button once to save the setting.

Language

1. Turn the program selector to choose from: US English, AU English, Svenska, Dansk, Norsk, Suomi, Français, Deutsch, Italiano, Espanol, Русский, Nederlands, EU English.
2. Press the Door opening button once to save the setting.

Temperature

1. Turn the program selector to choose between: °C and °F.
2. Press the Door opening button once to save the setting.

Extra rinses

Upon delivery, your washing machine is set to use three rinses in the Normal and Everyday wash programs. If you want to increase the number of rinses to five for these programs, do as follows:


1. Turn the program selector and select "Rinses On" for five rinses or "Rinses Off" for three rinses.
2. Press the Door opening button once to save the setting.

Care and cleaning


Cleaning the trap and the drainage pump

The washing machine has a trap where smaller objects such as coins and hairpins can collect. To clean the trap and the drainage pump, do as follows:


1. Make sure the machine is empty of water and switched off at the mains.

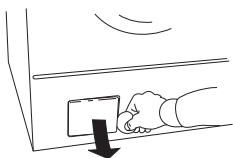


2. Open the door.

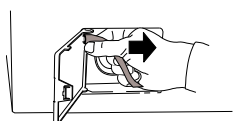


3. Unhook the drainage hose from the connector inside the door and drain the water into a suitable container, such as a shallow bowl.

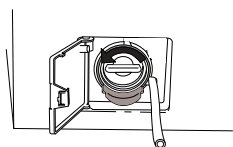

4. Turn the cover anti-clockwise to open the pump. Remove the cover.

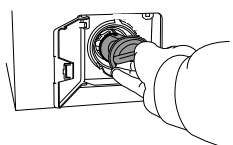

 5. Remove any items and so forth from the pump housing and the cover. Also check that the pump blades right at the back rotate.




6. Screw on the cover, replace the drainage hose on the hatch pin and close the hatch.

Cleaning the detergent compartment

NOTE!

Do not wash the detergent compartment or the insert in a dishwasher!

Open the detergent compartment and remove the insert. Rinse the insert and scrub it clean with a washing-up brush. Wipe up any detergent left inside the detergent compartment. Replace the insert in the detergent compartment.

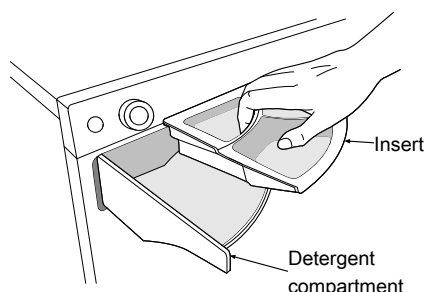

Cleaning the outside of the machine

Clean the outside of the machine and the program panel with a mild cleaner. Do not use any solvents, as these can damage the machine.

NOTE!

Do not hose down the machine with water!

Cleaning the inside of the machine to avoid unpleasant smells

Modern detergents often allow clothes to be washed at low temperatures. This means that small deposits can build up in the machine. These, in turn, may lead to unpleasant smells developing; especially if constantly using cold wash.

To avoid this, we recommend running the Cleaning program once a month. When this program is run, the drum and detergent compartment must be empty. Remove the insert from the detergent compartment and clean the detergent compartment in accordance with the "Cleaning the detergent compartment" chapter before running the program.


Care and cleaning

Rinse holes under the agitator


If you suspect that objects such as nails or paper clips may have fallen into the wash drum, you should check the space under the agitator. Such objects can rust and cause spots on clothing. Nails and other sharp objects can cause holes in fabrics.

Do as follows:


1. Insert a screwdriver or the like into the hole on the agitator as illustrated and carefully pry to the left.

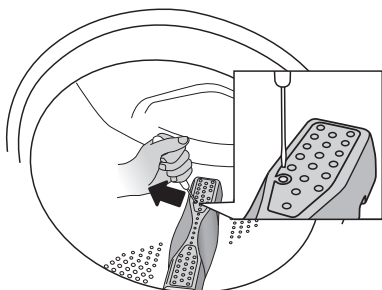

2. Use your other hand to grasp the agitator and pull it towards you.

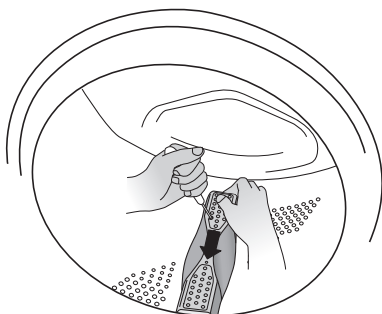

3. Lift the agitator.
4. Remove any objects.
5. Place the agitator in the mounting hole with the F-mark towards you. Ensure that all the agitator fasteners are in their holes in the drum. Push it in until it catches.

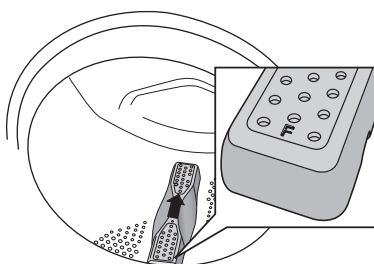

If you have hard water

If you live in an area with hard water (high limescale content), a greyish-white coating may form on the wash drum. To remove this coating, pour approximately 20 gram of citric acid into the wash drum and run any 90 °C program. Repeat if necessary.

Troubleshooting

The washer door will not open

1. Check that the main power switch is on.
2. Is there power? Check your home's fuses (circuit breakers). The washer door cannot be opened with the Door opening button (with the key symbol) if power is off.


If nothing else works, the washer door can be opened as follows:

WARNING!



The door may only be opened manually if the electric power is cut and the machine has been drained of water.

- A Run the Drain program to empty the water from the machine. If this does not work the machine must be drained manually. See "Cleaning the trap and the drainage pump" in the "Care and cleaning" chapter.
- B Ensure that the main power switch is turned off and that the plug has been removed from the wall socket.
- C Take the emergency door opening tool and place it in the gap on the right side of the washer door lock. This tool is found in the enclosed plastic bag.
- D Push the tool upwards to open the washer door.

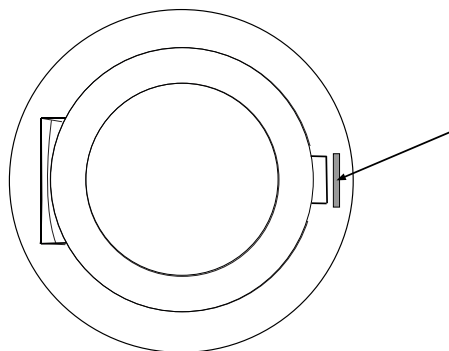

If in the future the washer door does not open when the wash program has finished, call the service division.

The machine will not start

1. Is the washer door properly closed? Push it firmly.
2. Is there power? Check the fuses and residual current devices (circuit breakers) in the building.
3. Check that you have not selected Delayed Start. To cancel Delayed Start, press the Start/Stop button for three seconds.

After power failure

Press the main power switch to resume the current program.

Wet washing still in the machine

A small load can under certain circumstances cause imbalance (see "Unbalance"). Rearrange the load and start the spin program, or load more washing and restart the washing program.

Troubleshooting

Error messages

If an error occurs during the program a message is shown on the display. To exit the message after taking measures, turn the machine off and then back on.

The error messages that may be shown in the display are:

Close the Door

Close the washer door and the program will start.

Over flow fault

1. Shut off the water tap.
2. See "Water outlet fault".

Water outlet fault

Check:

- that no objects are stuck in the drainage hose outlet.
- that the drainage pump is not blocked by foreign objects. Clean the pump. See the "Care and cleaning" chapter.
- that there are no kinks in the drainage hose.

After taking measures, run the Drain program or press the Door opening button (key symbol) to empty the machine. If this does not resolve the problem, call the service division.

Water inlet fault

Check:

- that the tap on the water pipe is open.
- that the filter in the machine's water inlet is not blocked.

Action:

1. Shut off the water tap.
2. Unscrew the hose.
3. Clean the filter in the inlet valve on the machine.
4. Screw the hose back on.
5. Turn on the tap and check for leaks.
6. Run the program again to check if the fault is fixed.
7. If this does not resolve the problem, call the service division.

Security fault

Call the service division!

Wash motor fault

Call the service division!

Unbalance

The machine stops the spin cycle if there is too much imbalance. The washing machine restarts the spin cycle and hopefully the washing is better distributed in the drum. This procedure can be repeated up to 10 times. If the machine still fails to find a good balance, the program jumps to the next step.

The error message requires no action.

Technical information

Information for test institute

Energy labelling

Australian standard:	AS/NZS 2040.1:1998
Washing program:	Normal, 40 °C, 7 kg cotton
Connection:	Cold water 20 °C
Test method for noise measurement:	IEC-60704-2-4

Power requirement when machine turned off	< 0,3 W
Power requirement for Delayed Start	< 6,0 W
Power requirement when program finished	< 3,0 W

Detergent, PBIS and Anti-Sudsing Agent (10ml) must be added via the detergent compartment.


Technical information

Loading procedure for standard test:

When loading the machine for testing according to AS/NZS 2040:2005 it shall be loaded according to the table below. Garments are placed on top of each other in layers and the soil swatches should be placed inside the wash drum in the direction shown in the table, seen from above.

Top	Swatches	Swatch placement
30. Bath towel	1	Left
29. Pillow case	1	Right
28. Pillow case	1	Front
27. Undershorts		
26. T-shirt	1	Rear
25. Tablecloth	1	Right
24. Bath towel		
23. Shirt	1	Front
22. Undershorts	1	Center
21. Undershorts		
20. Sheet	1	Left
19. Wash cloths (all)		
18. T-shirt		
17. T-shirt	1	Center
16. Undershorts	1	Right
15. Shirt	2	Rear
14. Bath towel		
13. Bath towel	1	Left
12. Handkerchiefs (all)		
11. Sheet	1	Right
10. Undershorts		
9. Undershorts	1	Center
8. Shirt	1	Rear
7. Bath towel		
6. Tablecloth	1	Left
5. T-shirt	1	Front
4. Undershorts		
3. Pillow case		
2. Pillow case	1	Left
1. Bath towel	1	Right
Total	20	

Illustration of loaded Wash Drum for standard test.

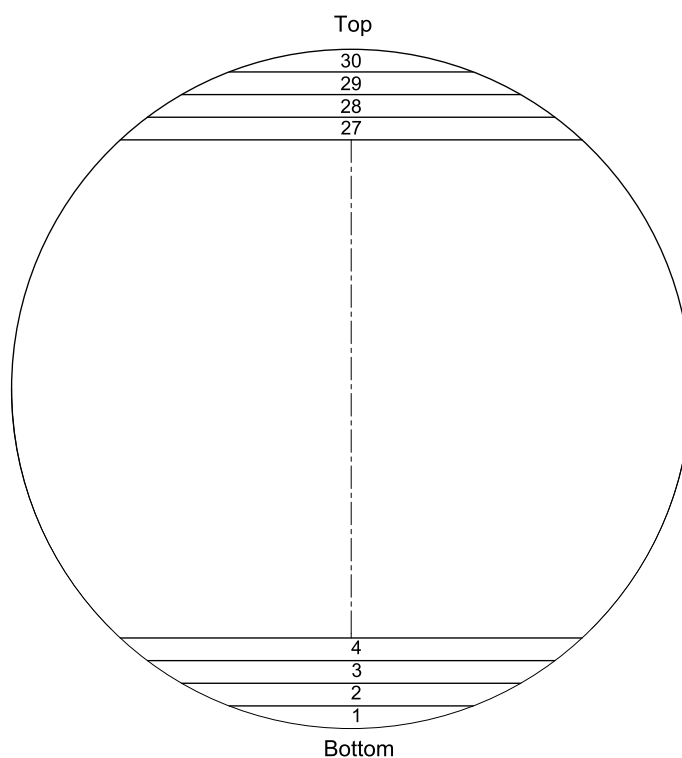


Technical information

Technical data


Height:	850 mm
Width:	595 mm
Depth:	585 mm
Weight:	73 kg (78 kg with outer door)
Cylinder volume:	60 l
Max. washing capacity:	7 kg
Spin speed (rpm):	400-1800
Rated power:	See type plate.
Heater output:	See type plate.
Water pressure:	0,1-1 MPa 1-10 kp/cm ² 10-100 N/cm ²
Wash drum and liquid compartment material:	Stainless steel
Outer casing material:	Powder-coated and hot-galvanized sheet steel or stainless steel.
Water connection:	1.5 m pex pipe
Drain:	1.7 m polypropylene hose

Transport protection


Remove the three transport bolts and the plastic plugs for locking the machine for transport before using the machine.

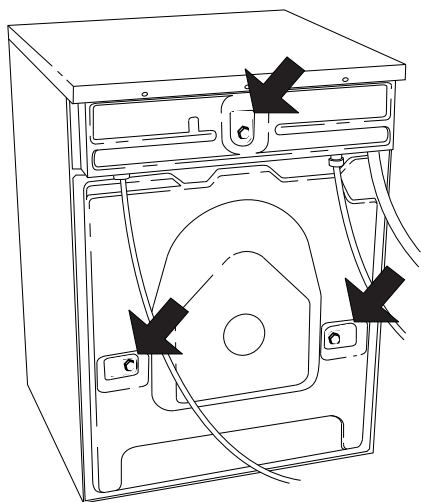


1. Loosen and remove the bolts as illustrated below.

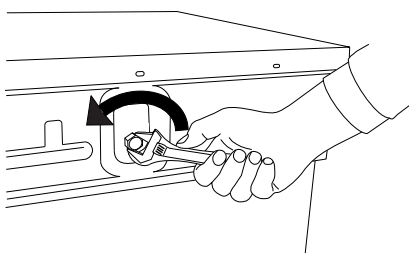

2. To remove the plastic plugs that held the bolts, squeeze together and pull out.

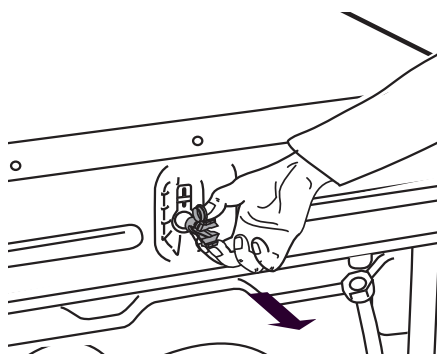

3. Remove the plastic covers from the plugs. Push the plastic covers into the three holes that contained the plugs. Save the plastic plugs in case the machine is moved in the future.

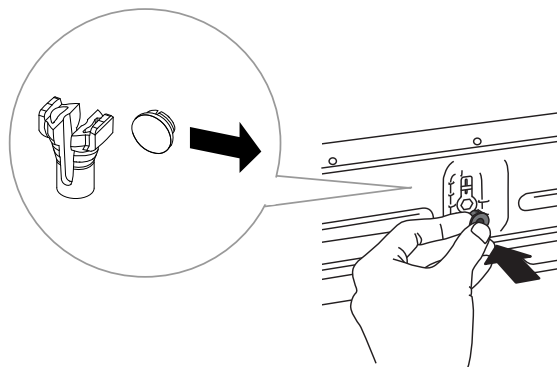

NOTE!

If the machine is to be transported, the bolts and plastic plugs for locking the machine during transport must be installed to prevent damage to the machine through shaking. If the transport bolts or plastic plugs have been lost, you can order new ones from your retailer.

Article number	Designation
80 882 77	Screw
80 901 05	Plastic plug, transport lock

Order three of each item!

Installation

Positioning the washing machine

The washing machine can be installed as a built-in or freestanding unit. Position the machine so that the electrical plug is easily accessible.

A. Built-in


The washing machine can be installed under a counter top with a working height of 850–900 mm. Leave a 5 mm space around the entire machine, including between the rear edge of the top cover and the wall behind it.

B. Freestanding

The washing machine can be positioned beside or under a tumble dryer.

Adjusting the feet


Keep the noise that the machine produces to a minimum by adjusting the feet so that the machine is steady and balanced on the floor. Tighten the lock nuts.

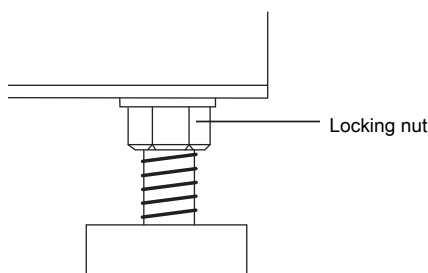

Connection to water supply

Water connection should be carried out by an appropriately qualified person. Connect the machine using the accompanying supply hose. Water pressure should be 0.1–1MPa (approx. 1–10kp/cm²; 10–100N/cm²). There should be a stopcock on the water pipe.

If the pipes are newly installed, it may be wise to flush them through so that any dirt is washed away. Otherwise, dirt can clog the filter in the machine's water intake and cut off or reduce water flow to the machine. Check for leaks.

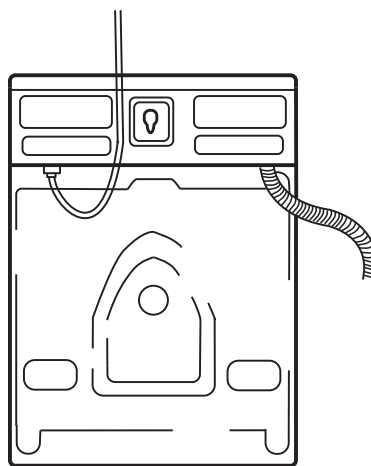


Use only the supply hose supplied with the machine. Do not re-use old hoses or other loose supply hoses.

Drainage connection

The machine is supplied with a drainage hose attached, which must be connected to a drain. See the examples below. The height must be 600–900 mm above floor level.

The lower position (600 mm) is always preferable. Ensure that the drainage hose has no kinks.

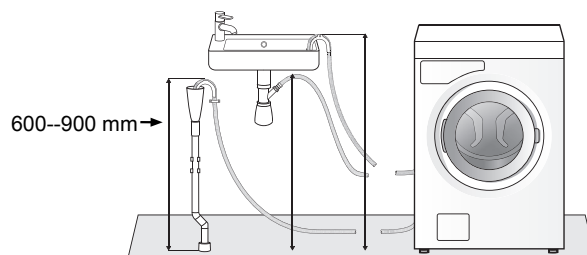


Installation

The machine can also be connected to the drain via a spigot connection. In this case the hose should also be 600-900 mm above the floor. The internal diameter of the hole should be at least 18 mm.

- Cut the nipple
- Remove burrs from the hole.

See the illustration.

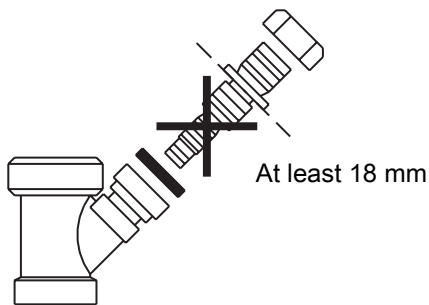

Electrical installation

Connect the machine by plugging it into an earthed wall socket. The electrical wall socket must be placed outside of the installation area to be easily accessible.

CAUTION!

If this appliance is supplied from a cord extensions set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.


Connection on delivery

The machine is supplied as 1-Phase, 220-230 V, 50-60 Hz, heat output 2000 W and has a 10 A plug. Any residual current devices must be type A.

NOTE!

Repairs and maintenance must be carried out by a qualified professional.

Door hanging

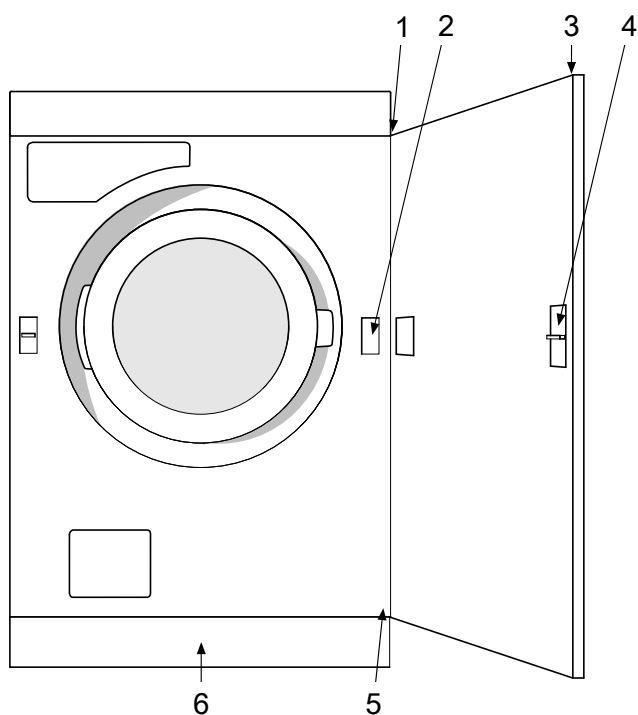

1. Hinge pins (top and bottom)
2. Cover plate
3. Plastic plugs (on the upper and lower edges)


4. Locking hook
5. Hinges (left + right side)
6. Plinth

Door hanging


You can choose whether the outer door is hung on the right or the left.

Follow these instructions:



1. Remove the plinth.
2. Remove the hinge, two screws.

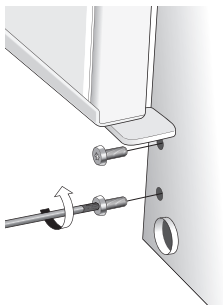

3. Lift up the outer door and remove it. Support the door while doing this.
4. Remove both door pins (top and bottom). Fit them on the opposite side of the outer door. Refit the hinge.

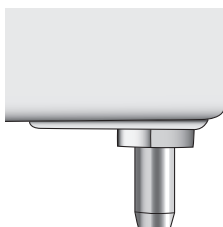

5. Loosen and remove the catch (lift up and pull out) and the cover plate on the outer door and the machine. Swap the catch and the cover plate.

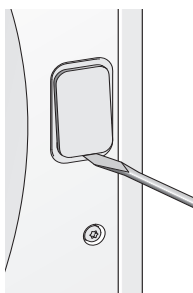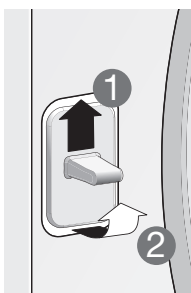

6. Swap the plastic plugs on the upper and lower edges of the outer door respectively. Use a flat-bladed screwdriver to remove the plugs.
7. Reattach the outer door by loosening the screws on the hinge a little, then mount and



close the door. Retighten the hinge. Replace the plinth.

Service

Before contacting the service division

Before you contact the service division, make sure that you know the model number (located on the front panel), and serial number.

The model designation can be found on the panel. The type designation and serial number can be found on the type plate on the inside of the washer door.

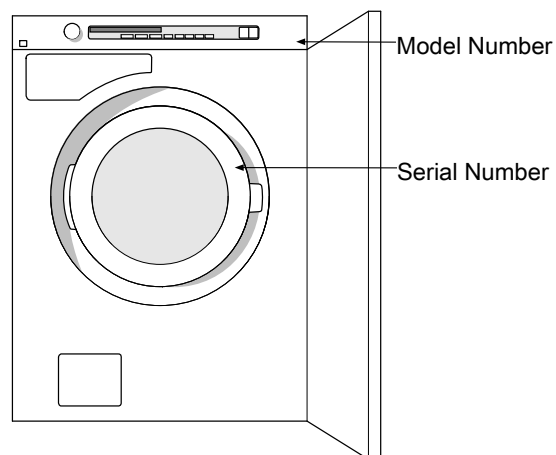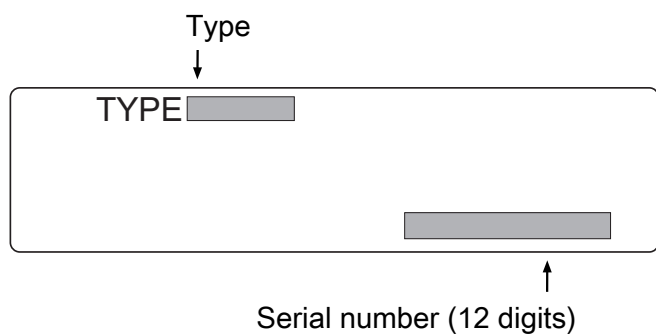

Your notes

Your notes

Quick guide

1 Washing

1. Empty pockets and refasten zips.
2. Read the item's laundry label.
3. Sorting laundry.

NOTE!

Place underwired bras in a laundry net.

2 Load the laundry

1. Press the main power switch.
2. If the washer door is closed, press the Door opening button (key symbol) and the door will open.
3. Load the washing and close the washer door.

3 Detergent compartment

1. Pour detergent into the main wash compartment, and pre-wash compartment as well if required. Pour

fabric softener into the compartment on the right with the -symbol.

2. If you use liquid detergent, follow the detergent manufacturer's recommendations.

4 Select the program

1. Select a program by turning the program selector.
2. Select any options and settings.
3. Press the Start/Stop button.

5 Program finished

1. The text "Done" is shown on the display for 2 minutes. The machine then turns off.
2. The washer door opens automatically once the program has finished.
3. Remove the load.

If you have small children or pets at home, close the washer door once you have removed the laundry.