

# Breville

[www.breville.com.au](http://www.breville.com.au)

# Breville

**Ikon®**  
4 Slice Electronic Toaster

Breville is a registered trademark of Breville Pty. Ltd.  
ABN 98 000 092 928

## **Breville Customer Service Centre Australian Customers**

✉ Breville Customer Service Centre  
Locked Bag 2000  
Botany NSW 2019  
AUSTRALIA

☎ Customer Service: 1300 139 798  
Fax (02) 9384 9601  
Email Customer Service: [askus@breville.com.au](mailto:askus@breville.com.au)

## **New Zealand Customers**

✉ Breville Customer Service Centre  
Private Bag 94411  
Greenmount  
Auckland, New Zealand

☎ Customer Service: 09 271 3980  
Fax 0800 288 513  
Email Customer Service: [askus@breville.com.au](mailto:askus@breville.com.au)

© Copyright. Breville Pty. Ltd. 2004

Ikon is a registered trademark of Breville Pty. Ltd.  
Due to continual improvements in design or otherwise, the product you purchase may differ slightly from the one illustrated in this booklet.

Model BTA550 Issue 1/05

## Instructions for use



Model BTA550



Breville recommends safety first	Page
Know your Breville Ikon Toaster	4
Operating your Breville Ikon Toaster	6
Care and cleaning	7
	9



# Congratulations

on the purchase of your new Breville Ikon Toaster

# Breville recommends safety first

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following instructions:

## Read all instructions before operating and save for future reference

- Ensure that the power source is the same as the voltage requirements of the product.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Keep appliance clear of walls and other heat sensitive materials. Minimum 200mm distance.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Always use the appliance on a dry, level surface.
- Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.
- Never immerse the power supply cord or appliance in water or any other form of liquid.
- At no time should the appliance be left unattended during toasting.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Close supervision is required at all times when operating the appliance near children.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance where children can touch hot surfaces.
- Do not let the power supply cord touch hot surfaces or become knotted, or hang over the edge of a table or counter.
- Do not place on, or near a gas burner, electric element, or in a heated oven.
- This appliance is intended for household use only. Do not use this appliance for other than its intended use.
- Not intended for use in moving vehicles or boats.
- Do not use outdoors.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening and is not too thick or long that it will jam or wedge the bread carriage.
- Never cover the appliance whilst it is plugged into the mains or while hot.
- Do not place cold toast on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

- Regularly inspect the power supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return unit to the nearest authorised Breville Service Centre for examination, replacement or repair.

This Breville Ikon Toaster is electronically controlled and will not lock down into the toast position until the toaster is plugged into a 230/240 volt power point and switched on.

Note



NEVER OPERATE TOASTER ON ITS SIDE. NEVER ADD ANY FOOD SUBSTANCE TO THE BREAD, MUFFINS OR CRUMPETS AS THIS CAN LEAD TO ELECTROCUTION OR FIRE.

THIS TOASTER IS FOR TOASTING BREAD, CRUMPETS AND MUFFINS ONLY. PLACING OTHER ITEMS IN THE TOASTER CAN LEAD TO ELECTROCUTION OR FIRE.

# Know your Breville Ikon Toaster



# Operating your Breville Ikon Toaster

Before first use, remove any promotional material attached to your toaster.

1. Insert the power plug into a 230/240 volt power outlet and then turn the power on.
2. The numerical LCD display on the control panel will indicate setting '1'.
3. Place up to 4 slices of bread, muffins or bagels into the bread slots.
4. Select the desired browning setting using the browning control dial. Colour settings range from '1' lightest to '9' darkest. When using the toaster for the first time, we suggest you toast on setting No. 4. Varying types of bread and personal preference may require a different browning setting, eg: raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

The toaster will remember your desired setting. When the power is turned off to the toaster, the digital control will default to your original desired setting when next switched on.

Note

5. Press the high lift lever down until it clicks into place. Toasting cycle will automatically commence. As the toasting cycle progresses the LCD display will count down and the toasting progress indicator bars will go out until toasting is complete.

If the toaster is not plugged in and switched on at the power outlet, the high lift lever will not click into place.

Note

6. The Ikon Toaster has a patented 'Lift and Look' feature which does not interrupt the cooking cycle. To check on the toasting progression during the cooking cycle, simply use the high lift lever to raise and lower toast.
7. The toaster turns off when the desired toast colour is achieved and automatically raises the toast. The toasting process can be stopped at any time by pressing the CANCEL button located on the side of the toaster.

The display will automatically shut off if not used for 5 minutes or more. Touching any of the front buttons or toasting lever will re-illuminate the display.

NOTE

## High lift

To remove smaller items such as crumpets and muffins, lift the high lift lever approximately 20mm above the starting position.



In the unlikely event that the bread or crumpet becomes jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then carefully ease the bread out of the toaster, ensuring that you do not damage the element.



DO NOT LEAVE UNATTENDED WHEN IN USE AS TOAST MAY JAM.

### Toasting frozen bread

To toast frozen bread, place the bread into the toasting slots, select the desired browning setting, lower the high lift lever until it clicks into place then press the defrost button, this will extend cooking time.

### Reheating toast

This function allows you to reheat toast without additional toasting. To reheat, place toast into toasting slots, lower the high lift lever until it clicks into place and press the reheat button.

### Toasting crumpets

This function adjusts heating elements to perfectly toast golden crumpets without burning the bottom. To toast crumpets, place crumpets into toasting slots with the tops facing inwards toward the middle of the toaster. Lower the high lift lever until it clicks into place and press the crumpet setting. This setting when activated adjusts the heating elements to produce additional heat to the centre elements to cook the top of your crumpet faster than the bottom.

Crumpets must always face inwards towards the middle of the toaster. The toaster always reverts back to the bread toast setting after each toasting cycle, unless the crumpet control setting is activated again.

Note

### Lift and Look Feature

The Breville Ikon Toaster has a patented 'Lift and Look' feature which does not interrupt the cooking cycle. To check on the toasting progression during the cooking cycle, simply use the high lift lever to raise and lower toast.

## Care and cleaning

The crumb tray should be cleaned out regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.

1. Always switch the power off at the outlet and then remove the plug from the outlet before cleaning the toaster.
2. To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace it before using the toaster again.
3. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.
4. To clean the interior, turn the toaster upside down over the sink or rubbish bin and shake crumbs free.

### Storage

Always switch off, then unplug from mains and allow to cool completely before storing.



NEVER ATTEMPT TO EXTRACT JAMMED TOAST, CRUMPETS OR MUFFINS OR ANY OTHER ITEM WITH A KNIFE OR ANY OTHER OBJECT, AS CONTACT WITH LIVE ELEMENTS MAY NOT ONLY DAMAGE THE ELEMENT, BUT CAUSE ELECTROCUTION.



DO NOT USE THE TOASTER WITHOUT THE SLIDE OUT CRUMB TRAY IN PLACE  
DO NOT ALLOW CRUMBS TO BUILD UP IN CRUMB TRAY. CRUMB TRAY SHOULD BE CLEANED OUT REGULARLY.

Blank lined area for notes on page 10.

Blank lined area for notes on page 11.

