

# BLANCO



Performance First

EN GUIDE TO INSTALLATION

Oven

*Dear Customer,*

*Thank you for buying a **BLANCO oven**.*

*Before we continue telling you about this oven, we cordially invite you to become part of the Blanco family by subscribing online. Please visit our website where you can easily subscribe and request such things as 'invitations to future cooking classes' and gourmet recipes. Go to [www.meappliance.com.au](http://www.meappliance.com.au) and fill in the subscription details.*

*You will find that the clean lines and modern look of your **Blanco oven** blends in perfectly with your kitchen décor. It is easy to use and performs to a high standard.*

*Blanco also makes a range of products that will enhance your kitchen such as cooktops, rangehoods, dishwashers and microwaves, sinks and taps. There are models to complement your new **Blanco oven**.*

*Of course, we make every effort to ensure that our products meet all your requirements, and our Customer Relations department is at your disposal, to answer all your questions and to listen to all your suggestions (see back cover of manual).*

*Please complete the warranty section of this manual and keep your receipt as proof of purchase. Retain all documents relating to the purchase of this product.*

*Blanco is committed to providing increasingly efficient products, that are easy to use, respect the environment, and are attractive and reliable.*

**BLANCO**

1 / NOTICES TO THE USER	
• Safety Recommendations _____	4
• Environment _____	5
• Child safety _____	5
2 / INSTALLING YOUR APPLIANCE	
• Choice of location _____	6
• Building in _____	6
• Electrical connection _____	7
• Changing the power cable _____	8
3 / DESCRIPTION OF YOUR APPLIANCE	
• Introduction to your oven _____	9
• Description of the accessories _____	10
• Description of your programmer _____	11
4/USING YOUR APPLIANCE	
• Using the programmer _____	12
◦ How to set the time _____	12
◦ How to change the time _____	13
◦ Immediate cooking _____	13
◦ Programmed cooking _____	14
◦ Using the timer function _____	15
◦ Display brightness _____	16
5 / OVEN COOKING MODES _____	17
6 / CARING FOR AND CLEANING YOUR APPLIANCE	
• Cleaning the outer surfaces _____	19
• Cleaning the door _____	19
• Cleaning the catalytic oven _____	20
• Changing the catalytic walls _____	22
7 / TROUBLESHOOTING _____	23
• Changing the bulb _____	24
8 / AFTER-SALES SERVICE _____	25

**Warning**

***Keep this user guide with your appliance. If the appliance is ever sold or transferred to another person, ensure that the new owner receives the user guide. Please become familiar with these recommendations before installing and using your oven. They were written for your safety and the safety of others.***

**• SAFETY RECOMMENDATIONS**

– This oven was designed for use by private persons in their homes. It is intended solely for cooking foodstuffs. This oven does not contain any asbestos-based components.

– This appliance is to be used by adults. Make sure that children do not touch it and that they do not treat it as a toy. Make sure that they do not touch the appliance's control panel.

– When you receive the appliance, unpack or have it unpacked immediately. Give it an overall inspection. Make note of any concerns or reservations on the delivery slip and make sure to keep a copy of this form.

– Your appliance is intended for standard household use. Do not use it for commercial or industrial purposes or for any other purpose than that for which it was designed.

– Do not modify or attempt to modify any of the characteristics of this appliance. This would be dangerous to your safety.

– Keep small children away from the appliance while it is in use. Thus you will prevent them from burning themselves by tipping over cookware. Moreover, the front of your appliance is hot during use and during cleaning (pyrolysis).

– Never pull your appliance by the door handle.

– Before using your oven for the first time, heat it up while empty for approximately 15 minutes. Ensure that the room is sufficiently ventilated. You may notice a particular odour or a small amount of smoke. All of this is normal.

– During cooking, ensure that the door of your oven is firmly closed so that the seal can properly fulfil its function.

– When in use, the appliance becomes hot. Do not touch the heating elements located inside the oven. You are at risk of incurring serious burns.

– When inserting or removing your dishes from the oven, do not bring your hands near to the upper heating elements; use insulated cooking mitts.

– After cooking, do not touch the cookware (grid, turnspit, etc.) with bare hands

– Never place aluminium paper directly in contact with the bottom element (See the "Description of your oven" chapter), the accumulated heat could cause deterioration of the enamel.

– Do not place heavy items on the open oven door; ensure that children cannot climb or sit on it.

– To avoid damaging the control panel of your appliance, do not leave the door open when the oven is functioning or still hot.

– The oven must be turned off for all attempts to clean the cavity.

– Intensive and prolonged use of the appliance may require additional ventilation achieved by opening the window or increasing the power of the mechanical fan.

– In addition to the accessories provided with your oven, only use dishes that are resistant to high temperatures (follow manufacturer's instructions).

– After using your oven, ensure that all the controls are in the off position.

– Never use steam or high-pressure devices to clean the oven (requirement imposed by electrical safety).

– For your safety, your oven is equipped with an AUTOMATIC STOP, if you forget to turn off your oven by mistake. After 10 hours of operation, the AS (Automatic Stop) feature is activated and your oven stops running. AS appears instead of the time and a series of 2 successive beeps is emitted for a short time.

## • CARE FOR THE ENVIRONMENT

– This appliance's packing materials are recyclable. Recycle them and play a role in protecting the environment by depositing them in municipal containers provided for this purpose.

– Your appliance also contains many recyclable materials. It is therefore marked with this logo to indicate that used appliances must not be mixed with other waste. Recycling of the appliances organised by your manufacturer will thus be undertaken in optimum conditions, in accordance with European directive 2002/96/CE relative to electrical and electronic equipment waste. Consult your city hall or your retailer to find the drop-off points for used appliances that is nearest to your home.



– We thank you for your help in protecting the environment.



### **Warning**

Installation should only be performed by qualified installers and technicians.

This appliance complies with the following European directives:

- Low Voltage Directive 73/23/CEE modified by directive 93/68/CEE for attribution of CE approval.

- Electromagnetic Compatibility Directive 89/336/CEE modified by directive 93/68/CEE for attribution of CE approval.

- CE Regulation 1935/2004 concerning materials and objects designed to come into contact with foodstuffs.

## • CHILD SAFETY (depending on model)

### • SAFETY ACTIVATION

- Open the door.
- Press the switch on the panel until the system is engaged and then close the door (fig.1).

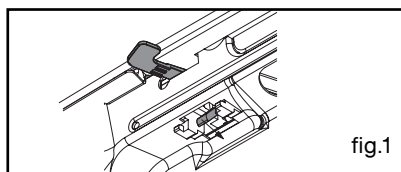


fig.1

### • OPEN WITH SAFETY ENGAGED

- Press the lever and then open the door (fig.2).

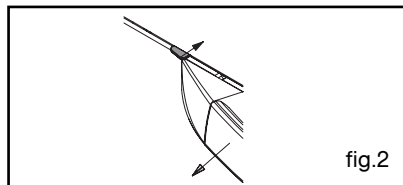


fig.2

### • SAFETY DEACTIVATION

- Open the door and press the switch on the panel (fig.3).

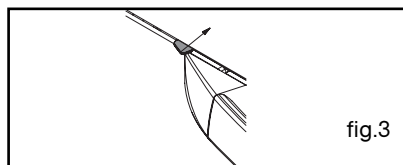


fig.3

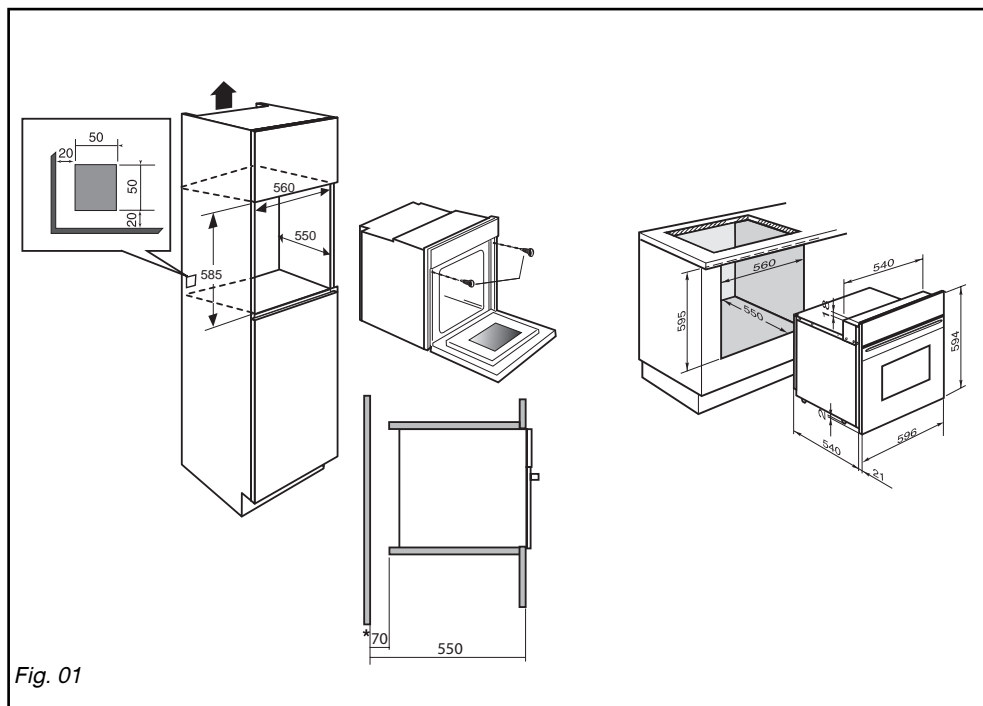


Fig. 01

## • CHOICE OF LOCATION

The diagrams above indicate the dimensions of a cabinet that would be acceptable for your oven.

The oven can be installed under a work top or in a column of cabinetry (open\* or closed) having the appropriate dimensions for built-in installation (see adjacent diagram).

Your oven has optimised air circulation that allows it to achieve remarkable cooking and cleaning results if the following guidelines are respected:

- Centre the oven in the cabinet so as to guarantee a minimum distance of 5 mm between the appliance and the neighbouring cabinet.
- The destination cabinet must be made of or coated with a material that is heat resistant.
- For greater stability, attach the oven in the cabinet with two screws through the holes

provided for this purpose on either side of the front side panels (fig.1).

## • BUILD-IN

To do this:


- 1) Remove the rubber screw covers to access the mounting holes.
- 2) Drill a Ø 2 mm hole in the cabinet panel to avoid splitting the wood.
- 3) Attach the oven with the two screws.
- 4) Replace the rubber screw covers (they also serve to absorb the shock caused by closing the oven door).

(\*) If the cabinet is open, its opening must be 70 mm (maximum).



### Tip

To be certain that you have properly installed your appliance, do not hesitate to call on a household appliance specialist.

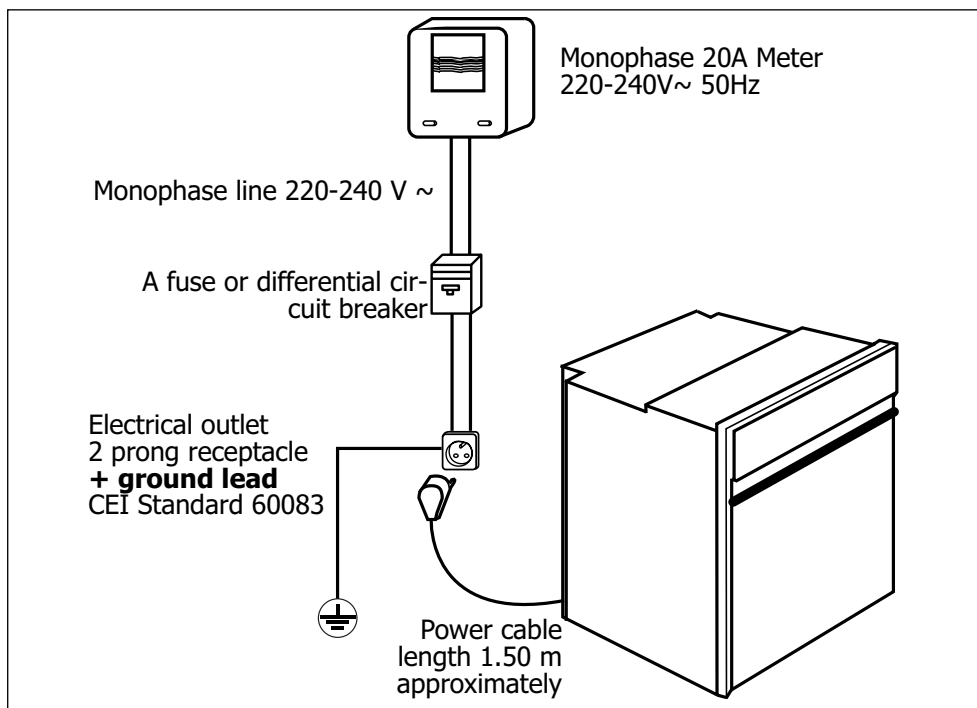

## • ELECTRICAL CONNECTION

Electrical safety must be provided by a correct build-in. During build-in and maintenance operations, the appliance must be unplugged from the electrical grid; fuses must be cut off or removed.

The electrical connections are made before the appliance is installed in its housing.

Ensure that:


- the electrical installation has sufficient voltage,
- the electrical wires are in good condition
- the diameter of the wires complies with the installation requirements.

Your oven must be connected with a power cord (standardised) with three 1.5 mm<sup>2</sup> conductors (1 ph +1 N + ground) that must be connected to a monophase 220-240 V~ net-

work via a CEI 60083 standardised receptacle (1 ph +1 N + ground lead) or an all-pole cut-off device, in compliance with installation regulations.



### Warning

The safety wire (green-yellow) is connected to the appliance's terminal  and must be connected to the ground lead of the electrical set-up.

In the case of a hook-up with electrical outlet, it must be accessible after installation.

The fuse in your set-up must be 16 amperes.  
**If the power cable is damaged, it must be replaced by a cable or a special kit available from the manufacturer or its After-Sales Service Department.**

**Warning**

***We cannot be held responsible for any accident resulting from an inexistent, defective or incorrect ground lead.***

***If the electrical installation at your residence requires any changes in order to hook up your Appliance, call upon a professional electrician.***

***If the oven malfunctions in any way, unplug the appliance or remove the fuse corresponding to the sector there the oven is hooked up.***

**• CHANGING THE POWER CORD**

– The power cable (H05 RR-F, H05 RN-F ou H05 VV-F) must be of sufficient length to be connected to the build-in oven while it sits on the floor in front of the cabinet.

To do this the appliance must be disconnected from the electrical network:

– Open the inspection flap located at the lower right of the back cover by unscrewing the two screws, then pivot the inspection flap.

– Strip 12 mm along each wire of the new power cable.


– Carefully twist together the strands.

– Loosen the screws from the terminal board and remove the power cord to be replaced.

• Introduce the power cable through the side of the cover in the cable clip located to the right of the terminal board.

– All the strands of the electricity wires must be captured under the screws.

– The phase wire on the L terminal.

– The green-yellow coloured ground wire should be connected to the terminal .

– The neutral conductor (blue) on the N terminal.


– Screw down tightly the screws on the terminal board and check the connection by pulling on each wire.

– Attach the cable with the cable clip located to the right of the terminal board.

– Close the inspection flap using the two screws.



## • INTRODUCTION TO YOUR OVEN

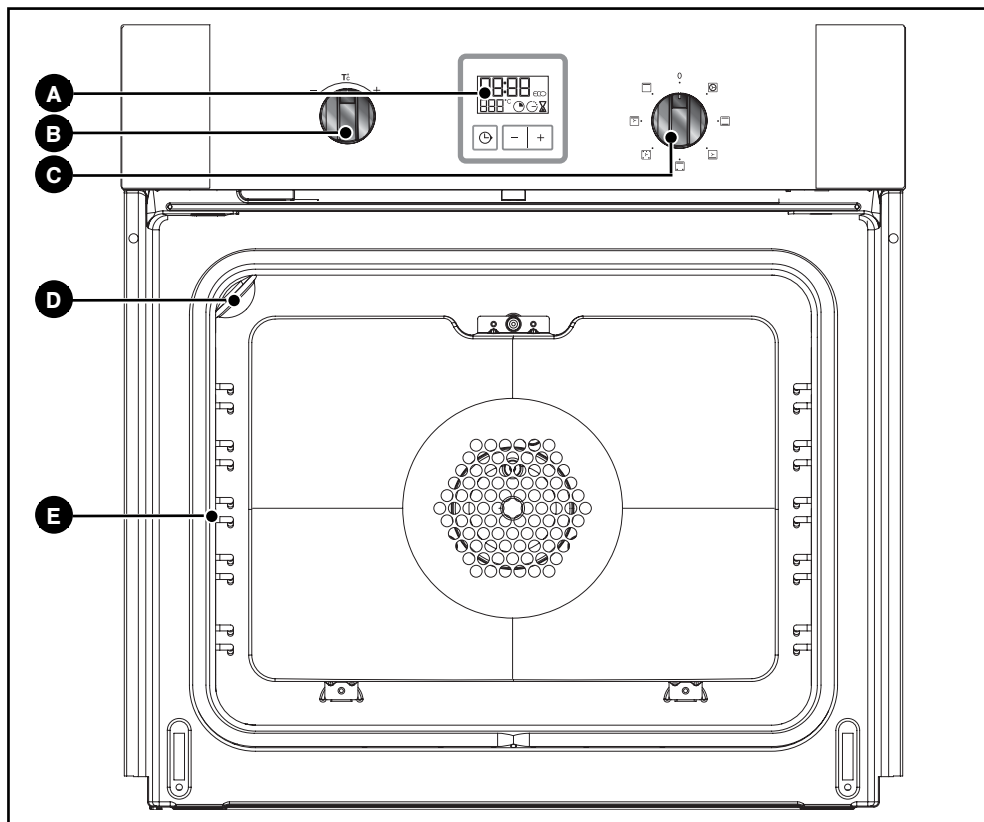

**A** Programmer

**B** Temperature selector

**C** Function selector

**D** Lamp

**E** Shelf support indicator



### Tip


*This Guide to Installation and Use is valid for several models. Minor differences in details and fittings may emerge between your appliance and the descriptions provided.*

## • ACCESSORIES

### • **Anti-tipping safety grid (fig.1)**


The grid can be used to hold all dishes and moulds containing foodstuffs to be cooked or browned.

It can be used for barbecues (to be placed directly on the grid).

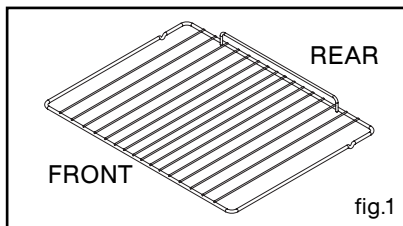

### • **Multi-purpose dish (fig.2)**

Inserted under the grid, it catches barbecue juices and grease. It can also be used half-full of water for double-boiler cooking methods. Avoid placing roasts or meats directly in the dish because you are certain to have major spattering on the oven walls.

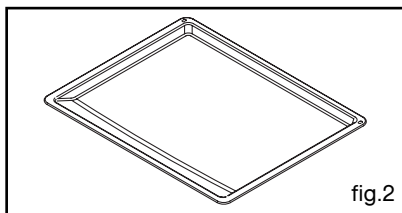


### • **Hollow dish fitted with a special barbecue support grid (fig.3)**

It is used to collect juices and grease from cooking with the high grill or the pulsed grill.

It can be used as a cooking dish when suitable for the size of the item to be cooked (e.g. whole poultry surrounded with vegetables, at moderate temperature).


Never place this dish directly on the base, except in GRILL position.

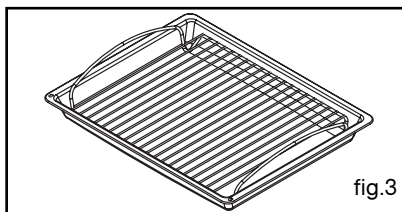

### • **Sliding system (fig.4)**

Thanks to this system, you can totally remove your enamelled dishes and easily access your preparations while they are cooking.


It absolutely must be removed during PYROLYSIS function.

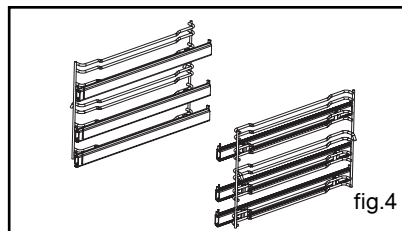

#### **Tip**

To clean dishes coated with anti-adhesive enamel, let them cool before cleaning them manually with a dish soap. Avoid scouring sponges. Do not cut on it with a knife or a metallic pizza cutter; use plastic or silicone utensils instead.

• **INTRODUCTION TO THE PROGRAMMER**

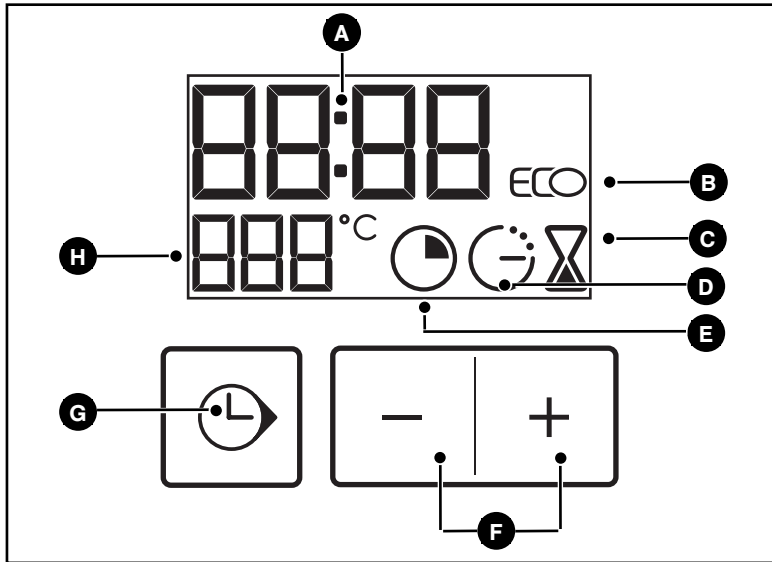

**A** Time and duration display

**B** ECO cooking indicator

**C** Timer indicator

**D** End of cooking indicator

**E** Cooking time indicator

**F** Touch controls for setting time

**G** Selection touch control (duration and time)

**H** Digital temperature display

### •How to set the time

- When supplied with electricity

The display flashes 12:00. (fig.1)

Set the time by pressing the + and - touch controls (pressing and holding the touch control makes the numbers advance more quickly) (fig.2).

Example: 12:30

Press the “⌚” touch control to enter.  
The display stops flashing.

- To reset the clock time

The function selector must be in the 0 position (fig.1).

Press and hold the “⌚” touch control for a few seconds until the display is flashing (fig.2), then release. Beeps are sounded to indicate that it is now possible to set.

Adjust the clock setting with the + and - touch controls (fig.3).

Press the “⌚” touch control to confirm (fig.4).

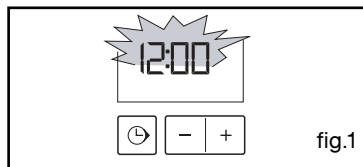


fig.1

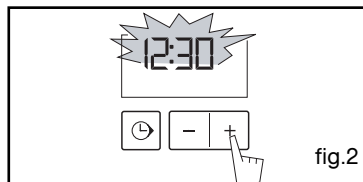


fig.2

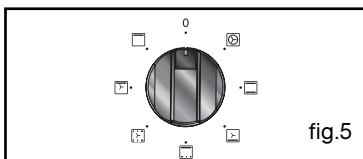


fig.5

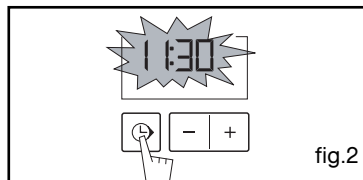


fig.2

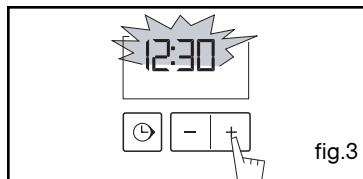


fig.3

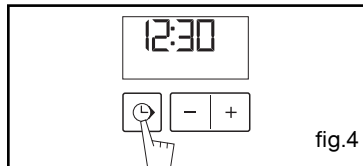


fig.4




### **Warning**

*If the “⌚” touch control is not pressed, the setting will be automatically recorded after a few seconds.*


### • Immediate cooking


– The programmer should display only the time.

It should not be flashing (fig.1).

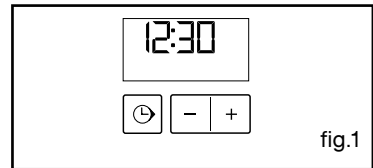

Turn the function selector to the position of your choice.


Example: position  (fig.2).

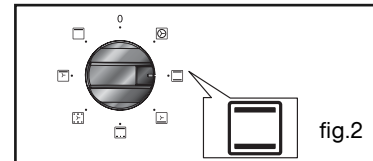

Your oven suggests the optimal temperature for this type of cooking.

It is, however, possible to adjust the temperature by turning the temperature selection knob toward + or - (fig.3)


Example: temperature setting: 210°C (fig. 4).

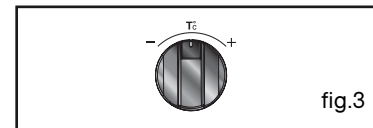

**Place your dish in the oven** based on the recommendations provided by the cooking guide.

After these actions, the oven heats up and the temperature indicator flashes.

A series of beeps will be emitted when the oven reaches the selected temperature.  
The temperature stops flashing.

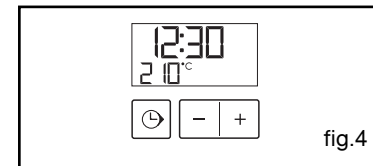

### Warning

*After a cooking cycle, the cooling fan continues to operate for a period of time to guarantee good oven reliability.*



### Warning

*All cooking takes place with the door closed.*



### Warning

*Do not hang a towel or cloth on the oven handle.*

## • PROGRAMMED COOKING

### - *Cooking with immediate start and programmed duration*

- Select the desired cooking mode and adjust the temperature (fig.1).

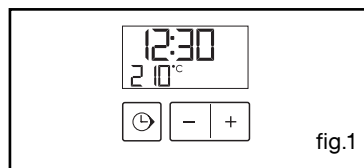


fig.1

- Press the “⌚” touch control until the cooking time indicator begins flashing ⌚.

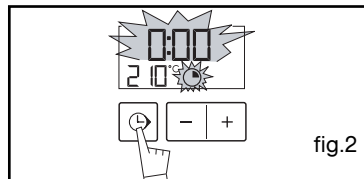


fig.2

The display flashes 0:00 to indicate that you can now adjust the setting (fig.2).

- Press the + or - touch controls to set the desired time.

Example: 30 minutes of cooking (fig.3).

The cooking time is automatically recorded after a few seconds.

The cooking time stops flashing.

The countdown of the duration begins immediately after it has been set.

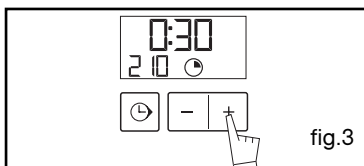


fig.3

### After these three steps, the oven heats up:

A series of beeps will be emitted when the oven reaches the selected temperature.

At the end of cooking (end of programmed time),

- The oven stops,

- The cooking time indicator and 0:00 flash (fig.4).

- A series of beeps is emitted for a few moments. The beeps are definitively stopped by pushing on any touch control.

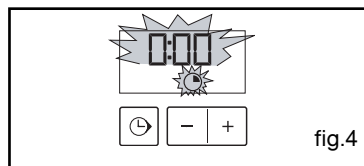


fig.4

The displays once again shows the time of day when the function selector is returned to 0 (fig.5).

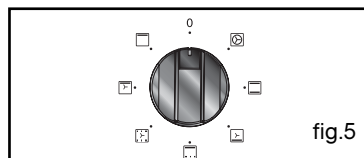


fig.5

## • PROGRAMMED COOKING

### - Cooking with delayed start and designated cooking end time

Proceed as with standard programmed cooking.

- After setting the cooking time, press the "⌚" touch control until the "⌚" end of cooking indicator flashes

The display flashes 0:00 to indicate that you can now adjust the setting (fig.1).

- Press the + or - touch control to set the desired cooking end time.

Example: end of cooking at 13:00 (fig.2).

The end of cooking time is automatically recorded after a few seconds or when you press the "⌚" touch control.

The end of cooking time display stops flashing.

**After these three steps, the oven heating is delayed so that cooking ends at 13:00.**

At the end of cooking (end of programmed time),

- The oven stops,
- The cooking time indicator and 0:00 flash (fig.3).
- A series of beeps is emitted for a few minutes. The beeps are definitively stopped by pushing on any touch control.

The displays once again shows the time of day when the function selector is returned to 0 (fig.4).

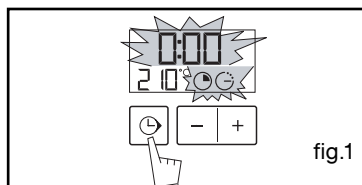


fig.1

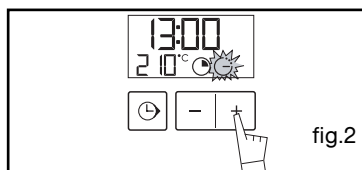


fig.2

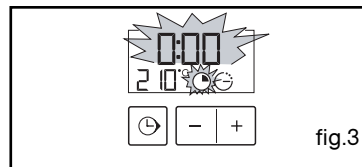


fig.3

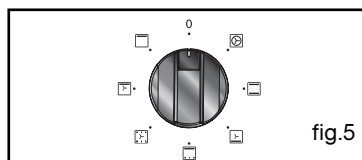


fig.5

## • USING THE TIMER FUNCTION

- Your oven's programmer can be used as an independent timer that allows you to count down a time without operating the oven.

In this case, the timer display has priority over the clock display.

- Press the "⌚" TOUCH CONTROL (fig.1) until the timer symbol flashes

⌚ -> 0.00 and a small hourglass flashes.

- Adjust the selected time by pressing the + or - touch controls. (fig.2).

- Press on the "⌚" touch control to confirm or wait a few seconds.

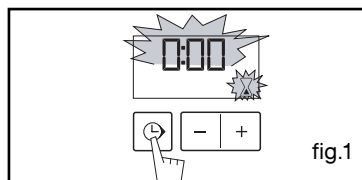


fig.1

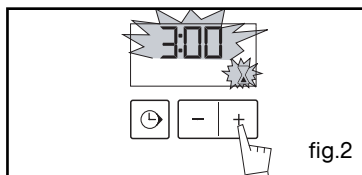


fig.2

The display stops flashing after a few seconds and the timer starts working, counting down the time in seconds.

Once the time has expired, the timer emits a series of beeps to notify you.

The beeps are stopped by pushing on any touch control.



### **Warning**

*It is possible to change or cancel the timer programme at any time.*

## • SETTING THE DISPLAY BRIGHTNESS

You can adjust the brightness of your display. To do this:

- Set and confirm the time on your programmer as 00:10 (fig.1).

- Press simultaneously on the + and - touch controls for 10 seconds until "CO" is displayed; you are not in configuration mode (fig.2).

- Press the + and - touch controls to obtain the desired brightness.

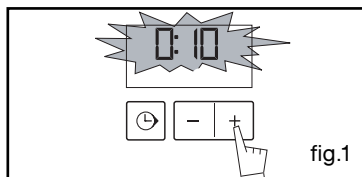


fig.1


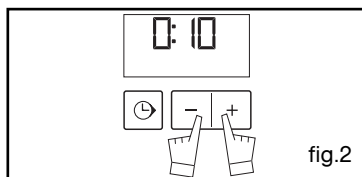


fig.2

After having adjusted the brightness to your liking, wait a few seconds and return your programmer to the current time of day.



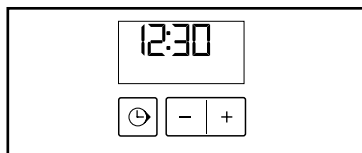

**CIRCULATING HEAT**

(recommended temperature **180°C** - Min. 35°C - Max. 235°C)

- Cooking is controlled by the heating element located at the back of the oven and by the fan.
- Preheating unnecessary except for cooking programmes requiring very short times (biscuits on several levels).
- Recommended for preserving tenderness in meats, vegetables and fish and for multiple cooking on up to three levels.

**TRADITIONAL**

(recommended temperature **225°C** - Min 35°C Max - 275°C)

- Cooking controlled by the upper and lower heating elements with no fan.
- Requires preheating before the dish is placed in the oven.
- Recommended for **slow, gentle cooking**: tender game meat, etc. To seal **roasts** of red meat. To simmer in a **covered stew pan** dishes that were begun on the hob (coq au vin, stew, etc.).

**PULSED BOTTOM ELEMENT**

(recommended temperature **205°C** - Min 35°C Max - 275. C)

- Cooking is controlled by the bottom element combined with a slight dose of the grill and with the fan.
- Cooking heat from the bottom with a small amount of heat from the top. Place the grid on the lowest shelf support.
- Recommended for **moist dishes** (quiches, juicy fruit tarts, etc.). The crust will be thoroughly cooked on the bottom. Recommended for **dishes that rise (cake, brioche, kouglof, etc.)** and **for soufflés** that will not be stuck by a crust formed on the top. Cooking multiple items on up to three levels.

**TRADITIONAL ECO**

- Cooking controlled by the upper and lower heating elements with no fan.
- This position makes it possible to save approximately 25% while maintaining cooking properties. The ECO position is used for the energy label performance.
- You will save energy throughout the cooking cycle, but the time may be slower.

**LOW TEMPERATURE STABILISATION/BREAD DOUGH**

(recommended temperature **80°C** - Min 35°C Max - 100°C)

- Heat regulated by the upper and lower elements with use of fan.
- Recommended for **rising dough for bread, brioche, kouglof, etc.** while not exceeding 40° (plate heating, defrosting).

**PULSED GRILL**

(recommended temperature **200°C** - Min. 180°C - Max. 230°C)

- Cooking is controlled alternately by the upper element and the fan.
- Preheating unnecessary. Roasts and poultry that are juicy crispy and all over.
- Recommended for all **poultry** or **roasts** to seal and cook through **leg roast, beef ribs**

For preserving tenderness in filets of **fish**.

**HIGH GRILL**

(recommended temperature **275°C** - Min 180°C Max - 275°C)

- Cooking controlled by the upper element without the fan.
- Preheat the oven for five minutes. Slide the drip tray onto the lower shelf support to collect greases.
- Recommended for grilling **chops, sausages, slices of bread, prawns placed on the grid**.

*\* Programme(s) used to obtain the results indicated on the energy label in compliance with European standard EN 50304 and in accordance with European Directive 2002/40/CE.*

## • CLEANING THE OUTER SURFACES

To clean the window of the electronic timer, as well as the oven door, use a soft cloth moistened with a glass cleaner.

Do not use abrasive cleaning products or hard, metallic scrubbers to clean the oven's glass door, which could scratch the surface and cause the glass to shatter.

To preserve your appliance, we recommend that you use Clearit cleaning products.



**Professional expertise  
serving individuals**

Clearit offers you professional products and solutions designed for the daily care of your household appliances and kitchens.

They are on sale at your regular retailer, along with a complete line of accessories and consumable products.

## • CLEANING THE DOOR





### **Warning**

**Before unclipping the glass, let the appliance cool down.**


- Open the door all the way and fix it in place using the two red stops (fig.1).

They are supplied in your appliance's plastic pouch.

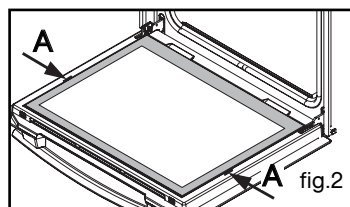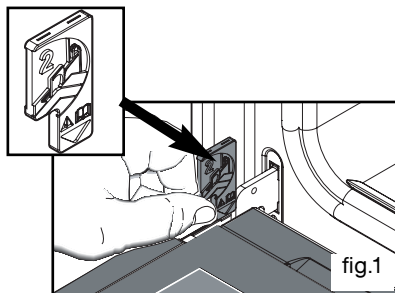

- Remove the first clipped in glass as follows: Insert the other two red stops in the **A** locations provided for this purpose (fig.2).

Create a lever effect on these parts to unclip the glass (fig.3).

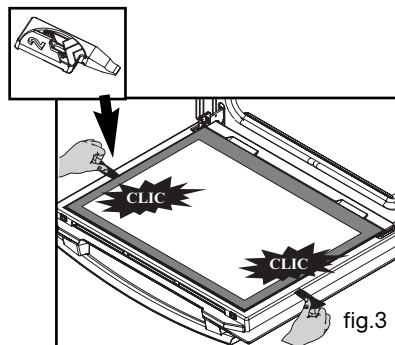

- Clean the glass using a soft sponge and dish soap.


Do not immerse the glass in water.

Do not use abrasive creams or scrubbing sponges. Rinse with clean water and dry with a lint-free cloth.

After cleaning:

- Clip in your window(fig.4).
- Remove the red plastic stops.

**Your appliance can now be used again.**

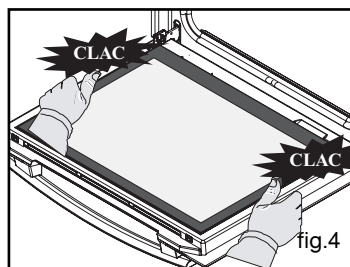

## • CATALYSIS OVEN

- This oven is composed of an enclosure fitted with detachable walls covered with a special microporous enamel (catalytic enamel), which provides its self-degreasing properties. As soon as dirt appears, it spreads out and is dispersed into the microporous holes. It is oxidised on both sides and gradually disappears. The self-degreasing enamel is mainly suited to fatty, rather than sugary substances. This is why the oven floor, which is more subject to sugary overflow, is not covered with this enamel.

### **We strongly recommend:**

- That you do not scrub these catalytic walls with metallic brushes, pointed or sharp instruments.
- That you do not try to clean them with commercial scouring products.
- When grilling food, the temperature of the walls is not always sufficient to eliminate major spattering of fat.

In this case, following cooking, prolong the heating of the oven for 20 to 30 minutes, at the maximum temperature of the chosen sequence.

If traces of spatter remain, they will be reduced during subsequent cooking operations.

Before you clean the cavity, let the oven cool down and confirm that all the knobs are in the OFF position.

#### General guidelines:

- \* Do not spray water on the appliance.
- \* Abrasive powders and scouring pads should be avoided.


#### POLISHED METAL SURFACES

Use commercially available products designed to take care of polished metals.

#### OVEN DOOR WINDOW

After cooking food that causes splattering, it is recommended that you clean the inside oven door window with soapy water.

Your oven cleans itself easily; here are some guidelines to help you:

Type of soil	How to proceed	Products to use
Light	Thoroughly wet the area with hot water	Dish sponge
Accumulation of baked-on soil	Let it soak in for 30 minutes in a warm oven or overnight for a cold oven.	"Special oven cleaner" aerosol Follow the instructions for use.
 Powder	 Scouring sponge	 Special disinfectant sponge for delicate dishes



#### **Warning**


- The oven must be turned off before any attempt to clean the cavity.

## • CHANGING THE CATALYTIC WALLS

Before commencing disassembly, allow the appliance to cool down and check that the cooking selector switch is in the 0 position.

### Lateral walls (1)

Unhook the wire shelf support (2) at the front by lifting it (*diagram A*). Pull the shelf support structure towards you, lifting it so as to unhook the rear attachment (*diagram B*). Remove it from the 2 holes (3) in the catalytic wall and from the oven cavity. Then remove the catalytic wall (1). Replace the new elements (wall and/or shelf supports) by performing the reverse operations.

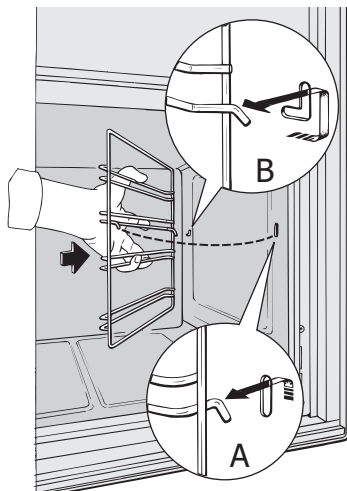


### Back wall (4)

Before performing this operation, unplug the oven.

Completely unscrew the screw (5) located at the top of the back wall. Tilt the wall forwards in order to remove it from the oven cavity. Position the new panel by reversing these steps.

Plug in the oven again.

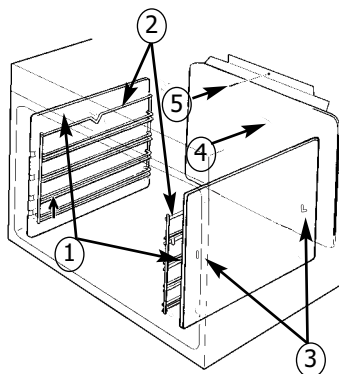

### Warning

- The oven must be turned off when cleaning inside the cavity.

If you have a doubt about the functioning of your oven, this does not necessarily mean that there is a malfunction. *In any event, check the following items:*

YOU OBSERVE THAT...	POSSIBLE CAUSES	WHAT SHOULD YOU DO?
The oven is not heating	<ul style="list-style-type: none"> <li>- The oven is not connected.</li> <li>- Your fuse is out of order.</li> <li>- The selected temperature is too low.</li> </ul>	<ul style="list-style-type: none"> <li>➔ Plug in your oven.</li> <li>➔ Replace the fuse and check its value (16A).</li> <li>➔ Increase the selected temperature.</li> </ul>
The light in your oven is no longer working.	The light in your oven is no longer working.	<ul style="list-style-type: none"> <li>➔ Replace the bulb.</li> <li>➔ Plug in your oven or replace the fuse.</li> </ul>
Your oven starts beeping.	<ul style="list-style-type: none"> <li>- During cooking.</li> <li>- At the end of cooking.</li> </ul>	<ul style="list-style-type: none"> <li>➔ The recommended temperature of your choice has been reached.</li> <li>➔ Your programmed cooking cycle is finished.</li> </ul>



### Warning

- Repairs to your appliance must be made only by professionals. Repairs not carried out according to guidelines can be a source of danger to the user.



### Tip

In all circumstances, if your efforts are not sufficient, contact the After-Sales Service Department without delay.

**Warning**

- *Disconnect your oven before performing any task on the bulb to avoid the risk of electric shock and, if necessary, let the appliance cool down.*

**Tip**

*To unscrew the view port and the light, use a rubber glove, which will make disassembly easier.*

## • CHANGING THE BULB


The bulb is located on the ceiling of your oven's cavity.

- Disconnect the oven.
- Unscrew the view port (fig.1).
- Unscrew the bulb in the same direction.

Bulb specifications:

- 15 W
- 220-240 V ~
- 300°C
- E 14 cap

- Replace the bulb then reposition the view port and reconnect your oven.

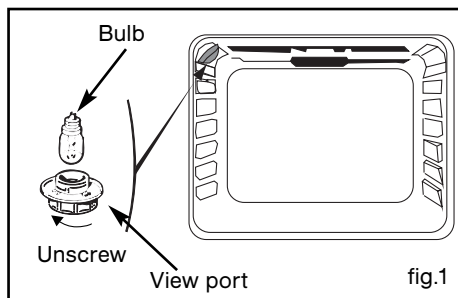



Any maintenance on your equipment should be undertaken by:

- either your dealer,
- or another qualified mechanic who is an authorized agent for the brand appliances.

When making an appointment, state the full reference of your equipment (model, type and serial number). This information appears on the manufacturer's nameplate attached to your equipment.