

DWA314W | smeg freestanding/built-in dishwasher



30cm
maximum
plate
diameter

ALSO AVAILABLE IN STAINLESS STEEL: DWA314X

ORBITAL WASH SYSTEM

Smeg's orbital wash system has two spray arms which operate simultaneously in opposite directions to ensure water is evenly distributed throughout the inner cavity for a perfect wash.

DELAY START TIMER

Delay Start option allows for up to 24-hours delay start — allowing you to take advantage of off-peak energy usage times.


TOTAL ACQUASTOP

Acquastop is a water safety device that operates when the dishwasher is not in operation by restricting mains pressure at the tap, and not at the dishwasher.

ULTRAFAST PROGRAM

The Ultrafast program has been developed especially for slightly dirty dishes that are to be washed immediately after use. This program takes only 27 minutes.

EAN	8017709183912
size	598mmW x 850mmH x 595mmD
capacity	14 placesettings
finish	white enamel
programs	7 programs soak, normal ECO, speedy 27 min, ECO, ultra clean, intensive 65°C, strong and fast
baskets	grey cutlery tray upper: 3-level adjustment, EasyGlide lower: double foldable rack with glass holder, cutlery basket
wash system	orbital ceiling spray upper spray arm six spray directions
wash temperatures	45, 50, 65, 70°C
water connection	single, cold/hot water max 60°C
timer	1–24 hour delay timer with auto soak
filtration	5-stage water filtration system
drying	natural condenser
safety	TOTAL ACQUASTOP LED on/off light end-cycle acoustic indicator self-balancing hinges
noise	47 dBA
water	9.6 litres
energy	1.9 kWh, 10 amps 230–240V, 50 Hz

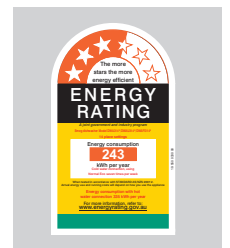

DWA314W


smeg freestanding/built-in dishwasher

SAVE ON ENERGY AND PROTECT THE ENVIRONMENT





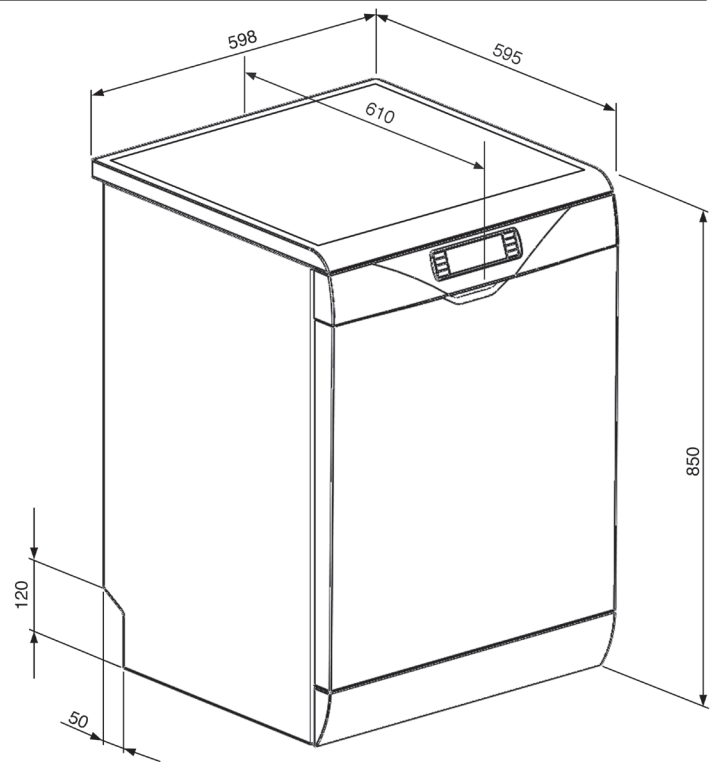


- always try to run the dishwasher full loaded
- do not wash dishes in running water
- use the washing program that is most appropriate for each type of load
- do not carry out any preliminary rinsing
- if available, connect the dishwasher to a hot water supply up to 60°C

The phosphates contained in dishwasher detergents are harmful to the environment. To avoid using excessive amounts of detergent and to save on electricity, observe the following:

- separate the more delicate items from dishes that are more resistant to aggressive detergents and high temperatures;
- do not pour the detergent directly onto the dishes.



PLEASE NOTE: drawings are not to scale. They are to assist only.

PROGRAM	LOAD	PROGRAM PROGRESS	DURATION	CONSUMPTION	
			minutes	water litres	power kWh
SOAK 	pans and dishes awaiting completion of load	cold prewash	15	3.5	0.02
RAPID 	lightly soiled dishes, washed immediately after use	wash at 38°C rinse at 50°C	27	6.5	0.70
NORMAL ECO 	crockery and cutlery normally soiled	cold prewash wash at 45°C rinse at 45°C dry	140	9.6	0.65
ECO 	dishes with normal dirt, even with dried-on residue	cold prewash wash at 55°C cold rinse rinse at 70°C dry	100	11	1.3
INTENSIVE 	dishes with normal dirt, with dried-on residue	cold prewash wash at 65°C cold rinse rinse at 70°C dry	115	13.5	1.35
STRONG AND FAST 	mixed dishes with normal dirt, without dried-on residue	wash at 65°C 2 cold rinses rinse at 70°C	135	15.5	1.60
ULTRA CLEAN 	very dirty pans and dishes, with dried-on residue	prewash at 40°C wash at 70°C 2 cold rinses rinse at 70°C dry	160	15.5	1.70