

Microwave

Miwell-Combi XSL



Operating instructions

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliance is reserved.

Validity

The model number corresponds to the first three digits on the identification plate. These operating instructions apply to the model:

Туре	Model no.	Size system			
MWC-XSL/60	939	60-450			

Variations depending on the model are noted in the text.

Contents

1	Sare	ty precautions	5
	1.1	Symbols used	
	1.2	General safety precautions	
	1.3	Appliance-specific safety precautions	
	1.4	Disclaimer	
	1.5		12
	1.6		14
	1.7		17
	1.8	Disposal	19
2	Appl	liance description	20
	2.1	Construction	20
	2.2	Operating and display elements	21
	2.3	Accessories	22
	2.4	Ventilation fan	25
	2.5	Installation	25
3	One	rating the appliance	26
Ŭ	3.1	9	2 6
	3.2	Start protection	
	3.3	•	27
_			
4		3-	29
	4.1	I	31
	4.2		31
	4.3		32
	4.4		32
	4.5		32
	4.6		32
	4.7	Factory settings	32
5	Time	e functions	33
	5.1	Setting and changing the time	33
	5.2	Timer	34
	5.3	Operating time	35
	5.4	Delayed start	36

Oper	ating modes	39
6.1	Hot air	39
6.2	Grill	40
6.3	Grill-forced convection	40
		41
		41
		41
		42
		42
	9	43
	·	43
		44
		44
		45
6.14	Combi mode	48
Care 7.1 7.2	Cleaning the exterior	50 50 50
7.3 7.4 7.5 7.6	Cleaning the door seal	50 51 52 52
7.4 7.5 7.6	Cleaning the cooking space	51 52 52
7.4 7.5 7.6	Cleaning the cooking space	51 52
7.4 7.5 7.6 Troul 8.1 8.2	Cleaning the cooking space Cleaning the accessories Replacing a defective light bulb Dle-shooting What to do if	51 52 52 53 53
7.4 7.5 7.6 Troul 8.1 8.2 Acce	Cleaning the cooking space Cleaning the accessories Replacing a defective light bulb ble-shooting What to do if After a power failure	51 52 52 53 53 55
7.4 7.5 7.6 Troul 8.1 8.2 Acce	Cleaning the cooking space Cleaning the accessories	51 52 52 53 53 55 56
7.4 7.5 7.6 Troul 8.1 8.2 Acce Tech	Cleaning the cooking space Cleaning the accessories Replacing a defective light bulb Dle-shooting What to do if After a power failure ssories and spare parts nical data	51 52 52 53 53 55 56 57
	6.2 6.3 6.4 6.5 6.6 6.7 6.8 6.9 6.10 6.11 6.12 6.13 6.14 Care 7.1	6.2 Grill 6.3 Grill-forced convection 6.4 Power&Favorit 6.5 Microwave 6.6 CombiCrunch 6.7 AutomaticPlus 6.8 Combi mode hot air 6.9 Combi mode grill 6.10 Combi mode grill-forced convection 6.11 Fast heating 6.12 Power&Favorit 6.13 AutomaticPlus 6.14 Combi mode Care and maintenance 7.1 Cleaning the exterior

1 Safety precautions

1.1 Symbols used



Denotes important safety precautions. Failure to observe said precautions can result in injury or in damage to the appliance or fittings!



Information and precautions that should be observed.



Information on disposal.



Information about the operating instructions.

- Indicates step-by-step instructions.
- Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



 Read the operating instructions before using the appliance for the first time!



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, unless they are supervised or have been given instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions



- READ THE IMPORTANT SAFETY INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE.
- WARNING: Children should only use the appliance in the combined operating mode under adult supervision due to the temperatures generated.
- WARNING: In the event that the appliance door or door seal is damaged, the appliance must not be used until it has been repaired by a qualified competent person.
- WARNING: It is hazardous for anyone other than a qualified competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.

- WARNING: Liquids and other foods must not be heated in sealed containers, as they are liable to explode.
- The appliance is intended to be used in household.
- Only use containers that are suitable for use in microwave appliances.
- The appliance must be carefully monitored when cooking foodstuffs in containers made from plastic or paper, as they could ignite.
- The appliance is intended for heating food and beverages.
 Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- If smoke is detected, switch off the appliance or pull out the mains plug, and keep the appliance door closed to stifle any flames.

- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the vessel.
- The contents of feeding bottles and baby food jars must be stirred or shaken and the temperature must to be checked before consumption, in order to avoid burns and scalds.
- Eggs in their shell or whole hard-boiled eggs should not be heated in microwave appliances since they may explode, even after microwave heating has ended.
- The appliance should be cleaned regularly and any food residue should be removed.
- Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

- Do not use abrasive cleaning agents or sharp metal scrapers for cleaning the glass of the appliance door, as they can scratch the surfaces. This can destroy the glass.
- Under no circumstances use a steam cleaner.
- Whe using the baking tray, the sloped side must face the appliance door. This makes it safer when pulling out the baking tray.

1.4 Disclaimer

- Any repairs, modifications or manipulations to the appliance, especially any live parts, may only be carried out by the manufacturer, its Customer Services or similarly qualified persons. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case of a repair order, follow the instructions given in the REPAIR SERVICE section. If necessary, please contact Customer Services.
- Make sure no water gets inside the appliance: Do not spray the appliance with water. If water gets inside it can damage the appliance.
- Retain these operating instructions for future reference. If you sell or pass
 the appliance on to a third party, please ensure these operating instructions accompany the appliance, together with the instructions on
 installation.
- The appliance is designed for use in the home for preparing food. No liability is assumed for any damage caused by improper or incorrect use.

1.5 Instructions for use

- The appliance corresponds to recognised technology standards and the relevant safety regulations. Proper use of the appliance is essential to avoid damage and accidents. Please observe the precautions given in these operating instructions.
- The appliance must be installed and connected up to the electricity supply in accordance with the separate installation instructions. Have the necessary work carried out by a qualified fitter/electrician.
- Before using the newly installed appliance for the first time, please observe the precautions in USING FOR THE FIRST TIME.
- If the appliance malfunctions, you must disconnect it from the power supply immediately.
- You should not in any circumstances flambé or cook with a lot of fat in the cooking space.
- You should not use the appliance as a room heater.
- You should never use the appliance to dry animals, fabrics or paper!
- You should ensure that the mains cables of other electrical appliances do not get caught in the door of the appliance, the electrical cable insulation could become damaged.
- You should ensure there are no foreign bodies or pets in the cooking space before closing the appliance door.
- You should not store objects in the cooking space that could pose a
 danger if the appliance were accidentally switched on. You should not
 store food or any temperature-sensitive or inflammable materials, e.g.
 cleaning agents, oven sprays, etc., in the cooking space.
- You should use original spare parts only.

Caution: Danger of injury!

- Be careful that fingers do not get caught in the door hinges. Otherwise, if the appliance door is moved, there is a risk of injury. Particular care should be taken when children are around.
- An open appliance door poses danger of tripping or injury! Do not sit or rest on the appliance door or use it as a storage surface.

Caution: Burns hazard!

- Accessible parts of the appliance can get hot when in use. Keep children away!
- The appliance, the appliance door and especially the glass get very hot when in use.
- Steam may escape from the cooking space when the appliance door is opened. Do not put your hands into the cooking space if there is steam in it!
- Overheated fat and oil can easily catch fire. Heating oil in the cooking space to sear meat is dangerous and should not be done. Never try to extinguish burning oil or fat with water (danger of explosion)! Extinguish the flames using a fire blanket and keep all doors and windows closed.
- Do not pour spirits (e.g. brandy, whisky, schnapps, etc.) over hot food danger of explosion!
- Accessories get hot in the cooking space. Always wear protective gloves or use oven cloths.
- If you notice smoke possibly coming from a fire in the appliance or inside
 the cooking space, keep the appliance door closed and disconnect the
 appliance from the mains supply.
- The appliance will remain hot for some time after it is switched off and cool down only slowly to room temperature. Allow sufficient time for the appliance to cool down before, for instance, cleaning it.
- Do not leave the appliance unsupervised when drying herbs, bread, mushrooms, etc. If the foodstuff dries out too much, this can pose a fire hazard.

How to avoid damaging the appliance

- The construction of the appliance may not be changed in any way. Do not apply force to or interfere with the appliance door or the control and safety devices. The illumination may only be replaced by our Customer Services.
- Always keep the appliance clean. Clean the appliance door with mild detergent.
- Take care not to damage the appliance door, the door frame and the door hinges.
- Do not use abrasive cleaning agents or cleaning aids such as steel wool, knives, glass scrapers, razor blades, etc. to clean the door glass.
 Scratches on the door glass could cause a breakage.
- · Close the appliance door carefully.
- When cleaning the appliance make sure no water can get into the inside
 of the appliance. Use only a moderately damp cloth. Do not spray the
 inside or outside of the appliance with water. Do not use a steam cleaner.
 If water gets inside the appliance, it can cause damage.

1.6 Microwave

- Microwave energy is safe when used properly. When the appliance door is opened, microwave operation is automatically interrupted. In the event of a malfunction or damage to the appliance, especially to the appliance door, do not use microwave operation. The appliance must be repaired by qualified personnel.
- Ensure that nothing is trapped between the appliance door and the frame.
- Do not switch the microwave on until you have put the food in the cooking space.

Heating foods and liquids

- Do not leave your appliance unattended when heating or cooking food in containers that are made of plastic, paper or other flammable materials. The containers can melt or ignite.
- Do not heat beverages or food that contain alcohol. Ignition hazard and danger of explosion!
- When heating liquids, place a teaspoon in the vessel to prevent delayed boiling (or superboiling). With delayed boiling, boiling point is reached without the typical steam bubbles forming. Disturbing an open vessel, even slightly, can cause the liquid to shoot out – risk of scalding!
- · Do not use vessels with a narrow spout.
- Stir liquids halfway through heating and when the time is up allow the vessel to stand in the cooking space for a short time. Stir the contents once more and then take the vessel out of the cooking space.
- Infant food in jars or bottles must be heated without the lid, top or teat.
 Infant food must be stirred or shaken well after being heated. It is imperative to check the temperature of the food before giving it to the infant risk of scalding!
- Do not heat food in tightly sealed containers (tins, bottles, sealed foil, paper or metal disposable packaging). Remove plastic packaging before cooking or defrosting foods. Sealed containers can explode. Always open the containers.

1 Safety precautions

- The cooking time depends on the quantity, nature and initial temperature of the food, as well the dishes being used. Always start with the shorter cooking time given to avoid overcooking the food. Otherwise, smaller quantities or food with a low moisture content can dry out and possibly ignite. If the food has not reached the right stage of cooking when the time is up, then extend the cooking time.
- Prick food with a skin or peel such as potatoes, tomatoes, sausages, shell food, etc. with a fork. Otherwise, the steam that is produced will be unable to escape and may cause the food to explode.
- Do not cook eggs in the shell. Do not heat up boiled eggs. Eggs can explode in the microwave. Crack the eggs open and then whisk them. Pierce the volks of fried eggs.

1.7 Note on accessories



The accessories get very hot during use – burns hazard! Always wear protective gloves or use oven cloths.

Turntable roller and glass turntable

- You should use the appliance at all times and exclusively with the turntable roller and the glass turntable supplied.
- You should never place a vessel or container other than the glass turntable directly on the turntable roller.
- You should allow the glass turntable to cool down first before cleaning it or rinsing it with water.
- You should not cook food directly on the glass turntable.
- You should not place hot food or containers on the glass turntable when it is cold.
- You should not place frozen food or containers on the glass turntable when it is hot.

CombiCrunch plate

- You should use the CombiCrunch plate in the CombiCrunch and hot air modes only.
- You should never use the CombiCrunch plate together with the wire rack in the CombiCrunch mode.
- You should never use the CombiCrunch plate as a stand for other cookware or containers.

High or low wire rack

- You should always place the wire rack in the centre of the glass turntable.
- When using the combi mode, do not put metal cookware on the wire rack. Otherwise, arcing can occur which will damage your appliance.
- You should never use the wire rack with the Power&Favorit, microwave and CombiCrunch operating modes. Otherwise, arcing can occur which will damage your appliance.

Food cover

• Use the food cover with the Power&Favorit and microwave modes only.

The food cover could otherwise melt.

Baking tray

• You should only use the baking tray in the hot air mode. Otherwise, arcing can occur which will damage the appliance.

Cookware

 You should ensure that the cookware does not touch the sides of the cooking space as it rotates.

Note also when using the microwave and combi modes:

- You should use only heat-resistant, microwave-proof dishes, such as glass, ceramic, porcelain or temperature-resistant plastics. Microwaves can penetrate these materials. Microwaves cannot or can only partially penetrate metal cookware; food in this instance will remain cold. If you use metal cookware, arcing could occur which will damage the appliance.
- You should only use cookware with a metal decor, e.g. a gold rim, or food in aluminium containers if the manufacturer guarantees their microwave compatibility. This also applies to products made from recycled paper.
- Do not use a meat thermometer. The features of meat thermometers can cause arcing in the microwave mode, which will damage your appliance.
- Porcelain, ceramic and earthenware dishes with cavities which can fill with water can crack. Follow the manufacturers' instructions.

1.8 Disposal

Packaging



Danger of suffocation! Packaging materials (e.g. plastic, polystyrene) can be dangerous for children. Keep packaging materials away from children.



All packaging material is marked and should be collected for recycling and disposed of in an environmentally friendly way.

Disconnection


- ➤ Pull the plug out of the mains socket or have the appliance disconnected from the mains supply by an electrician. Then cut off the mains cable.
- ➤ Disable the appliance after disconnecting it.

Appliance disposal

- The symbol on the identification plate warns that the appliance may not be disposed of in normal household waste.
- The appliance must be disposed of in accordance with local regulations on waste disposal. For more information on the handling, disposal and recycling of the product, please contact the local authorities, the local recycling facilities for household waste or the retailer from whom you purchased the appliance.

2 Appliance description

2.1 Construction

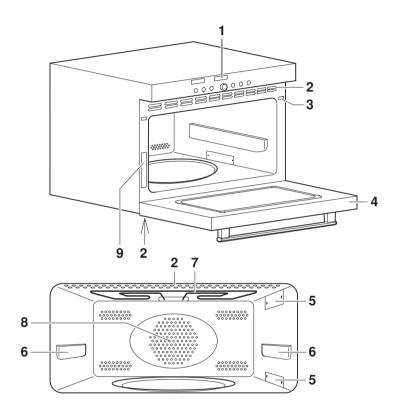


- 1 Operating and display elements
- 2 Ventilation slots
- 3 Safety door catch
- 4 Appliance door
- 5 Microwave inlet

- 6 Level
- **7** Grill
- 8 Hot air fan
- 9 Identification plate

2.2 Operating and display elements



Buttons

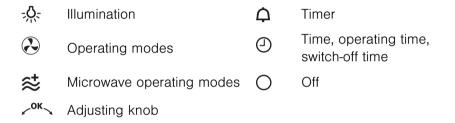

Displays

Microwave power level, temperature, grill setting
TY:25 Time, operating time, switch-off time, timer

Operating modes



Microwave operating modes

Symbols

 \triangle Timer \rightarrow I Switch-off time

2.3 Accessories

Turntable roller and glass turntable



You should always use the turntable roller and the glass turntable in combination with the other accessories.

- ➤ Place the turntable roller in the fitting in the floor of the cooking space.
- ➤ Position the glass turntable on the turntable roller so that the pegs on the base of the glass turntable engage in the corresponding recesses of the turntable drive in the floor of the cooking space. The glass turntable can turn clockwise or anti-clockwise.
- ➤ The glass turntable must be used with all operating modes. It collects meat juices and food particles, preventing soiling of the cooking space floor.



CombiCrunch plate



You should use the CombiCrunch plate in the CombiCrunch and hot air modes only. You should not use knives or cutting wheels to cut on the CombiCrunch plate. This will cause visible damage.



- Use CombiCrunch plate to make the food brown and crispy.
- ➤ Place the food directly on the CombiCrunch plate.



CombiCrunch grip

➤ Use the CombiCrunch grip for taking the Combi-Crunch plate out of the cooking space.

High or low wire rack



When using the combi mode, you should never place metal dishware on the wire rack. Otherwise, arcing can occur which will damage the appliance.



- ➤ When using the hot air mode, place the food on the wire rack to allow the air to circulate freely.
- ➤ When using the grill mode, place the food directly on the wire shelf and do not cover.

Food cover



Use the food cover with the Power&Favorit and microwave modes only. The food cover could otherwise melt.

- Use the food cover to prevent the food from drying OUT
- It prevents the cooking space from becoming soiled
- Using it shortens the cooking time.
- For heating food on more than one level:
- ➤ Place a plate on the glass turntable and cover with the food cover.
- ➤ Place a second plate on the food cover and cover it with a second food cover.

Baking tray



Use the baking tray in the hot air mode only. Do not use knives or cutting wheels to cut on the baking tray. This will cause visible damage.

- Baking tray, particularly for savouries and biscuits.
- If not fully covered by the baking, the shape of the baking tray can become distorted during baking. This is normal. As it cools down, it will go back to its original form.
- ➤ The baking tray is to be used the normal way round - not upside down.



When using the baking tray, the sloped side must face the appliance door. This makes it safer when pulling out the baking tray.







Ventilation fan 2.4

The fan switches on automatically during operation. The fan can continue to run at the end of operation to cool the electronic components. During this time, the appliance door can be opened and the food removed. The fan switches off automatically.

2.5 Installation



Never obstruct the ventilation slots.

The appliance may only be operated with the appropriate approved installation kit. Alternative ways of setting up or installing the appliance are not permitted.

A special installation kit is provided for installing the appliance.

Adequate air circulation is essential for the trouble-free operation of the appliance.



Observe the Installation instructions and follow the detailed INSTALLATION SPECIFICATIONS.

3 Operating the appliance

The operating modes, the operating time, the switch-off time and various other functions can be selected by pressing the appropriate button once or more.

- The symbol for the function selected illuminates or flashes.
- A recommendation flashes in the corresponding digital display.
- Turn the pok adjusting knob to change the setting.
- Other settings or changes can be made at any time.
- Press the O button to switch off the appliance.

3.1 Using for the first time

Before using the newly installed appliance for the first time the following measures should be taken:

- ➤ Remove all packaging and transport materials from the cooking space.
- ➤ When [2:30] flashes in the right digital display, turn the ✓ adjusting knob to set the time.

 


- Press the pok adjusting knob to switch between hours and minutes.
- Turn it to set the hours and the minutes.
- ➤ Clean the cooking space and the accessories.

3.2 Start protection

Start protection prevents an operating mode being started accidentally. If the length of time between closing the appliance door and starting the appliance is longer than 1 minute, start protection is automatically activated.

- If any attempt is made to start any operating mode, door appears in the digital displays.
- Opening the appliance door deactivates start protection.
- The operating mode is started by pressing the pok adjusting knob.



3.3 Example



Scalding hazard! Disturbing a vessel, even slightly, can cause the liquid to erupt! When heating liquids, place a teaspoon in the vessel to prevent delayed boiling (or superboiling).

Stir liquids before consuming.

Heat is produced during cooking. Always wear protective gloves or use oven cloths.

You should keep children away.

The symbols are explained in the separate TIPS ON SETTINGS. The tables in tips on settings give:

Heating up	Quantity	A [≋]		°C/***	† ₩	W	.cli	⊕ mins.	
Milk	2 dl	<i>R3</i>	-	1	*	650	_	11/2-2	_

- ➤ The turntable roller and the glass turntable must be used with all operating modes.
- ➤ Next steps are described on the following sides.

- ➤ Select the ≅ operating mode.
 - 550 flashes in the left digital display.
 - The ≅ symbol flashes.
 - The I→I symbol illuminates.
 - 5 'BB illuminates in the right digital display.
- ➤ The microwave power level can be changed by turning the ✓ok adjusting knob.
- ➤ Use the button to select the operating time.
 - 550 illuminates in the left digital display.
 - The ≅ symbol illuminates.
 - The I→I symbol flashes.
 - 5 '00 flashes in the right digital display.
- ➤ Turn the ✓oK adjusting knob to change the operating time to 1130 and press to confirm.
 - The milk is heated up.

Switching off

- ➤ Press the button.
 - The $[\approx]$, \rightarrow I symbols and the digital displays go out.



When the symbols are no longer illuminated the appliance is off. The fan can continue to run.

Removing the cooked food from the cooking space



Burns hazard! Hot air may escape from the cooking space when the appliance door is opened.

The accessories will be hot. Use either protective gloves or the CombiCrunch grip.

➤ To prevent corrosion, leave the appliance door open until the cooking space has cooled down.


4 User settings

You can adjust the settings.

- ➤ With the appliance switched off, hold the ✓ adjusting knob depressed for 5 seconds.
 - EEEE appears in the digital display.
- ➤ Press the ✓oK adjusting knob to confirm.
 - E -: [] appears in the digital display for «Childproof lock off».
- ➤ Turn the ✓oK adjusting knob to select setting.
- ➤ Press the ✓oK adjusting knob to confirm.
 - E.g. [h: I flashes in the digital display for «Time display visible».
- ➤ Turn the ✓oK adjusting knob to change the digital display to Eh: ① for «Time display invisible».
- ➤ Press the ✓oK adjusting knob to confirm the setting.
- ➤ Press the button to end the settings.



Possible settings

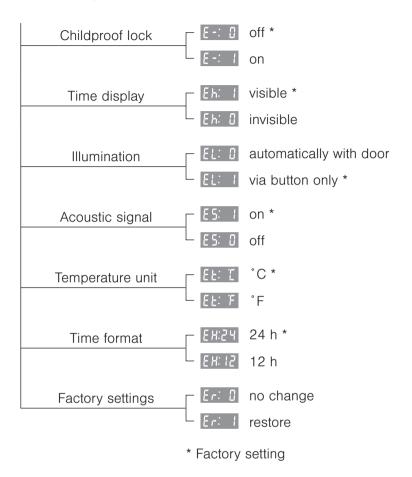

4.1 Childproof lock

 
The childproof lock is to prevent the appliance being inadvertently switched on.

If the 🚱 or 📚 button are pressed when the childproof lock is activated:

- A double acoustic signal is emitted.
- Nothing happens when the button is pressed.

Operating the appliance when the childproof lock is activated

- ➤ Hold the button depressed and press the ② or ≋ button.
 - The childproof lock is overridden. The appliance can be operated as normal.
 - The childproof lock is automatically reactivated 10 minutes after the appliance has been switched off.



4.2 Time display

If the «invisible» setting is selected, the displays are not illuminated when the appliance is off. The time is visible when the appliance is on.



To reduce power consumption to a minimum, select Eh: II, «Time display invisible», in the user settings. Despite automatic energy-saving stand-by, all safety functions are active.

4.3 Illumination

With the «automatically with door» setting, when an operating mode is running the illumination comes on when the appliance door is opened and goes off again when it is closed.



Acoustic signal 4.4

The acoustic signal can be switched on or off:

• On	Acoustic signal is switched on
• Off	Acoustic signal is switched off



Even if the acoustic signal setting is set to «off», an acoustic signal is emitted in the event of a malfunction.

Temperature unit 4.5

For temperature unit, select between «°C» and «°F».

• °C	Degrees Celsius
• °F	Degrees Fahrenheit

Time format 4.6

Select the «24 h» setting to activate the European time format and the «12 h» setting for the US time format (a.m./p.m.).

4.7 Factory settings

If one or more user settings have been changed, these can be reset to the factory settings.

5 **Time functions**

The following time functions are available:

- Time
- Timer
- Operating time time-controlled switch-off of the appliance
- Delayed start time-controlled switch-on and switch-off of the appliance




When the appliance is switched off, the time display is dimmed

between 24:00 and 6:00.

If the EH: 12 time format has been selected, the display is not dimmed.

 5.1 Setting and changing the time



- ➤ Press the () button.
 - The hour flashes in the right digital display.
 - The (2) symbol flashes.
- ➤ Turn the ✓oK adjusting knob to set the hour.
- \rightarrow Press the (1) button or the \nearrow^{OK} adjusting knob.
 - The minutes flash in the right digital display.
 - The () symbol flashes.
- ➤ Turn the ✓oK adjusting knob to set the minutes.

Press the confirm the setting.

5.2 Timer

The timer functions like an egg timer. It can be used at any time and independently of all other functions.

Setting

- ➤ Press the ♠ button.
 - 🗓 ' 🗓 🌐 flashes in the right digital display.
 - The \(\hat{\(\mathcal{\(\mathcar{\(\mathcal{\(\mathcal{\(\mathcar{\}\)}}}}}\) symbol flashes.}}}}}}}}} \)
- ➤ Turn the ✓oK adjusting knob to set the timer duration.

The timer can be set for:

- up to 10 minutes in 10-second intervals, e.g. 9 '50 = 9 minutes and 50 seconds.
- over 10 minutes in 1-minute intervals, e.g. Th 12 = 1 hour and 12 minutes.

The maximum timer duration that can be set is 9 hours and 59 minutes.



Press the \triangle button 1× to reset the timer duration to $\square '\square\square$.

Starting

- ➤ Press the ✓oK adjusting knob to start the timer.
 - The countdown to the time remaining is visible in the digital display.
 - The \(\Omega\) symbol illuminates.

Set duration finished

When the set duration is up:

- A sequence of 5 short acoustic signals is repeated for 1 minute.
- The symbol flashes.

Press the \triangle button to switch off the acoustic signal.

Checking and changing

- ➤ Press the △ button.
 - The countdown to the time remaining flashes in the right digital display.
 - The \(\inft\) symbol flashes.

Turn the cor, adjusting knob to change the timer duration.

Switching off before time

- ➤ Press the ♠ button 2×.
 - [] '[] flashes in the right digital display.
 - The \(\inft\) symbol flashes.
- ➤ Press the ✓oK adjusting knob to confirm.

5.3 Operating time

The operating mode selected switches off automatically when the operating time is up.

Setting

- ➤ Select the desired operating mode.
- ➤ If the right digital display does not flash, press the ② button.
 - A corresponding recommended value appears in the right digital display.
 - The |→| symbol flashes.
- ➤ Turn the ✓oK adjusting knob to set the duration.
- ➤ Press the ✓oK adjusting knob to confirm.

Checking and changing

- ➤ Press the ② button.
 - The countdown to the time remaining flashes in the digital display.
 - The \rightarrow I symbol flashes.

Turn the ✓oK adjusting knob to change the duration.

Switching off before time

➤ Press the ○ button.

End of the operating time

When the set duration is up:

- The appliance switches off automatically.
- A long, intermittent acoustic signal is emitted for 1 minute.
- [] '[] flashes in the right digital display.
- The \rightarrow I symbol flashes.
- The settings remain for 3 minutes.

Extending the operating time

► Turn the ✓oK adjusting knob within 3 minutes to select a new duration.

Switching off

- ➤ Press the button to switch off.
 - The settings are cleared.

5.4 Delayed start

The delayed start is activated when for the operating mode selected both an operating time and a switch-off time are set. The appliance switches on and off again automatically at the desired times.



Delayed start can only be selected if the operating time is shorter than 20 minutes. Exception: with pure hot air mode 1h30.

Perishables should not be kept unrefrigerated.

A delayed start is not possible for the «AutomaticPlus» operating mode.

 
➤ Select the desired operating mode.

Setting the operating time

- ➤ If the right digital display does not flash, press the ② button.
 - The corresponding recommended value flashes in the right digital display.
 - The \rightarrow I symbol flashes.
- ➤ Turn the ✓oK adjusting knob to set the duration.

Setting the switch-off time

- ➤ Press the button again.
 - The switch-off time without a delayed start e.g. **B**: 15 flashes in the right digital display.
 - The →I symbol flashes.
- ➤ Turn the ✓oK adjusting knob to set the switch-off time.




- ➤ Press the ✓oK adjusting knob to confirm.
 - The time appears in the right digital display.
 - The →I symbol illuminates.
 - The operating mode selected remains switched off until the automatic start.

Example:

- ➤ Select the **≋** operating mode and 150 W.
- ➤ At 8:00, set an operating time of 15 minutes.
- ➤ Set the switch-off time to 11:30.
 - The appliance will automatically switch on at 11:15 and off again at 11:30.

Checking and changing

 - ➤ Press the button 1×.
 - The operating time is visible for 2 seconds.
- ➤ Press the button 2×.
 - The switch-off time flashes. It can be changed.



Switching off before time

➤ Press the ○ button.

End of the operating time

When the set duration is up:

- The appliance switches off automatically.
- A long, intermittent acoustic signal is emitted for 1 minute.
- [] '[] flashes in the right digital display.
- The \rightarrow I symbol flashes.
- The settings remain for 3 minutes.

Extending the operating time

➤ Turn the ✓oK adjusting knob within 3 minutes to select a new duration.

Switching off

- ➤ Press the button to switch off.
 - The settings are cleared.

6 Operating modes

All the operating modes are described below.

➤ Always use the turntable roller and the glass turntable in combination with the other accessories.



See also the notes in the separate TIPS ON



Grill setting

The following grill settings are available:

• 1	low
• 2	medium
• 3	high

6.1 Hot air **⊘**

Temperature range	50-250 °C
Possible duration	0-1h30
Use	Cake, bread, savouries and biscuits, etc.
Accessories	

6.2 Grill <u>"</u>

Grill setting	1–3
Possible duration	0-1h30
Use	Gratinating and toasting.
Accessories	
	➤ Place the food to be grilled directly on the wire rack.
	➤ Place a plate underneath the wire rack to catch food particles and condensate.

6.3 Grill-forced convection 🖫

Grill setting	1–3
Possible duration	0-1h30
Use	Gratinating and cooking.
Accessories	
	➤ Place the food to be grilled directly on the wire rack.
	➤ Place a plate underneath the wire rack to catch food residues and condensate.

6.4 Power&Favorit **≅**

Possible duration	0-10 mins.
Microwave power level	900 W
Use	Heating up liquids, e.g. water for tea or milk.

6.5 Microwave **≅**

Microwave power level	50–850 W
Possible duration	0-1h30
Use	Preparing and heating food, e.g. vegetables, potatoes, meat and fish.
Accessories	
	➤ Most foods need to be turned or stirred halfway through the cooking time.

6.6 CombiCrunch **≅**



Use the CombiCrunch plate only.

Possible duration	0-1h30
Use	Frozen convenience products, e.g. pizza, chips, fish fingers, chicken nuggets.
Accessories	
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	➤ Preheat the CombiCrunch plate for 3 mins.
-(1)-	- This makes the food crispier.

6.7 AutomaticPlus <a>□

Food is cooked optimally with the help of «AutomaticPlus».



See also the notes in the separate TIPS ON SETTINGS.

6.8 Combi mode hot air <a>⊕ + <a>≅



Use glass, porcelain or silicon cookware. Do not use metal cookware.

Temperature range	50-250 °C
Microwave power level	50-350 W
Possible duration	0-1h30
Use	For fast cooking of cakes, lasagne, baked dishes, etc.
Accessories	

6.9 Combi mode grill [™] + [∞]



Use glass, porcelain or silicon cookware. Do not use metal cookware.

Grill setting	1–3
Microwave power level	50-650 W
Possible duration	0-1h30
Use	For fast browning and gratinating of e.g. vegetables, baked potatoes, etc.
Accessories	
	➤ Place the food to be grilled directly on the wire rack.
	➤ Place a plate underneath the wire rack to catch food residues and condensate.

6.10 Combi mode grill-forced convection ∑ + ≥



Use glass, porcelain or silicon cookware. Do not use metal cookware.

Grill setting	1–3
Microwave power level	50-650 W
Possible duration	0-1h30
Use	For fast browning and cooking of e.g. fish, chicken breast, etc.
Accessories	
	➤ Place the food to be grilled directly on the wire shelf.
	➤ Place a plate underneath the wire rack to catch food residues and condensate.

6.11 Fast heating

Fast heating can be used to shorten the preheating time. Fast heating is only possible with the ② operating mode.

Fast heating may only be used when the cooking space is empty.

- ➤ Select the ② operating mode and the cooking space temperature.
- ➤ Hold the ✓oK adjusting knob depressed for 2 seconds.
 - A single acoustic signal is emitted.
 - [] flashes in the left digital display.
 - The operating time remains unchanged.

A single acoustic signal is emitted when the set cooking space temperature is reached.

The set cooking space temperature is maintained for 20 minutes.

- ➤ Open the appliance door and put the food in the cooking space.
- ➤ Close the appliance door.
- ➤ Turn the ✓oK adjusting knob to set the operating time and press to confirm.

6.12 Power&Favorit

The heating of liquids, e.g. 2 dl coffee, can be saved with this operating mode.

- ➤ Select the 😰 operating mode.
 - 900 illuminates in the left digital display.
 - The ≅ symbol flashes.
 - 0 '50 flashes in the right digital display.
- ➤ Turn the ✓oK adjusting knob to set the operating time.
- ➤ Press the adjusting knob for at least 2 seconds to save the duration.

The next time the 🗟 operating mode is selected, the operating time saved flashes in the right digital display.

6.13 AutomaticPlus

By using «AutomaticPlus», everyday recipes can be simply set up and quickly prepared. The programmes can be selected by the preparation method and the food category.

- ➤ Select the A operating mode.
 - R flashes in the left digital display.
- ➤ Turn the ✓oK adjusting knob to select the preparation method and press to confirm.
 - In the left digital display the preparation method illuminates and the food category flashes.
- ➤ Turn the ✓oK adjusting knob to select the food category and press to confirm.
 - The food category illuminates in the left digital display.
 - The appropriate recommended value for the weight of the food flashes in the right digital display.
- ➤ Turn the ✓oK adjusting knob to select the weight of the food and press to confirm.
 - The programme starts.
 - The countdown to the time remaining appears in right digital display.

Programme pause

Depending on the category of food, the programme pauses after approximately half the set time.

- An acoustic signal is emitted 3x.
- Łurn appears in the left digital display.
- Food appears in the right digital display.
- ➤ Open the appliance door.
- > Stir or turn the food.
- ➤ Close the appliance door and press the ✓oK adjusting knob to confirm.
 - The programme resumes.
 - If the food is not turned or stirred, the programme resumes automatically after 2 minutes.
 - The countdown to the time remaining appears in the right digital display.

Programme «A1 - Plated meal»

No weight has to be entered for the «A1 – Plated meal» programme.



Before starting, the cooking space must have cooled down in order to determine the optimum duration.

Do not open the appliance door while the «A1– Plated meal» programme is running, otherwise the programme will be aborted.

After the «A1 – Plated meal» programme has started, the cooking duration is determined automatically.

- In the right digital display 1'00 illuminates and flashes.
- The cooking duration is being determined.
- The effective duration subsequently illuminates in the right digital display.

The appliance may determine the duration anew.

- or h flashes 3x in the digital display.
- The new effective duration subsequently illuminates in the right digital display.

6.14 Combi mode

The following combi modes are possible:

 $\mathbb{R} + \mathbb{R}, \mathbb{T} + \mathbb{R}$ and $\mathbb{T} + \mathbb{R}$.

Example: Combi mode grill 📅 + 🙈

- ➤ Select the " operating mode.
 - I flashes in the left digital display.
- ➤ Turn the ✓oK adjusting knob for the grill setting, e.g. 3 for «high».
- ➤ Press the ② button.
 - 3 appears in the left digital display.
 - ## 15 flashes in the right digital display.
 - The \rightarrow I symbol flashes.
 - The symbol illuminates.
- ➤ Turn the ✓oK adjusting knob to set the duration (maximum of the 30).

The cooking time refers to both grill and microwave operation.

- ➤ Select the

 operating mode.
 - The operating time selected illuminates in the right digital display.
 - The I→I symbol illuminates.
 - The ≅ symbol flashes.
 - 350 flashes in the left digital display.
- ➤ Turn the ✓oK adjusting knob to set the microwave power level.
- ➤ Set a delayed start, if required.
- ➤ Press the ✓oK adjusting knob to confirm.

Switching grill operation off

- ➤ Use the button to select the grill.
 - The symbol flashes.
 - The grill setting flashes in the left digital display.
- ➤ Turn the ✓oK adjusting knob to reduce the grill setting to
 - Grill operation is switched off.
 - Microwave operation continues.

Switching microwave operation off

- ➤ Use the

 button to select the microwave.

 - The microwave power level flashes in the left digital display.
- ➤ Turn the ✓oK adjusting knob to reduce the microwave power level to
 - Microwave operation is switched off.
 - Grill operation continues.

Switching off

➤ Press the O button.

7 Care and maintenance



Burns hazard! Allow the appliance and the accessories to cool down before you clean them.

The appliance may not be used if the appliance door or the safety door catch is damaged. You should regularly inspect these parts.

7.1 Cleaning the exterior

- > Remove any soiling or traces of cleaning agent immediately.
- ➤ Clean the surfaces with a soft cloth dampened with water and a little washing-up liquid for metallic surfaces rub in the direction of the original polish lines. Wipe dry with a soft cloth.

7.2 Cleaning the appliance door



Under no circumstances may the appliance door be removed! Do not use abrasive cleaning agents or cleaning aids such as steel wool, knives, glass scrapers, razor blades, etc. to clean the door glass. Scratches on the door glass could cause breakage.

➤ Clean the appliance door with a soft cloth dampened with water and a llitte washing-up liquid. Wipe dry with a soft cloth.

7.3 Cleaning the door seal

➤ Clear the door seal with a soft, damp cloth. Then wipe dry with a soft cloth.

7.4 Cleaning the cooking space



Always replace the turntable roller and glass turntable immediately after cleaning.

Do not use abrasive cleaning agents. Do not use scouring pads, wire wool, etc. as such products will damage the surface.

- ➤ Clean the cooking space regularly, especially when food has been spilt. Take care that no grease splashes or food residues harden. Take all accessories out of the cooking space before cleaning.
- ➤ Ideally remove any soiling with a soft cloth dampened with water and a little washing-up liquid while the cooking space is still warm to the touch. Wipe dry with a soft cloth.
- ➤ For stubborn dirt deposits heat up a glass of water at maximum microwave power level for 2–3 minutes. The steam that is produced will soften the soiling.
- ➤ To eliminate unpleasant odours, heat up a glass of water with lemon juice for 2–3 minutes at maximum microwave power level.

7.5 Cleaning the accessories



You should allow the glass turntable and the CombiCrunch plate to cool down before cleaning.

You should never immerse the hot CombiCrunch plate in washingup water or use water to cool it down. This would damage the CombiCrunch plate.

You should not clean the CombiCrunch plate in the dishwasher.

This could damage the surface coating.

You should not use abrasive scouring pads, steel wool, etc. These products would damage the surfaces.

The following accessories can be cleaned in the dishwasher:

- turntable roller
- · glass turntable
- · food cover
- CombiCrunch grip
- · wire rack



The baking tray can be cleaned in the dishwasher; however, this will affect its non-stick properties.

➤ Clean the CombiCrunch plate with water, mild detergent and a sponge.

7.6 Replacing a defective light bulb

For safety reasons, in case of a defective light bulb please contact our Customer Services.

8 Trouble-shooting

This section lists faults that can be solved simply by following the instructions given. If another fault is displayed or the fault cannot be remedied, please call Customer Services.

Before you call Customer Services:

▶ please note down the serial number (FN) and the error message in full, e.g.
F xx
.

8.1 What to do if ...

... the appliance was switched on without any food in it

Possible cause	Solution
	The appliance will be undamaged if only
	switched on for a short time. Do not switch the
	appliance on without any food in it.

... the appliance is not working

Possible cause	Solution
 Appliance is not connected to the power supply. 	➤ Check the power supply.
 Fuse or automatic circuit breaker for electrical installations in the home is defective. 	➤ Change the fuse.➤ Reset the automatic circuit breaker.
 Interruption in the power supply. 	➤ Check the power supply.
The appliance is faulty.	➤ Contact our Customer Services.

... a scratching noise can be heard when the appliance is switched on

Possible cause	Solution	
 Cooking space floor and 	➤ Clean the floor of the cooking space and	
turntable roller are soiled.	the turntable roller regularly.	

... the appliance affects your television reception

Possible cause	Solution	
	Your appliance is not faulty in this case. When in use, it can cause interference to television or radio reception. This is a similar kind of interference to that caused by small electrical appliances (such as mixers, vacuum cleaners, etc.).	

... hot air flows out of the appliance

Possible cause	Solution		
	This is a normal functional state. The heat emitted by the food warms the air in the cooking space. This is then discharged to the outside. The heated air contains no		
	microwaves. The ventilation openings are on no account to be obstructed.		

... the appliance switches off prematurely

Possible cause	Solution	
Appliance is overheated.	➤ Check the ventilation slots. These must be freely accessible.	
 Ventilation slots are obstructed. 	➤ Remove any objects obstructing the ventilation slots.	
	➤ Wait for the appliance to cool down.	
	➤ Restart the appliance.	

8.2 After a power failure

After a power failure, Hall flashes in the right digital display and the symbol flashes.


- ➤ Turn the ✓oK adjusting knob to set the hour.
- ➤ Press the ✓oK adjusting knob to confirm.
- ➤ Turn the ✓oK adjusting knob to set the minutes.
- ➤ Press the ✓oK adjusting knob again to confirm the time.



All the user settings are reset to the factory settings.

9 Accessories and spare parts

Please give model number of the appliance and exact description of the accessory or spare part when ordering parts.

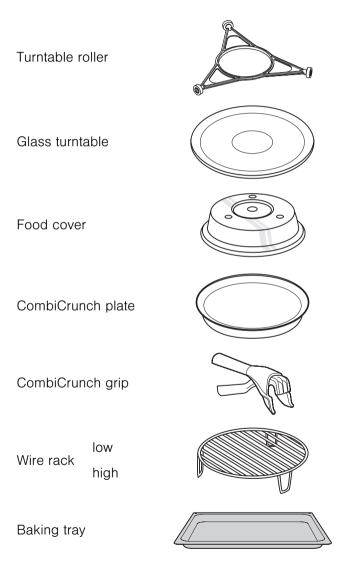


10 Technical data

External dimensions

➤ See installation instructions

Electrical connection

 ➤ See identification plate 1



Automatic energy-saving stand-by

To avoid consuming power unnecessarily, the appliance is equipped with automatic energy-saving stand-by.



To reduce power consumption to an absolute minimum, select [Eh: []] «Time display invisible». Despite automatic energy-saving stand-by, all safety functions are active.

11 Notes

12 Index

A Accessories	E Electrical connection 57 Exterior 50 Cleaning 57 External dimensions 57 F Factory settings 32 Fast heating 44 Food cover 18, 24 Foods Heating 15
BakeOmatic Grill setting	G Glass turntable 17, 22 Grill 20, 40 Grill-forced convection 40
C 50 Childproof lock 30, 31 Cleaning 50 Combi mode 48	H Hot air
Combi mode grill	Identification plate 20, 57 Illumination 30, 32 Installation 25 Installation kit 25 Instructions for use 12
Plate	L Level
Delayed start	MMaintenance50Malfunction63Microwave41Safety precautions14Microwave inlet20Microwave operating modes22Model no2

12 Index

21 , 39 45 44	Stand-by 57 Start protection 27 Switch-off time 36 Symbols 5, 22
27 35 26 63	T Technical data
	Setting
55 , 44	Time display
63 64	Time format. 30, 32 Time functions. 33 Timer. 34 Trouble-shooting. 53
54 28 63	Turntable roller
	Using for the first time
20 5 7 6 6 6 6 6 6 6	V Validity 2 Ventilation fan 25 Ventilation slots 20, 55 W Wire rack 17, 23
	39 45 44 27 35 26 63 55 44 63 64 54 28 63 20 5 7 6 63 63

13 Repair service



The Trouble-shooting section will help you to correct minor malfunctions yourself, saving you the time and trouble of calling out a service technician and the cost that goes along with it.

Whether you contact us about a malfunction or an order, please always state the serial number (FN) and the model type of your appliance. Enter these details below and also on the service sticker which comes with the appliance. Stick it in a conspicuous place or in your telephone or address book.



You will also find the same details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance.

- ➤ Open the appliance door.
 - The identification plate is on the left-hand side of the cooking space.

If the appliance is not working properly, contact your nearest V-ZUG Ltd Service Centre using freephone 0800 850 850 and stand in close proximity to the appliance.

Queries, orders, service agreement

For administrative and technical queries or problems, as well as for ordering spare parts and accessories, please contact our head office in Zug on telephone number +41 (0)41 767 67 67.

As regards the maintenance of all our products, when the warranty expires you have the option of taking out a service agreement. We will be happy to send you the necessary forms.

Quick instructions

Please first read the safety precautions in the operating instructions!

To set the time

- ➤ Press the button.
- ➤ Turn the ✓oK adjusting knob to set the hour.
- ➤ Press the button again.
- ➤ Turn the ✓oK adjusting knob to set the minutes.

To switch off the appliance

➤ Press the ○ button.

To set the timer

- ➤ Press the △ button.
- ➤ Turn the ✓oK adjusting knob to set the timer duration.

Switching Power&Favorit on

- ➤ Press the 🗱 button.
- ➤ Press the ✓oK adjusting knob to confirm.

V-ZUG Ltd

Industriestrasse 66, 6301 Zug
Tel. +41 (0)41 767 67 67, Fax +41 (0)41 767 61 61 vzug@vzug.ch, www.vzug.ch
Service Centre: Tel. 0800 850 850



J939.013-2