

Specifications

It is a requirement of state plumbing codes that licensed plumbers carry out all tapware installations. All installations must comply with the relevant requirements of AS/NZS3500 and local plumbing codes.

Pressure

Maximum Hydrostatic Pressure - 1000kpa

Recommended Maximum Hydrostatic Pressure - 500 kpa. (AS/NZS 3500)

Recommended Minimum Hydrostatic Pressure - 150 kpa.

Maximum Hydrostatic Pressure may be exceeded under test conditions only in accordance with AS/NZS 3500. Where hydrostatic pressure exceeds the maximum stated above, pressure limiting valves must be installed or warranty will be void.

Temperature

Maximum Water Temperature - 80°C

For optimum performance, Hot and Cold inlet water pressure should be equal.

Sink / Basin Requirement

Hole size : Ø40 - 42mm

Maximum Bench Thickness - 40mm

Care and Maintenance

[1] Product should be inspected for surface damage prior to installation. [2] Cleaning and handling of all finishes must be performed carefully. [3] Clean products using a soft cloth with warm soapy water only. [4] Never use harsh detergents or abrasive cleaners as these will damage the product. [5] Water marks can be removed from Matt Finishes with an application of a carnauba wax based non-abrasive polish on a microfibre cloth. [6] Do not use undue pressure when cleaning and wipe in one direction only. [7] Contact with harsh chemicals such as hair dye, hair bleach etc will result in damage to the finish. [8] Tapware should never be installed using acetone silicones. [9] Avoid the use of wax based furniture creams as this can result in a build up of deposits which will detract from the appearance. [10] Damage to finishes arising from improper installation or post installation use or failure to observe the above care and cleaning instructions will void all warranty agreements.

Dimensions are approximate. Information in this installation instruction is representative of the product available at the time of printing. Due to our policy of continuous product development, the design and specifications depicted are subject to change without notice. Please confirm all particulars with your client advisor prior to purchase.

rogerseller

rogerseller.com.au


Eccentric by Rogerseller

Hob Mixer & Outlet


Installation
Instructions

rogerseller

Eccentric by Rogerseller

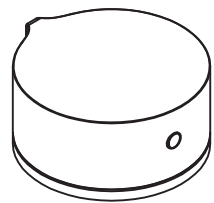


Remote Mixer - Closed Position

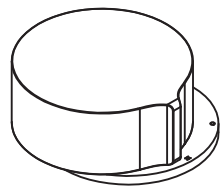


Remote Mixer - Open Position

Handle
Orientation

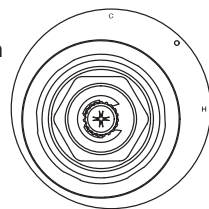


Handle

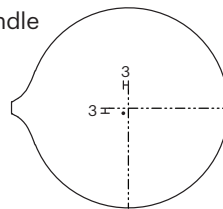

Off-centre drilling

Grub Screw

Handle Button

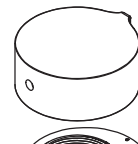

Handle




Base Ring



Base Ring O-Ring



Lock Nut

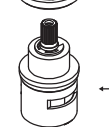

Cartridge



Body
37mm Diameter



Back Nut




Flexible
Hose -
Plain



Flexible
Hose -
Cold



Flexible
Hose -
Hot

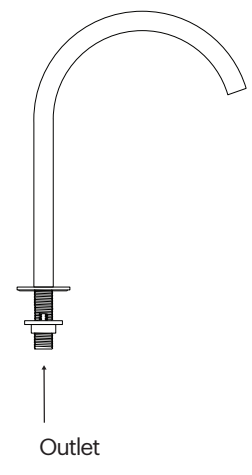

Outlet

Eccentric by Rogerseller
Hob Mounted Mixer
& Outlet

Installation of mixer:

1. Bench hole diameter must be a minimum of **37mm** for installation of Mixer
2. Maximum bench thickness 38mm for Mixer
3. Firmly tighten the flexible hoses into the base of the body. If the hoses have red and blue indicators make sure they are connected to the correct inlet hole in the mixer base. The hot inlet hole is the closest hole to the H stamp.
4. Feed the hoses through the basin hole, one at a time.
5. (Under the Basin / Bench) Place the back nut over the end of the hoses.
6. Lock the mixer onto the basin by tightening back nut onto the body.
7. Connect the flexible hoses to the supply lines, making sure the hot water is connected to the hot water hose. Rogerseller recommends the installation of stop taps and in-line filters to ensure a cleaner flow of water to the mixer.
8. Prior to introducing the mains water supply, open the handle in the mixed position, midway between full hot and cold. Then introduce the mains water to flush the supply lines.
9. **Install Outlet, connect to mixer & test.**

Please leave instructions with the tap or home owner

Eccentric by Rogerseller

