Warranty and Installation Guide Tilt Action Flat Panel Wall Mount

Olbertz Holdings Pty Ltd ACN 010 003 933 trading as Crest Electronics (Crest Electronics) of 165

Electronics will (at its election) either repair that product, replace the product, supply an equivalent

product or pay the costs of repairing or replacing the product or acquiring an equivalent product.

This limited warranty will not extend to or cover any expenses associated with removing,

demounting the original product or installing the repaired, replaced or equivalent product or all or any of its components, you must bear these expenses. It also does not cover damage or loss resulting from intentional or unintentional misuse of, tampering with, alterations to or incorrect

installation of this product or use of this product for purposes other than that for which it is designer or in a manner inconsistent with the product's instructions. This limited warranty also

does not apply to damage or loss resulting from fair wear and tear or events beyond Crest

In order to claim under this warranty, you must contact Crest Electronics and return to Crest Electronics (via our nominated reply paid address) the product and its components and proof of purchase (including the date and location of purchase) so that Crest can verify the defect and your

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or

replaced if the goods fail to be of acceptable quality and the failure does not amount to a major

may have under a law in relation to the goods or services to which the warranty relates.

failure. The benefits given by this warranty are in addition to other rights and remedies which you

Electronics' control including but not limited to natural disasters.

South Pine Road, Brendale, Queensland, 4500, PH: 1800 812 261, support@crest.com.au, warrants that if this Crest product purchased by you from Crest or a retail outlet is found by Crest

to be defective in workmanship or materials within 5 years of the date of purchase, Crest

5 YEAR WARRANTY

Thank you for purchasing this Crest TV Wall Mount.

Crest prides itself on supplying quality audio visual accessories to consumers and businesses throughout Australia. If you follow this guide carefully, we are confident this product will help maximise the enjoyment you obtain from your audio visual equipment for many years.

Please keep this guide for future reference.

TECHNICAL SUPPORT

If you have any questions regarding the warranty, installation or use of this product, please contact our Technical Support Centre on 1800 812 261.

INSTALLATION INSTRUCTIONS

IMPORTANT

- Installation of this TV mount will be easier if two people are involved.
- 2. Some images in this guide may vary slightly from the actual components supplied.
- 3. Ensure this Installation Guide is completely read and understood before attempting installation.
- 4. Mount MUST NOT be installed solely in plasterboard, fibre cement and similar surfaces.
- 5. Mount MUST be installed in sound supporting structures such as those made of timber, steel or masonry using appropriate fasteners.
- 6. The supporting structure must be capable of sustaining the combined weight of the TV mount and the display otherwise the structure must be reinforced.

purchase.

- 7. The fasteners supplied in this hardware pack allow for fixing into timber and masonry only. If installing into a supporting structure made of steel, appropriate fasteners must be used and sourced from an appropriate supplier.
- 8. Use appropriate tools and safety equipment and ensure adequate ventilation during installation.
- 9. If uncertain about any aspect of installation, contact Crest or an installation professional.

TV COMPATIBILITY SPECIFICATIONS

Note the TV Compatibility Specification of each mount.

LCD011

This model will suit most flat panel TV sizes from 23 to 42 inches (58 to 106cm) as long as they weigh 40kg maximum and possess a maximum mounting hole pattern of 320×500 mm (h \times w)

PLSM006

This model will suit most flat panel TV sizes from 37 to 65 inches (94 to 165cm) as long as they weigh 75kg maximum and possess a maximum mounting hole pattern of $500 \times 800mm$ (h x w)

TOOLS REQUIRED


Drywall (Timber Frame) Installation

- Stud finder
- Phillips head screwdriver
- Spirit levelPencil
- 5 or 6mm high speed drill bit
- Drill
- Adjustable spanner

If Installing in Masonry, you will also need:

- Drill with hammer function
- 10mm masonry drill bit
- Hammer

WALL MOUNT FASTENERS DIAGRAM

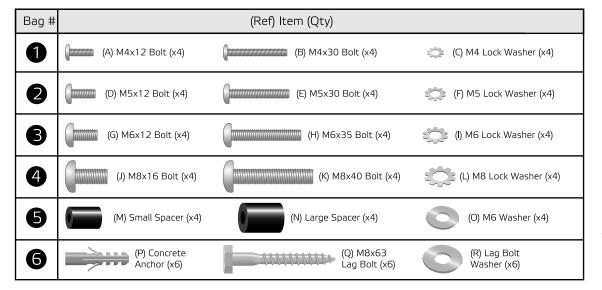





165 South Pine Rd PO Box 5658 Brendale Qld 4500



STEP 1 - ATTACH WALL PLATE TO WALL

A. Installing in Drywall (Timber frame)

- 1. Locate centre of timber studs using stud finder.
- 2. Mark a minimum of four fixing holes (one at top and bottom at either end of wall plate) over stud centres using wall plate as guide. Ensure plate is level.
- Predrill holes to a depth of 55mm using high speed drill bit.
 If installing in hardwood, larger diameter and deeper holes may need to be drilled.
- 4. Attach wall plate using lag bolts (Q) through lag bolt washers (R). Do not over tighten. See Figure 1.



Figure 1 – Attach wall plate to wall.

B. Installing in Masonry

- 1. Mark a minimum of four (preferably six) fixing holes using wall plate as guide. Ensure plate is level.
- 2. Predrill holes to a depth of 65mm using 10mm masonry bit. Clean out holes.
- Fully insert masonry anchors (P). Tap in with hammer if required. See Figure 2.
- 4. Attach wall plate by inserting lag bolts (Q) through lag bolt washers (R) into masonry anchors (P) and tighten. Do not over tighten. See Figure 3.


 


Figure 2 – Insert masonry anchors. Figure 3 – Attach wall plate to wall.

STEP 2 - ATTACH ARMS TO TV

- Use correct bolt size (A, D, G or J) with corresponding lock washers (C, F, I or L) through round washers (O) to attach arms to rear of TV. Use longer bolts (B, E, H, or K) and plastic spacers (M or N), if rear of TV is curved or recessed. Note that M8 bolts do not require a round washer. To avoid damaging TV, do not over tighten bolts. See Figure 4.
- When attaching arms to rear of TV, ensure tilt adjustment knobs are on outer side.

 

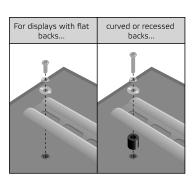
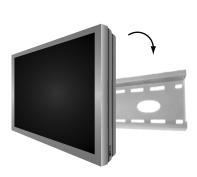


Figure 4 - Attach Arms to Rear of TV.

STEP 3 – MOUNT TV ON WALL PLATE AND ADJUST TILT ANGLE

- With help of another person, carefully lift TV and hook arms over wall plate. See Figure 5.
- 2. Insert safety bar and install padlock (not supplied) to prevent theft. See Figure 6.
- 3. Use tilt adjustment knobs to adjust angle of TV. See Figure 6.



 




Figure 6 – Install safety bar and padlock and adjust tilt angle using knobs.