


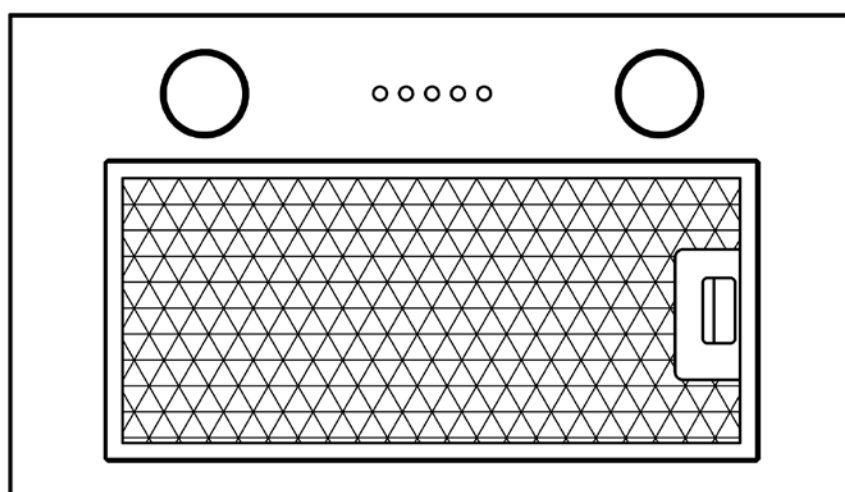

OPERATING AND INSTALLATION INSTRUCTIONS  
FOR  
OMEGA UNDERMOUNT RANGEHOODS

**ORU52XL**  
**ORU70XL**



Thank you for introducing our family to yours

At Omega, we understand that cooking, cleaning and washing may not be your favourite things in the world. That's why we created a range of no-nonsense, reliable products that always get the job done for you. With the features you need and nothing you don't. What's more, they're made to fit perfectly into your home life and your wallet. You are welcoming an Omega appliance into your place and you can be sure it'll always serve you well.

We aim to simplify any further appliance purchases. When researching our products you will find a range of icons that visually represent our products key features. Visit our website to learn more about these icons and the features and benefits of our products.

For important information such as instruction manuals, specifications and catalogues, please visit [omegaappliances.com.au/customer](https://omegaappliances.com.au/customer) (for Australia) or [omegaappliances.co.nz/customer](https://omegaappliances.co.nz/customer) (for New Zealand). Also, make sure you activate your product warranty by registering your warranty online using the links above.

We value your opinion, so please take a few minutes to tell us what you think about your new addition! Simply go to the relevant appliance page of our website [omegaappliances.com.au](https://omegaappliances.com.au) and click on "Write a Review".

If you want to know more about promotions, receive cool tips and tailor made content or just connect with us on social media, like [omegaappliances](https://www.facebook.com/omegaappliances) on Facebook and follow [omegaappliances\\_australia](https://www.instagram.com/omegaappliances_australia) on Instagram.

Enjoy your new appliance and remember, we're only one click away!



**[omegaappliances.com.au](https://omegaappliances.com.au) / [omegaappliances.co.nz](https://omegaappliances.co.nz)**



**[omegaappliances](https://www.facebook.com/omegaappliances)**



**[omegaappliances\\_australia](https://www.instagram.com/omegaappliances_australia)**

**omega. Always serves you well.**

# INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS FOR OMEGA UNDERMOUNT RANGEHOODS

ORU52XL & ORU70XL

## CONGRATULATIONS

Thank you for choosing one of our many fantastic rangehoods. We are confident that you will now be able to meet your cooking needs. Before you use the rangehood we strongly recommend that you read through the whole user manual which provides the description of this product and the proper use of its functions.

To avoid the ever-present risks involved with using an electrical appliance it is vital that the rangehood is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. It is important that you retain these instructions and your proof of purchase along with any other important documents about this product for future reference.

Due to continual product development, Omega reserves the right to alter specifications or appearances without notice.

## CONTENTS

SECTION	PAGE NO.
Important Safety Instructions	4
Appliance Details	5
Operating Instructions	6
Installation	6
Lamp Replacement	7
Cleaning	7
Troubleshooting	7
Warranty Details	8

## DISPOSAL INFORMATION

- Most of the packing materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them in appropriate collection containers.
- Take care to remove all packaging from the appliance before use.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

## IMPORTANT SAFETY INSTRUCTIONS

**IMPORTANT:** Read the assembly instruction section and safety precautions of this booklet carefully before removing the contents of this carton.


1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.
2. In certain circumstances electrical appliances may be a safety hazard.
3. Do not check the status of the filters while the cooker hood is operating.
4. Do not touch the light bulbs after appliance use.
5. Do not disconnect the appliance with wet hands and do not disconnect the power cord with extreme force.
6. Do not flambé underneath range hood.
7. Avoid free flame, as it may cause damage to the filters and be a fire hazard.
8. If frying food, ensure to check regularly to avoid the oil overheating and becoming a fire hazard.
9. Unplug the appliance before carrying out maintenance or replacing lamps.
10. If the power cord is damaged, it must be replaced by the manufacturer, an authorised service centre or similarly qualified persons to avoid a hazard.
11. Indoor use only.
12. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
13. It is recommended to operate the range hood prior to cooking.
14. It is recommended to leave the range hood in operation for 15 minutes after cooking is terminated in order to completely eliminate cooking vapours and odours.
15. Turn off the range hood when not in use.
16. Don't use the range hood if it is damaged, especially the supply cord and the case.
17. Don't immerse the range hood in liquid.
18. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliance burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
19. Regulations concerning the discharge of air have to be fulfilled. There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
20. Clean the surface of the cooker hood regularly using cloth moistened with denatured alcohol or non-abrasive liquid detergent.
21. For hoods using optional charcoal filters, replace the filters approximately every 3 - 4 months.
22. There is a fire risk if cleaning is not carried out in accordance with the instruction.
23. The unit is intended for use above hobs with four elements.
24. If the instruction for the minimum distance between the supporting surface of the cooking vessels on the hob and the lowest part of the range hood are specified by hob instructions, these instructions should be taken into account.
25. **CAUTION:** Accessible parts may become hot when used with cooking appliances.
26. **NOTE:** The minimum distance between this appliance and a cooktop in this manual may differ from that in the cooktop manual. The greater of the two **MUST** be followed.
27. The ORU52XL is intended to be used above hobs with a maximum of 4 elements/burners. The ORU70XL is intended to be used above hobs with a maximum of 5 elements/burners.
28. **Warning:** Failure to install the screws or fixing devices in accordance with the instructions may result in an electrical hazard.

## APPLIANCE DETAILS


RANGEHOODS	ORU52XL	ORU70XL
Rated Voltage	220 to 240V ac 50Hz	220 to 240V ac 50Hz
Max Rated Inputs	271W	271W
Lamp (G10 220-240V)	2x3W	2x3W
Airflow	790m <sup>3</sup> /hr	820m <sup>3</sup> /hr
Outlet Diameter	Ø150mm	Ø150mm

This information can be found on the rating plate (data label) affixed to the inside of the appliance.

SIZES:

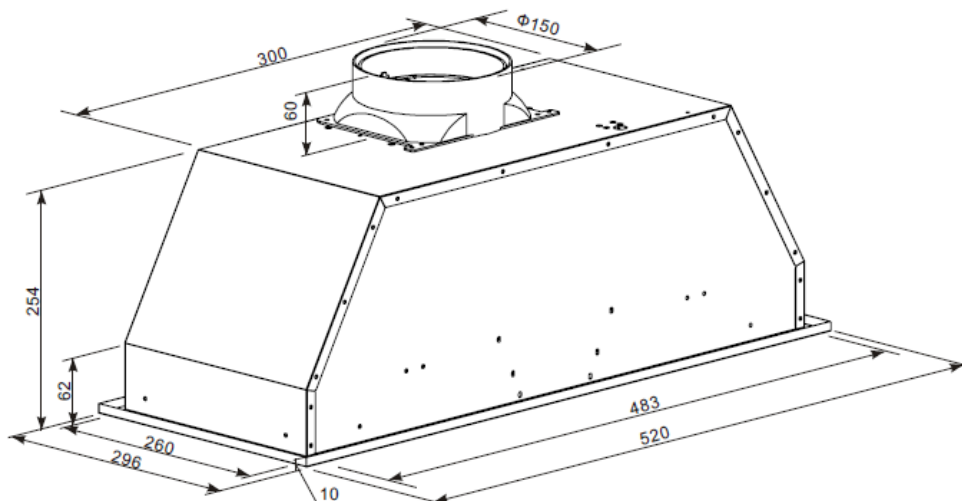

ORU52XL

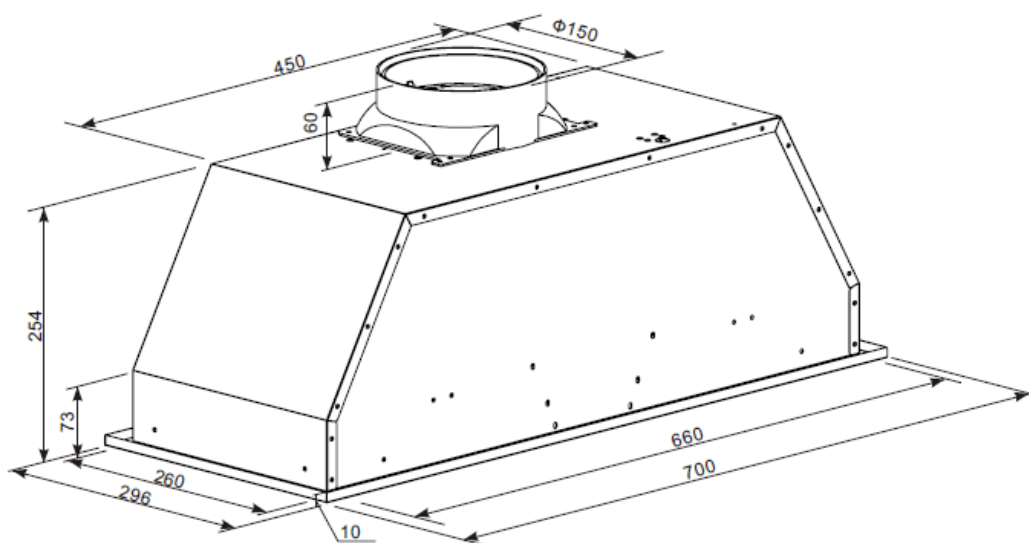



ORU70XL

## OPERATION

Note: Before the unit can be operated, it must either be ducted or, if the model is installed as a re-circulating range hood, it must be fitted with charcoal filters (one set supplied with the appliance).

With the appliance fully installed and the power connected, the appliance can be used.

The light can be turned on & off by pressing the Light button. The fan can be turned on and adjusted by pressing any of the three fan speed buttons (Low, Mid & High). The fan can be turned off by pressing the Stop button.

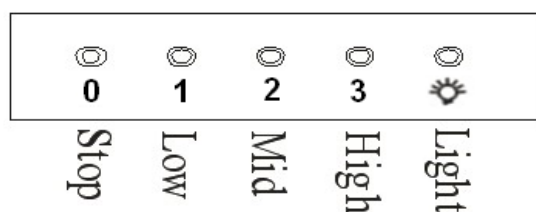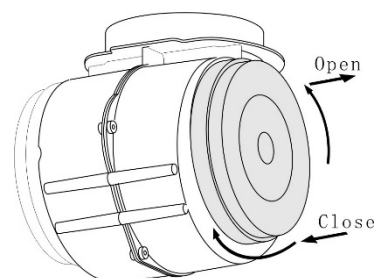

## INSTALLATION

Please ensure that all power is switched off before installing the range hood.

Installation must be in accordance to the local electrical authority and codes.

The switched power outlet for the range hood should be positioned to enable the user to turn the power off, to enable cleaning and any maintenance required.

The switched power outlet should be installed within 600mm from the rear of the unit.

Ensure that when installing the range hood, that it is protected from any possible damage from tools etc.

Ducting for this unit must be installed in accordance to the local authority.

Ensure that the fixings used for this range hood are suitable.

Check the area where the range hood is to be fitted, to ensure that it is structurally sound.

Before using the appliance, remove the plastic coatings protecting the stainless steel finish.


These models are intended to be installed into kitchen cabinetry. Take care that the cabinetry and supporting wall can carry the weight of the rangehood.

Always double-check dimensions in this manual against the appliance before commencing.

The rangehood should be placed at a minimum distance of 650mm from the cooking surface of the cooker below. Any more than 750mm could compromise the performance of the appliance. Drill a hole in the cupboard, 490\*265mm for model ORU52XL and 665\*265mm for model ORU70XL. Make sure the distance between the edge of the hole and the edge of the cupboard edge is at least 35mm. Remove the filter and remove the four screws holding the lower panel in place. Lift the appliance into the hole and check that it fits correctly (no gaps, does not interfere with anything above it etc). Mark the hole positions with a pencil remove the appliance and pre-drill the holes using a small drill bit. Place the appliance back into position, line up the holes and fix into place using the 8 screws provided. Replace the cover & fix into position with the 4 screws and fit the filter. Fit the one way filter to the top of the unit.

The exhaust air vents through the one way valve at the top. If the exhaust is to be vented away, cut a hole (~Ø160mm) in the top of the cupboard, and connect Ø150mm ducting to the one way valve & pass it through the hole to wherever it is going. If the exhaust air is to be recirculated back into the room, either cut vents into the cupboard (with a minimum area of 800cm<sup>2</sup>), or leave the cupboard door open when in use.

Once assembled in place, the appliance can be connected to the power supply.

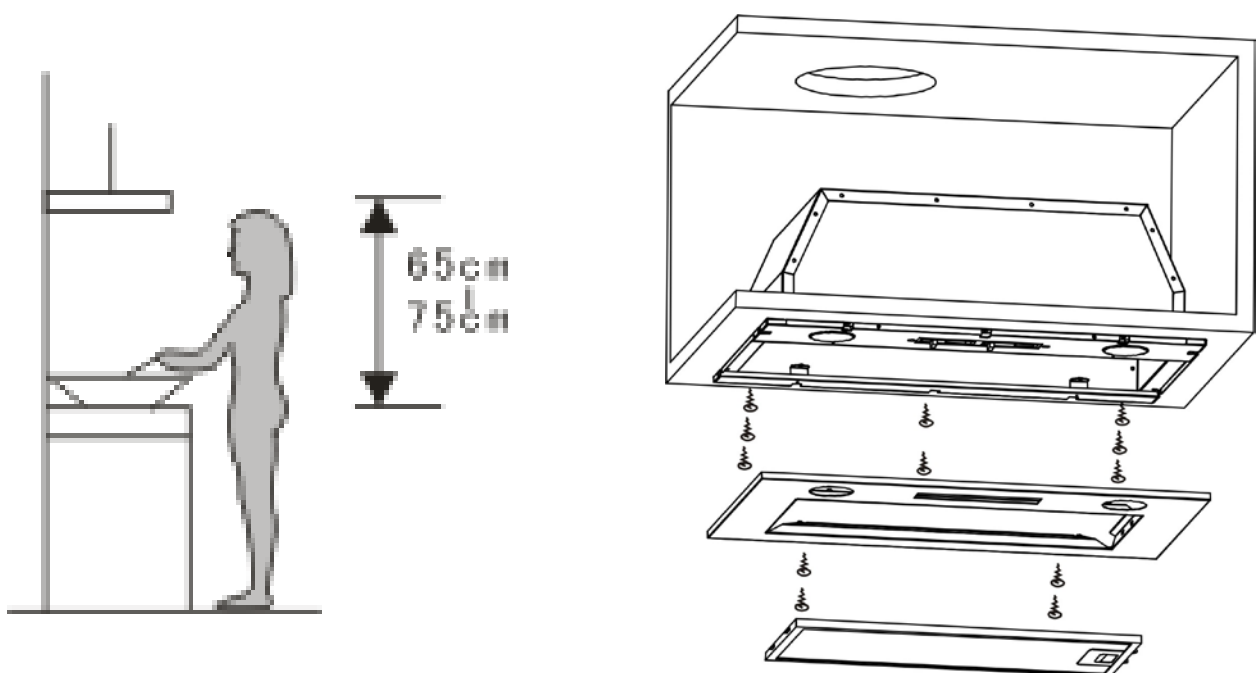


## LAMP REPLACEMENT

Switch the appliance off, disconnect from the power source and give it time to cool off.

Press the face of the light in slightly and rotate anti-clockwise to remove.

Check and replace with a same rated LED (G10, 220-240V, 3W).

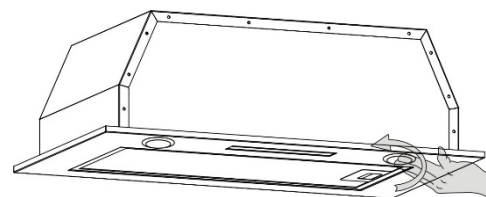

## CLEANING

### SAFETY PRECAUTION

Before cleaning your rangehood or performing any maintenance, please ensure that the rangehood is turned off at the power point.

Do not use abrasive cleaners to clean the rangehood. The use of warm soapy water and a cloth is recommended. Ensure that the rangehood is cleaned regularly, as a build-up of grease and fat may occur otherwise.

The filters on the rangehood must be cleaned regularly to maintain efficiency, and prevent grease build up. It is recommended that this is undertaken every 4 – 6 weeks, depending on frequency of use.

The filters can be cleaned with warm soapy water or a cloth, or they may be washed in a dishwasher. If washed in a dishwasher, discolouration may occur to the mesh and frame.

Cleaning of the range hood must be performed as described above, otherwise there is a possibility of a fire hazard due to grease and fat build up.

Carbon filters must be used when recirculating the air back into the room. These must be replaced every 4 - 6 weeks, depending on the frequency of use.

## TROUBLESHOOTING

Fault	Possible Cause	Solution
Light on, but motor does not work	Fan switch turned off	Select a fan switch position.
	Fan switch failed	Contact Service.
	Motor failed	Contact Service.
Light does not work, motor does not work	House fuses blown	Reset/Replace fuses.
	Power cord loose or disconnected	Refit cord to power outlet. Switch power outlet on.
Oil leakage	One way valve and the air ventilation entrance are not tightly sealed	Take down the one way valve and seal with sealant.
	Leakage from the connection of U-shaped section and cover	Take U-shaped section down and seal.
Lights not working	Broken/Faulty globes	Replace globes as per this instruction.
	Contacts bad	Re-set lights.
Insufficient suction	The distance between the range hood and the gas top is too far	Refit the range hood to the correct distance.
	Ventilation too little/too much	Adjust ventilation, open/close windows.



### AUSTRALIAN CUSTOMERS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### NEW ZEALAND CUSTOMERS

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

### OUR WARRANTY

This product is also covered by the manufacturer's warranty set out in this document (Our Warranty).

Our Warranty is for a period of twenty four (24) months from the date of purchase and for refrigeration appliances will have an additional thirty six (36) months after the first twenty four (24) months on the Sealed System (PARTS only) Compressor & condenser etc. The labour cost to replace these parts is the responsibility of the customer.

This is in addition to (and does not exclude, restrict or modify) any rights or remedies to which you may already be entitled to under the Australian consumer law or the New Zealand Consumer Guarantee act 1993 relating to this product.

Our warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defective materials or components, or faulty workmanship. The product will be repaired or replaced at the option of Omega, and all costs of installation, removal, cartage, freight travelling and insurance are to be paid by the customer.

Our warranty is subject to the following conditions:

1. That the purchaser contact Omega prior to any product repair.
2. That the purchaser carefully follows all instructions provided with the product and complies with all relevant electrical & plumbing regulations in their State when installing the product.
3. That the purchaser carefully follows the instructions provided in the owner's handbook relating to the proper use and care of the product and does not use the product for any purpose other than the DOMESTIC use for which it has been designed. If the appliance is used in commercial applications or for rental purposes, Our Warranty is limited to a warranty of Twelve (12) months covering all parts with Three (3) months on any labour cost of service or repair.

### SERVICE AREA

The provision of service under Our Warranty is limited by the boundary / territory area of the nearest service centre. Travelling cost incurred for service outside this area is not covered by Our Warranty and service will incur commercial cost to be paid by the customer regulated by the number of kilometres travelled beyond the service area. These costs will be disclosed to you for acceptance by you prior to your claim being processed.

Microwave ovens must be returned to your nearest Authorised Service Centre for repair as they are a carry in serviceable appliance.

### WHAT IS COVERED: By Our Warranty

During the warranty period, Omega or its authorised Service Centre will, at no extra charge, if your appliance is readily accessible without the need of special equipment and subject to the terms and conditions of this warranty, repair or replace any parts which it considers defective.

### WHAT IS NOT COVERED: By Our Warranty

1. Products installed damaged or incomplete or not in compliance with the relevant electrical & plumbing regulations in their State.
2. Normal wear and tear e.g. cleaning, light globes, filters etc.
3. Failure resulting from power surges and electrical storms.
4. Insect or vermin infestation.
5. Unauthorised repairs or use of non- genuine Omega parts.
6. Any failure caused by the product not being used in accordance with the instruction and the installation manual provided with the product.
7. Misuse or abuse, including failure to properly maintain or service.
8. The clearing of blockages in pumps and hoses.
9. Damage which occurs during delivery or installation.
10. Claims to product surface coating due to liquid or solid spill-overs, accidental damage or damage caused from cleaning products not recommended by Omega.

### HOW TO CLAIM OUR WARRANTY

You will need to contact Omega in Australia or New Zealand by using the contact details below.

#### IN AUSTRALIA

Omega is a division of Shiro Australia Pty Ltd  
ABN 28 002 386 129  
Head office: 104 Vanessa Street, Kingsgrove NSW 2208.  
Phone: (02) 9415 5000.  
Customer care: 1300 739 033.  
Web: [www.omegaappliances.com.au](http://www.omegaappliances.com.au)  
Note: Please complete the following details when you have unpacked the product:

#### IN NEW ZEALAND

Omega is a division of Monaco Corporation  
(Member of Shiro Australia Pty Ltd)  
Address: 231 Bush road, Albany, North Shore City,  
Auckland, New Zealand 0632.  
Phone: (09) 415 6000.  
Email: [customercare@shiro.com.au](mailto:customercare@shiro.com.au)

Model No.....

Serial No.....

Date of Purchase.....

Retailer.....