



# OPERATION, MAINTENANCE AND SAFETY INSTRUCTIONS

FOR OMEGA ALTISE

MODELS INCLUDE:

OT600B



## TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS .....	1
SPECIFICATIONS .....	2
PARTS LIST .....	2
OPERATING INSTRUCTIONS .....	3
REMOTE CONTROL .....	4
CARE AND MAINTENANCE .....	4

## IMPORTANT SAFETY INSTRUCTIONS

### IMPORTANT

Read the safety precautions of this booklet carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage. If you are unsure about anything regarding your fan or these instructions, please contact Omega Altise on 1300 795 572 in Australia or (09) 415 6000 in New Zealand before operating your appliance.

1. Read all instructions carefully before using the tower fan.
2. Use this tower fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons. Do not modify this appliance. Do not try to repair this appliance – there are no user serviceable parts within.
3. Remove the packaging and ensure that the appliance is undamaged (keep packing box for later storage). In case of doubt do not use the appliance and contact Omega Altise Service. Do not let children play with any parts of the packaging.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Extreme caution is necessary when the tower fan is used by or near children or individuals with decreased mental and physical capacity and whenever the tower fan is left operating unattended.
5. Before you use the appliance, check if the voltage marked on the rating label corresponds to the mains in your home. The appliance must be connected to a grounded power supply.
6. Do not use this appliance with a programmer, timer or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
7. Do not pull the power cord to disconnect with the power source. Always grasp the plug to pull it out.
8. Do not run power cords under rugs, curtains or other combustible materials. Do not place power cords in areas where they can be a tripping hazard. Do not operate directly below a power outlet.
9. Do not insert any objects into the appliance as it may cause an electric shock or fire or damage to the appliance. Do not block or tamper with the appliance in any manner while it is in operation. To prevent a possible fire, do not cover the appliance in any manner. Do not place on soft surfaces, like a bed, where openings may become blocked.
10. Do not leave the appliance unattended. Always unplug the appliance when not in use. Take care that it is not obstructed when oscillating.



**WARNING:** The Function Switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the appliance.

1. Keep materials such as hair, net curtains, tablecloths & clothes away from the openings of the tower fan, as material may be sucked into the appliance causing injury, damage to property or the appliance.
2. The appliance has hot and arcing or sparking parts inside. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden, corrosive, salty or wet atmospheres. This appliance is intended for general indoor domestic use **ONLY**.
3. This appliance is not intended for use in wet or damp locations. Never locate it where it may fall into a bathtub or other water container.
4. Do not use the tower fan outdoors. Do not use close to windows or in direct sunlight.
5. Always place the appliance on flat, stable surfaces before use. Always place the appliance vertically on its base.
6. **NOTE:** Over time, the grills at the front and rear of the appliance will build up dust & dirt. This should be cleaned regularly to maintain optimum efficiency. Follow the cleaning procedure within this instruction.
7. **WARNING:** The remote control contains a button battery inside. Keep batteries out of reach of children. When not in use, store the remote control in the bracket at the rear top of the appliance.



**WARNING:** To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufacturer, its Service Agent or similarly qualified persons in order to avoid a hazard. In order to avoid overheating, do not cover the appliance. Do not use the appliance in the immediate surrounding of a bath, shower or swimming pool.

## SPECIFICATIONS

 
 
Model	OT600B
Rated Voltage	220 – 240V – 50Hz
Rated Power Input	45W
Weight	4.3 kg
Controls	Electronic / Remote
Settings	3 Speed, Normal, Sleep and Natural Breeze modes.
Oscillation	Yes

## PARTS LIST

1. Control Panel with remote control compartment
2. Digital Display
3. Safety Grille
4. Base
5. Remote Control


### Assembly Instructions

1. Remove all items of packaging from the tower fan.
2. Pass the power cord through the middle of the two base pieces.
3. Position base piece onto the support posts of the other base piece to create the base assembly.
4. Turn the tower body upside down position the base assembly onto the pedestal tube. Ensure that the pedestal tube is sitting flush in the base assembly.
5. Screw the base assembly onto the pedestal tube with the supplied screws.
6. Position the power cord into the provided cord track in the rear base.
7. Turn the tower fan back to an upright position. It is now ready for use.

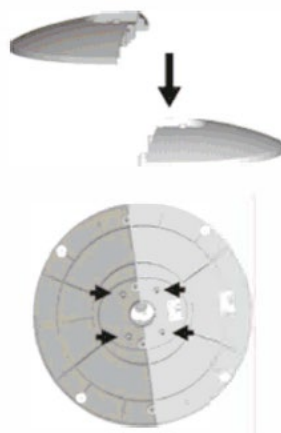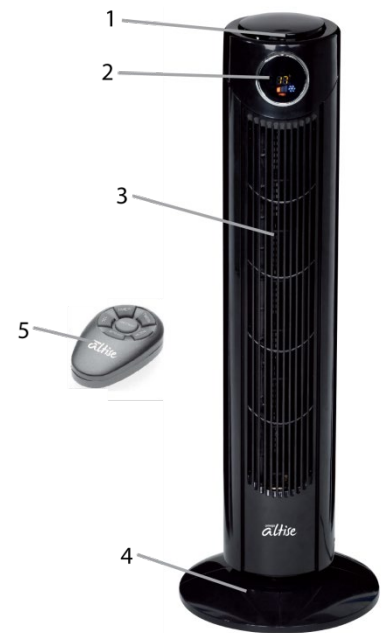

## OPERATING INSTRUCTIONS

 1. Use in a dry place, free of excessive humidity and water.
2. This unit can be operated by the control panel on the fan or by remote control in the same manner.

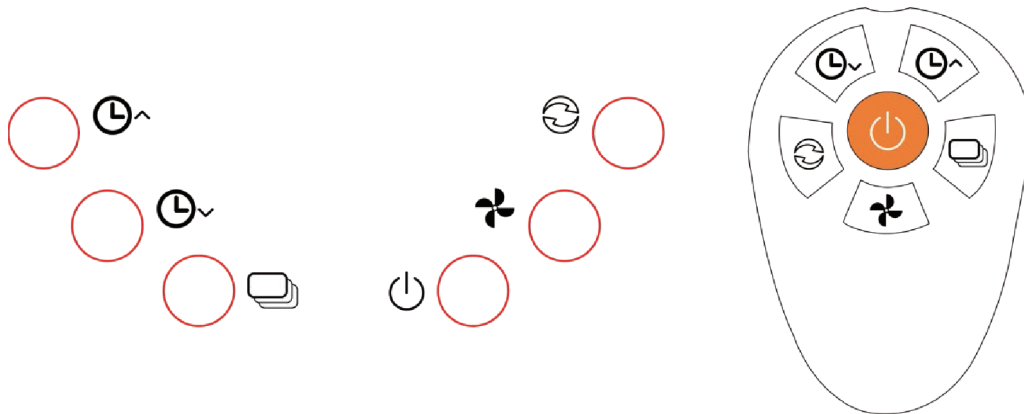

ON/OFF:

Press this button to turn the fan on or off.



SPEED:

Press these buttons to adjust the speed of the fan between 3 comfort settings: High, Medium and Low. The speed will be indicated on the display panel.



OSC:

Press the oscillation button to activate the oscillation function for widespread breeze distribution. Press again to turn the oscillation function off.



MODE:

Choose from 3 different breeze patterns: Normal, Natural and Sleep. The function selected will be shown on the front display. When Natural or Sleep airflows are selected the fan will continually cycle through Low, Medium and High fan settings.



 
TIMER ^:

Press the **timer ^** button to activate the timer-off function. Each time the button is pressed the timer will be increased by 1 hrs up to a maximum of 12 hours.



TIMER v:

Each time the **timer v** button is pressed the timer will be decreased by 1hr.

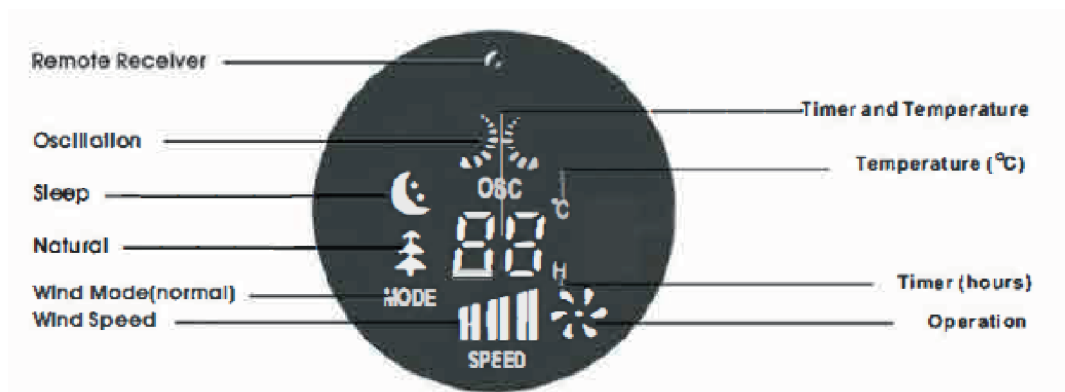

## REMOTE CONTROL

- The remote control requires 2 x AAA batteries
- Ensure the batteries are installed correctly according to the indicated polarities.

## CARE AND MAINTENANCE

1. Always disconnect the cord from the electrical outlet when cleaning your fan.
2. Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
3. Wipe the exterior surfaces of the fan occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the fan.
4. Avoid the use of gasoline, benzine, thinner etc as they may result in damage to the fan.
5. Store the fan in a clean dry place when not in use.



**CAUTION:** Do not immerse the unit in water or allow water to drip into the interior of the fan housing as this could create a fire or electric shock hazard.



**WARNING:** Do not attempt to open or repair the unit yourself. Doing so could void the warranty and cause damage or personal injury.

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference. Due to continual product development, Omega Altise reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.