



ME83D

# Microwave Oven

## Owner's Instructions & Cooking Guide

imagine the possibilities

Thank you for purchasing this Samsung product.  
Please register your product at

[www.samsung.com/register](http://www.samsung.com/register)

**Planet  
First** **100%  
Recycled Paper**

This manual is made with 100 % recycled paper.






## CONTENTS

Oven .....	2
Control panel .....	3
Accessories .....	3
Using this instruction booklet .....	4
Important safety information .....	4
Legend for symbols and icons .....	4
Precautions to avoid possible exposure to excessive microwave energy ..	4
Important safety instructions .....	5
Installing your microwave oven .....	8
Setting the time .....	8
What to do if you are in doubt or have a problem .....	9
Cooking/reheating .....	9
Power levels .....	10
Stopping the cooking .....	10
Adjusting the cooking time .....	10
Setting a standing time .....	10
Using the auto reheat/cook feature .....	11
Auto reheat/cook settings .....	11
Using the cafeteria feature .....	12
Cafeteria settings .....	12
Using the auto rapid defrost feature .....	13
Auto rapid defrost settings .....	13
Using the deodorize feature .....	14
Switching the beeper off .....	14
Safety-locking your microwave oven .....	14
Cookware guide .....	15
Cleaning your microwave oven .....	16
Storing and repairing your microwave oven .....	16
Technical specifications .....	17


## OVEN

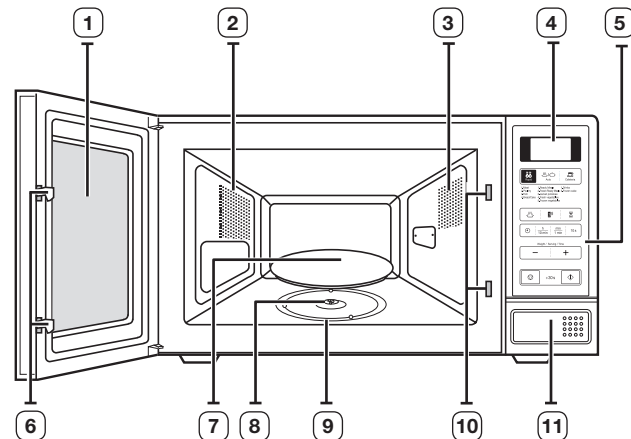

- |                      |                            |
|----------------------|----------------------------|
| 1. DOOR              | 7. TURNTABLE               |
| 2. VENTILATION HOLES | 8. COUPLER                 |
| 3. LIGHT             | 9. ROLLER RING             |
| 4. DISPLAY           | 10. SAFETY INTERLOCK HOLES |
| 5. CONTROL PANEL     | 11. OPEN DOOR PUSH BUTTON  |
| 6. DOOR LATCHES      |                            |



## CONTROL PANEL

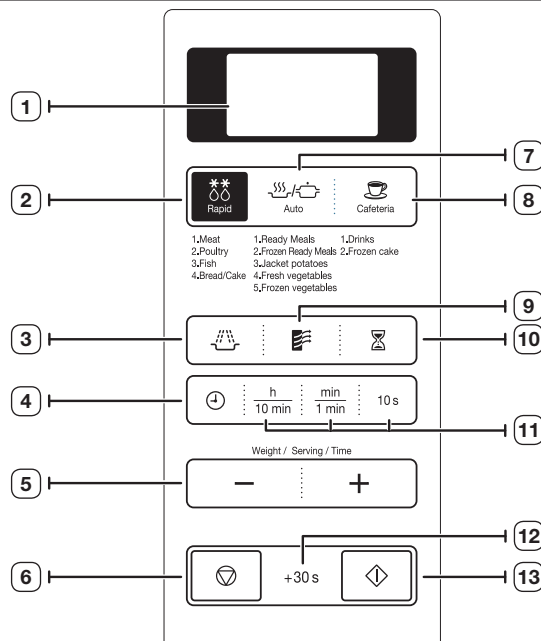


## ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.


- Coupler**, already placed over the motor shaft in the base of the oven.

 **Purpose :** The coupler rotates the turntable.




- Roller ring**, to be placed in the centre of the oven.

 
**Purpose :** The roller ring supports the turntable.



- Turntable**, to be placed on the roller ring with the centre fitting to the coupler.

 **Purpose :** The turntable serves as the main cooking surface; it can be easily removed for cleaning.



-  **DO NOT** operate the microwave oven without the roller ring and turntable.

## USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

## IMPORTANT SAFETY INFORMATION

### IMPORTANT SAFETY INSTRUCTIONS.

#### READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Before using the oven, confirm that the following instructions are followed.

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at [www.samsung.com](http://www.samsung.com).
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

## LEGEND FOR SYMBOLS AND ICONS



**WARNING**

Hazards or unsafe practices that may result in **severe personal injury or death.**



**CAUTION**

Hazards or unsafe practices that may result in minor personal injury or property damage.



Warning; Fire hazard



Warning; Hot surface



Warning; Electricity



Do NOT attempt.



Do NOT disassemble.



Do NOT touch.



Important



Call the service center for help.



Warning; Explosive material



Follow directions explicitly.



Unplug the power plug from the wall socket.



Make sure the machine is grounded to prevent electric shock.



Note

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
  - Door (bent)
  - Door hinges (broken or loose)
  - Door seals and sealing surfaces
- The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment.

For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.





## IMPORTANT SAFETY INSTRUCTIONS

Make sure that these safety precautions are obeyed at all times.


















<b>⚠ WARNING</b>					
Only qualified staff should be allowed to modify or repair the microwave oven.	✓	✓	✓	✓	✓
Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓	✓
For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓	✓
Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓	✓
This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓	✓
Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓	✓
Do not pull or excessively bend or place heavy object on the power cord.	✓	✓	✓	✓	✓
In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓	✓
Do not touch the power plug with wet hands.	✓	✓	✓	✓	✓
Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓	✓
Do not insert fingers or foreign substances. If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓	✓
Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓	✓
Do not place the oven over a fragile object such as a sink or glass object. (Counter top model only)	✓	✓			






Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓
Appliances are not intended to be operated by means of an external timer or separate remote-control system.	✓	✓		
Do not pour or directly spray water onto the oven.	✓	✓		
Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
Children should be supervised to ensure that they do not play with the appliance	✓	✓	✓	✓
The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.	✓	✓	✓	✓
Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet. (Counter top model only)	✓	✓	✓	✓
<b>WARNING:</b> The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.	✓	✓	✓	✓

★ <b>WARNING:</b> Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.	✓	✓	✓	✓
★ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.	✓	✓	✓	✓
□ <b>WARNING:</b> If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.	✓	✓	✓	✓
□ <b>WARNING:</b> It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.	✓	✓	✓	✓
□ <b>WARNING:</b> Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.	✓	✓	✓	
□ <b>WARNING:</b> Liquids and other foods must not be heated in sealed containers since they are liable to explode.	✓		✓	✓
□ <b>WARNING:</b> Accessible parts may become hot during use. To avoid burns young children should be kept away.	✓		✓	
★ <b>WARNING:</b> Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: <ul style="list-style-type: none"> <li>Immerse the scalded area in cold water for at least 10 minutes.</li> <li>Cover with a clean, dry dressing.</li> <li>Do not apply any creams, oils or lotions.</li> </ul>	✓	✓	✓	✓
★ During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.	✓		✓	✓

★ <b>WARNING:</b> The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;		✓		
★ The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.	✓	✓	✓	✓
★ This oven should be positioned proper direction and height permitting easy access to cavity and control area.	✓	✓	✓	✓
★ Before using the your oven first time, oven should be operated with the water during 10 minute and then used.	✓	✓	✓	✓
★ This microwave oven has to be positioned so that plug is accessible. If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.	✓	✓	✓	✓
□ During cleaning conditions the surfaces may get hotter than usual and children should be kept away (Cleaning function model only)		✓	✓	
□ Excess spillage must be removed before cleaning and utensils which state in cleaning manual can be left in the oven during cleaning. (Cleaning function model only)	✓	✓	✓	✓
★ Appliance should allow to disconnection of the appliance from the supply after installation. The disconnection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules. (Built-in model only.)	✓	✓	✓	✓
✎ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.		✓		
✎ <b>WARNING:</b> When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.		✓		
✎ The temperature of accessible surfaces may be high when the appliance is operating.		✓		
✎ The door or the outer surface may get hot when the appliance is operating.		✓		




 <b>CAUTION</b>					
 Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓	
 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;	✓		✓		
 Do not use your microwave oven to dry papers or clothes.	✓		✓	✓	
 Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓	
 If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;	✓		✓	✓	
 The oven should be cleaned regularly and any food deposits removed;	✓	✓			✓
 Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓			
 Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.			✓	✓	
 Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓		
 Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓		
 Do not touch heating elements or interior oven walls until the oven has cooled down.			✓		
 Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓		

 Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			✓	
 Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
 Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.	✓			✓
 Install the oven in compliance with the clearances stated in this manual (see Installing Your Microwave Oven)	✓		✓	
 Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	


## INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

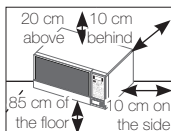

2. Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.

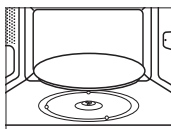

3. This microwave oven has to be positioned so that plug is accessible.

- ☞ If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent. For your personal safety, plug the cable into a 3-pin, 240 Volt, 50 Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable.
- ☞ Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

## SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, "12:00" is automatically displayed on the display. Please set the current time. The time can be displayed in either the 24- hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

- ☞ Do not forget to reset the clock when you switch to and from summer and winter time.

### 1. To display the time in the...

 
24-hour notation  
12-hour notation

### Then press the Clock button...

Once  
Twice




2. Set the hour with the **h** button and the minutes with the **min** button.



3. When the right time is displayed, press the **Clock** button again to start the clock.

### Result :

 The time is displayed whenever you are not using the microwave oven.





## WHAT TO DO IF YOU ARE IN DOUBT OR HAVE A PROBLEM

If you have any of the problems listed below try the solutions given.

### This is normal.

- Condensation inside the oven
- Air flow around the door and outer casing
- Light reflection around the door and outer casing
- Steam escaping from around the door or vents

### The oven does not start when you press the Start button.

- Is the door completely closed?

### The food is not cooked at all

- Have you set the timer correctly and/or pressed the **Start** button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

### The food is either overcooked or undercooked


- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

### Sparkling and cracking occur inside the oven (arcing)

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

### The oven causes interference with radios or televisions

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

 If the above guidelines do not enable you to solve the problem, contact your local dealer or SAMSUNG after-sales service.

## COOKING/REHEATING

The following procedure explains how to cook or reheat food.

ALWAYS check your cooking settings before leaving the oven unattended. First, place the food in the centre of the turntable. Then, close the door.

 
### 1. Press the **Power Level** button.

**Result :** The 850 W (maximum cooking power) indications are displayed:

Select the appropriate power level by pressing the **Power Level** button again until the corresponding wattage is displayed. Refer to the power level table.



### 2. Set the cooking time by pressing the **10 min**, **1 min** and **10 s** button.



### 3. Press the **Start** button.

**Result :** The oven light comes on and the turntable starts rotating.

- 1) Cooking starts and when it has finished the oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

 **Never** switch the microwave oven on when it is empty.







## POWER LEVELS

You can choose among the power levels below.

Power Level	Output	
	MWO	GRILL
HIGH	850 W	-
MEDIUM HIGH	600 W	-
MEDIUM	450 W	-
MEDIUM LOW	300 W	-
DEFROST	180 W	-
LOW/KEEP WARM	100 W	-

 If you select higher power level, the cooking time must be decreased.

 
 If you select lower power level, the cooking time must be increased.

## STOPPING THE COOKING

You can stop cooking at any time to check the food.


1. To stop temporarily;  
Open the door.


**Result :** Cooking stops. To resume cooking, close the door and press **Start** again.



2. To stop completely;  
Press the **Stop/Cancel** button.

 **Result :** The cooking stops. If you wish to cancel the cooking settings, press the **Stop/Cancel** button again.



 You can also cancel any setting before starting by simply pressing **Stop/Cancel**.


## ADJUSTING THE COOKING TIME

 You can increase the cooking time by pressing the **+30 s** button once for each 30 seconds to be added.

1. Press the **+30 s** button once for each 30 seconds to be added.



2. Press the **Start** button.




## SETTING A STANDING TIME

The Hold Time can be used to set a standing time automatically (without microwave cooking).

1. Press the **Hold Timer** button.



 2. Select the standing time by pressing the **10 min**, **1 min** and **10 s** button.



3. Press **Start** button.

**Result :** Standing time starts. When it has finished:  
1) The oven beeps four times.  
2) The current time is displayed again.







## USING THE AUTO REHEAT/COOK FEATURE

The Auto Reheat/Cook feature has four pre-programmed cooking time. You do not need to set either the cooking times or the power level. You can adjust the number of servings by pressing the Up/Down button. First, place the food in the centre of the turntable and close the door.

1. Select the type of food that you are cooking by pressing the **Auto Reheat/Cook** button once or more times.

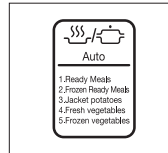


 2. Select the size of the serving by pressing the **Plus/Minus** button. (Refer to the table on the side.)



3. Press the **Start** button.

 - Result :** Cooking starts. When it has finished.
- 1) The oven beeps four times.
  - 2) The end reminder signal will beep 3 times (once every minute).
  - 3) The current time is displayed again.



 Use only recipients that are microwave-safe.

## AUTO REHEAT/COOK SETTINGS

The following table presents the various Auto Reheat/Cook Programmes, quantities, standing times and appropriate recommendations.


Code/Food	Portion	Standing time
1. Ready Meals (Chilled)	300-350 g / 400-450 g	3 min.
	<b>Recommendations</b> Put on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta).	
2. Frozen Ready Meals	300-350 g / 400-450 g	4 min.
	<b>Recommendations</b> Take frozen ready meal and check if dish is suitable for microwave. Pierce film of ready meal. Put the frozen ready meal in the centre. This programme is suitable for frozen ready meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta).	
3. Jacket Potatoes	200 g / 400 g / 600 g	3 min.
	<b>Recommendations</b> Take potatoes with similar size and weight of circa 200 g per potato. Wash and prick the skin with a fork. Wrap each potato in microwave cling film. Put one potato in the centre, put two potatoes opposite to each other and 3 potatoes in a circle directly on the turntable.	
4. Fresh Vegetables	100-150 g / 200-250 g / 300-350 g / 400-450 g 500-550 g	3 min.
	<b>Recommendations</b> Weigh the frozen vegetables (-18 °C) and put them in a suitable sized glass pyrex bowl with lid. When cooking 100-350 g add 15 ml (1 tablespoon) water, for 400-550 g add 30 ml (2 tablespoons). Stir after cooking and before serving. This programme is suitable for peas, sweet corn, broccoli, cauliflower and mixed vegetables such as peas, carrots and cauliflower.	
5. Frozen Vegetables	100-150 g / 200-250 g / 300-350 g / 400-450 g 500-550 g	3-4 min.
	<b>Recommendations</b> Weigh the vegetables after washing, cleaning and cutting into similar size. Put them into a glass bowl with lid. Add 30 ml (2 tablespoons) water when cooking 100-250 g, add 45 ml (3-4 tablespoons) for 300-550 g. Stir after cooking.	




## USING THE CAFETERIA FEATURE

With the Cafeteria feature, the cooking time is set automatically. You can adjust the number of servings by pressing the Up/Down button. First, place the food in the centre of the turntable and close the door.

1. Select the type of food that you are cooking by pressing the **Cafeteria** button once or more times.

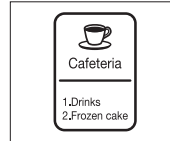

 
2. Select the size of the serving by pressing the **Plus/Minus** button.  
(Refer to the table on the side.)



3. Press the **Start** button.



- Result :** Cooking starts. When it has finished.
- 1) The oven beeps four times.
  - 2) The end reminder signal will beep 3 times (once every minute).
  - 3) The current time is displayed again.

 Use only recipients that are microwave-safe.

## CAFETERIA SETTINGS

The following table presents Auto Programmes for reheating drinks and defrosting frozen cake. It contains its quantities, standing times and appropriate recommendations.

Code/Food	Serving size	Standing time
<b>1. Drinks</b> Coffee, milk, tea, water (room temperature)	150 ml (1 cup) / 250 ml (1 mug)	1-2 min.
	<b>Recommendations</b> Pour into a ceramic cup (150 ml) or mug (250 ml) and place in the centre of turntable. Reheat uncovered. Stir carefully before and after standing time. Be careful while taking the cups out (see safety instructions for liquids).	
<b>2. Frozen Cake</b>	100 g (1 pc) / 200 g (2 pcs) 300 g (2-3 pcs) / 400 g (3-4 pcs) 500 g (4 pcs)	5-15 min.
	<b>Recommendations</b> Put flat frozen cake pieces (-18 °C) directly on metal rack. Put bigger pieces and muffins on turntable. Put one piece in the centre, put 2 pieces opposite to each other and 3-4 cake pieces in a circle. By the help of the heater the cake will be warmed and crisp up. This programme is suitable for cake pieces such as apple cake with crumble topping, streusel cake, cake with poppy seeds and muffins. It is not suitable for a whole cake, cake with cream filling and cake with chocolate topping.	





## USING THE AUTO RAPID DEFROST FEATURE

The Auto Rapid Defrost feature enables you to defrost meat, poultry, fish. The defrost time and power level are set automatically. You simply select the programme and the weight.

 
 Use only dishes that are microwave-safe.

First, place the frozen food in the centre of the turntable and close the door.

1. Select the type of food that you are cooking by pressing the **Rapid Defrost** button one or more times.  
(Refer to the table on the opposite page for further details)



2. Select the food weight by pressing the **Plus/Minus** button. It is possible to set up to a maximum of 2000 g.




3. Press the **Start** button.

### **Result :**

- Defrosting begins.
- The oven beeps half way through defrosting to remind you to turn the food over.
- Press **Start** button again to finish defrosting.



 You can also defrost food manually. To do so, select the microwave cooking/reheating function with a power level of 180 W. Refer to the section entitled "Cooking/Reheating" on page 9 for further details.

## AUTO RAPID DEFROST SETTINGS

The following table presents the various Auto Rapid Defrost programmes, quantities, standing times and appropriate recommendations. Remove all kinds of package material before defrosting. Place meat, poultry and fish on a ceramic plate.

Code/Food	Serving size	Standing time
1. Meat	200-2000 g	20-60 min.
	<b>Recommendations</b>	
	Shield the edges with aluminium foil. Turn the meat over when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops and minced meat.	
2. Poultry	200-2000 g	20-60 min.
	<b>Recommendations</b>	
	Shield the leg and wing tips with aluminium foil. Turn the poultry over when the oven beeps. This programme is suitable for whole chicken and chicken portions.	
3. Fish	200-2000 g	20-50 min.
	<b>Recommendations</b>	
	Shield the tail of the whole fish with aluminium foil. Turn the fish over when the oven beeps. This programme is suitable for whole fishes and fish fillets.	
4. Bread/ Cake	100-1000 g	5-20 min.
	<b>Recommendations</b>	
	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door. This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not, suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping.	







## USING THE DEODORIZE FEATURE

Use this feature after cooking odorous food or when there is a lot of smoke in the oven interior.

First clean the oven interior.

Press the **Deodorize** button after you have finished The oven can be locked at any time. cleaning. you will hear four beeps.



-  The deodorization time has been specified as 5 minutes. It increases by 30 seconds whenever the **+30 s** button is pressed.
-  The maximum deodorization time is 15 minutes.

## SWITCHING THE BEEPER OFF

You can switch the beeper off whenever you want.

 
1. Press the **Stop/Cancel** and **Start** buttons at the same time.

**Result :**

- The following indication is displayed.

OFF

- The oven does not beep each time you press a button.




2. To switch the beeper back on, press the **Stop/Cancel** and **Start** buttons again at the same time.

**Result :**

 - The following indication is displayed.

On

- The oven operates with the beeper on again.



## SAFETY-LOCKING YOUR MICROWAVE OVEN

Your microwave oven is fitted with a special Child Safety programme, which enables the oven to be “locked” so that children or anyone unfamiliar with it cannot operate it accidentally.

 
The oven can be locked at any time.

1. Press the **Stop/Cancel** and **Clock** buttons at the same time.

**Result :**

- The oven is locked (no functions can be selected).
- The display shows “L”.


L



2. To unlock the oven, press the **Stop/Cancel** and **Clock** buttons again at the same time.

**Result :**

 - The oven can be used normally.





## COOKWARE GUIDE

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry. The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
<b>Aluminum foil</b>	✓ ✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
<b>Browning plate</b>	✓	Do not preheat for more than eight minutes.
<b>China and earthenware</b>	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
<b>Disposable polyester cardboard dishes</b>	✓	Some frozen foods are packaged in these dishes.
<b>Fast-food packaging</b>		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
<b>Glassware</b>		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.

Cookware	Microwave-Safe	Comments
• Glass jars	✓	Must remove the lid. Suitable for warming only.
<b>Metal</b>		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
<b>Paper</b>		
• Plates, cups, napkins and Kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
<b>Plastic</b>		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓ ✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
<b>Wax or grease-proof paper</b>	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended

✓✗ : Use Caution


✗ : Unsafe




## CLEANING YOUR MICROWAVE OVEN


The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings


 **ALWAYS** ensure that the door seals are clean and the door closes properly.

 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

 **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

 **Clean the** microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.


## STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.


The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing


Only a qualified microwave service technician should perform repair.

 **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- Unplug it from the wall socket
- Contact the nearest after-sales service centre

 If you wish to store your oven away temporarily, choose a dry, dust-free place.

**Reason :** Dust and damp may adversely affect the working parts in the oven.

 This microwave oven is not intended for commercial use.



## TECHNICAL SPECIFICATIONS

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

<b>Model</b>	<b>ME83D</b>
<b>Power source</b>	240 V ~ 50 Hz
<b>Power consumption</b> Microwave	1250 W
<b>Output power</b>	100 W/850 W (IEC-705)
<b>Operating frequency</b>	2450 MHz
<b>Magnetron</b>	OM75P(31)
<b>Cooling method</b>	Cooling fan motor
<b>Dimensions (W x H x D)</b> Outside Oven cavity	489 x 275 x 351 mm 330 x 211 x 329 mm
<b>Volume</b>	23 liter
<b>Weight</b> Net	12.5 kg approx

## MEMO



MEMO

MEMO

ENGLISH



**MEMO**

**MEMO**

ENGLISH



## QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300-362-603	www.samsung.com
NEW ZEALAND	0800-SAMSUNG (0800-726-786)	
CHINA	400-810-5858	
HONG KONG	(852) 3698-4698	www.samsung.com/hk www.samsung.com/hk_en/
INDIA	3030-8282 1800-1100 11 1800-3000-8282 1800-266-8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	
JAPAN	0120-327-527	
MALAYSIA	1800-88-9999	
PHILIPPINES	1-800-10-SAMSUNG (726-7864) for PLDT 1-800-3-SAMSUNG (726-7864) for Digitel 1-800-8-SAMSUNG (726-7864) for Globe 02-5805777	
SINGAPORE	1800-SAMSUNG (726-7864)	
THAILAND	1800-29-3232 02-689-3232	
TAIWAN	0800-329-999 0266-026-066	
VIETNAM	1-800-588-889	

Code No.: DE68-03760G

