

Breville

the Easy Carve Instruction Booklet



BEK5

CONGRATULATIONS

on the purchase of your new
Breville product

CONTENTS

- 4 Breville recommends safety first
- 6 Know your Breville product
- 8 Operating your Breville product
- 11 Care & cleaning

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Do not immerse the motor unit, cord or plug in water or any other liquid.
- Do not remove knife blades from the motor unit whilst blades are in operation.
- Do not place your hands near the blades when the knife is operating.
- Switch off the power outlet and remove the plug before removing the blades and/or cleaning.
- Make sure the motor and blades have completely stopped before disassembling.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Do not leave the appliance unattended when in use. Young children should be supervised to ensure that they do not play with the appliance.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
- This appliance is for household use only.
- Do not use this appliance for anything other than its intended use. Do not use outdoors.
- Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Breville service centre for examination, replacement and repair.
- Always ensure the power cord is clear of the blades before operating.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.

BREVILLE RECOMMENDS SAFETY FIRST

- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

**SAVE THESE
INSTRUCTIONS**

KNOW
your Breville product

KNOW YOUR BREVILLE PRODUCT



- A. Twin stainless steel blades
- B. Blade safety guards
- C. Blade release buttons
- D. Dual safety switch ON/OFF buttons
- E. 150 watts of power
- F. Built-in loop for storage

OPERATING

your Breville product

OPERATING YOUR BREVILLE PRODUCT

BEFORE FIRST USE

Remove all promotional labels and wash the stainless steel blades in warm, soapy water. Dry thoroughly.

1. Interlock the blades together before inserting into the appliance. To assemble blades, hold the shaft ends below the safety guards and slip the rivet on the tip of the other blade. Move blades together ensuring tips remain together.



NOTE

Always use both blades when operating the Easy Carve.

2. Hold assembled blades by the safety guards and insert and slide blades into the blade slot pushing until both blades are locked into position. You will hear a click sound.




3. Insert the plug into a 230/240V power outlet and switch ON. Ensure the cord is clear from the blades.

NOTE

Always ensure blades are fully locked into position before operating.


4. Holding the knife with one hand, depress both the top and bottom ON/OFF controls to activate the knife. The unit will not operate unless both controls are depressed at the same time. Releasing either of the ON/OFF controls will automatically stop the knife.

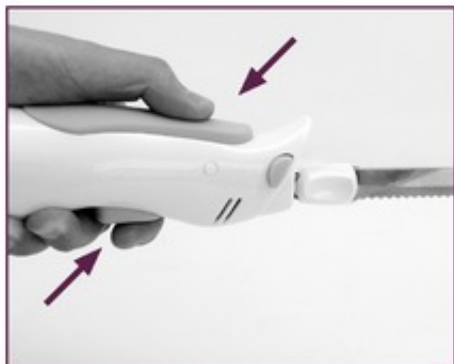

⚠ CAUTION

Avoid contact with moving parts. Keep hands, hair, clothing and other utensils away from moving blades during operating to prevent personal injury and/or damage to the knife.

5. When slicing is completed, turn the power OFF at the power outlet and remove the plug.
6. Depress and hold both the blade release buttons on either side of the unit at the same time holding the blades by the safety guards.
7. Ensure the cutting edge of the blades face downwards. To remove blades pull the blades firmly out of the slots.

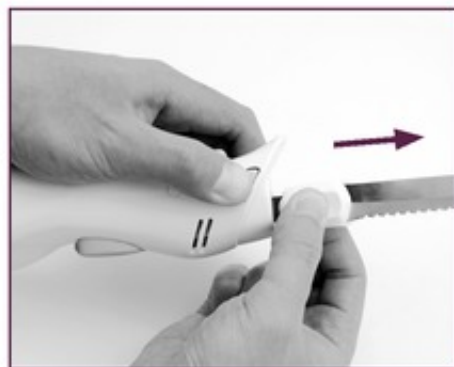

⚠ CAUTION

The blades of your Easy Carve are sharp! Handle with extreme care. We recommend using the safety guards at all times provided when handling the blades. Do not fit or remove the blades whilst the knife is connected to the power outlet.

⚠ CAUTION

Do not allow children to operate the appliance without supervision.

CARE AND CLEANING

of your Breville product

CAUTION

Ensure the power outlet is switched OFF and the plug removed before removing the blades and/or cleaning.

- Depress the blade release buttons and hold the blades by the safety guards.
- Ensure the cutting edge of the blades face downwards. To remove blades pull the blades firmly out of the slots.
- Unlock the blades by sliding apart. Always hold blades by the safety guards when handling and cleaning.
- Wash the blades in hot soapy water with a soft cloth or sponge. Rinse thoroughly and dry completely. Alternatively place blades into the dishwasher.
- Do not use abrasive scouring pads or powders on the blades.
- After cleaning, always store blades in plastic sleeve provided. To clean motor housing wipe with a soft damp cloth.

SLICING HINTS

- Always place food to be sliced on a wooden or plastic cutting board. Do not slice food on china, metal or bench tops as scratching may occur.
- Guide blades through food. A sawing action is not necessary. Do not force blades through food.
- To maintain sharpness of blades, do not cut through frozen foods, bones, fruit pips, stones or any other hard substances.
- For best results when carving meat and poultry allow cooked meat to stand for 10–15 minutes before slicing. This allows the juices to set and makes carving easier and neater.
- Before carving meat or chicken, remove any skewers. If desired, string may be left around the meat whilst carving.
- A carving fork is recommended for steadying the meat and assists in carving even slices.
- Do not attempt to sharpen blades.

NOTES

NOTES

NOTES

Breville

Breville Customer Service Centre

Australian Customers

Mail: PO Box 22
Botany NSW 2019
AUSTRALIA

Phone: 1300 139 798

Fax: (02) 9384 9601

Email: Customer Service:
askus@breville.com.au

New Zealand Customers

Mail: Private Bag 94411
Botany Manukau 2163
Auckland NEW ZEALAND

Phone: 0800 273 845

Fax: 0800 288 513

Email: Customer Service:
askus@breville.com.au

www.breville.com.au

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2013.

Due to continued product improvement, the products illustrated/photographed
in this brochure may vary slightly from the actual product.

BEK5 Issue - A13